



WARRANTY

Register your product within 30 days of purchase to activate its one-year limited manufacturer's warranty at [ovente.com/register](https://www.ovente.com/register)

WARRANTY IS ONLY VALID IF YOU REGISTERED WITHIN 30 DAYS AFTER PURCHASE.

LIMITED ONE (1) YEAR WARRANTY

Your product has a one (1) year warranty period from the date of purchase from an authorized retailer. In the event that the product is defective, feel free to contact us to arrange for a replacement. This warranty only covers defects in workmanship and materials. The warranty does not include damage due to abuse or misuse, any commercial use or accidents.

LIMITATIONS

The warranty stated above is the only warranty applicable to this product. Other expressed or implied warranties are hereby disclaimed. No verbal or written information given by the Manufacturer, its agents or employees shall create a guarantee or in any way increase the scope and duration of this warranty. Repair or replacement as provided under this warranty is the exclusive remedy of the consumer. The manufacturer shall not be liable for incidental or consequential damages resulting from the use of this product. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the applicable warranty period set forth above except to the extent prohibited by law. Consumer rights may vary from state to state.

**Customer Service: [ovente.com/support](https://www.ovente.com/support)
Visit us at [ovente.com](https://www.ovente.com)**



Facebook.com/ovente



@OventeTweets



@Ovente

OVENTE®

Double Wall Cordless Cool Touch Electric Kettle, 1.7L KD64 Series



Before using please read the instruction manual and keep it for future use.



IMPORTANT SAFEGUARDS

When using your kettle, basic safety precautions should always be followed, including the following:

- **READ ALL INSTRUCTIONS.**

- Check if the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance.
- Do not use the appliance if the plug, the mains cord or the appliance itself is damaged. If the mains cord is damaged, contact your service provider immediately.
- This appliance can be used by children aged 8 or over and by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, provided they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Keep the appliance and its mains cord out of the reach of children younger than 8 when the appliance is switched on or is cooling down.
- Keep the mains cord away from hot surfaces.
- Place the appliance on a horizontal, even and stable surface.
- Do not plug in the appliance or operate the control panel with wet hands.
- Only connect the appliance to an earthed wall socket. Always make sure that the plug is inserted into the wall socket properly.
- Do not place the appliance against a wall or against other appliances. Leave at least Inches free space on the back, sides and space above the appliance.
- Do not use the appliance for any other purpose than described in this manual.



KETTLE MAINTENANCE

1. Wipe the exterior of the kettle with a soft, damp cloth or sponge.
2. Remove water spots with a moistened cloth.
3. Do not use abrasive scouring pads.
4. Never immerse the kettle in water or other liquids.
5. From time to time, depending on the nature of your water supply, limescale will be naturally formed and can be found mostly on the heating element; thus, reducing the heating efficiency. (Refer to the descaling instruction).



TECHNICAL SPECIFICATIONS

Model: KD64

Input Voltage: 110-120V

Power: 900-1100W

Hertz: 50/60Hz

CLEANING

Smell / Spotting / Descaling

The residue, smell and red spots do not come from the Stainless Steel or glass. They can be caused by limescale which are natural deposits (calcium, magnesium, iron and copper) that may build up depending on the water in your area, which, over time, can cause spotting and residue.

While you do not need to worry about hygienic or health-related issues, we do strongly recommend descaling your kettle from time to time to avoid limescale build-up and other issues.

What you need:

1. White Vinegar
2. Water

Steps:

1. Mix 8 parts water to 2 parts vinegar solution
2. Pour solution into kettle and close the lid
3. Bring solution to a boil and leave for 5-8 hours.
4. Dispose solution down the drain.
5. If the problem persists, repeat from step 1 until limescale dissipates.

Caution: the solution may be extremely hot during this process.

Should you have any questions and/or concerns please feel free to contact us.

- Do not let the appliance operate unattended.
- Do not touch hot surfaces or hot water. Use handles. Care must be taken since burns can occur from touching hot parts or from spilled hot liquid.
- To protect against fire, electric shock, and personal injury, do not immerse cord, plug, power base, or electric kettle in water or other liquid.
- Unplug from outlet when not in use and allow the kettle to cool before cleaning.
- The use of accessory attachments not recommended by the manufacturer may result in fire, electric shock, or personal injury.
- Do not use outdoors.
- Switch OFF and unplug from the outlet before filling, emptying or cleaning, or when not in use.
- Do not overfill the kettle. Refer to the maximum level indicator inside the kettle.

Warning: If the kettle is overfilled, boiling water may emit.

- To avoid against fire, do not operate near explosive and/or flammable fumes. Do not operate or place any part of this appliance on or near gas, electric burner or in a heated oven.
- Never yank on the cord as this may damage the cord and will cause a risk of electric shock.
- To avoid possible steam damage, do not face the spout when operating the kettle.
- If operated on wooden furniture, use a protective pad to prevent damage on delicate finishes
- Do not switch your kettle ON if it is empty.
- Use the kettle only with the supplied base unit. Do not use the base unit for other purposes.
- While the water is boiling, do not attempt to open the lid of the kettle to avoid the steam scalding on your hand.

SPECIAL SAFETY INSTRUCTIONS FOR THE KETTLE

- It is recommended to use filtered or tap water when filling the kettle.
- The water level must be within the MIN and MAX marks.
- Switch off the kettle before removing from the base.
- Always ensure that the lid is tightly closed.
- The base and exterior of the kettle must not become wet.
- Always make sure that the kettle is positioned properly on its power base.
- The kettle will automatically shut off once it reached the designated temperature.

USING THE KETTLE FOR THE FIRST TIME

Before using the kettle for the first time, fill the kettle with cold water and boiled it twice without any additives.



USING THE KETTLE

1. Slide the lid button to open the kettle (refer to figure 1).
2. Fill the kettle with water up to desired level. Do not overfill to prevent the risk of spillage.
Use the water level indicator inside the kettle to measure the desired amount of water.
3. Put the base on a dry and flat surface.
4. Place the kettle on the base.
5. Connect the kettle to a properly installed 110-120V 50/60Hz socket.
6. Insert the plug to the socket.

7. Switch on the kettle (Refer to figure 4). After boiling, the kettle switches off automatically.
8. Disconnect the kettle from the main power supply.

