

Place
Stamp
Here

Product Registration
HAAN[®] Corporation
1828 William Penn Way
Lancaster, PA 17601

5) We like to hear from our product owners. Please add any
comments here:

4) How did you hear about HAAN[®]?

3) Where did you purchase your HAAN[®] product?

Instruction Manual

HAAN[®]
EXPERIENCE STEAM. DISCOVER CLEAN.™

 
name: **Steam Station™ II**
model number: **GS-65**

*"The Fast, Easy Way
to Steam Away Wrinkles
and Freshen Fabrics!"*

HAAN[®] Corporation
1828 William Penn Way
Lancaster, PA 17601

phone: **877-422-6347**

www.HAANusa.com

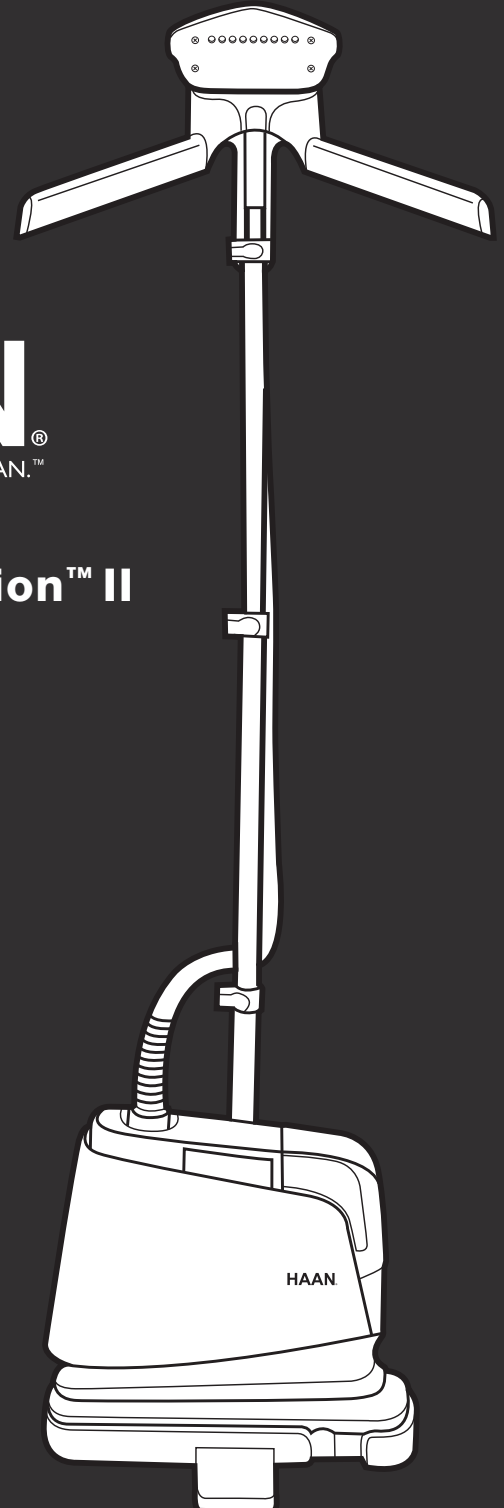

Product Registration

Please fill out and mail this Product Registration Card within thirty (30) days of purchase in order to validate the fore said Limited Warranty. The registration will allow us to contact you in the unlikely event of a product safety notification. By returning this card you acknowledge that you have read and understood the instructions for use and the warnings set forth within the instructions.

First Name	Last Name
Address	
City	State/Province
Zip Code/Postal Code	Country/Territory
Product Name/Model number	
Date Purchased	Place of Purchase

(Fold here and tape closed before mailing)

Warranty Notice: FAILURE TO COMPLETE AND RETURN THIS PRODUCT REGISTRATION CARD WILL NOT DIMINISH YOUR WARRANTY RIGHTS.

Privacy Notice: We use this information requested on this card to process your registration, thereby allowing you to receive the benefits of being a registered user, and for use in post-sales services. Other uses of your information are governed by the choices you make in answering the questions and the HAAN privacy policy. For information on this policy contact 877- HAAN DIRECT.

1) Yes! I would like HAAN® to send me information on products and services including new product releases, events and special offers. You may contact me by:

EMAIL	☐	_____
PHONE	☐	_____
MAIL	☐	_____

2) What other HAAN® products have you purchased?

Cut along dashed line

Notice

The information contained in this document is subject to change without notice.

HAAN® Corporation assumes no responsibility for any errors that may appear in this document nor does it make expressed or implied warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

HAAN® Corporation shall not be liable for incidental or consequential damages in connection with or arising out of the furnishing, performance, or use of this document and the program materials which it describes.

All rights reserved. No part of this document may be photocopied, reproduced or translated to another language without prior written consent of HAAN® Corporation.

HAAN® is a registered trademark of the HAAN® Corporation.

HAAN® Experience Steam. Discover Clean.™ is a trademark of the HAAN® Corporation.

Product Specifications: Model GS-65

Color	Red and Black
Size: Body w/ Base	12.75" H x 14.25" W x 13.75" L
Size: Telescopic Pole (with hanger)	26.75"-66.5"
Weight	5.5 lbs
Voltage/Hz	120 volts / 50Hz
Wattage	1300 watts
Cord Length	8'
Hose Length	approx. 47"
Tank Capacity	26.25 oz.
Heat-up Time	40 sec.
Operating Time	Up to 30 min.
*Dimensions approximated. Dimensions include base and measured without hose, or attachments.	

One-Year Limited Warranty

Your HAAN® Steamer is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of purchase when utilized for normal household use by the original purchaser only. The included Warranty Registration Card should be filled out and returned within thirty (30) days of purchase. This will register your product.

Should any defect covered by the terms of the limited warranty be discovered within one year, HAAN® Corporation will repair or replace the defective part. To process a warranty claim, contact customer care at 1-877-422-6347 for further assistance and instructions. A customer care agent will conduct trouble shooting in an attempt to fix any minor problems. Should trouble shooting not provide any result, a return authorization will be issued. Proof of purchase is required and should accompany the return. Freight costs must be prepaid by the purchaser.

The liability under this warranty is limited solely to the cost of the replacement parts or the complete unit at our option. Labor charges are not included.

This warranty is extended to the original purchaser of the unit and excludes all other legal and/or conventional warranties. The responsibility of HAAN® Corporation, if any, is limited to the specific obligations expressly assumed by it under the terms of the limited warranty. In no event is HAAN® Corporation liable for incidental or consequential damages of any nature whatsoever. Some states/provinces do not permit the exclusion or limitation of incidental or consequential damages, so the above may not apply to you. This warranty gives you specific legal rights which vary from state to state or province to province.

Warranty Notice: failure to complete and return the product registration card will not diminish your warranty rights.

Introduction

Congratulations on purchasing a HAAN® product. Now you have an easy way to quickly steam away wrinkles and freshen and sanitize fabrics throughout your home.

The GS-65 heats up in seconds, and is ready when you are — for fast touch-ups of your favorite blouses, shirts and suits, without the hassle of an iron or the fear of scorching. A full array of accessories including a crease tool, a hand-held pressing board and a fabric brush ensures perfectly steamed clothes and fabrics that have that “fresh from the dry cleaner” look without the expense.

Backed with a one-year limited warranty, your quality HAAN® product is sure to give you years of dependability. And our Customer Care representatives are available to answer any of your questions about your new garment steamer.

The HAAN® Team

Important Safety Instructions

IMPORTANT

Be sure to read ALL instructions and warnings before using your HAAN® Steam Station.



WARNING

Risk of electrical shock: Be sure to read and follow all instructions and warnings.



CAUTION

The GS-65 emits steam at 212°F to sanitize the area of use. This means that the steam plate gets very hot during use. Care should be taken when using this appliance. DO NOT touch the steam plate during use except in the approved manner as outlined in this manual.

SAVE THESE INSTRUCTIONS:

For household use only. Any other use of this appliance will void the manufacturer's warranty.

When using your garment steamer, basic safety precautions should always be observed, including the following:

WARNING – To reduce the risk of fire, electric shock or injury:

1. Do not leave the product unattended with the power turned on. Unplug the unit from outlet when not in use and before conducting any maintenance or troubleshooting.
2. When not in use, the product's power cord should be unplugged.
3. DO NOT service the garment steamer when it is plugged in.
4. DO NOT use with a damaged cord or plug. Do Not use the garment steamer if it has been dropped, damaged, left outdoors or dropped into water. Return to a service center.
5. Store the product in a place that is out of the reach of small children and close attention is necessary when used near children.
6. Make sure to use the product according to this user manual, and use only authentic product parts and accessories.
7. Do not use in close proximity to flammable materials.
8. To unplug the power cord, simply grasp the plug. Do not pull on the power cord itself. Do not pull or carry by the cord, use the cord as a handle, close door on the cord, pull cord around sharp corners or expose cord to heated surfaces.
9. Do not handle the power cord with wet hands.
10. Store the product in a cool place indoors.
11. Do not immerse the unit or expose it to rain.
12. Do not spray steam in the direction of another person, animal or electrical outlet.
13. Make sure to unplug the power cord prior to filling the product with water.
14. Do not allow to be used as a toy.
15. Not for space heating purposes.
16. Do not use the product with water that has been combined with detergent, descaling, aromatic, alcohol, rinse and/or any other sort of chemicals. Use water only.

To order additional pads, accessories or replacement parts call customer care at:

877-HAAN DIRECT / 877-422-6347

Or visit:

www.HAANusa.com

Commonly Asked Questions

Q: Does the Garment Steamer actually iron or press clothing?

A: The Garment Steamer doesn't press clothing, but rather, relaxes wrinkles. However, by using the hand pressing board, you will be able to steam garments flat or crisp.

Q: Does the Garment Steamer kill germs?

A: Yes, the 212°F steam kills germs, bacteria, dust mites and other allergens – to leave fabrics fresh and clean.

Q: Is the Garment Steamer safe on all fabrics?

A: The Garment Steamer can safely and gently steam most fabrics. However, we recommend you test a small seam, hem or hidden area of fabric before you steam an entire garment – especially for delicate or vintage fabrics.

Q: Should the water tank be filled with only cold water?

A: Yes, fill the water tank only with cold water.

Q: Do I have to use distilled water in my Garment Steamer?

A: While we recommend the use of distilled water to maintain optimum functionality and extend the life of your appliance, tap water can be used. If you have hard water in your area, we strongly recommend the use of distilled water.

Q: How long does a full tank of water last?

A: With one tank of water, you can steam fabrics for approximately 30 minutes.

Q: How do I know when the Garment Steamer is heated up and ready to use?

A: When you have filled the tank, plugged in the unit and turned it ON, it takes 40 seconds to heat up and be ready to use. When you see a steady amount of steam emitting from the steam vents on the steam head, all is ready.

Q: Do I have to empty the tank completely after I am done?

A: Yes, we recommend emptying the water from the tank. Just open the Excess Water Removal Valve found on the bottom of the body and empty the excess water into the sink.

Q: Do the accessories lock into place, or do I have to worry about them coming off while I am steaming?

A: The accessories snap onto place on the steam head.

Important Safety Instructions

 
17. Unplug the product before attempting to refill water tank.
18. The product and accessories become hot during use. Exercise care when changing accessories and follow removal/changing instructions as outlined in manual. Do not try to fasten or remove accessories during operation. Scalding may occur if this is done while appliance is active.
19. Use only manufacturer's recommended attachments— use of attachments not provided, approved or sold by HAAN® may cause fire, electric shock or injury and will void warranty.
20. If the circuit breaker activates while using the steam function discontinue product use immediately and contact the customer support center (Beware of the risk of electrical shock.) To avoid circuit overload, do not operate a other appliance on same circuit as the garment steamer.
21. Do Not allow the product to be disassembled and/or modified by anyone other than an authorized HAAN® service technician. Doing so can result in fire and/or electrical shock and would void warranty.
22. Steam only in an up and down vertical motion. Never hold steam head down while at rest or tilt it in a backward position as this may result in hot water discharge.

IMPORTANT ►

Electrical Plug Instructions:



WARNING
DO NOT modify the plug. Improper connection of the equipment-grounding conductor can result in a risk of electrical shock. To provide continued protection against risk of electric shock, connect to properly grounded outlet only.

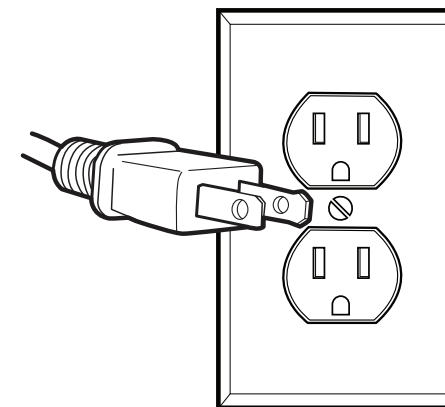

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

Couldn't find the Answer to your Question?

Call Customer Care at 877-HAAN DIRECT / 877-422-6347

IMPORTANT

Always ensure that your steam station is **UNPLUGGED** from the wall receptacle prior to cleaning or emptying the water tank.

**CAUTION**

Do not immerse your steam station in water or any other liquid.

Care & Maintenance

1. Clean and rinse your steamer regularly.
2. Never use additives such as salt, perfume and dyes. Do not introduce detergents and/or soap to the water tank. These substances will corrode or clog internal parts.
3. When steaming clothes using the Garment Valet, hold the steam head in a vertical, upright position.
4. Hold the steam head vents away from you and steam in a vertical up and down motion. This will allow the condensation in the hose to flow back into the steamer.
5. Do not pull the steamer by the power cord; pulling the steamer by the power cord may cause the internal wiring to become loose.
6. Be sure to turn your HAAN® Steam Station™ off and unplug the unit from the electrical outlet before doing any maintenance.
7. To clean the exterior body of your HAAN® Steam Station™ wipe it down with a damp cloth.
8. To reduce or eliminate the occurrence of mineral deposits, we recommend the use of de-mineralized or distilled water in the unit. However, regular tap water may be used.

 
Problem	Solution
Unit not operating.	• Ensure plug is set firmly in outlet. • Replace fuse or reset breaker.
Unit does not emit steam.	• Ensure water tank is filled with water.
Gargling noise coming from steam hose.	• Ensure the steam hose is not bent and is an upright, extended position.

Removing Excess Water from Body

IMPORTANT


Always turn off and unplug unit from electrical outlet before attempting to empty excess water from the body.

7

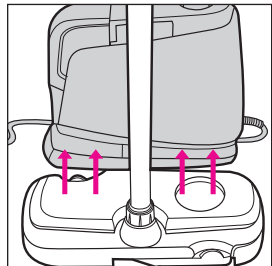


Remove body from base.

 8

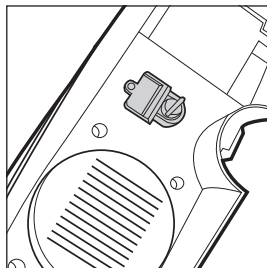

Turn body upside down to reveal excess water drainage plug.

 9

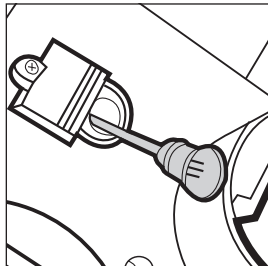


Unscrew and remove the excess water drainage plug. Drain any excess water.

Product Accessories


! WARNING

 Add Accessories to a cool Steam Head. Allow Steam Head to cool completely before adding or removing product accessories. Failing to do so could result in injury.

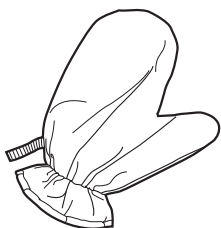


Pressing Mitt:

 Makes it easy to press difficult and hard-to-reach areas.

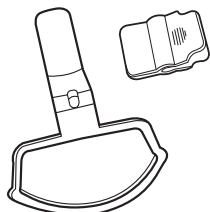

Crease Tool & Extra Clip:

 
The Crease Tool attaches to the steam head for perfect creases or crisp shirt cuffs and collars. Just clip it to the Steam Head. Place the garment between the Steam Head and the open Crease Tool, close to hold the crease firmly while steaming it to set.

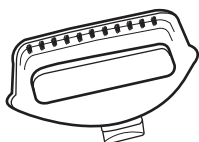

Fabric Brush:

Match the shape of the Fabric Brush attachment to the Steam Head until the tabs on the top and the bottom of the brush snap securely into place. Brush the surface of the area to be cleaned while steaming to sanitize and remove hair.

 Product Description

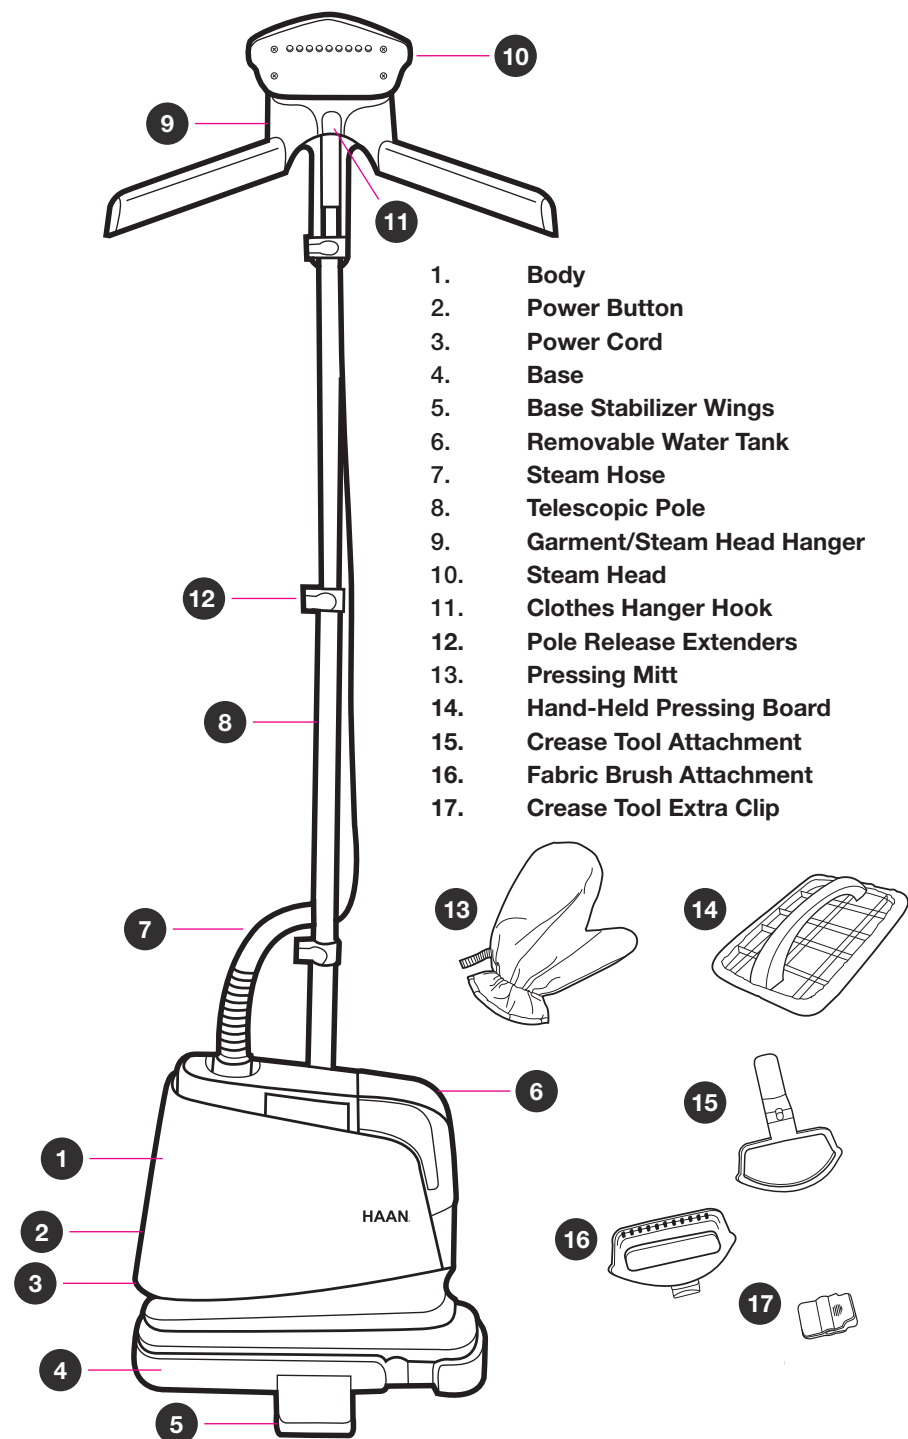

⚠ CAUTION

Use only a heavy duty extension cord rated for 15 amps minimum – DO NOT use an ordinary extension cord.

 
IMPORTANT

This product is NOT for space heating purposes.


⚠ CAUTION

HAAN® steam products emit steam at 212°. This means that the steam head gets very hot during use. Care should be taken when using this appliance and DO NOT touch components of this machine during use except in the approved manner as outlined in this manual. NEVER POINT THE STEAM HEAD TOWARDS YOU, ANOTHER PERSON, CHILD OR PET.


Production Assembly & Operating Instructions

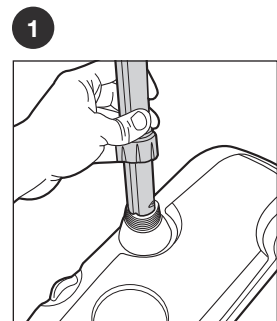

 
Line up grooves in pole with tabs on base. Insert pole into base.

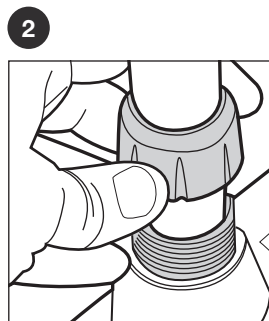

 
Turning clockwise, gently tighten pole to base.

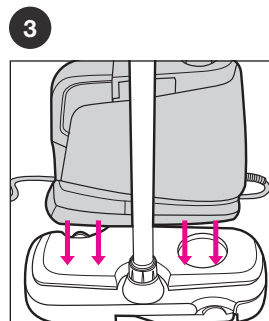

 
Line up groove in body with pole and place on base.

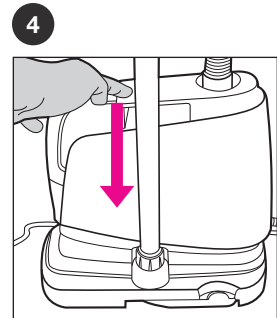

 
Push body down on base to secure in place.

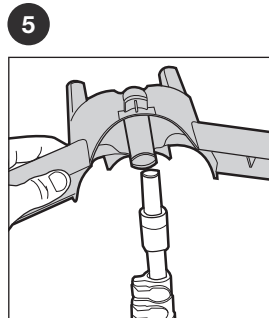


Attach garment hanger to pole.

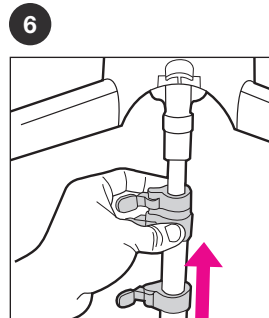 

 
Loosen pole release extenders and extend pole. Remember to tighten them when the desired height is reached.

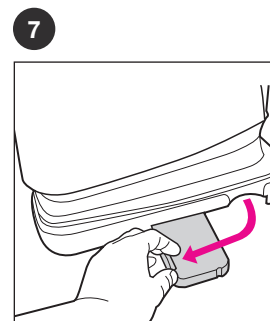


Extend Base Stabilizer Wings.

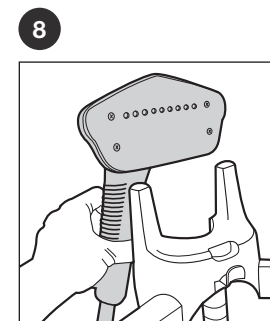 


Hang Steam Head on hanger.

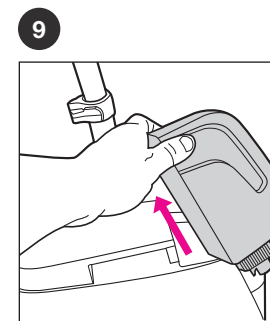 


Remove water tank.

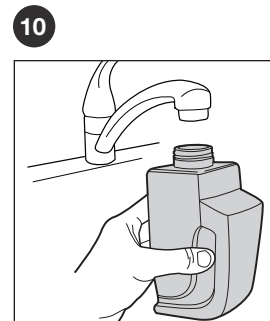 


Fill water tank at faucet.

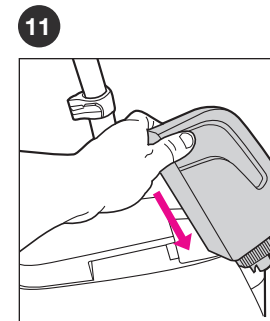 

Place water tank back on unit.

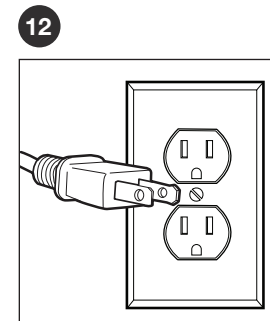 

Plug unit into electrical outlet.

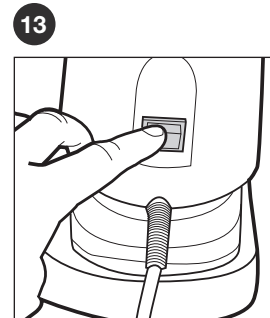 

Turn unit "ON". Wait 40 seconds for unit to heat up.

NOTE: Blue light will illuminate water tank when product is "ON".

You are now ready to steam your Garments!

IMPORTANT

When refilling the water tank always turn off and unplug the unit from the electrical outlet.