



EAGLE PEAK Slant Leg Canopy

8 ft x 8 ft

Instruction Manual

WARRANTY

For warranty, please **DO NOT** return your product or parts to the manufacturer without contacting the **Customer Service** first, the purchaser must obtain prior authorization from the **Customer Service**.

Please read and save the owners manual instructions before attempting to use your canopy.

1 Year Limited Warranty

Please email the **Customer Service** before returning the product to our shop. We warrants for a period of 1 year from the original date of purchase, this product against any defect in materials or workmanship. At its discretion, we may provide replacement parts for defective parts to original purchaser after its own review and examination. Original receipt or proof of purchase as well as proof of defect is required. We will not be responsible for shipping costs incurred outside the continental USA. Warranty is valid for the original purchaser for 1 year from the date of purchase and is not transferable.

This Warranty Does Not Cover

•This 1 Year Limited Warranty does not cover normal wear and tear, accidental or deliberate damages of the product, abuse or misuse, or use of this product that does not comply with the product instructions including damages from inclement weather conditions, such as wind, rain, hail, snow or other forces of nature. In case of inclement weather, take down and store the canopy, remove and store valuables, and seek appropriate shelter.

•Certain regions are extreme on canopy tops of any type. If you live in altitudes above 3000 feet the warranty period for your canopy top will be limited to 6 months from the date of original purchase.

•This warranty does not cover any product purchased through non authorized dealers and/or on-line auction websites.

•This warranty shall be void if as to any product which has been altered or modified in any manner.

We does not warrant against and under no circumstances shall we be liable or responsible for any personal loss, injury, or direct or indirect incidental or consequential damages resulted from the use of this product.

This product is designed and intended for commercial and recreational usage. Prolonged exposure to UV rays will cause any fabric to fade and deteriorate and is **NOT** covered by this 1 Year Limited Warranty.

All replacement products or parts will assume the remaining warranty of the original product. This warranty gives you specific legal rights. You may also have other rights, which vary from state to state.

It is your responsibility to read and save these instructions before attempting to set up your canopy. We would also like to suggest that you follow these safety precautions, care and maintenance tips when using your canopy.


1. Never set up or continue to use in any rain, wind or storm conditions, especially lightning storms. Damage can occur to your canopy and put you and others in potential danger.
2. We suggest that you take your time in order to avoid bending the frame or pinching your fingers or hands while opening and closing the frame.
3. Avoid setting up your canopy on steep inclines.
4. Do not use your canopy for permanent shelter. It is designed for temporary use only.
5. Keep your canopy away from heat and flames at all times. Do not barbecue or build fires under your canopy.
6. Never leave your canopy unattended.
7. Hand wash the canopy using only mild soap and water. Never use harsh detergents, abrasives or bleach. Do not machine wash fabric components.
8. Never fold or store your canopy when it is wet or damp. Let it dry completely to avoid mildew.
9. The frame **MUST** be staked or properly weighted down at all times.
10. For best results in keeping your top clean and avoid small rips and tears, it is recommended that the top be removed from the frame and stored in the carry bag after each use.

This product contains composite wood that complies with Phase 2 of CAATCM 93120 for formaldehyde.
Manufacture ID: Guangxi Gaolin Forestry Inc. 04/2025
TSCA Title VI Compliance

SET UP THE CANOPY


1 OPEN THE CANOPY FRAME

- Lift and partially pull the canopy frame apart.

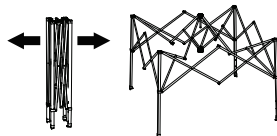


2 ATTACH THE CANOPY TOP

- Unfold the canopy top and place on top of the canopy frame.
- Secure the canopy top to the corners of the canopy frame using the Velcro connections.

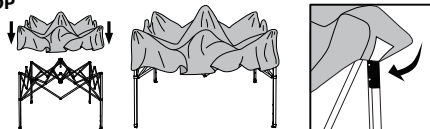


3 LOCK THE FRAME

- From under the canopy, use one hand to push the central bottom hub straight up until it clicks into the central pole.

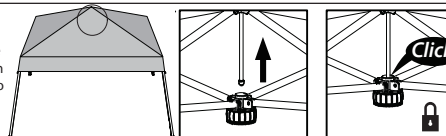


4 ADJUST THE CANOPY HEIGHT

- Finish locking the frame inside the canopy frame using the Velcro loops.
- Press the push pin on each leg and raise or lower to adjust the canopy height.

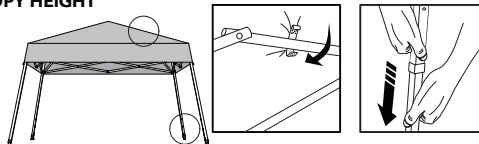


5 SECURE THE CANOPY IN PLACE

- Insert a stake into the foot of each canopy leg.
- Tie four ropes to the corners of the top fabric. Measure out from each leg to a proper distance and secure four stakes to the ground. Tie the ropes to the stakes in the ground. Ensure that the rope has the proper tension by adjusting the plastic adjusters on the ropes.

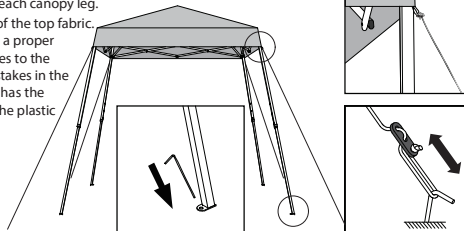

TAKE DOWN THE CANOPY

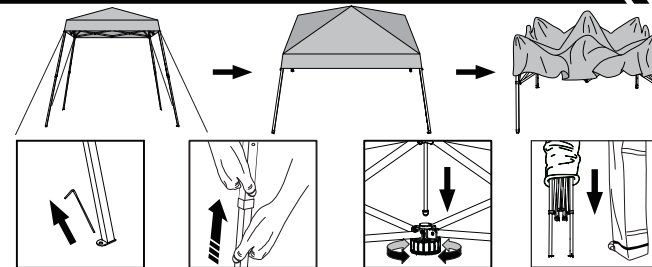

- Pull up all stakes from the ground. Press the push pin on each leg and retract the legs to their original height.
- Get in the underneath of canopy, rotate the central bottom hub to unlock the frame.
- Lift one corner of the frame until all legs are raised off the ground except for the one leg on the opposite corner. Push inward until the frame is fully closed.
- Slide the wheeled storage bag over the closed canopy frame. Close the zipper on the wheeled storage bag.

REPLACEMENT PARTS

To inquire about replacement parts, please email to service@eaglepeak.com.

