

1. Precautions

Do not perform any maintenance procedures on wall installations for 72-hours. Remove all metal objects before conducting maintenance and prohibit foot traffic until the floor is dry. Do not use dust mops treated with oils or silicones, acetone, strong alkaline cleaning agents, multi-surface cleaners, vinegar/ammonia/ citrus oil solutions, scouring powder, strong solvents, or abrasive cleaning pads, as these can damage the flooring. Do not wet mop or allow cleaning solutions to puddle or pool on the surface of the material. The application of a floor-finish is not recommended and will change the maintenance protocol.

2. Regular Cleaning

Wipe, dust-mop or vacuum the material to remove any dirt or grit – do not use a vacuum with a beater bar. Damp-mop or wipe the material as often as required using a clean cloth, a flat microfiber mop or a spray mop or a flat microfiber spray mop. Use a pH neutral, film-free and streak-free cleaner concentrate (diluted with potable water), available at local hardware stores. Make sure to change the cloth or mop pad as often as required.