

Installation

- A standard electrical supply (115 VAC only, 60 Hz, 10A), properly grounded in accordance with National Electrical Code and local codes and ordinances is required.
- **IMPORTANT:** Do not kink or pinch the power supply cord between the upright freezer and wall or cabinet.

MOVEMENT OF YOUR APPLIANCE

- Position the upright freezer in a dry and well-ventilated place. Keep the upright freezer away from direct sunlight, heaters, and corrosive gases or chemicals.
- Clean the interior surface with lukewarm water using a soft cloth.
- Place your appliance on a hard and level floor that is strong enough to support it when it is fully loaded.
- If the appliance is needed to be lifted, two or more people should move upright freezer. Failure to do so can result in back or other injury.
- We do not recommend installing the appliance on carpet.

LEVELING THE UPRIGHT FREEZER

It is important for the upright freezer to be leveled in order to work properly. It can be raised or lowered by turning the two leveling legs on the bottom of the appliance. If the upright freezer is not leveled during installation, the door may not close or seal properly, causing cooling, frost, or moisture problems. It is very important that the upright freezer is at level in order to function properly.

NOTE: This upright freezer comes with 2 leveling legs (1 large, 1 small)

We recommend using a carpenter's level to check the machine.

1. Place a carpenter's level on top of the product to see if the upright freezer is level from front to back and side to side.
2. Adjust the height of the legs as follows:
 - Turn the leveling leg to the right to lower that side of the upright freezer
 - Turn the leveling leg to the left to raise that side of the upright freezer

