

FLUIDMASTER® 800P-48GB DUAL FLUSH PUSH BUTTON INSTALLATION INSTRUCTIONS

TOOLS NEEDED




Ruler



Mini Hack Saw

DO NOT USE

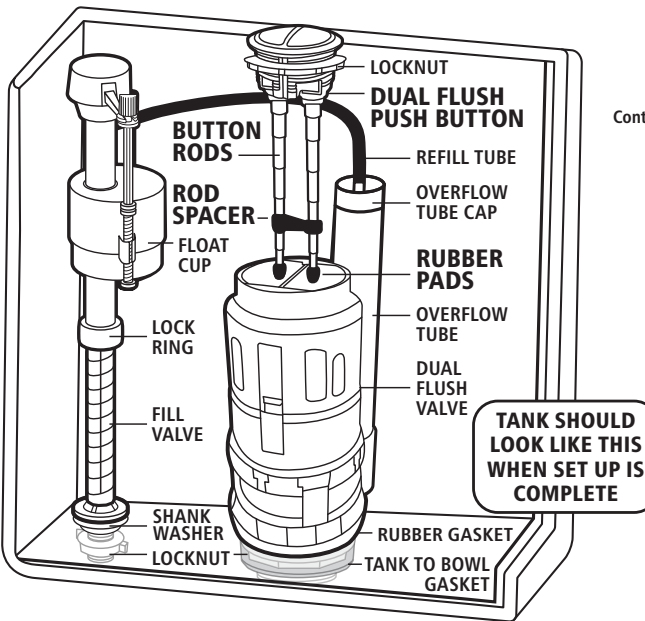

WARNING
DO NOT USE IN-TANK DROP-IN TOILET BOWL CLEANERS CONTAINING BLEACH OR CHLORINE. Use of such products will: (1) RESULT IN DAMAGE to tank components and MAY CAUSE FLOODING and PROPERTY DAMAGE and (2) VOID FLUIDMASTER WARRANTY.
Fluidmaster Flush 'n Sparkle Toilet Bowl Cleaning System is recommended for those choosing to use in-tank bowl cleaners and WILL NOT VOID the FLUIDMASTER WARRANTY because it will not damage the components. DO NOT over-tighten nuts or tank/bowl may crack. Always use quality Fluidmaster parts when installing or repairing. Fluidmaster will not be responsible or liable for use of non-Fluidmaster parts during installation or repair.

LIMITED FIVE-YEAR EXPRESS WARRANTY

Subject to the "Exclusions" set forth below, Fluidmaster Inc. promises to the consumer to repair, or at the option of Fluidmaster Inc. to replace any part of this plumbing product which proves to be defective in workmanship or materials under normal use for five years from the date of purchase. All costs of removal, transportation and reinstallation to obtain warranty service shall be paid by the consumer. During this "Limited Five Year Express Warranty," Fluidmaster Inc. will provide, subject to the "Exclusions" section set forth below, all replacement parts free of charge, necessary to correct such defects. This "Limited Five Year Warranty" is null and void if this plumbing product has not been installed and maintained in accordance with all written instructions accompanying the product, and if non-Fluidmaster Inc. parts are used in installation.

EXCLUSIONS: FLUIDMASTER INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING COSTS OF INSTALLATION, WATER DAMAGE, PERSONAL INJURY OR FOR ANY DAMAGES RESULTING FROM ABUSE OR MISUSE OF THE PRODUCT, FROM OVERTIGHTENING OR FROM FAILURE TO INSTALL OR MAINTAIN THIS PLUMBING PRODUCT IN ACCORDANCE WITH THE WRITTEN INSTRUCTIONS, INCLUDING USE OF NON-FLUIDMASTER PARTS. DO NOT USE IN-TANK DROP-IN TOILET BOWL CLEANERS CONTAINING BLEACH OR CHLORINE. USE OF SUCH PRODUCTS WILL RESULT IN DAMAGE TO TANK COMPONENTS AND MAY CAUSE FLOODING AND PROPERTY DAMAGE. USE OF SUCH PRODUCTS WILL VOID THIS WARRANTY.



PARTS IN THIS KIT:

(1) Replacement Dual Flush Push Button - includes rods, spacer and rubber pads

INSTALLATION





1 Remove Existing Button

- A. Remove the existing button from the tank lid by unscrewing the locknut from the underside of the tank lid.
- B. Once the locknut is removed, remove the entire button assembly with rods from the tank.
- C. Measure the length of the rods of the existing buttons.

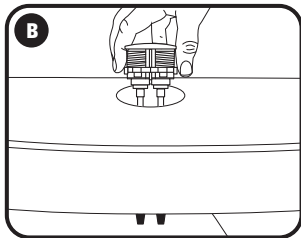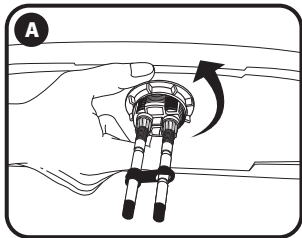


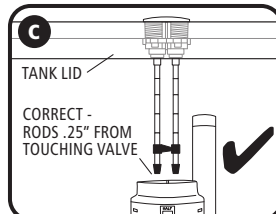
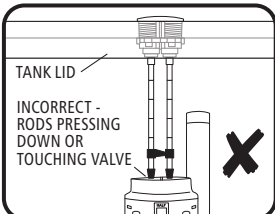
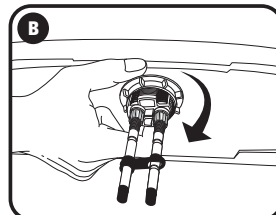
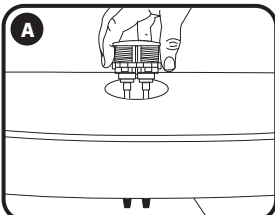
2 Cut and Size Replacement Button

- A. Remove the locknut from the button housing and remove the rubber pads at the bottom of the rods and the spacer from the Fluidmaster push button.
- B. Cut the rods of the Fluidmaster replacement button to match the length of the existing button being removed.
- C. Re-attach the spacer and rubber pads on to the rods.

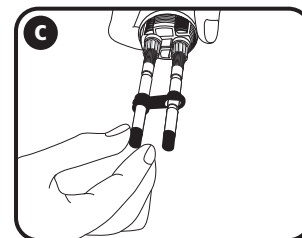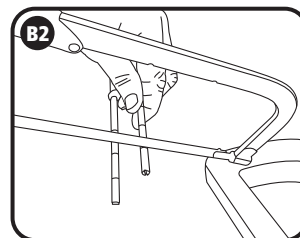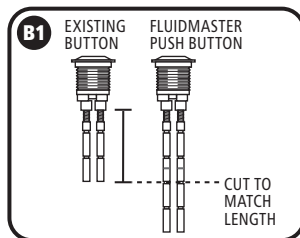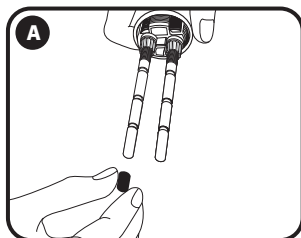

3 Install Replacement Button

- A. Place the button into the tank lid being sure to properly align the full and half flush buttons to match the buttons on the flush valve. 
- B. Tighten the locknut to the button housing to secure the button in place (hand tighten only).
- C. Replace the lid on the tank. If the rods prevent the lid from being replaced, cut the rods one segment at a time until it is possible to replace the lid without the rods coming into contact with the valve.



4 Finishing Up

- A. Allow the tank to completely fill with water. If the toilet "runs" with water constantly running from the tank to the bowl, it is possible that the buttons rods are too long. Remove the lid. If the running stops, the rods are touching the top of the valve and are too long. Cut one segment and replace the lid.
- B. Press the half flush button. If the toilet does not flush, it could be that the rods are too short. The rods can be extended by rotating them counter-clockwise until the proper length is achieved. Once the proper length has been achieved, tighten the black locknuts at the base of the rods.

