


## Replacement Parts List — 9949A Series

1	9949A1201	Lid Assy (Red)	9	5010000748	Match Light Chain
2	9949-1191	Hinge Kit (2 pk)	10	9949-1961	Tool Holder
3	5010000747	Grease Tray	11	5010000777	Control Knob
4	5010000778	Side Table w/ Hardware	12	9949A1551	Cooktop
5	9949-2891	Spring Clip (2 pk)	13	5010000743	Regulator Assy
6	9949-2071	Hubcap	14	5010000776	Lid Handle
7	9949-2401	Wheel w/ Hardware	15	9949-1141	Lid Latch
8	9949-5601	Handle Assy	16	9942-5851	Ignitor/Electrode (not shown)

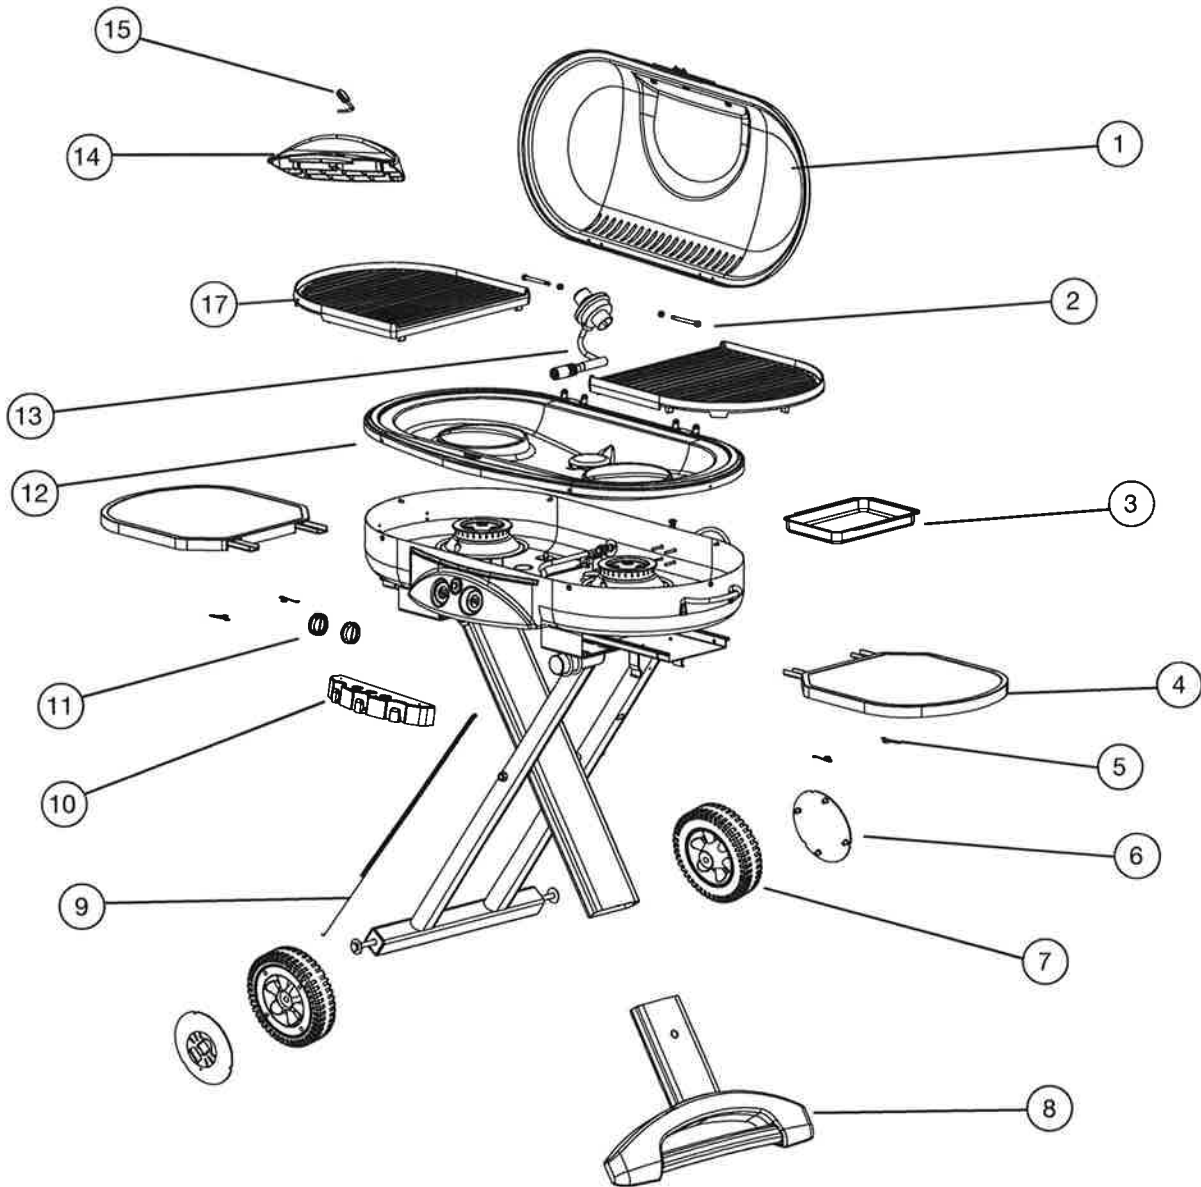

- Additional Accessories Sold Separately
- 9949-1001 Patio Cover (Not Shown)
  - 2000020981 Full Griddle (Not Shown)
  - 2000020980 Carry Case (Not Shown)
  - 2000019875 Stove Grate (Not Shown)
  - 2000019874 Griddle (Not Shown)
  - 2000019873 Grill Grate ( 17 )