


PARTS DIAGRAM

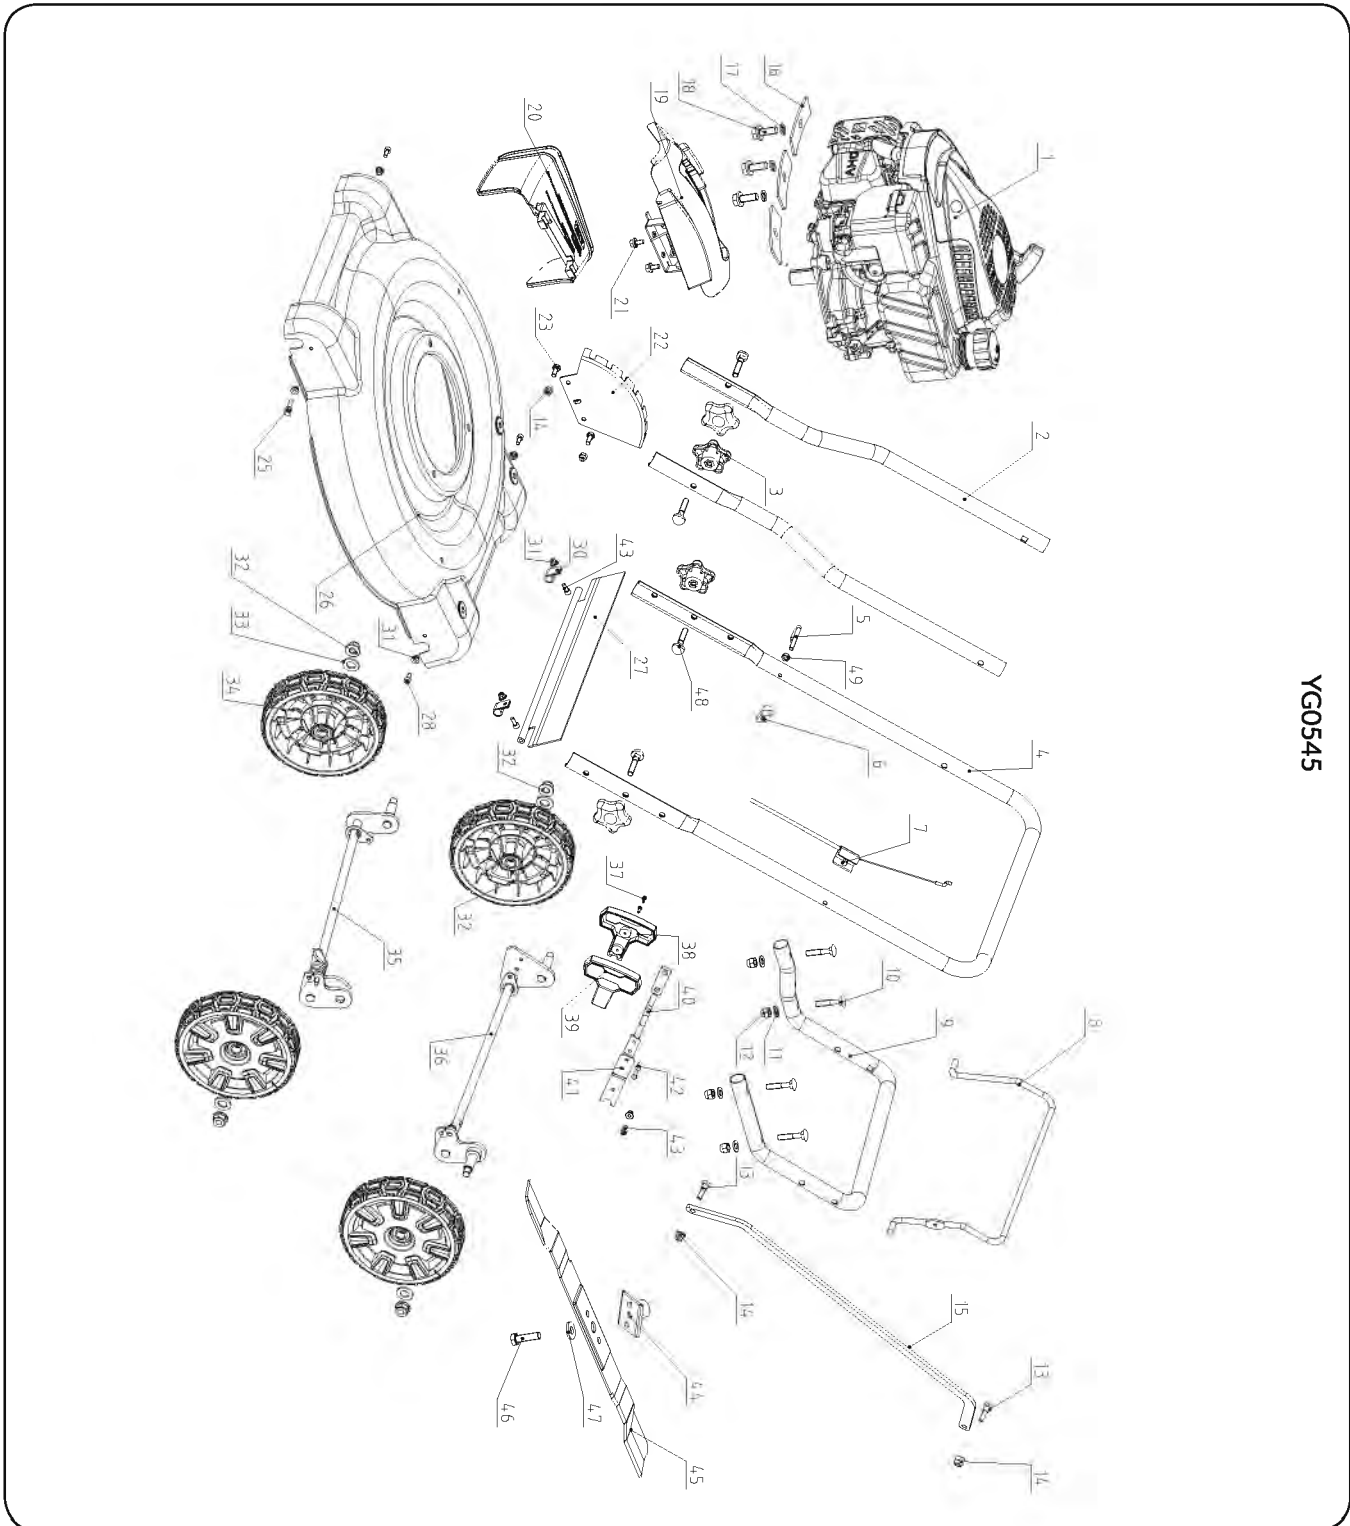

YG0545

YG0545 PARTS LIST

No.	Description	Qty
1	Engine	1
2	Intermediate Connecting Handlebar	2
3	Star Shaped Head Clamping Nuts Knob	4
4	Upper Handle	1
5	Rope Guide	1
6	Guide Knob	1
7	Engine Start/Stop Control Cable	1
8	Engine Start/Stop Control	1
9	Lower Handle	1
10	Bolt M8x40	4
11	Big Washer 8	4
12	Nut M8	4
13	Positioning Bolt	2
14	Nut M6	4
15	Height Adjustment Connecting Rod	1
16	Engine Bolt Gasket	3
17	Spring Washer 8	3
18	Bolt M8x25 (Torque 18-22 Nm)	3
19	Mulching Cover Assembly	1
20	Side Discharge Chute	1
21	Hexagon Head Self-tapping Locking Screw M6x12	2
22	Height Adjustment Positioning Plate	1
23	Bolt M6x16	2
24	Discontinued	N/A
25	Groove Bolt	2
26	Cutting Deck	1
27	Shield-Trailing	1
28	Bolt M5x12	2
29	Discontinued	N/A
30	Trailing Shield Holder	2

No.	Description	Qty
31	Nut M5	7
32	Nut M10	4
33	Washer 14	4
34	Wheel	4
35	Front Wheel Axle	1
36	Rear Wheel Axle	1
37	Screw ST3.5*13	2
38	Height Adjustment Handlebar Knob-Right	1
39	Height Adjustment Handlebar Knob-Left	1
40	Height Adjustment Handlebar	1
41	Arm Pivot	1
42	Rivet 4 x10	2
43	Bolt M5x16	3
44	Blade Support	1
45	Blade	1
46	Blade Bolt 3/8-24UNF-2A	1
47	Spring Washer for Blade	1
48	Carriage Bolt	4
49	Thin Nut M5	1