

SOLAR GUTTER / FACIA / WALL LIGHT

Use and Care Guide

TOOLS REQUIRED




Phillips Screwdriver




Electric Drill


HARDWARE INCLUDED

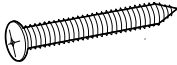

AA - Mounting Screw
x 2

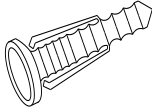

BB - Wall Anchor
x 2

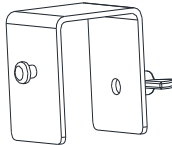

CC – Mounting Bracket
x 2



Installation

Gutter / Facia Mounting

- To mount the solar light to a gutter, place one mounting bracket (CC) to the edge of the gutter and secure it with the butterfly screw. Place another mounting bracket (CC) to the edge of gutter, measure and adjust this mounting bracket at the location of both hanging screws 5 1/2 in. on-center, and then secure it with the butterfly screw.
- Adjust the hanging screws of the mounting bracket (CC), leaving about 3/16 in. of the screws (AA) sticking out of the bracket surface.
- Align and place the mounting holes on the back plate of the solar light over the hanging screws of the mounting brackets (CC).
- To mount the solar light to a hard facia, using the mounting brackets (CC) upside down, follow the same steps as Gutter Mounting above.
- To mount the solar light to a wood facia, as an optional mounting way, measure and mark on the wood surface at the locations of both mounting screws 5 1/2 in. on-center.
- Insert the mounting screws (AA) into the wood facia at the marked locations, leaving about 3/16 in. of the screws (AA) sticking out of the wood surface.
- Align and place the mounting holes on the back plate of the solar light over the mounting screws (AA).

Wall / Fence / Deck Rail Mounting

- If mounting to a wood surface of fence or deck rail, measure and mark on the wood surface at the locations of both mounting screws 5 1/2 in. on-center.
- Insert the two mounting screws (AA) into the wood surface at the marked locations, leaving about 3/16 in. of the screws (AA) sticking out of the wood surface.
- If mounting to a wall broad or brick walls, measure and mark on the wall at the locations of both mounting screws 5 1/2 in. on-center. Drill two 7/32 in. holes on the wall at the marked locations.
- Insert the plastic anchors (BB) into the holes. Insert the mounting screws (AA) into the anchors (BB), leaving about 3/16 in. of the mounting screws (AA) sticking out of the wall surface.
- Align and place the mounting holes on the back plate of the solar light over the mounting screws (AA).

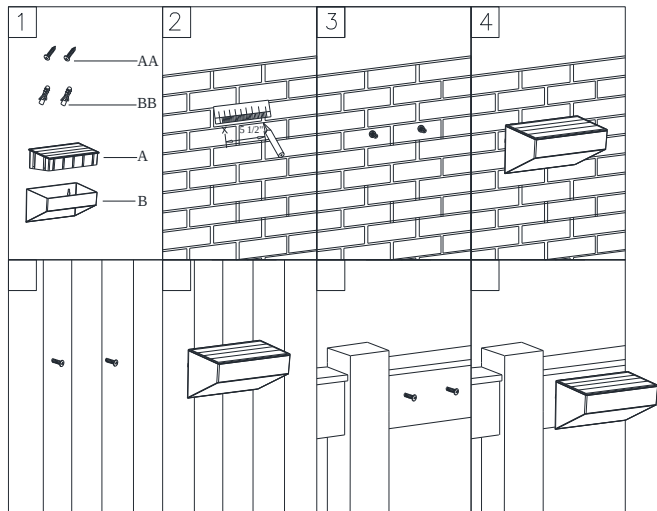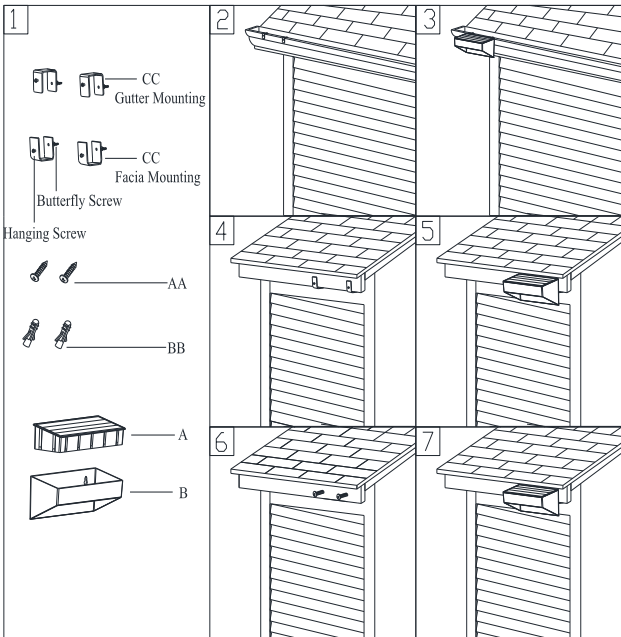

IMPORTANT: Prior to use, set the ON/OFF switch located on the bottom plate of the solar light to the ON position and allow it to charge a full sunny day.



IMPORTANT: Ensure the mounting location for your solar light allows the solar panel to receive direct sunlight. Do not locate the product in shaded areas as this will significantly reduce performance.



NOTE: The solar light is equipped with a photosensor that turns the unit on at dusk and off at dawn. Ambient light can affect the operation of the photosensor.

Safety Information



WARNING: Your solar light may not function in temperatures below -4°F (-20°C) or above 140°F (60°C).



CAUTION: Use a rechargeable battery only. Recycle or dispose of batteries properly.



CAUTION: Do not open, short circuit, or mutilate batteries as injury may occur.

Maintenance

Replacing the battery



IMPORTANT: Dispose of the battery in accordance with local, state, and federal regulations.




IMPORTANT: When storing any solar product for an extended period of time, remove the batteries. Storing any solar product without regular recharge or removal of batteries could cause permanent damage to the rechargeable batteries.



NOTE: To reduce the risk of damage to the electrical connections, exercise caution when separating the bottom plate (D) from the top cap (A).



NOTE: Use one 18650 size, 2000mAh, 3.7V Lithium ion rechargeable battery. For best performance, replace with a new Lithium ion rechargeable battery annually.

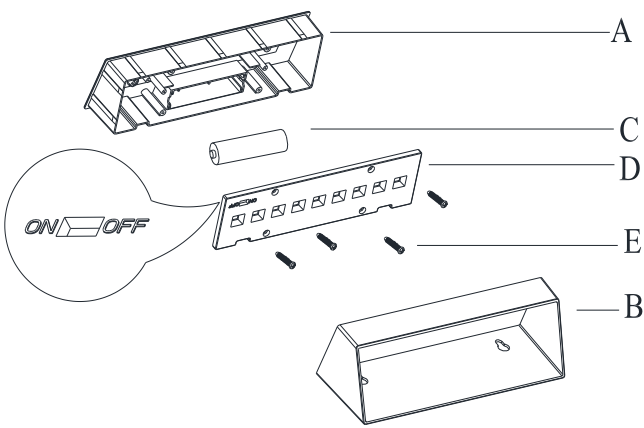

- ❑ Remove the top cap (A) from the lamp housing (B).
- ❑ Unscrew the bottom plate (D) from the top cap (A).
- ❑ Remove the old battery (C) from the battery compartment located on the top cap (A). Replace with a new Lithium ion rechargeable battery – The recommended replacement battery capacity should be 2000mAh above.
- ❑ Replace the bottom plate (D) with the 4 screws (E).

Troubleshooting

Problem	Possible Cause	Solution
The nightly run time is shorter.	The battery is not fully charged.	Ensure the solar light is located in an area where it can receive the maximum amount of full, direct sunlight every day. Keeping the solar panel clean is equally important to ensure the maximum charging performance.
	The battery is reaching the end of its useful life.	Replace the old battery with a new 3.7V Lithium ion rechargeable battery.
The solar light does not turn on at night.	The solar light is set to OFF.	Your solar light is equipped with an ON/OFF switch on the back plate of the light. This switch must be set to ON prior to use.
	The solar light is installed close to other light sources, which may keep the solar light from turning on at night automatically.	Relocate the fixture or eliminate other light sources.

Care and Cleaning

- ❑ The solar panel should be cleaned periodically with a damp cloth to help maintain optimum performance.
- ❑ Do not use any cleaners with chemicals, solvents, or harsh abrasives.

Warranty

ONE YEAR LIMITED WARRANTY

WHAT IS COVERED

The manufacturer warrants this product to be free of defects in material and workmanship for a period of one (1) year from the date of purchase. This warranty only applies to the original consumer purchaser and only to products used in normal use and service. The manufacturer’s only obligation and your exclusive remedy, is the repair or replacement of the product at the manufacturer’s discretion, provided that the product has not been damaged through misuse, abuse, accident, modification, alteration, neglect, or mishandling. Proof of purchase and evidence of manufacturer’s date coding must accompany all warranty claims. Manufacturer’s date coding is printed and adhered to each product.

WHAT IS NOT COVERED

This warranty does not apply to products that are found to have been improperly installed, set-up, or used in any way not in accordance with the instructions supplied with the product. This warranty does not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, or faulty installation. Batteries supplied with this product are not included in this warranty. This warranty shall not apply to the finish on any portion of the product, such as surface and/or weathering, as this is considered normal wear and tear. The manufacturer does not warrant and specially disclaims any warranty, whether express or implied, of fitness for a particular purpose, other than the warranty contained herein. This warranty does not cover consequential or incidental loss or damage, including but not limited to any labor/expense costs involved in the replacement or repair of the product.

Contact the Customer Service Team at 1-830-249-1200 or CustomerService@Creative-prc.us