

## FAQ:

**Question: Does it fit under a table? What's the high from the tray high to the floor?**

Answer: The total height is 40.9 inch, and the high from the tray to the floor is 32.7inch.

**Question: How to clean the seat cushions?**

Answer: Our seat cushions are removable, you can easily wash it with water, the rest of the chair can be washed with a damp cloth.

**Question: From what age can you use this?**

Answer: This high chair is for use from approximately six months (when your child can sit unassisted) and up in the highchair. For use from approximately 2 years to approximately 6 years (limit 39.7lbs) when converted to a play table and chair (maximum ages vary depending on the child's size/weight and activity level).

**Question: When used a table & chair, is the chair still connected to the table?**

Answer: Converts back and forth from a full-size highchair to a separate play table and chair.

**Question: What materials is this made of ?**

Answer: The machine washable seat pad is 100% polyester fabric (100% polyester fill). Chair and Table are made of PE plastic; insert feeding tray is PP plastic.

**Question: Is this chair adjustable?**

Answer: This chair has three adjustable angles and a five-point seat belt to make it easier for your child to sit safely and comfortably.