 


USE AND CARE GUIDE

CRYSTAL CAPE CHAIR

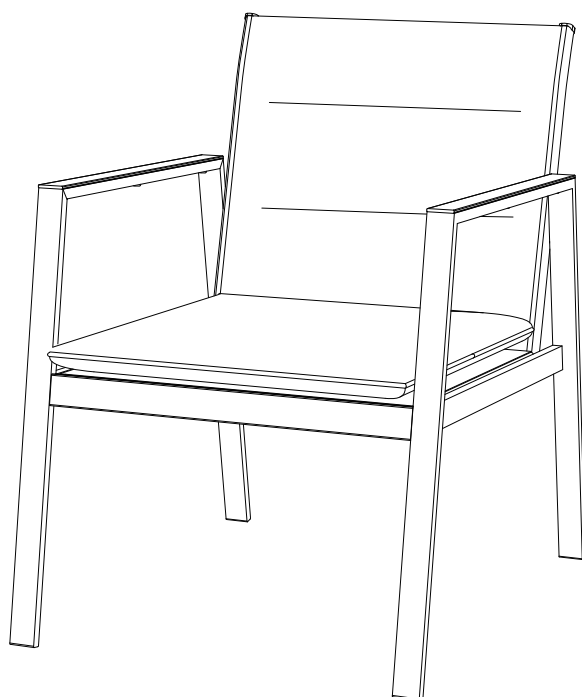

Questions, problems, missing parts?
Before returning to the store, call Customer Service
8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-877-527-0313

HOMEDEPOT.COM

THANK YOU

We appreciate the trust and confidence you have placed in StyleWell through the purchase of this chair. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing StyleWell!

Table of Contents

Table of Contents	2	Hardware Included.	3
Safety Information	2	Chair Package Contents.	4
Warranty	2	Assembly.	5
What is covered	2	Care and Cleaning	7
What is not covered	2		
Pre-Assembly	3		
Planning Assembly.	3		

Important Safety Instructions

SAVE THESE INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE

To reduce the risk of injury to persons:

1. Close supervision is necessary when this furnishing is used by or near children, or disabled persons, if applicable.
2. Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.



CAUTION: Read all of the instructions in this manual before you begin assembly. Failure to do so may result in faulty assembly and potential injury!

Warranty

1 YEAR WARRANTY

WHAT IS COVERED

We warrant the product to be free of manufacturing defects to the original purchaser for one year.

WHAT IS NOT COVERED

It remains the customer's responsibility for freight and packaging charges to and from our service center. This warranty does not cover commercial use, hardware, acts of nature, freezing, or abusive use. In addition, purchased parts are not covered under this warranty.

We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production.

Contact Customer Care at 1-877-527-0313 or visit www.HomeDepot.com.

Pre-Assembly

PLANNING ASSEMBLY

Please read this entire instruction manual prior to assembly.

Identify all parts packed in the carton against the parts list. Remove all protective materials and place the parts on a non-abrasive surface to avoid scratching.

 


NOTE: More than one person may be required to assemble this product.


HARDWARE INCLUDED



NOTE: Hardware not shown to actual size.

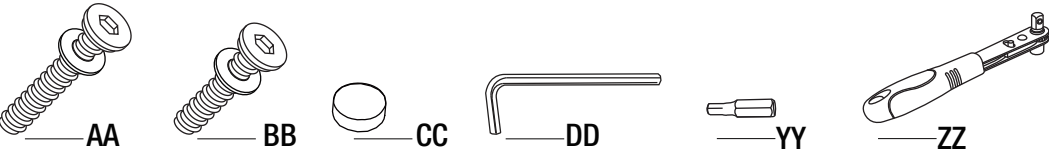

Part	Description	Quantity
AA	M6x45 bolt	2
BB	M6x30 bolt	6
CC	Bolt cap	8
DD	Allen driver	1
YY	Hex. screw (6 mm)	1
ZZ	Ratchet wrench	1

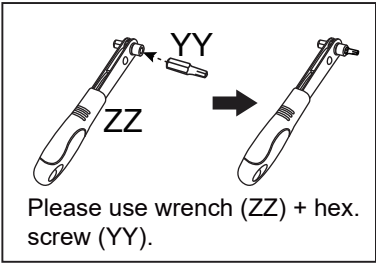 

Please use wrench (ZZ) + hex. screw (YY).



Tighten the screws



 
Loosen the screws

Pre-Assembly

CHAIR PACKAGE CONTENTS



IMPORTANT: Do not fully tighten bolts/screws until all pieces are loosely assembled.

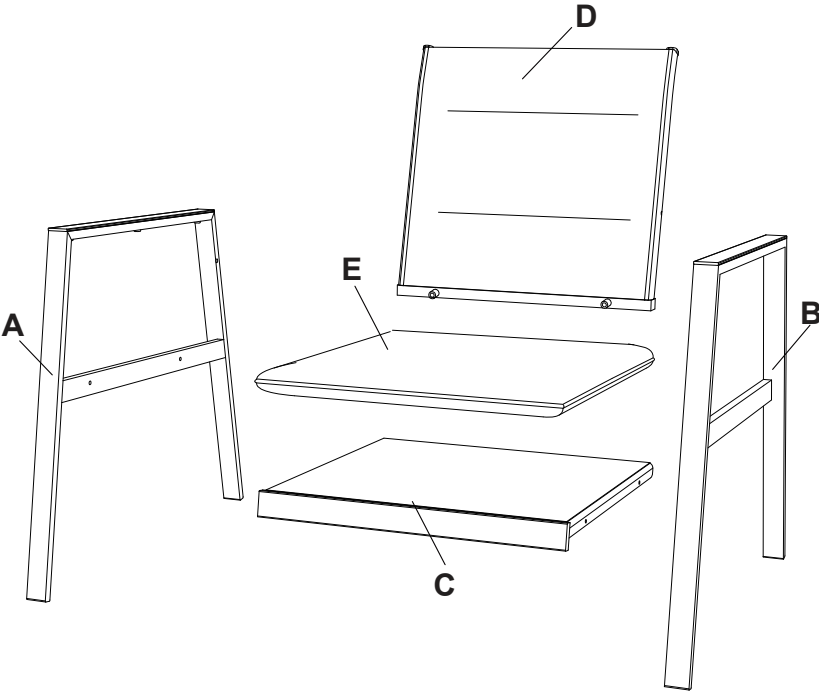

Part	Description	Quantity
A	Right arm	1
B	Left arm	1
C	Chair seat	1
D	Chair back	1
E	Seat cushion	1


Assembly

1 Attach the chair back to the chair seat

- Attach the chair back (D) to the chair seat (C) using M6 bolts (AA).



 NOTE: Please ensure all the bolts are assembled correctly and use the allen driver (DD) to tighten. Do not fully tighten bolts/screws until all pieces are loosely assembled. Add corresponding plastic caps (CC) after final assembly finished.

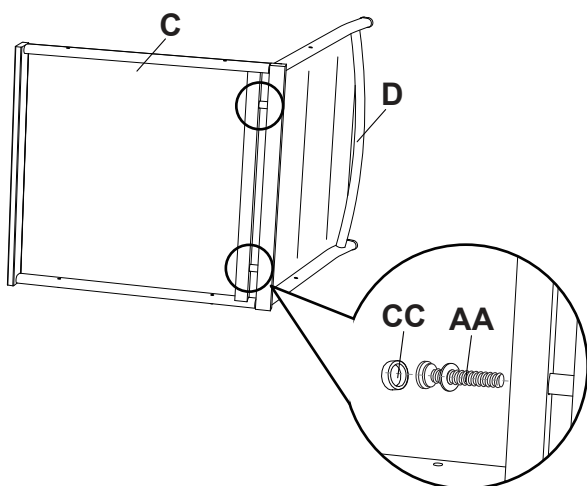


2 Attach the chair seat to the right arm

- Attach the chair seat (C) to the right arm (A) using M6 bolts (BB).




 NOTE: Please ensure all the bolts are assembled correctly and use the allen driver (DD) to tighten. Do not fully tighten bolts/screws until all pieces are loosely assembled. Add corresponding plastic caps (CC) after final assembly finished.

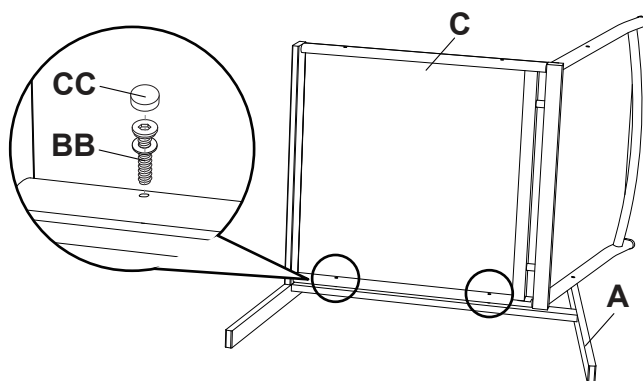


3 Attach the chair back to the right arm

 - Attach the chair back (D) to the right arm (A) using an M6 bolt (BB).

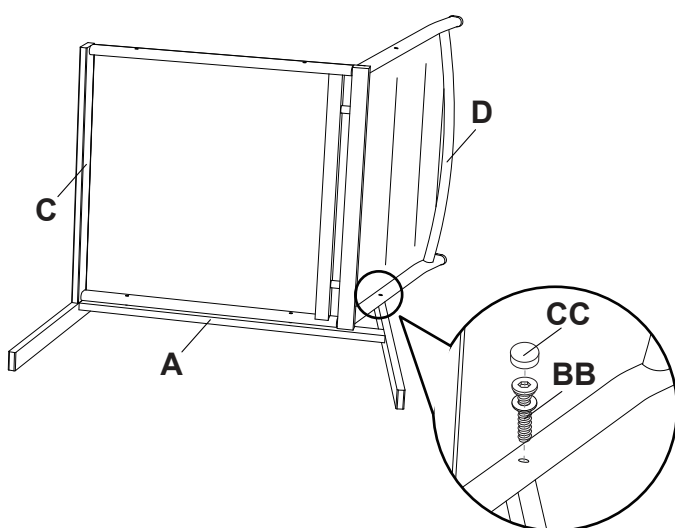

4 Attach the left arm to the chair seat

 - Attach the left arm (B) to the chair seat (C) using M6 bolts (BB).

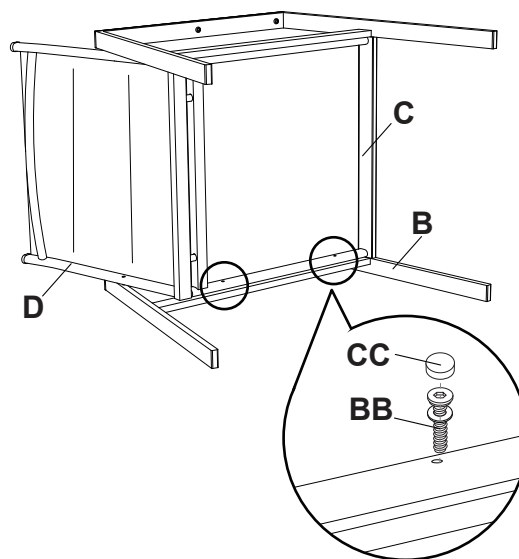


Assembly (continued)

5 Attach the left arm to the chair back

- Attach the left arm (B) to the chair back (D) using an M6 bolt (BB).




 NOTE: Please ensure all the bolts are assembled correctly and use the allen driver (DD) to tighten. Do not fully tighten bolts/screws until all pieces are loosely assembled. Add corresponding plastic caps (CC) after final assembly finished.

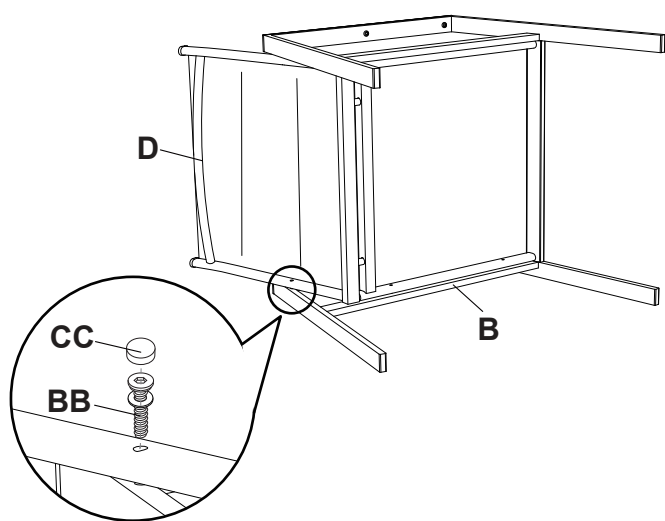

6 Add the cushion

 - Add the seat cushion (E) to the chair.

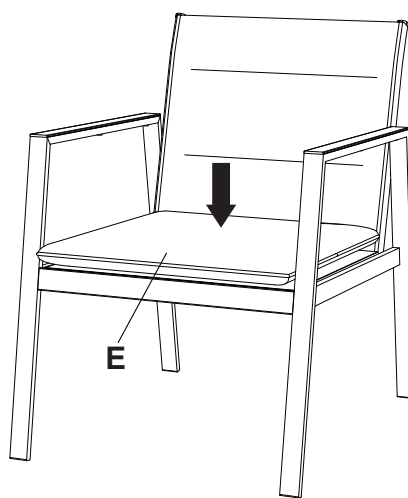

Care and Cleaning

- Do not allow water to build up in the frames. This will cause corrosion and possible freezing damage in cold climates.
- Use a mild soap and water for normal cleaning. Do not use janitorial or alcohol based cleaners. Some cleaners may be marked as natural, but some ingredients may cause discoloration or have an adverse reaction to your finish.
- Rinse with clean water and dry with a soft, absorbent cloth towel.
- Treat the frames with a liquid wax for maximum protection against UV rays and/or salty, damp air.
- Furniture covers are a great way to protect your investment from harsh elements of weather and UV light. However, it is important to ensure the furniture and covers are free of moisture and debris before covering. It is also necessary to promptly uncover furniture after precipitation and during periods of high humidity to prevent moisture build up. Failure to do so can lead to permanent surface and finish damage, which is not covered under warranty.

StyleWell.™

Questions, problems, missing parts?
Before returning to the store, call Customer Service
8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

 
1-877-527-0313

HOMEDEPOT.COM

Retain this manual for future use.

USE AND CARE GUIDE

CRYSTAL CAPE LOVESEAT

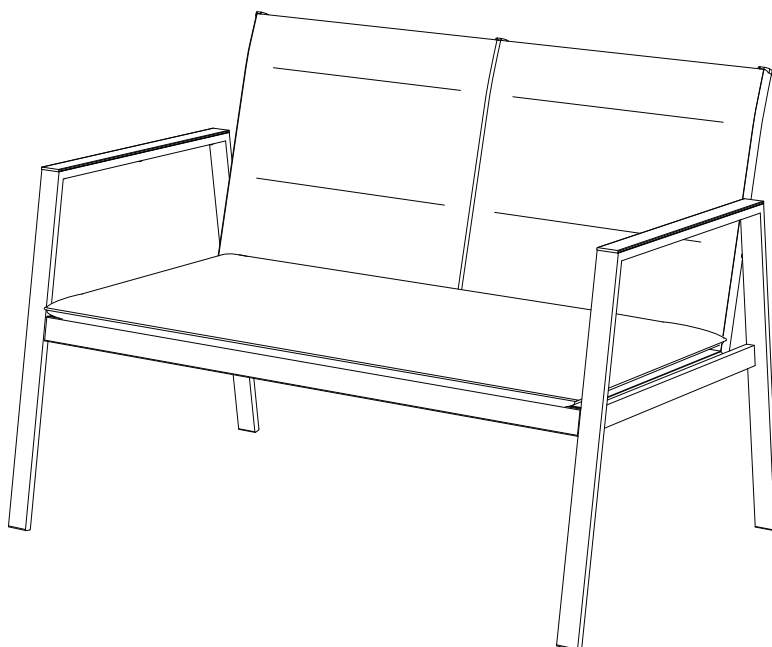

Questions, problems, missing parts?
Before returning to the store, call Customer Service
8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-877-527-0313

HOMEDEPOT.COM

THANK YOU

We appreciate the trust and confidence you have placed in StyleWell through the purchase of this chair. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing StyleWell!

Table of Contents

Table of Contents	2	Hardware Included.	3
Safety Information	2	Loveseat Package Contents	4
Warranty	2	Assembly	5
What is covered	2	Care and Cleaning	7
What is not covered	2		
Pre-Assembly	3		
Planning Assembly	3		

Important Safety Instructions

SAVE THESE INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE

To reduce the risk of injury to persons:

1. Close supervision is necessary when this furnishing is used by or near children, or disabled persons, if applicable.
2. Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.



CAUTION: Read all of the instructions in this manual before you begin assembly. Failure to do so may result in faulty assembly and potential injury!

Warranty

1 YEAR WARRANTY

WHAT IS COVERED

We warrant the product to be free of manufacturing defects to the original purchaser for one year.

WHAT IS NOT COVERED

It remains the customer's responsibility for freight and packaging charges to and from our service center. This warranty does not cover commercial use, hardware, acts of nature, freezing, or abusive use. In addition, purchased parts are not covered under this warranty.

We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production.

Contact Customer Care at 1-877-527-0313 or visit www.HomeDepot.com.

Pre-Assembly

PLANNING ASSEMBLY

Please read this entire instruction manual prior to assembly.

Identify all parts packed in the carton against the parts list. Remove all protective materials and place the parts on a non-abrasive surface to avoid scratching.

 


NOTE: More than one person may be required to assemble this product.


HARDWARE INCLUDED




NOTE: Hardware not shown to actual size.

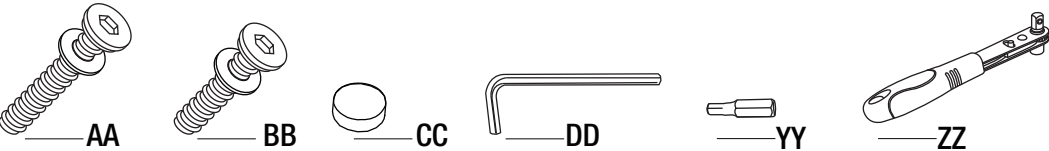


Part	Description	Quantity
AA	M6x45 bolt	3
BB	M6x30 bolt	6
CC	Bolt cap	9
DD	Allen driver	1
YY	Hex. screw (6 mm)	1
ZZ	Ratchet wrench	1

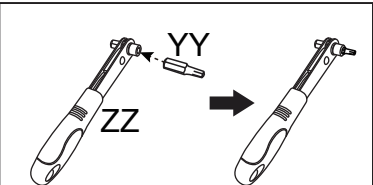 

 Please use wrench (ZZ) + hex. screw (YY).

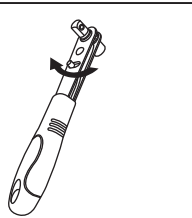

Tighten the screws

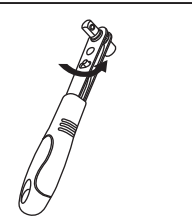 


Loosen the screws

Pre-Assembly

LOVESEAT PACKAGE CONTENTS



 IMPORTANT: Do not fully tighten bolts/screws until all pieces are loosely assembled.

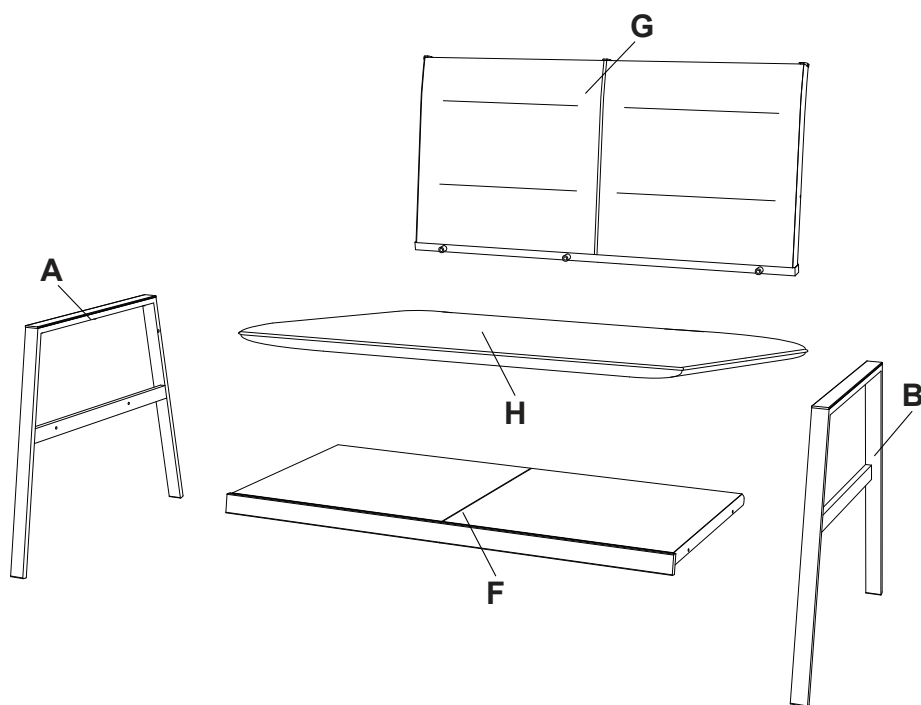

Part	Description	Quantity
A	Right arm	1
B	Left arm	1
F	Loveseat seat	1
G	Loveseat back	1
H	Seat cushion	1


Assembly

1 Attach the loveseat back to the seat

- Attach the loveseat back (G) to the loveseat seat (F) using M6 bolts (AA).



 NOTE: Please ensure all the bolts are assembled correctly and use the allen driver (DD) to tighten. Do not fully tighten bolts/screws until all pieces are loosely assembled. Add corresponding plastic caps (CC) after final assembly finished.

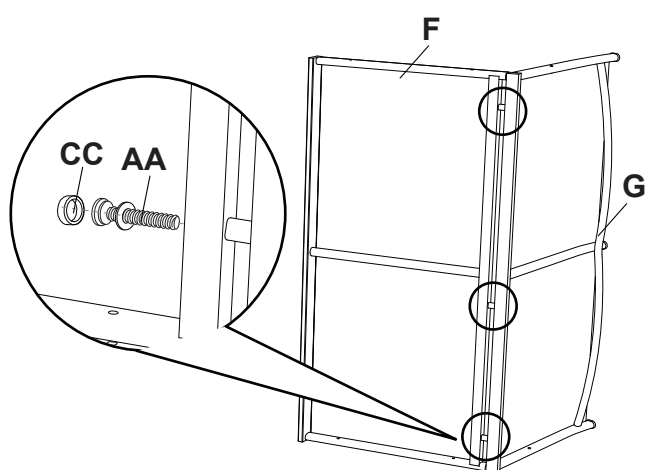


2 Attach the loveseat seat to the right arm

- Attach the loveseat seat (F) to the right arm (A) using M6 bolts (BB).




 NOTE: Please ensure all the bolts are assembled correctly and use the allen driver (DD) to tighten. Do not fully tighten bolts/screws until all pieces are loosely assembled. Add corresponding plastic caps (CC) after final assembly finished.

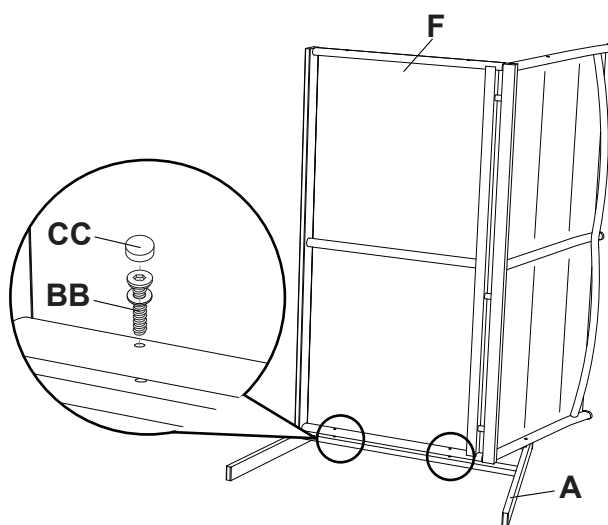


3 Attach the loveseat back to the right arm

 - Attach the loveseat back (G) to the right arm (A) using an M6 bolt (BB).

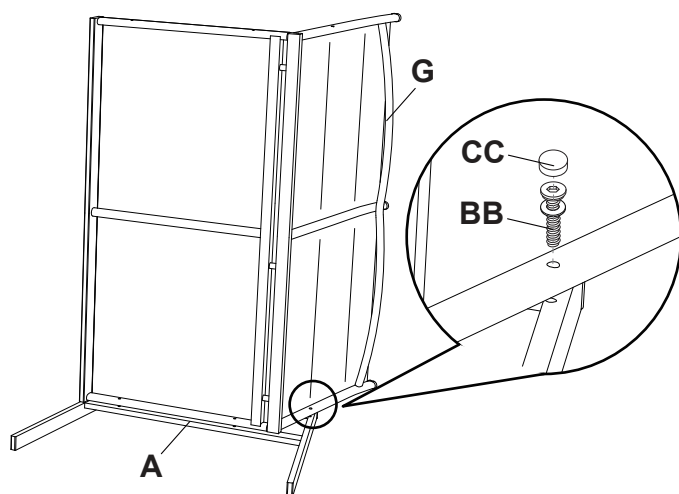

4 Attach the left arm to the loveseat seat

 - Attach the left arm (B) to the loveseat seat (F) using M6 bolts (BB).

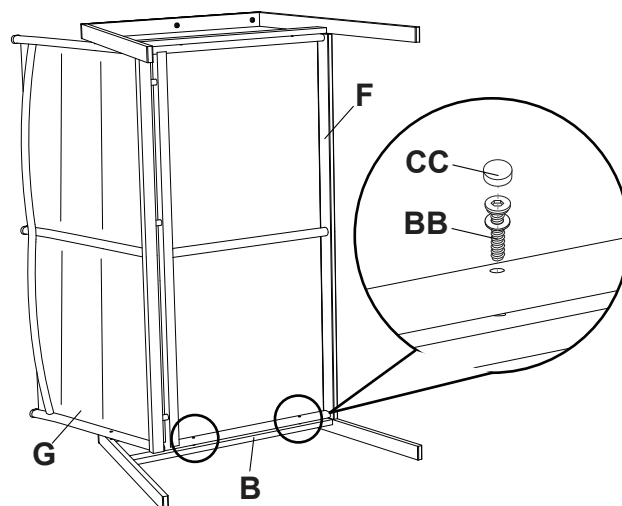


Assembly (continued)

5 Attach the left arm to the loveseat back

- Attach the left arm (B) to the loveseat back (G) using an M6 bolt (BB).




 NOTE: Please ensure all the bolts are assembled correctly and use the allen driver (DD) to tighten. Do not fully tighten bolts/screws until all pieces are loosely assembled. Add corresponding plastic caps (CC) after final assembly finished.

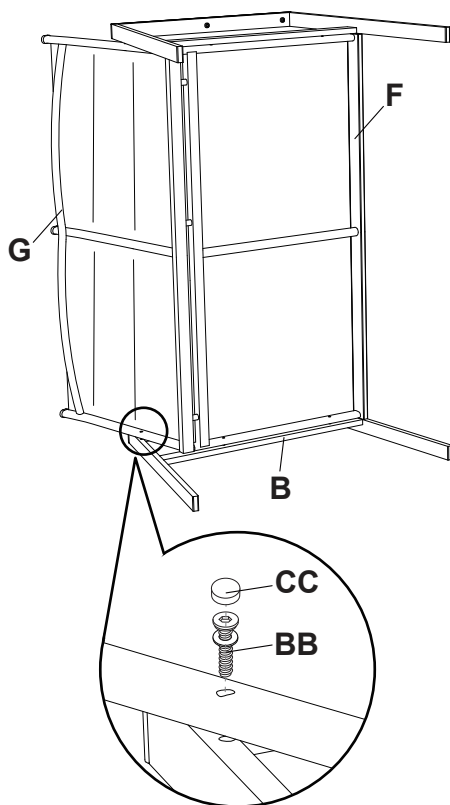

6 Add the cushion

 - Add the seat cushion (H) on the loveseat.

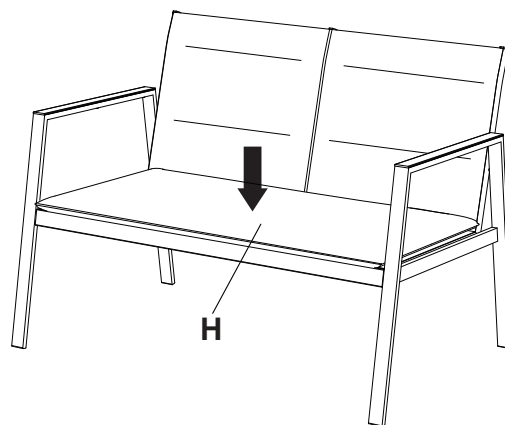

Care and Cleaning

- Do not allow water to build up in the frames. This will cause corrosion and possible freezing damage in cold climates.
- Use a mild soap and water for normal cleaning. Do not use janitorial or alcohol based cleaners. Some cleaners may be marked as natural, but some ingredients may cause discoloration or have an adverse reaction to your finish.
- Rinse with clean water and dry with a soft, absorbent cloth towel.
- Treat the frames with a liquid wax for maximum protection against UV rays and/or salty, damp air.
- Furniture covers are a great way to protect your investment from harsh elements of weather and UV light. However, it is important to ensure the furniture and covers are free of moisture and debris before covering. It is also necessary to promptly uncover furniture after precipitation and during periods of high humidity to prevent moisture build up. Failure to do so can lead to permanent surface and finish damage, which is not covered under warranty.

StyleWell.TM

Questions, problems, missing parts?
Before returning to the store, call Customer Service
8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

 
1-877-527-0313

HOMEDEPOT.COM

Retain this manual for future use.

USE AND CARE GUIDE

CRYSTAL CAPE COFFEE TABLE

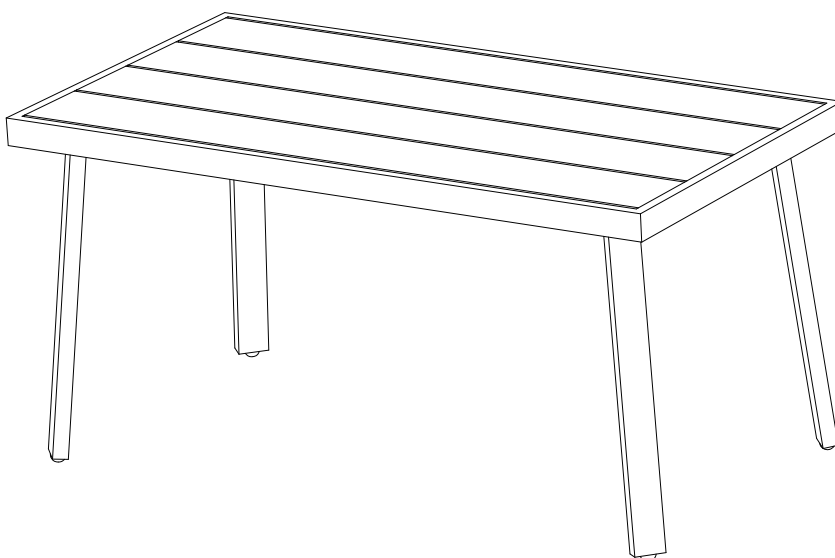

Questions, problems, missing parts?
Before returning to the store, call Customer Service
8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-877-527-0313

HOMEDEPOT.COM

THANK YOU

We appreciate the trust and confidence you have placed in StyleWell through the purchase of this table. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing StyleWell!!

Table of Contents

Table of Contents	2	Hardware Included.	3
Safety Information	2	Table Package Contents.	4
Warranty	2	Assembly.	5
What is covered	2	Care and Cleaning	6
What is not covered	2		
Pre-Assembly	3		
Planning Assembly.	3		

Important Safety Instructions

SAVE THESE INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE

To reduce the risk of injury to persons:

1. Close supervision is necessary when this furnishing is used by or near children, or disabled persons, if applicable.
2. Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.



CAUTION: Read all of the instructions in this manual before you begin assembly. Failure to do so may result in faulty assembly and potential injury!

Warranty

1 YEAR WARRANTY

WHAT IS COVERED

We warrant the product to be free of manufacturing defects to the original purchaser for one year.

WHAT IS NOT COVERED

It remains the customer's responsibility for freight and packaging charges to and from our service center. This warranty does not cover commercial use, hardware, acts of nature, freezing, or abusive use. In addition, purchased parts are not covered under this warranty.

We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production.

Contact Customer Care at 1-877-527-0313 or visit www.HomeDepot.com.

Pre-Assembly

PLANNING ASSEMBLY

Please read this entire instruction manual prior to assembly.

Identify all parts packed in the carton against the parts list. Remove all protective materials and place the parts on a non-abrasive surface to avoid scratching.

 


NOTE: More than one person may be required to assemble this product.


HARDWARE INCLUDED




NOTE: Hardware not shown to actual size.

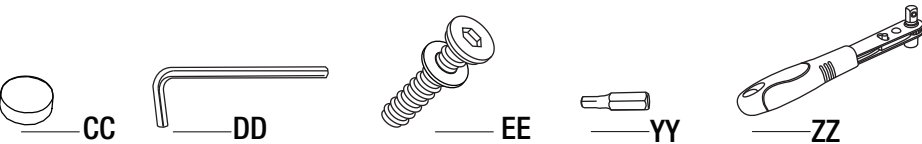


Part	Description	Quantity
CC	Bolt cap	12
DD	Allen driver	1
EE	M6x15 bolt	12
YY	Hex. screw (6 mm)	1
ZZ	Ratchet wrench	1

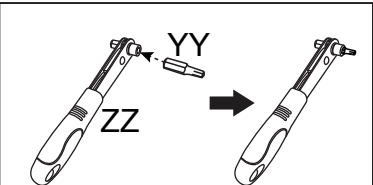 

 Please use wrench (ZZ) + hex. screw (YY).

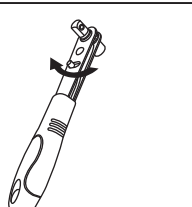

Tighten the screws

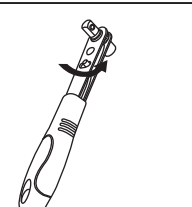 


Loosen the screws

Pre-Assembly

TABLE PACKAGE CONTENTS



 IMPORTANT: Do not fully tighten bolts/screws until all pieces are loosely assembled.

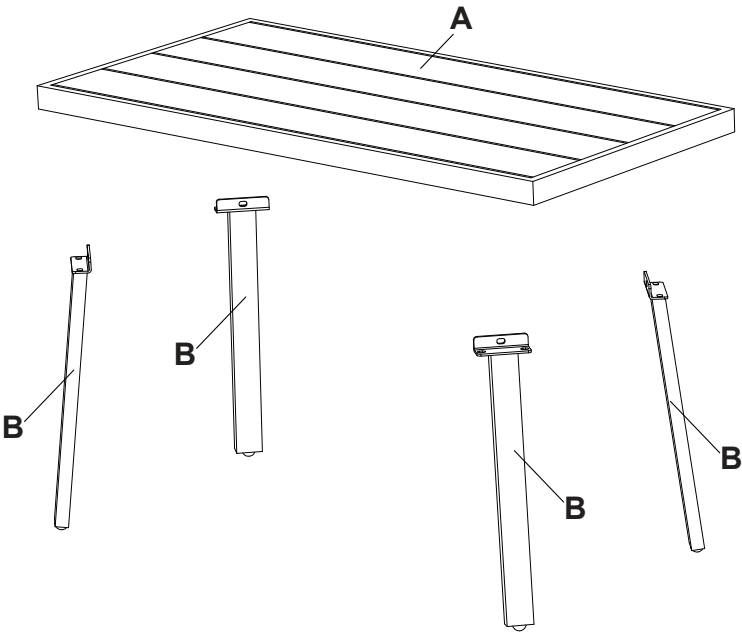

Part	Description	Quantity
A	Table top	1
B	Table leg	4


Assembly

1 Attach the table legs to the table top

- Attach the table legs (B) to the table top (A) using M6 bolts (EE).




 NOTE: Please ensure all the bolts are assembled correctly and use the allen driver (DD) to tighten. Do not fully tighten bolts/screws until all pieces are loosely assembled. Add corresponding plastic caps (CC) after final assembly finished.

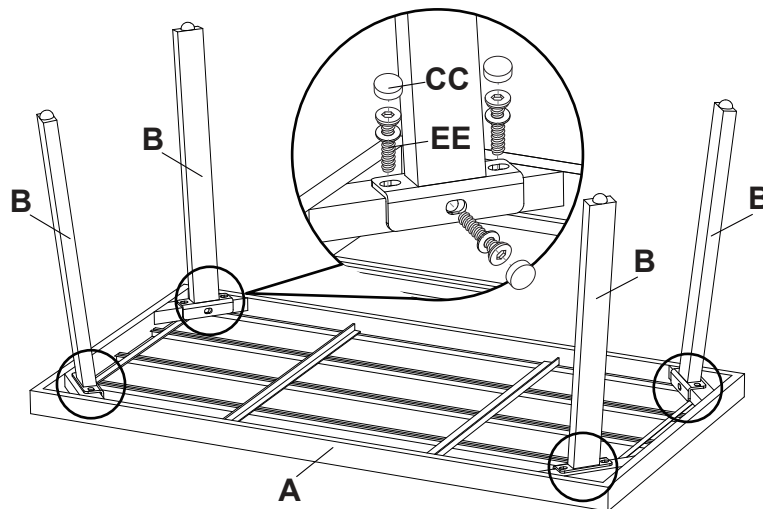

2 Turn the table up

 - Turn the table right side up.

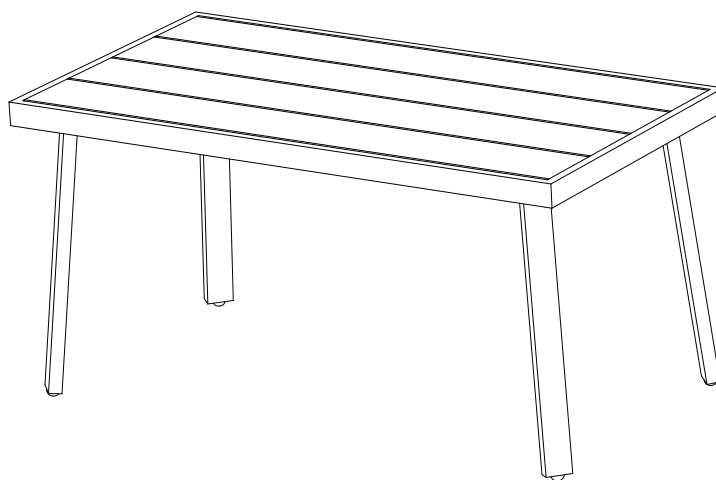

Care and Cleaning

- Do not allow water to build up in the frames. This will cause corrosion and possible freezing damage in cold climates.
- Use a mild soap and water for normal cleaning. Do not use janitorial or alcohol based cleaners. Some cleaners may be marked as natural, but some ingredients may cause discoloration or have an adverse reaction to your finish.
- Rinse with clean water and dry with a soft, absorbent cloth towel.
- Treat the frames with a liquid wax for maximum protection against UV rays and/or salty, damp air.
- Furniture covers are a great way to protect your investment from harsh elements of weather and UV light. However, it is important to ensure the furniture and covers are free of moisture and debris before covering. It is also necessary to promptly uncover furniture after precipitation and during periods of high humidity to prevent moisture build up. Failure to do so can lead to permanent surface and finish damage, which is not covered under warranty.

StyleWell.™

Questions, problems, missing parts?
Before returning to the store, call Customer Service
8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-877-527-0313

HOMEDEPOT.COM

Retain this manual for future use.