


Canopy Sand Bags

Owner's Manual

(for use with Gigatent Canopies)

Model # AC001 / AC001W 9.5" W x 19" H (Empty Bag)

*PARTY TENT CANOPY NOT INCLUDED

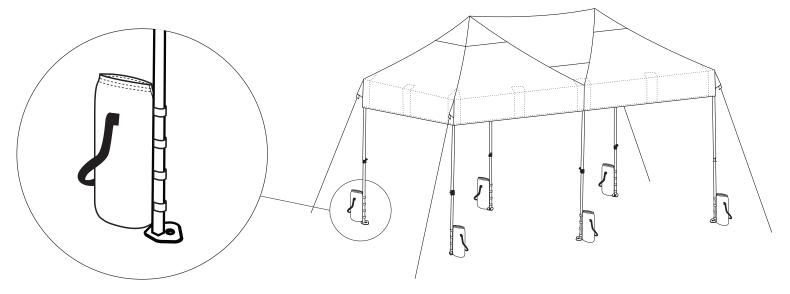


ASSEMBLY INSTRUCTIONS

Step 1

1) Attach the Canopy Sand Bag to the leg frame of the canopy by looping the "hook and loop" straps together. Be sure to attach all the straps of the Canopy Sand Bag to the leg frame (Figure A).

2) Repeat step for each Canopy Sand Bag on each leg frame of the canopy.

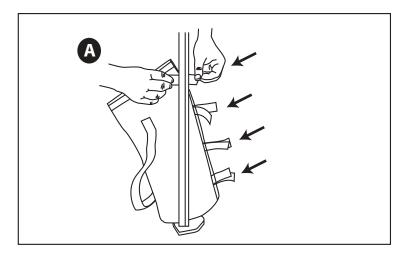

For questions or concerns call Gigatent at our Toll Free Number:

877-836-8701 Monday-Thursday 9am-5pm EST, Friday 9am-12pm EST or email us at customerservice@gigatent.com. For replacement parts, please login to our website at gigatent.com and click the link "replacement parts".


Step 2

3) Position your canopy in the proper location prior to filling Canopy Sand bags with sand.

4) Fill the Canopy Sand Bag with sand close to the top(Figure B). Allow enough room at top of Canopy Sand bag to "hook and loop" closed.

5) Repeat step for each Canopy Sand Bag.

NOTE: DO NOT ATTEMPT TO MOVE CANOPY WITH SAND BAGS ATTACHED TO FRAME! THIS CAN CAUSE UNDUE STRESS AND DAMAGE FRAME.

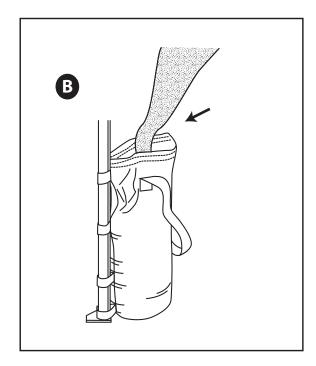

Manufacturer's Warranty

Warranty covers product to be free from defects in material and workmanship for 14 days after date of purchase.

Warranty does not cover natural breakdown of materials that occur inevitably with extended use (e.g., damage, exhausted zippers, defects caused by accident, abuse, alteration, animal attack, storm damage, misuse or improper care.

This product is covered for 14 days from date of purchase. Please check all contents to verify product has no missing or broken parts. Gigatent will mail replacement parts free of charge within the 14 Day Manufacturer's Warranty by calling 1-877-836-8701 or emailing customerservice@gigatent.com. We highly recommend logging on to our website at www.gigatent.com should you need customer service.

WARNING:

This product was not designed to be left out in the sunlight for extended periods of time. Prolonged UV exposure will rapidly break down the color and integrity of this product. UV damage is not covered under our warranty.

WARNING : NEVER LEAVE BURNING FIRE UNATTENDED

Wind may topple product. Use extra caution.

Keep all Flame and Heat away from product.

THIS PRODUCT IS NOT FIRE PROOF.

IF LEFT TOO CLOSE OR ON OPEN FLAME THE PRODUCT WILL BURN OR BE SEVERELY DAMAGED.

CAUTION: Use caution when using propane stove on this product. Unintended fire my result in damage of product or bodily harm.

Manufactured in China for Gigatent 55 Haul Rd Wayne, New Jersey 07470 www.gigatent.com

