

# Gazebo Maintenance & Care Guide

Thank you for choosing our Wood-like Aluminum Gazebo. This product is designed for outdoor use, offering both durability and natural beauty. Proper care and regular maintenance will help extend its lifespan, maintain its structural integrity, and preserve its elegant appearance.

## 1. Routine Cleaning (Recommended: Every 2 – 3 Months)

### ▲Roof

Rinse loose dirt with a garden hose (low pressure—do not use high-pressure washers).

Wipe stains with a soft cloth + mild soapy water; rinse thoroughly.

Dry with a clean towel to prevent water spots (especially in humid climates).

### ▲Frame

Dust with a dry brush or cloth.

Clean with a damp cloth + mild detergent; avoid harsh chemicals.

Wipe dry to prevent moisture buildup (reduces risk of warping/mold).

### ▲Curtains

Remove curtains (detach ties first).

Machine wash on gentle cycle with cold water + mild detergent (no bleach).

Air dry completely (do not tumble dry) before rehanging.

For minor stains: Spot-clean with a cloth + soapy water.

## 2. Seasonal Maintenance

### Warm/Stormy Seasons (Spring/Summer)

Check roof fasteners monthly (tighten if loose, to prevent wind damage).

Shake curtains regularly to remove debris (leaves, pollen).

If heavy rain is forecast: Ensure curtains are tied back (improves water runoff).