 


USE AND CARE GUIDE

2-DRAWER TV STAND

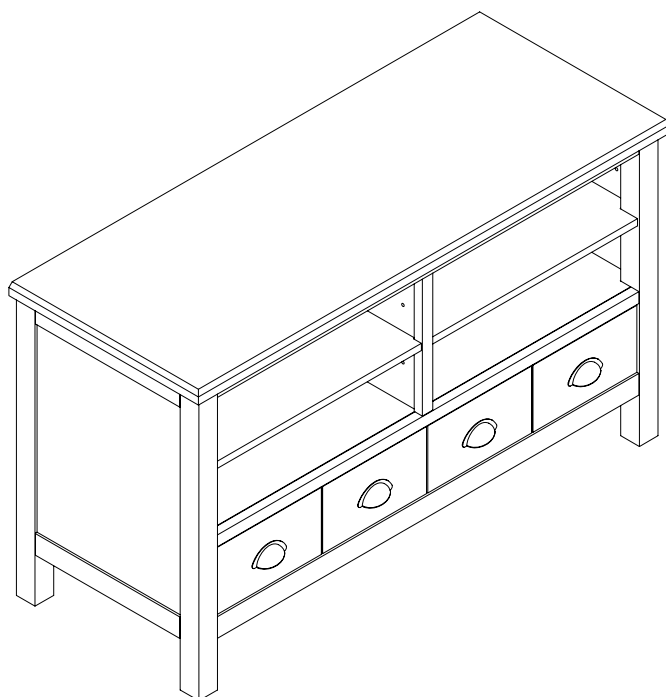

Questions, problems, missing parts? Before returning to the store,
call Home Decorators Collection Customer Service.
8 a.m. – 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday

1-800-998-7021

HOMEDEPOT.COM/HOMEDECORATORS

THANK YOU

We appreciate the trust and confidence you have placed in Home Decorators Collection through the purchase of this 2-drawer TV stand. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Home Decorators Collection!

Table of Contents

Table of Contents.....	2	Hardware Included.....	3
Safety Information.....	2	Pre-assembly (continued).....	4
Warranty.....	2	Package Contents.....	4
3 Year Warranty.....	2	Assembly.....	5
What is Covered.....	2		
What is Not Covered.....	2		
Pre-assembly.....	3		
Planning Assembly.....	3		
Tools Required.....	3		

Safety Information



DANGER

- Keep small parts away from children during assembly.
- Read and follow instructions carefully.



WARNING

- Read these instructions carefully and keep in a safe place.
- TO GUARANTEE THE SAFE USE OF THIS PRODUCT, FOLLOW THE WARNINGS, GUIDELINES AND RECOMMENDATIONS IN THIS MANUAL.
- Adult assembly required.
- Small parts may present choking hazard prior to assembly.
- Do not place heavy objects on the glass top.
- Some assembly may involve attaching glass or mirrors.
- Be very careful handling the glass or mirrors, as severe injury may result if the glass or mirror breaks.
- Never handle large pieces of glass or mirrors by yourself.



CAUTION

- Do not use power tools to assemble your furniture. Power tools may strip or damage parts/product.
- Do not overtighten connectors (screws, bolts, etc.). Overtightening can lead to product damage.
- Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment. If parts are missing, contact THE HOME DEPOT to obtain any missing parts.
- DO NOT USE SUBSTITUTE PARTS.
- This product should only be used on a flat, level surface.

Warranty

3 YEAR WARRANTY

WHAT IS COVERED

We guarantee this product to be free of manufacturing defects to the original purchaser for three years.

WHAT IS NOT COVERED

 
This warranty does not cover commercial use, acts of nature, and abusive use.

Pre-assembly


PLANNING ASSEMBLY

Keep children and pets away from build area. Make sure your area is large enough to unpack, sort and assemble the unit.

TOOLS REQUIRED



Small head
Phillips
screwdriver

 


Large head
Phillips
screwdriver


HARDWARE INCLUDED



 NOTE: Hardware not shown to actual size.



— AA

 


— BB



— CC



 — DD



— EE



— FF



 
— GG



— HH



— II




— JJ

Part	Description	Quantity
AA	Wood dowel	22
BB	Cam lock bolt	18
CC	Cam lock	18
DD	Plastic cover	8
EE	Flat head screw	20
FF	5/8 in.Round head screw	24
GG	Shelf support	8
HH	Handle	4
II	Bolt	8
JJ	Wire plug	2

Pre-assembly (continued)

 PACKAGE CONTENTS

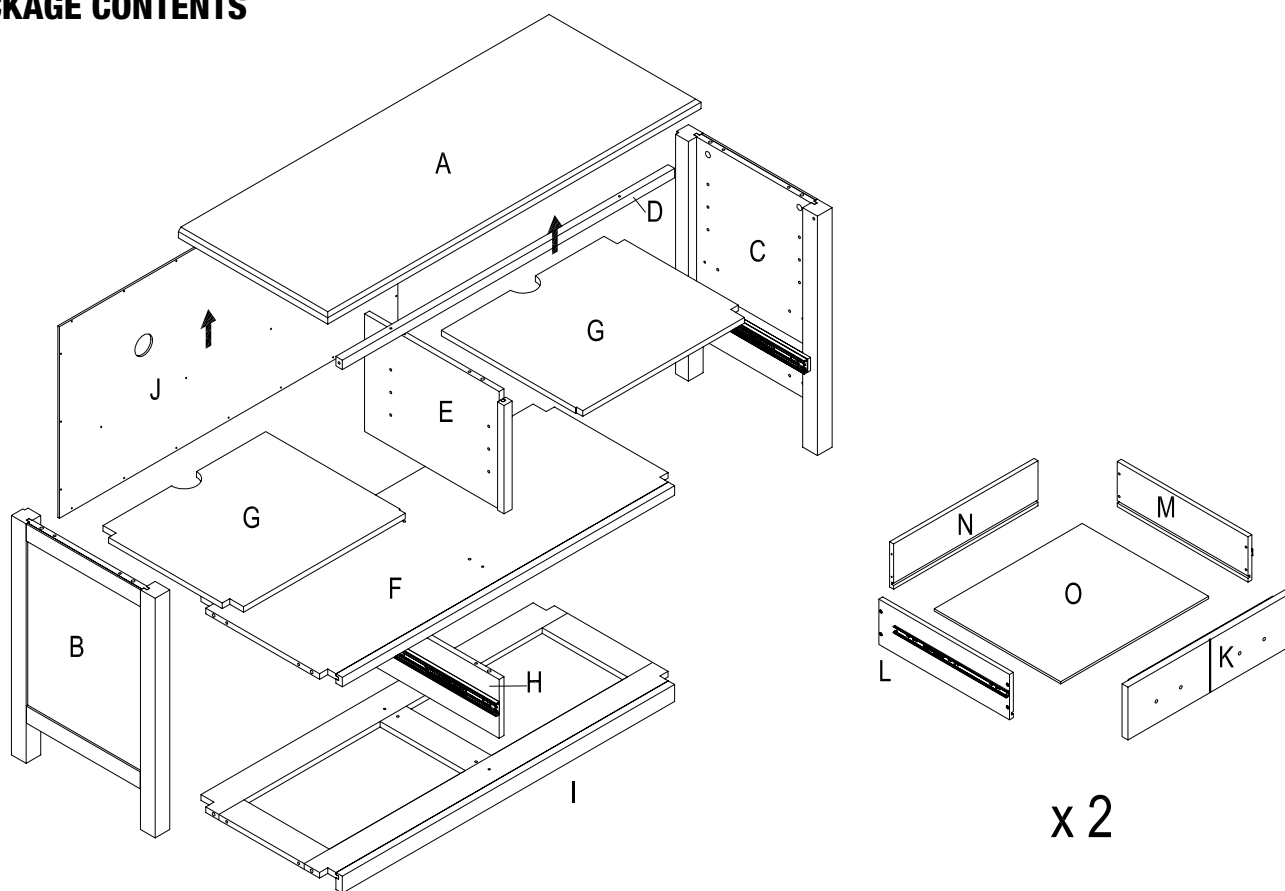


Part	Description	Quantity
A	Top panel	1
B	Left side panel	1
C	Right side panel	1
D	Crossbar	1
E	Top partition	1
F	Fixed panel	1
G	Adjustable shelf	2
H	Bottom partition	1
I	Bottom panel	1
J	Back panel	1
K	Drawer front panel	2
L	Drawer left side panel	2
M	Drawer right side panel	2
N	Drawer back panel	2
O	Drawer bottom panel	2


Assembly

1 Attaching the bottom partition to the fixed panel

 
- a) Install dowel (AA) and bolt (BB) into panel (F).

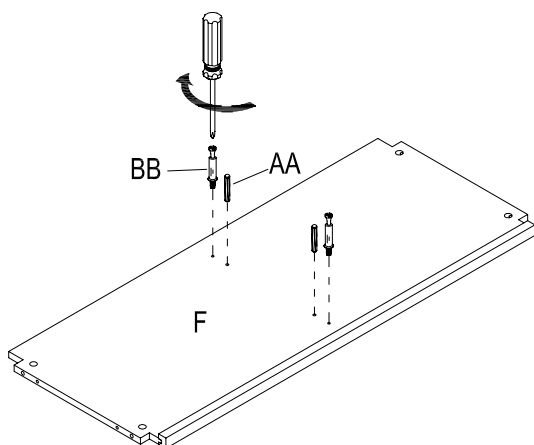

 
- b) Insert lock (CC) into partition (H).

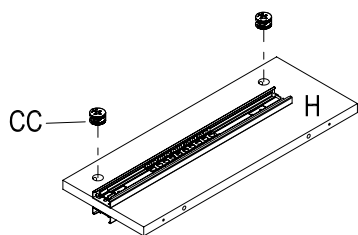

 - c) Join partition (H) to the panel (F) with dowel (AA).

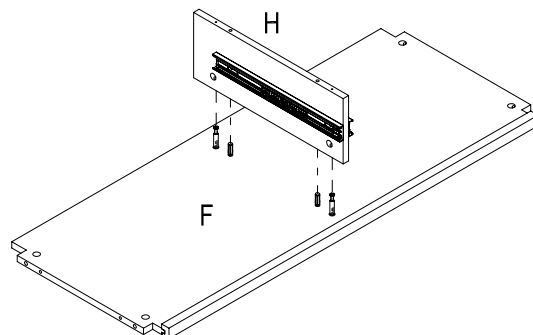

 - d) Tighten bolt (BB) with lock (CC) in the pre-drilled holes.

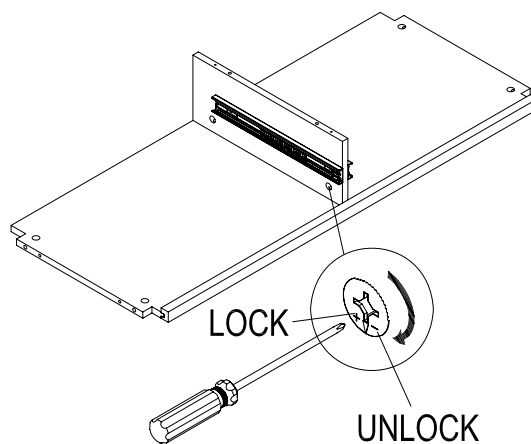

Wood dowel

Cam lock bolt

Cam lock

 
 
 
Small head

Large head

(AA) x 2

(BB) x 2


(CC) x 2

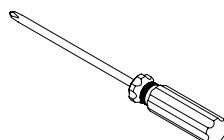


Assembly (continued)

2 Attaching the bottom panel

 
- a) Install dowel (AA) into panel (I).

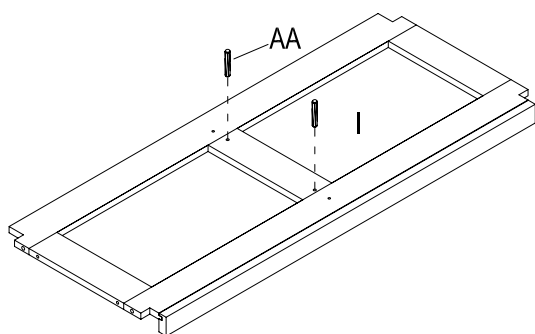

 - b) Join panel (I) to the partition (H) with dowel (AA).

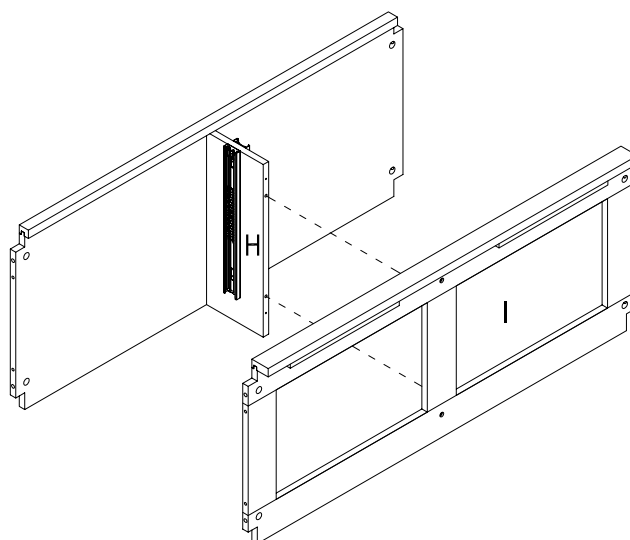

 - c) Tighten panel (I) with screw (EE).

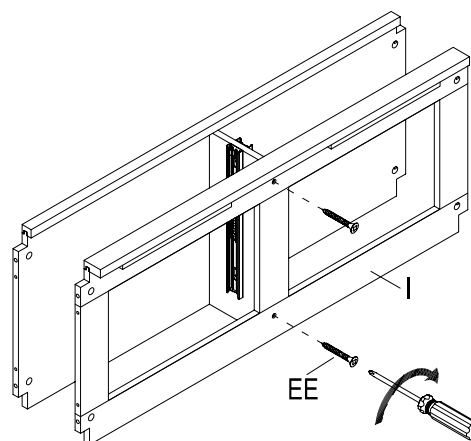

Wood dowel

 
 
Flat head screw

Small head

Large head

(AA) x 2


(EE) x 2

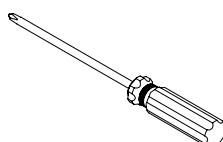


Assembly (continued)

3 Attaching the top partition

 
- a) Install dowel (AA) and bolt (BB) into panel (F).

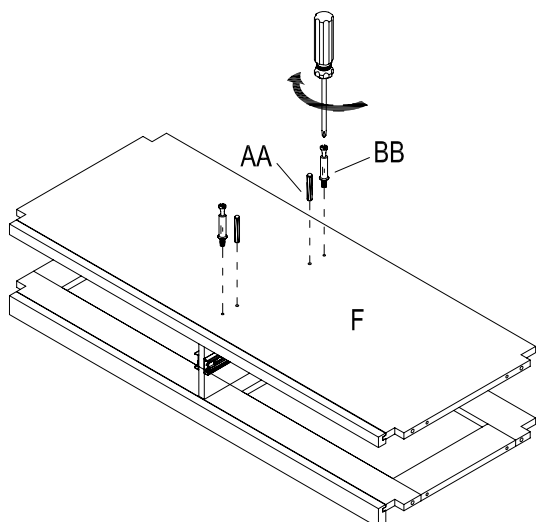

 
- b) Insert lock (CC) into partition (E).

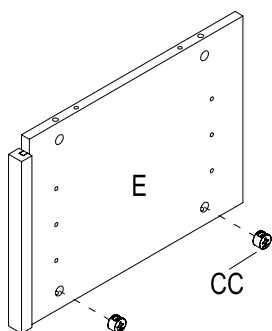

 - c) Join partition (E) to the panel (F) with dowel (AA).

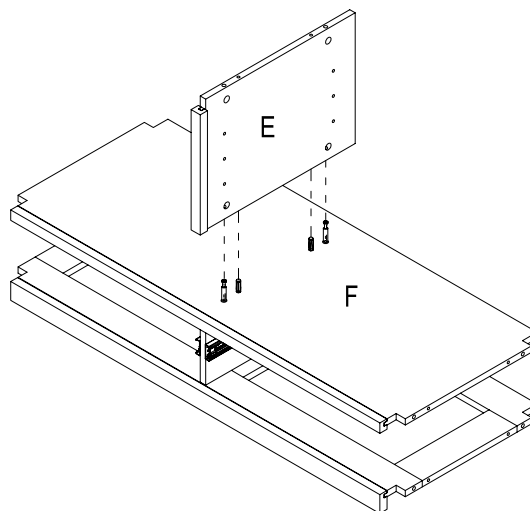

 - d) Tighten bolt (BB) with lock (CC) in the pre-drilled holes.

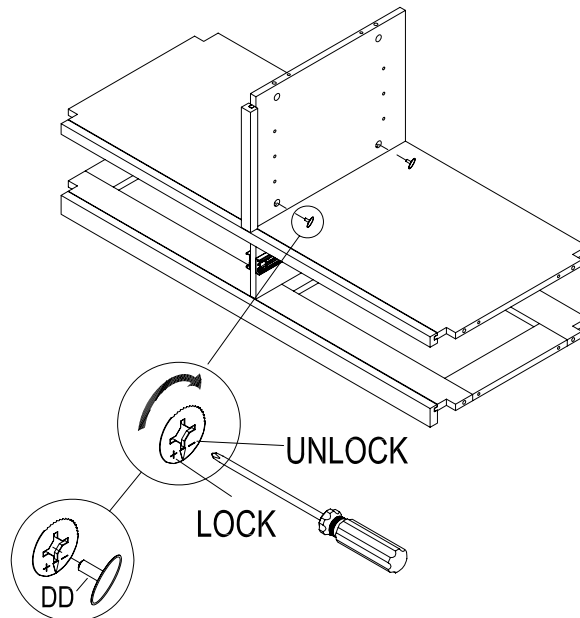

- e) Cover the cam holes with the cover (DD).

Wood dowel Cam lock bolt Cam lock Plastic cover

(AA) x 2

 
 
 
(BB) x 2

(CC) x 2

(DD) x 2

Small head


Large head

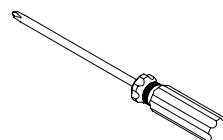


Assembly (continued)

4 Attaching the left side panel

 
- a) Install dowel (AA) and bolt (BB) into panel (B).

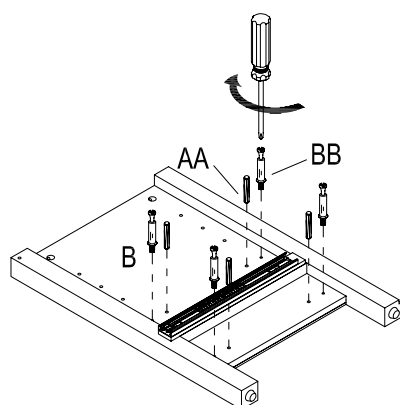

 
- b) Insert lock (CC) into panels (F) and (I).

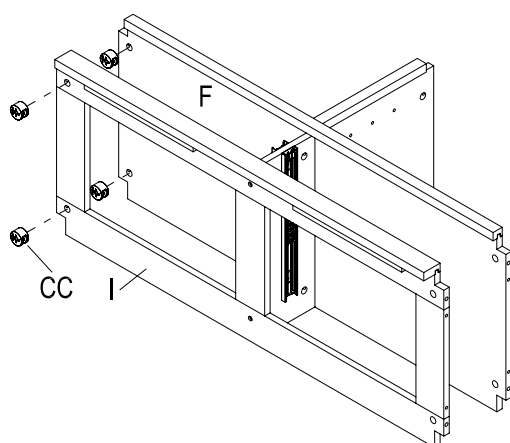

 - c) Join panel (B) to the assembled body with dowel (AA).

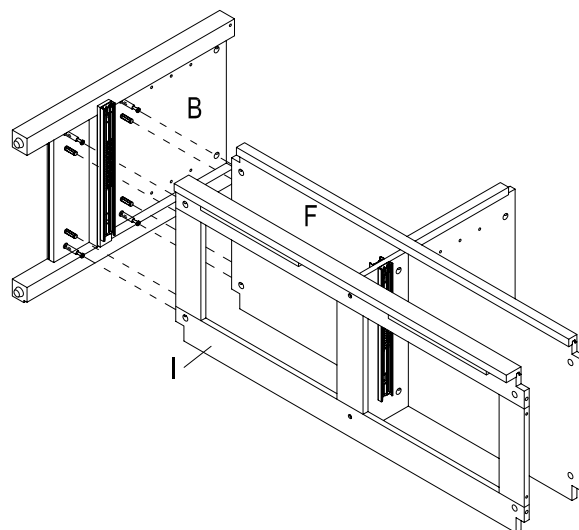

 - d) Tighten bolt (BB) with lock (CC) in the pre-drilled holes.

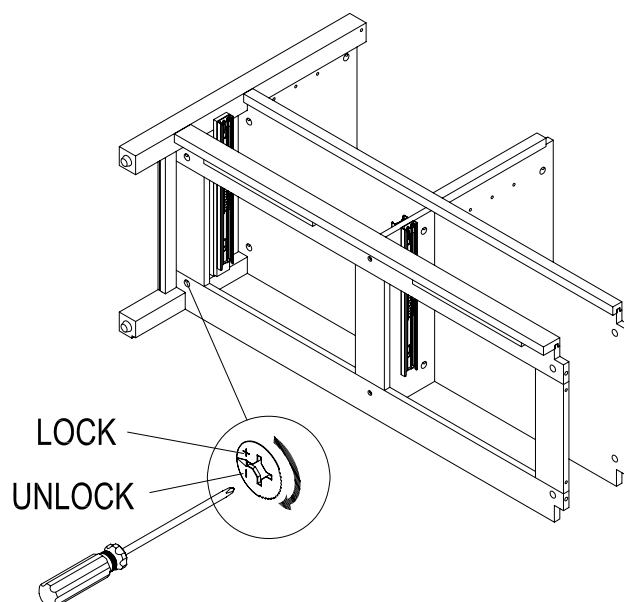

Wood dowel

Cam lock bolt

Cam lock

 
 
 
Small head

Large head

(AA) x 4

(BB) x 4


(CC) x 4

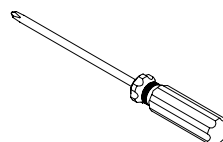


Assembly (continued)

5 Attaching the right side panel and crossbar

 
- a) Install dowel (AA) and bolt (BB) into panel (C).

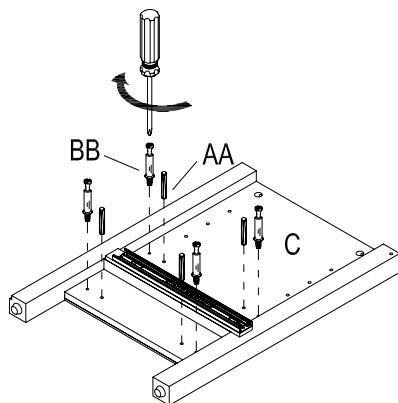

 
- b) Insert lock (CC) into panels (F) and (I).

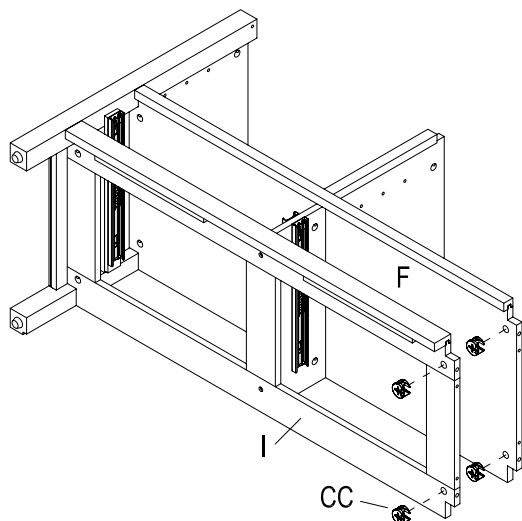

 - c) Join panel (C) and bar (D) to the assembled body with dowel (AA).

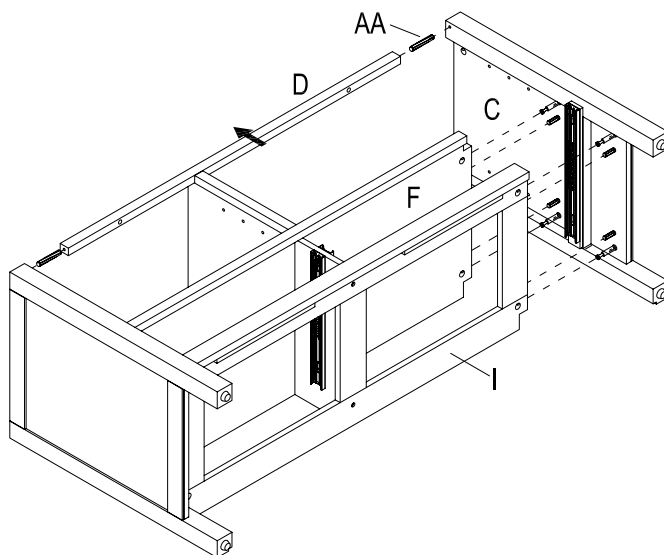

 - d) Tighten bolt (BB) with lock (CC) in the pre-drilled holes.

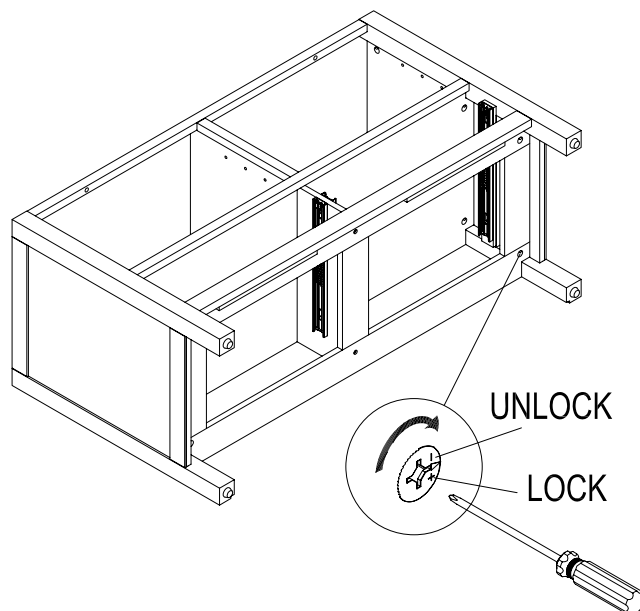

Wood dowel

Cam lock bolt

Cam lock

 
 
 
Small head

Large head

(AA) x 6

(BB) x 4


(CC) x 4

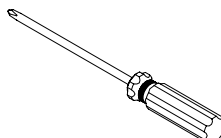


Assembly (continued)

6 Attaching the top panel

 
- a) Install dowel (AA) and bolt (BB) into panel (A).

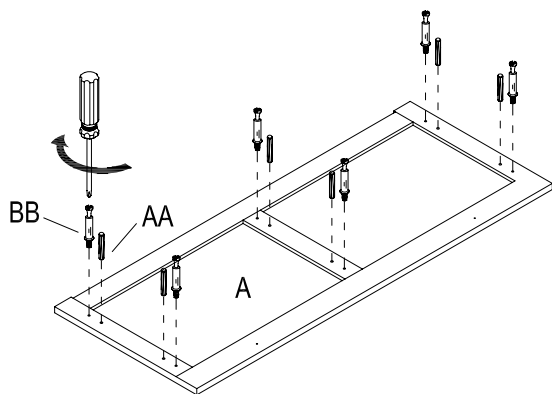

 
- b) Insert lock (CC) into panels (B) and (C), and partition (E).

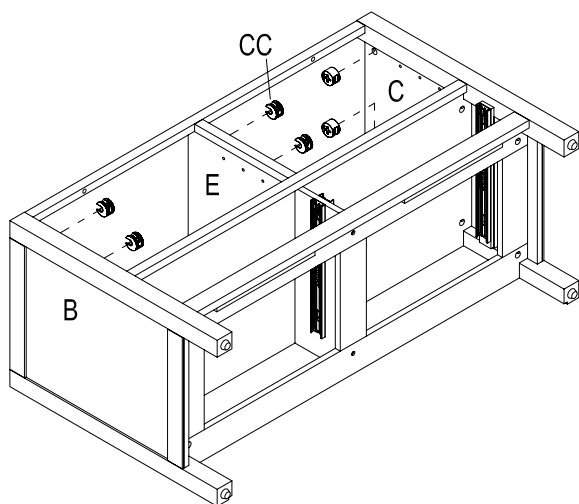

 - c) Join panel (A) to the assembled body with dowel (AA).

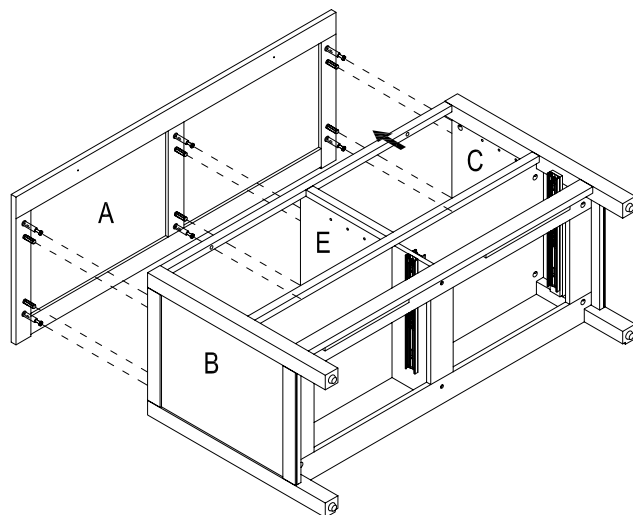

 - d) Tighten bolt (BB) with lock (CC) in the pre-drilled holes.

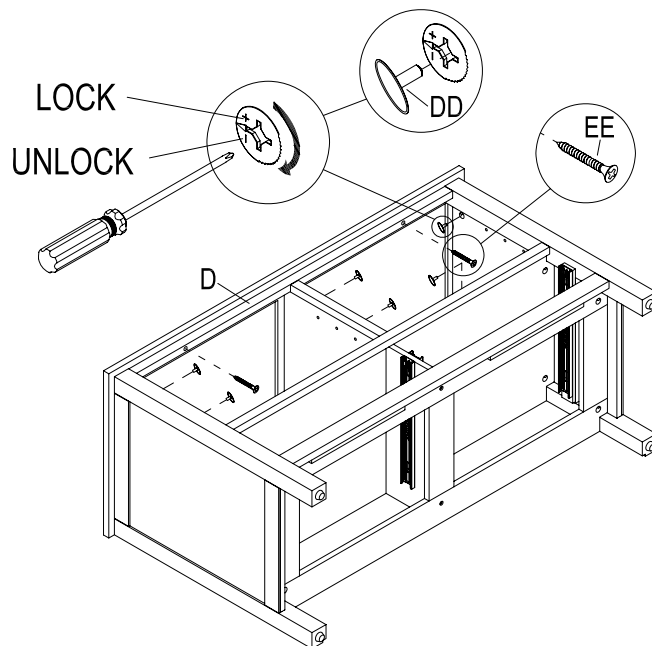

- e) Tighten bar (D) with screw (EE).
Cover the cam holes with the cover (DD).

Wood dowel Cam lock bolt Cam lock Plastic cover

(AA) x 6

(BB) x 6

(CC) x 6

 
 
 
 
(DD) x 6

Flat head screw

Small head

Large head


(EE) x 2

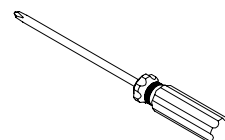


Assembly (continued)

7 Attaching the back panel

 - a) Install with plug (JJ) into panel (J) as shown.

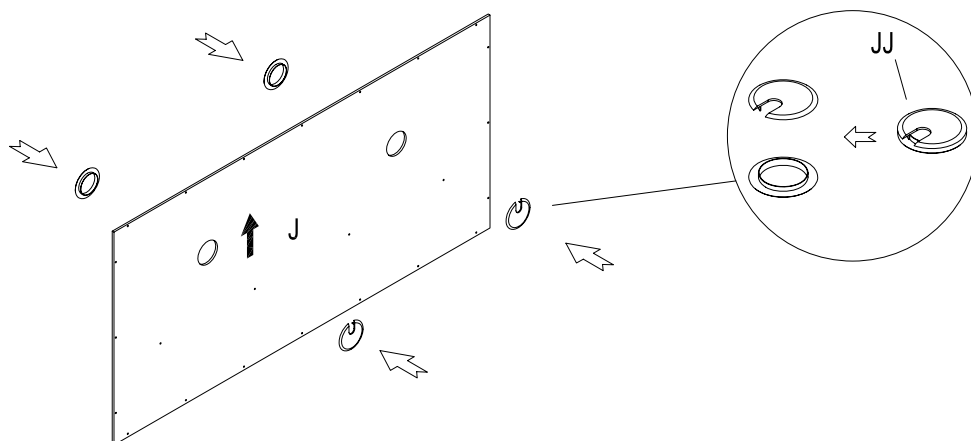

 - b) Tighten panel (J) to the assembled body with screw (FF) as shown.

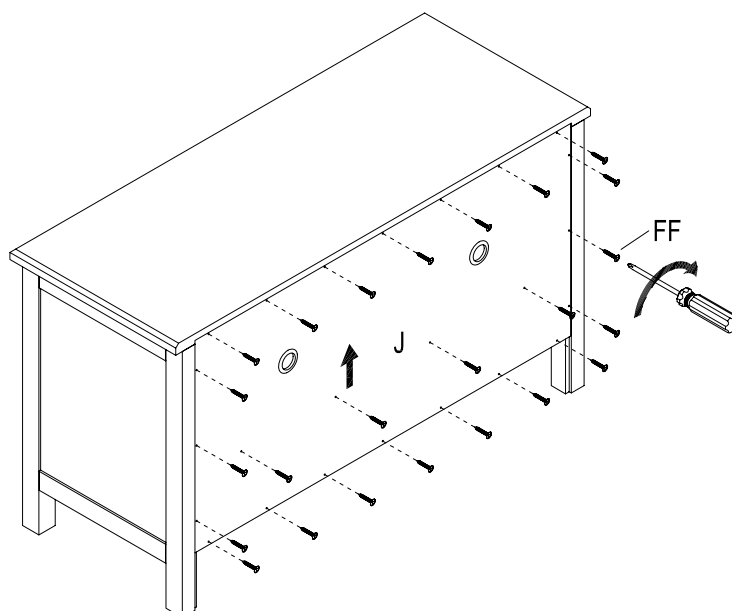


5/8 in. Round head
screw
(FF) x 24



Wire plug
(JJ) x 2



 
Small head



Assembly (continued)

8 Attaching the adjustable shelf

 - Insert shelf supports (GG) in desired positions and place shelf (G) on the supports.

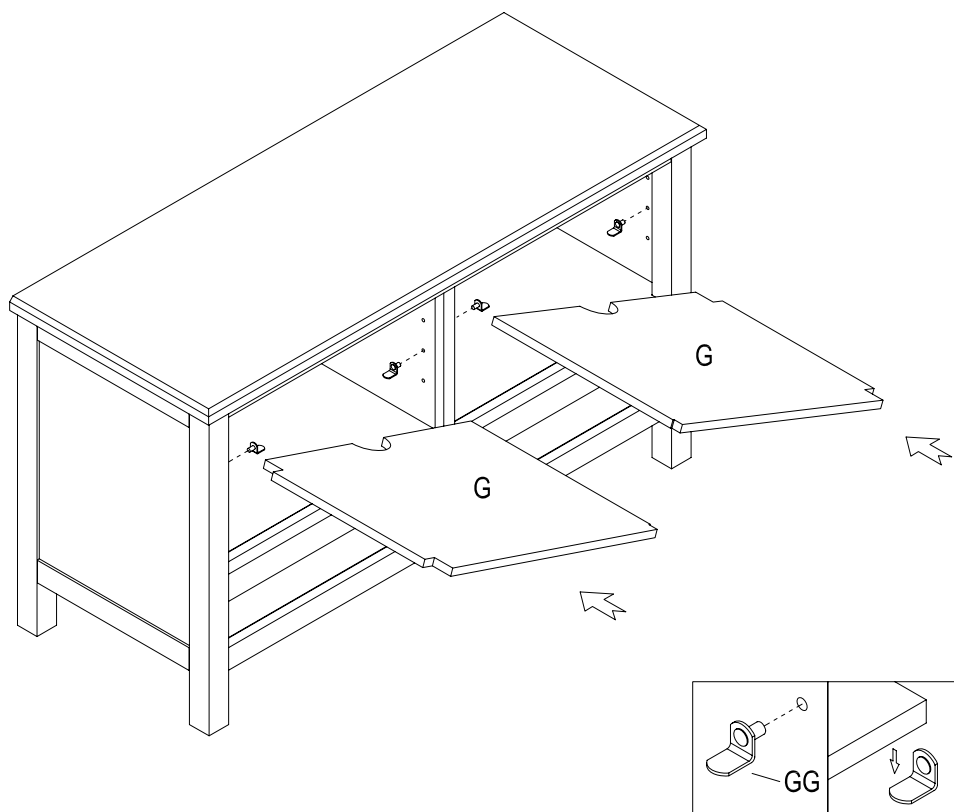

Shelf support

 
(GG) x 8




Assembly (continued)

9 Assembling the drawer


- a) Tighten panels (L) and (M) to panel (K) with screw (EE).

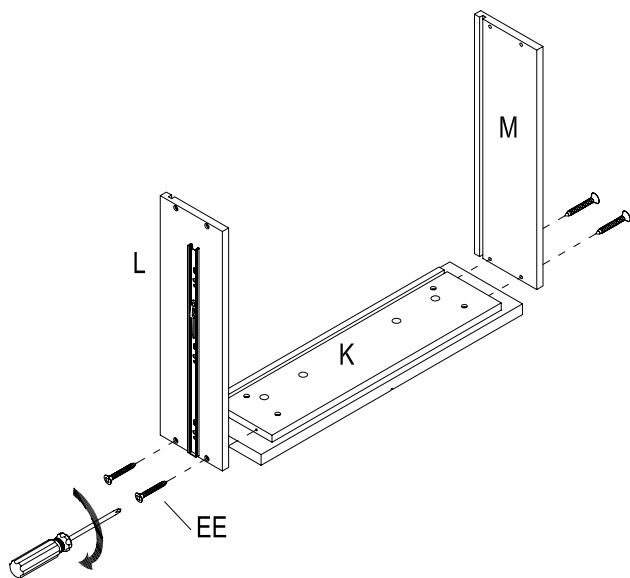

 
- b) Slide panel (O) into the grooves on panels (L) and (M).

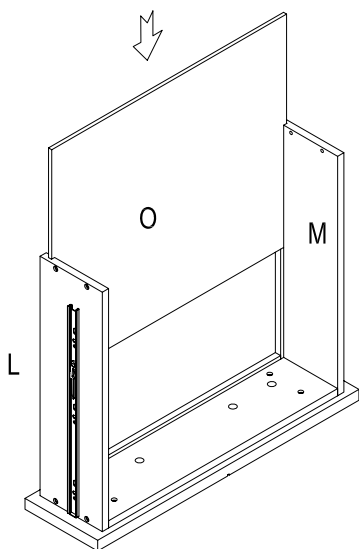

 - c) Tighten panel (N) to the assembled body with screw (EE).

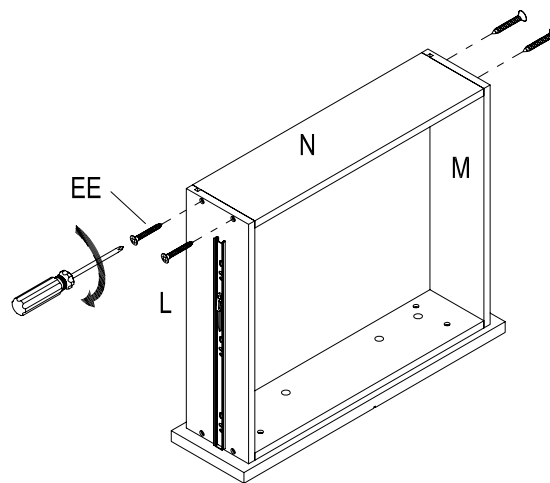

 - d) Tighten handle (HH) to panel (K) with bolt (II).

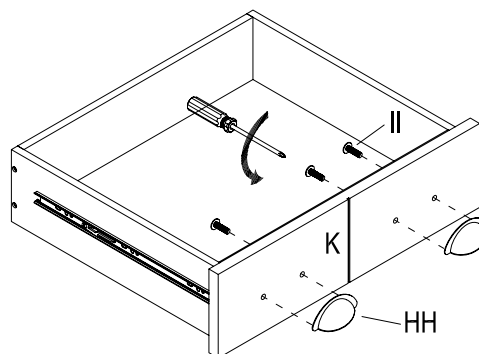

Flat head screw

Handle

 
Bolt

Small head

(EE) x 16

(HH) x 4


(II) x 8




Assembly (continued)

10 Inserting the drawer

 
- Insert the drawer into the assembled body as shown.

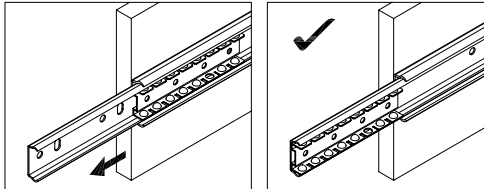


 
1. Pull out slide. Slide bearings forward.

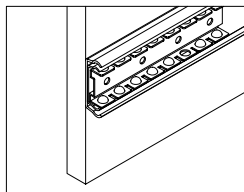

 2. Push slide back inside.
Repeat for every slide!

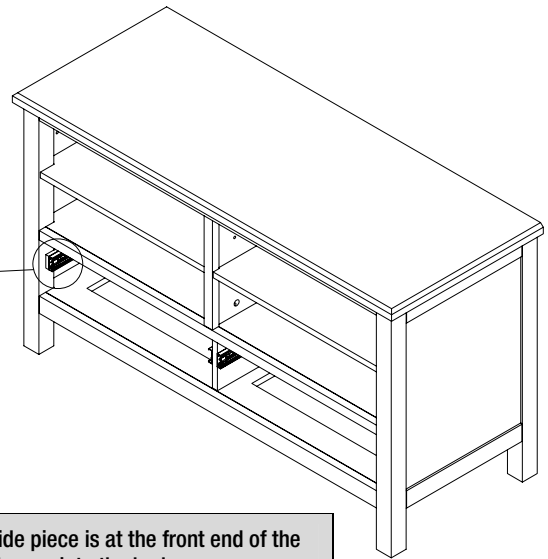

  NOTE: Make sure the slide piece is at the front end of the glide when installing the drawer into the body.

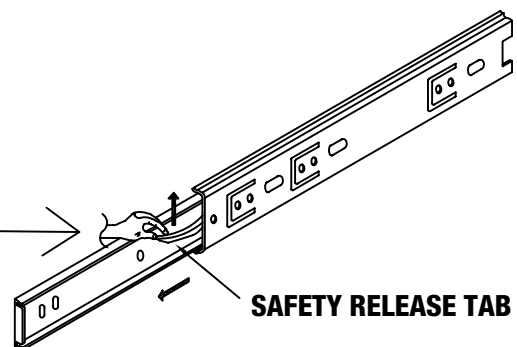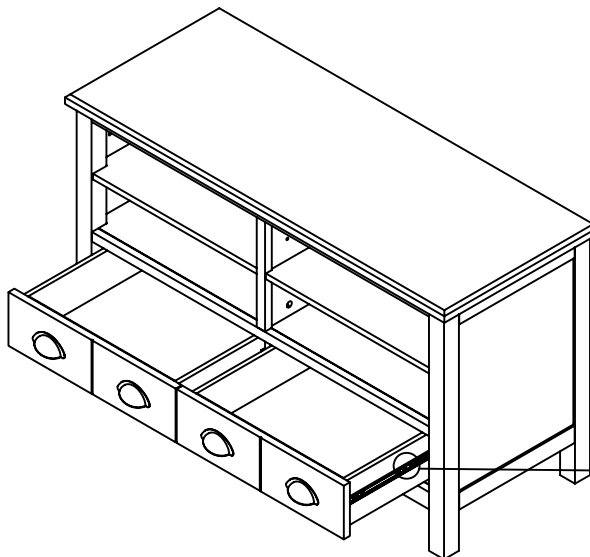

SAFETY RELEASE TAB



NOTE: When removing the drawer, tip-up the safety release tab to remove the drawer from the body.

The logo for Home Decorators Collection is centered within a dark gray rectangular box. The word "HOME" is in a large, white, serif font. Below it, "DECORATORS" is in a smaller, white, serif font. At the bottom, "COLLECTION®" is in an even smaller, white, sans-serif font.

HOME DECORATORS COLLECTION®

Questions, problems, missing parts?
Before returning to the store, call Home Decorators Collection Customer Service.
8 a.m. – 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday

1-800-998-7021

[HOMEDEPOT.COM/HOMEDECORATORS](https://www.homedepot.com/homedecorators)

Retain this manual for future use.