

CLEANING AND MAINTENANCE

Note: Before any cleaning or maintenance steps, please unplug the power plug and do not use the wire tip and other highly corrosive wipers to clean the ice maker. This may cause cracking of plastic parts.

1. Peripheral: Use a clean, soft cloth to wipe the periphery of the ice maker. At least once a week. Use a wet cloth with a neutral cleaner to remove grease or other impurities.

2. Ice-spoon cleaning: dip the ice-spoon into neutral detergent and water Nirvana

compound for at least 3 minutes, then rinse it with clean water and shake it dry.

3. Refrigerator cleaning: Open the ice door, remove all the ice, clean the inner wall of the refrigerator with neutral detergent, and then rinse with clean water.

4. Pump cleaning: take off the hose, take out the pump, take off the front cover. After rotating the inner cover counterclockwise, you can take off the inner cover. Clean the pump fan blade with a brush. It is recommended to wash once a week.

Warning: Cyclopentane is used in insulating and insulating materials of ice maker, and properly disposed of when discarded, such as sent to a qualified recycling company for disposal, should not be incinerated.