 




INcsb052_US

800-102V80

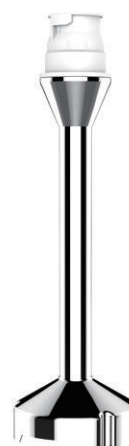

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

ASSEMBLY & INSTRUCTION MANUAL

Please read this manual thoroughly before use and save for future reference.

Safety warning

Before using this appliance, you should always follow these basic precautions, including :

 
- 1.read all the manual;
2. Before use, check that the voltage of your wall outlet is the same as the voltage on the label on the bottom of the appliance.
3. Do not operate the appliance when its cord or plug is damaged, or if the appliance has been dropped or damaged in any way. Return the appliance to the nearest authorized service location for inspection, repair, or adjustment.
4. Do not hang the power cord on the edge or corner of the table or on a hot surface.
5. Do not immerse the power cord or the body of the eggbeater in a liquid, as this may cause an electric shock.
6. Do not pull, twist or broke the power cord.
7. Close monitoring is necessary when the appliance is used near a child or a weak-willed person.
8. Do not place the appliance in or near hot gases or hot ovens.
9. Never remove the blender or dough hook while the equipment is working.
10. Do not leave unattended while the appliance is at work.
11. Disconnect the device from power when unattended or assembled, disassembled or cleaned.
12. Use of accessories not recommended or sold by the manufacturer may result in fire, electric shock, or damage.
13. Remove the blender or noodle hook from the mixer before washing.
14. Check that the control switch is OFF before inserting the plug into the wall outlet. When disconnected, push the switch to OFF and remove the plug from the wall outlet.
15. Avoid contact with moving parts.
16. Keep hands, clothing and spatula away from the mixer when the appliance is working to reduce personal injury and damage to the mixer.
17. Those who are physically, mentally impaired or inexperienced or knowledgeable are under surveillance and who know the instructions for safe use of the appliance, and who understand the dangers involved, can use this device.
18. Children cannot play with this appliance.
19. Please do not use it outdoors.
20. Please do not use this device for other purposes.
21. Be careful when holding sharp blades, dumping food in bowls and cleaning equipment.
22. This device cannot be used by children. Please keep the power cord out of the reach of children.
23. When replacing parts or approaching parts in use, first turn off the electrical switch and disconnect the power.
- 24.save this manual.

Only use for family

SAVET HESE INSTRUCTIONS

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way."

Know each parts

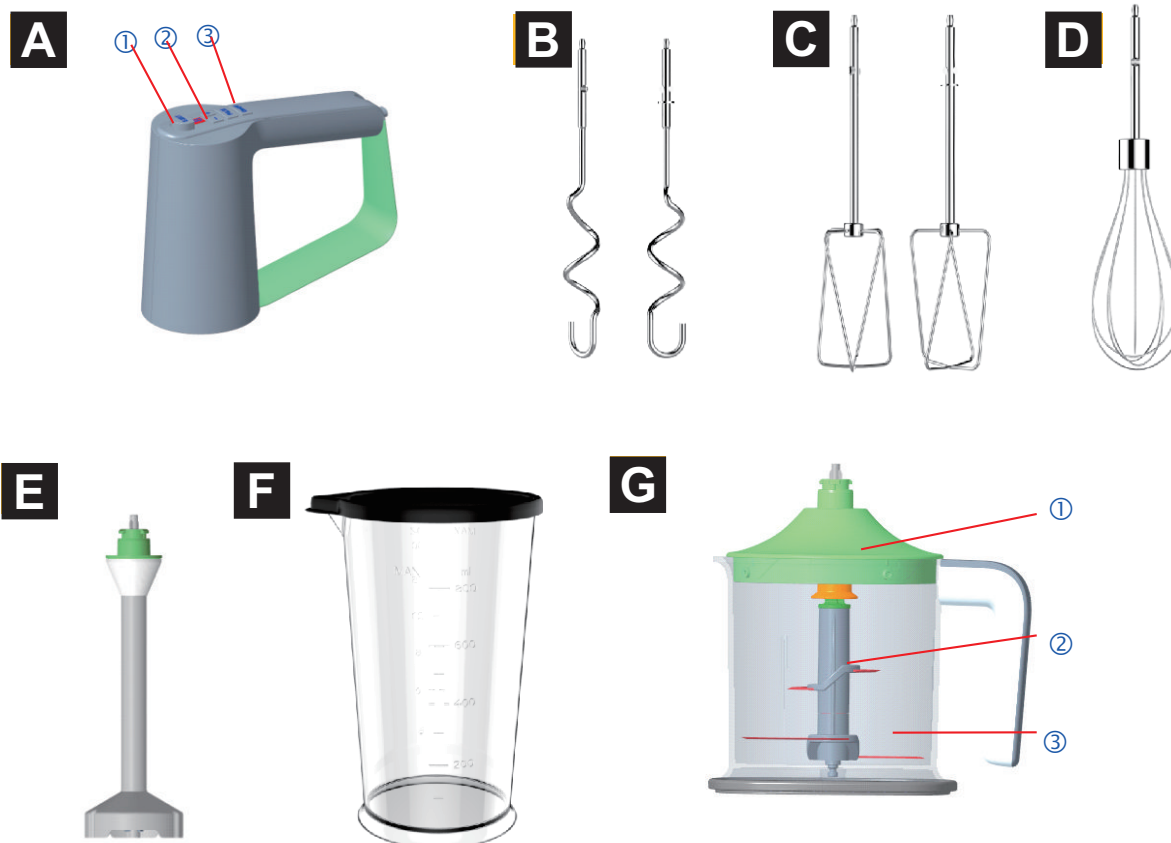

- A) main body (hook release button ①display ③button)
B) dough hooks
C) double beater (ss)
D) whisk
E) ss blender
F) cup
G)chopper (①lid ②S blade③chopper bowl)

Know your machine

Congratulations on your purchase of a new handheld blender

When using a new handheld blender, even if you feel you are familiar with this type of appliance, you must read and follow the instructions in this manual, save this manual for future reference, and especially pay attention to the "Important Guarantee" section

These appliances are suitable for standard household electrical outlets and are not intended for industrial or commercial use ;

Before first use

- Remove all packaging materials and promotional labels before using this product for the first time.

- Before using this product for the first time, please clean and dry the stainless steel stir sticks, pasta sticks, whisks, measuring cups, and cutting cup containers. ;
- When using this appliance for the first time, you may notice a strange smell from the motor. This is normal and the smell will disappear as the motor runs.。
Warning : Do not plug the power cord into a power outlet until the stainless steel stir bar, stir noodle stick, double egg fork, lantern stick, and vegetable cup container are fully installed in the host; "OFF" position.

CONTROL BUTTON

- Release button – release dough hooks,double beater,whisk.。
- Press button1-5,you can adjust the speed of dough hooks,double beater,whisk.
- "L","H"button is used for blender and chopper,press pulse can start working.

Assemble asseccories

- enssure the plug is off of power.
- Ensure the speed button is on 0 position.
- Insert the corresponding accessories into the correct mounting holes .

Each pair of whisks and noodle bars has a large-diameter meson, while the other does not have a meson; make sure to insert the opposite hole when installing the appliance (Figure 1).

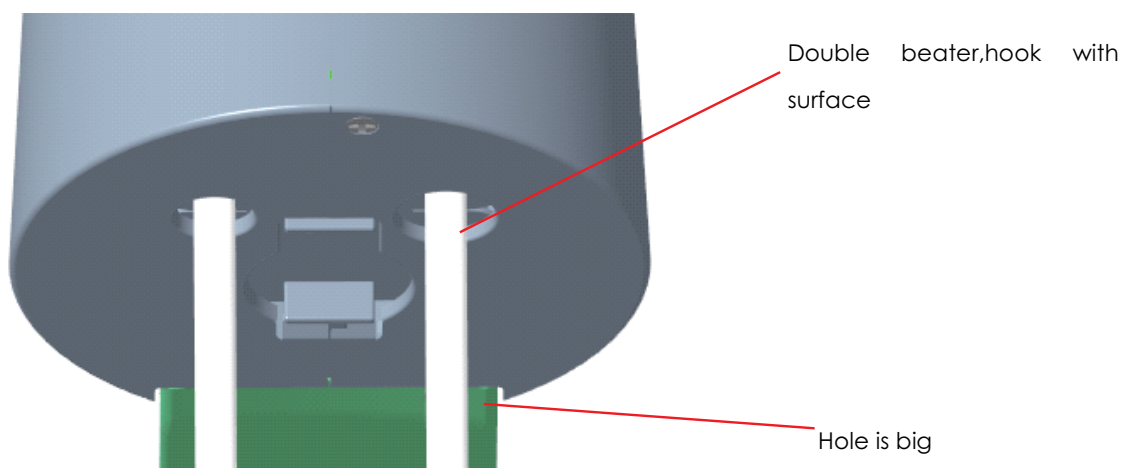 


Fig.1

When installing the stainless steel stirring rod, turn the baffle apart, insert the accessory counterclockwise into the hole, and check whether it is installed in place (Figure 2)

You can then stir the stir bar with the food in a measuring cup. (Figure 3)

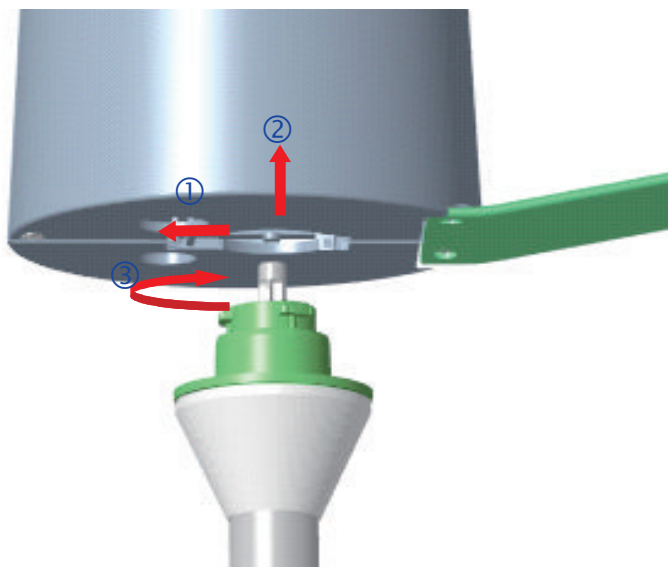 


Fig.2

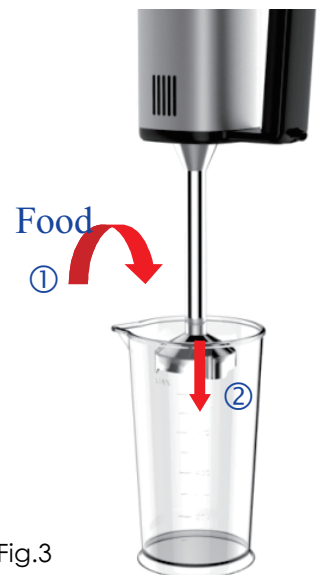 


Fig.3

- Install the cutting cup in the corresponding hole of the appliance, and be sure to put the cutting knife into the container before putting the food in the cutting cup (Figure 4).

Warning: The shredder is very sharp, please be careful!

When installing the cutting cup lid, flip the baffle off, insert the accessory counterclockwise into the hole, and check whether it is installed in place. (Figure 5)

Place the utensil with the lid of the cutting cup on the cutting cup, and rotate the mixer clockwise until it is in place. (Figure 6) Check whether the installation is correct and firm. If you find it difficult to put the cutting knife into the container

Medium, please cover the vegetable cutting cup

The connecting sleeve is rotated by a certain angle. (Figure 7).



Fig.4

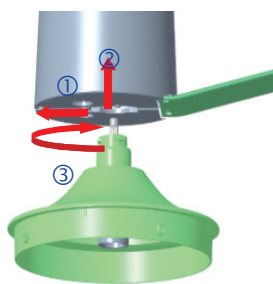 


Fig.5



Fig.6

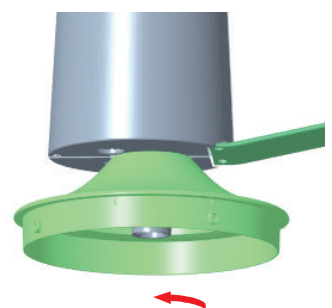 


Fig.7

Speed selection and function introduction:

Speed setting	function	description
1 (low speed)	mix/ stir	Mix large quantities and dry food at low speed, such as flour, sugar, etc.
2	Slow speed beater	After adding the liquid, stir into a salad and sauce with a suitable speed
3	mix/ stir	cake
4	mix/high speed mixer	Pan or cake
5 (high speed)	powder	Pan or cake
PULSE (high speed)	blender	Vegetable fruit
	chopper	Vegetable&meat

Hand mixer (double beater/dough hooks/whisk)

- Ensure they insert in right place.
- Power on.
- Put ingredients in a container suitable for mixing, hold the handle of the appliance, start the appliance and start stirring the food to be mixed.
- To avoid the risk of food splashing and injury, you can adjust the appropriate whipping speed in the following ways during use.

You can use the pulse speed knob at any time (except “0”). The power and speed of the device can be maximized by the pulse button (the speed can be set to “5”). Move the appliance in a circle to make the mixer The noodle bar can effectively stir food.

- Stop the blender occasionally using a plastic spatula to scrape off the sides of the mixing bowl and continue mixing. .

Warning: When using the blender, do not place the blender or noodle bar near the side of the mixing bowl, otherwise it will be dangerous..

Warning: In order to prevent the blender from overheating, do not operate it for more than 10 minutes each time. Allow the equipment to cool to room temperature before using it..

Use handblender (use for handblender)

Make sure that the stainless steel stir bar is inserted into the slot and secure.
Plug into a standard household electrical outlet.

Stir the fruits / vegetables and water into a measuring cup, hold the blender handle and place the inner surface of the edge of the blender

To avoid the risk of ingredients splashing and injury when opening the device, make sure to hold the beaker with one hand

Press the speed selector setting on PULSE. Press the pulse button to start the device. For better mixing, you can move the stainless steel stirring rod in the measuring cup slightly.

Note: To prevent the blender from overheating, do not run it for more than 1 minute at a time. Allow the device to cool to room temperature before using it. Do not stir without load as this will increase the temperature of the bottom of the mixing tube and may cause burns. Do not use it for mixing dry food..

Use chopper

Make sure the cutting cup is inserted into the slot and secure.

Make sure the meat / vegetables are in a shredder bowl for processing.

Plug into a standard household electrical outlet.

Place the meat / vegetables in separate shredder bowls for processing. Grasp the blender handle.

The speed selector is set to "PULSE". Press the pulse button to start the device.

For better mixing, you can press and hold the pulse button slightly every few seconds.

Note: To prevent the blender from overheating, do not run it for more than 1 minute at a time. Allow the device to cool to room temperature before using it.

Remove the blender or noodle stick / lantern stick / stainless steel blender / cutting cup

Set the speed selector to "0" to "OFF".

Turn off the device at the power source.

Unplug the device.

Press the "back button" button to exit the noodle stick / lantern stick / double egg fork.

Turn the stainless steel stirring rod clockwise to remove it from the blender.

Turn the stirrer counterclockwise to remove it from the lid of the cutting cup, and then rotate the lid of counterclockwise to remove it from the container of the cutting cup.

Recipe: The container filled with 90g honey+100g raisin.

Note: When operating the hand blender, do not release the whisks / noodles / stainless steel stirrers or rotating stirrers / cutting cups; remove the accessories from the bowl / measuring cup (beating only after all accessories are completely stopped) Egg waffle / stir noodle stick / stainless steel stir stick / cutting cup).

Note: While pressing the "back button" button to remove the accessory, always set the speed selector to "0" (OFF).

Trouble shoting

problem:	reason:	method:
No function	Check plug if it is power on	Power is not good connected
	Check if speed is on 0	Use 5 speed to control
Assy can't pull off	No press the release button	Press release button,then pull off
Assy not work	Assy not insert fully	Ensure all assy is full insert
Blender/chopper not work	Speed is on 1-5,pulse not work	Speed on pulse,press pulse;

Clean and maintainance

 
1. Unplug the appliance before cleaning and wait for it to cool down completely.
 2. Wipe the outer surface of the main unit clean with a damp cloth and then polish it with a dry cloth.
 3. Wipe off excess physical particles on the power cord.
 4. Rinse the utensils with water and wipe them clean with a dry cloth.
 5. Wash the egg beaters and noodle bars with hot washing water and wipe them with a dry cloth. The egg beaters and noodle bars can be washed in a dishwasher.
- Note: The main unit must not be immersed in water or liquid.
Warning: Please use the manufacturer's authorized after-sales service agency.
WARNING: The shredding blade is very sharp, use caution when cleaning.

presentation:

voltage.....120V ~ 60Hz
power.....300W
protect level..... II 
max working time.....dough hooks,double beater,whisk 1-10mins; hand blender 1mins; chopper bowl 15s;

Rating label (L50*W30mm)

Rating label (L50*W30mm)

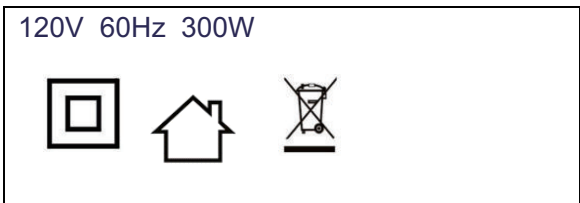

Note: Due to the continuous improvement of the product, the design and specifications of the product may be different from the illustration on the package.



Product packaging is made of recyclable materials, which can be sent to public collection points.



The meaning of the DUST bin:
Do not dispose of appliances as unsorted municipal waste. Use separate collection facilities.
Contact your local government for some information about the garbage collection system available. If electrical appliance waste is landfilled or dumped, hazardous substances may seep into the groundwater and enter the food chain, endangering your health and well-being; when replacing new appliances with old appliances, retailers have a legal obligation to recycle your old appliances free For disposal.

