


# BEFORE FIRST USE

## Before First Use:

1. Read all instructions and important safeguards.
  2. Remove all packaging materials and make sure items are received in good condition.
  3. Tear up all plastic bags as they can pose a risk to children.
  4. Place the electric range on a flat, sturdy, heat resistant counter, or tabletop for use.
  5. Wipe burners clean with a damp cloth.
  6. Set temperature control knobs to OFF position.
  7. Plug into wall outlet.
  8. Before your first use, turn the temperature controls to high for 3 to 5 minutes to warm up the unit. Do not place any pots and pans on it yet. This step only needs to be done the first time you use the product.
- **Do not use abrasive cleaners or scouring pads.**
  - **Do not immerse any part of this appliance or power cord in water or other liquid.**

## Suitable Cookware To Use:

1. For the most efficient operation of the range, the pots and pans used must be in good shape with a solid base. To ensure safety and maximum heat efficiency, use only pots and pans with flat bases. See figure below.
2. Stainless steel, nonstick and heat-proof ceramic cookware are suitable to use on the electric burners. Please read instructions on all cookware to ensure they can be used on a cooktop.
3. The diameter of the bottom of pots and pans should be 6 ½" to 7 ½" and with a maximum cooking capacity of 1 ½ quarts for each hot plate.

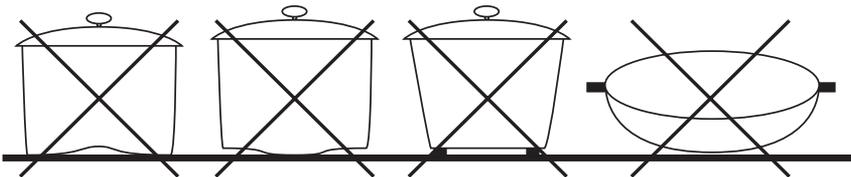

## CAUTION:

- Do not use any cookware that does not have a completely flat bottom..

# HOW TO USE

## How to Use:

1. Turn the control knob to the desired level of heat. The temperature can be adjusted from low to high by turning the control knobs.  
Quick Temperature guide:  
Warm: keeping food warm, simmering  
Low: Slow cooking, stewing, sauce thickening  
Medium: Shallow frying of meat or pan-fried dishes, soup making  
High: To bring food to boil rapidly, steaming, stir frying
2. Place the cookware on burners.
3. When finished cooking, turn control knobs to OFF position and unplug from wall outlet. Wait until the burners have completely cooled before cleaning.

## CAUTION:

- Do not touch the surface of the range when in operation as it is very hot.
- The burners will remain hot for a period of time after the unit has been turned off. Do not move, clean, or store until unit has completely cooled
- Do not immerse the range in water or any liquid.

# HOW TO CLEAN

*Always unplug unit and allow to cool completely before cleaning.*

1. Use a damp soft sponge or cloth to clean the burners. It is ok to use a small amount of non-abrasive detergent.
  - **Do not use harsh abrasive cleaners.**
  - **Do not immerse any part of this appliance or power cord in water or other liquid.**
  - **Electric burners are not dishwasher safe.**

## Storage:

1. Store the burners in a cool, dry place.
2. To protect the tubular heating elements, do not stack any items on burners when stored.