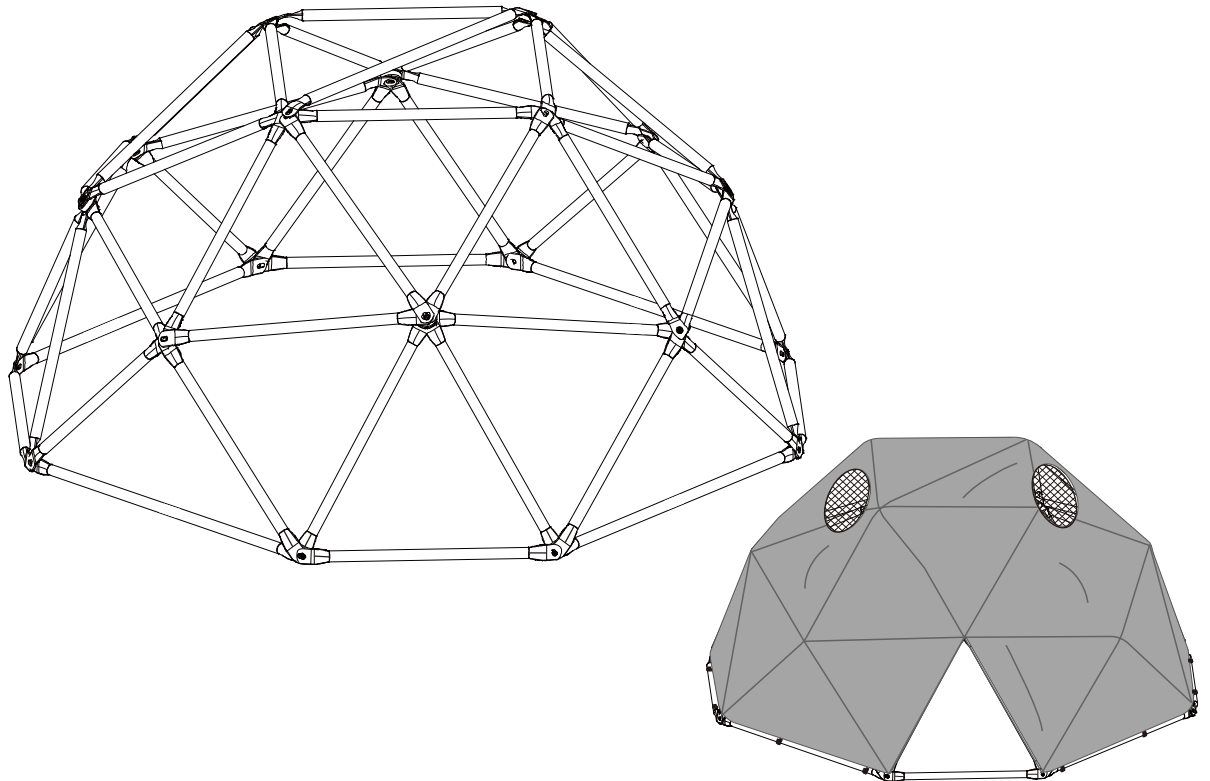


# DOME CLIMBER WITH COVER

## USER AND ASSEMBLY MANUAL



Tips : It will take 2 people around 45 mins to assemble this product.



### WARNINGS!



- Misuse and abuse of this product can result in injury.
- Read instructions before assembly or using this product. Retain Instructions.
- Always inspect product before use, checking for worn, defective or missing parts.
- Suitable for age 3-8 years. Max user weight 45 kg.
- Assembly by adults.
- Adult supervision at all times.
- Only for outdoor and domestic use.
- Before you start assembly please check all parts are included, if any parts are missing or you need advice, please contact Customer Services: by email [support@sportspowerfit4kids.com](mailto:support@sportspowerfit4kids.com), by phone (+44) 0330 0904 420 or visit [www.sportspowerfit4kids.com](http://www.sportspowerfit4kids.com)















SW-076C

# Before you start...

- We suggest you spend some time reading this guide before following the simple step-by-step assembly instructions.
- Do not discard any of the packaging until you have checked that you have all parts and fittings listed. When discarding packaging take care and consideration for others and the environment.
- When assembling this product be aware of the safety of yourself and others.
- Because of the size of this product we suggest that you assemble it in the area intended for use.
- Some of the assembly will be easier with two people. Seek assistance when lifting large or heavy items.
- Assemble this product on a clean, flat and level surface e.g. the cardboard packaging.
- Keep any tools provided or spare fittings for future use. Only use the tools specified.
- Assemble all parts loosely, by hand, before tightening any bolts or fixings.

**BEFORE STARTING ASSEMBLY, PLEASE CHECK ALL PARTS ARE INCLUDED. IF ANY PARTS ARE MISSING, PLEASE CALL (+44) 0330 0904 420, EMAIL [support@sportspowerfit4kids.com](mailto:support@sportspowerfit4kids.com), OR VISIT [www.sportspowerfit4kids.com](http://www.sportspowerfit4kids.com)**

# CONTENTS

<p><b>A</b> x20 (630mm)</p> 	<p><b>B</b> x24 (660mm)</p> 	<p><b>C</b> x5 (875mm)</p> 
<p><b>D1</b> x12 (M8x30mm)</p> 	<p><b>D2</b> x12 (M5x14mm)</p> 	<p><b>E</b> x8 (M8x12mm)</p> 
<p><b>F</b> x12 (M6)</p> 	<p><b>G</b> x24 (M6)</p> 	<p><b>H</b> x12</p> 
<p><b>I</b> x8</p> 	<p><b>J</b> x1 (M8)</p> 	<p><b>K</b> x2 (M4x60mm)</p> 
<p><b>K</b> x4 (M4x245mm)</p> 	<p><b>L</b> x1</p> 	

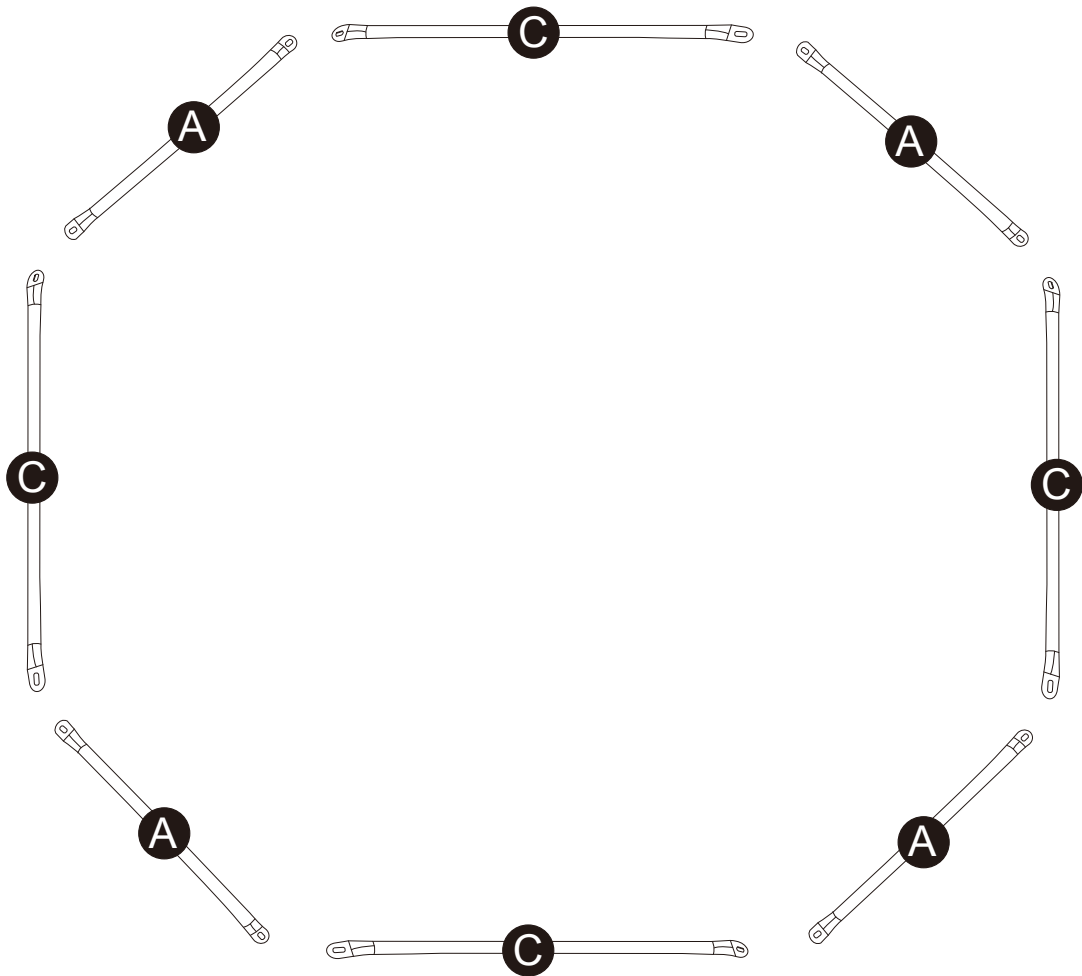
For faulty or missing parts please contact customer services: call (+44) 0330 0904 420, Email [support@sportspowerfit4kids.com](mailto:support@sportspowerfit4kids.com) or visit [www.sportspowerfit4kids.com](http://www.sportspowerfit4kids.com)

## ASSEMBLY

### step 1

Locate all A and C tubes needed to form the base of the climber and place them on flat surface as shown below.

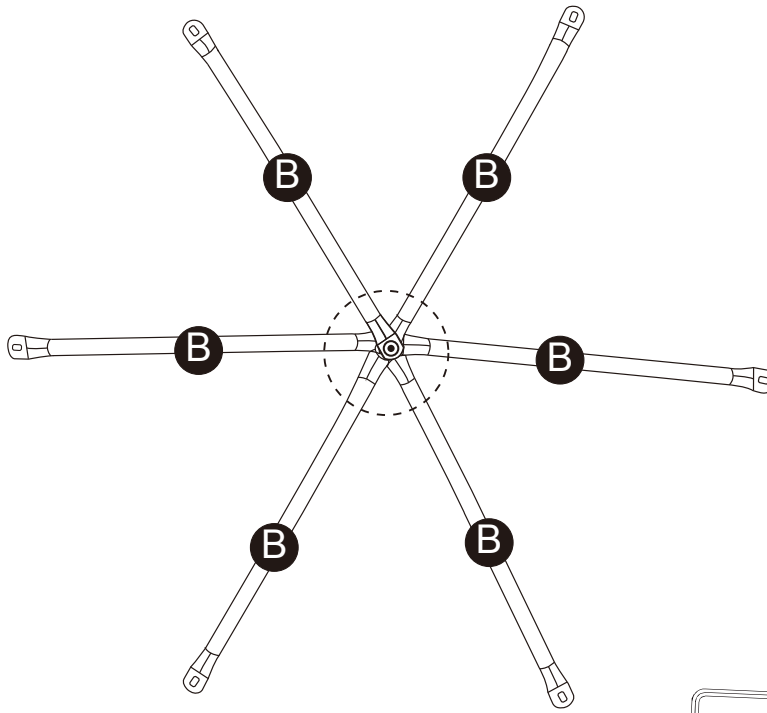
Leave these in position and move to a clear space nearby to install the top sections of the climber in the next steps.



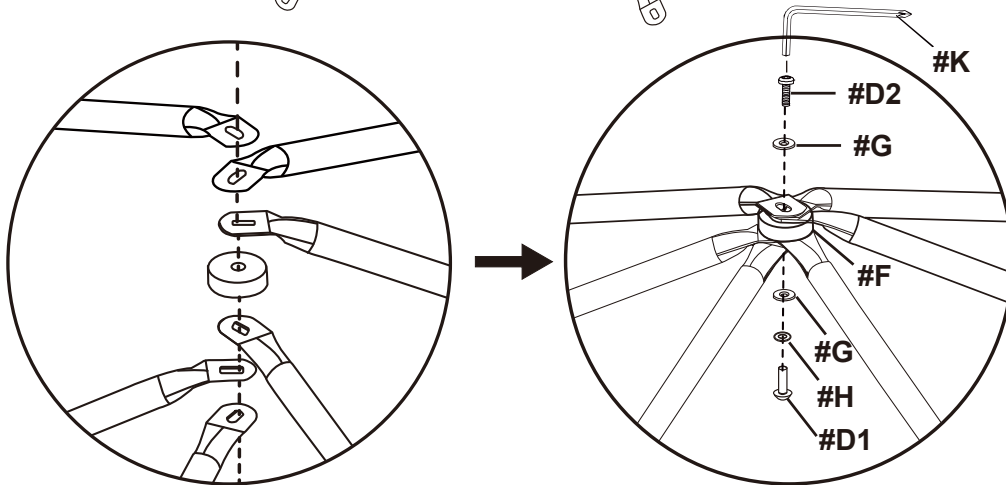
# ASSEMBLY

## step 2

Connect six B tubes together in the sequence shown in the enlarged diagram. Make sure 3 tubes are placed above the plastic connector #F, and three are below. Repeat this step and assemble four sets.



X4



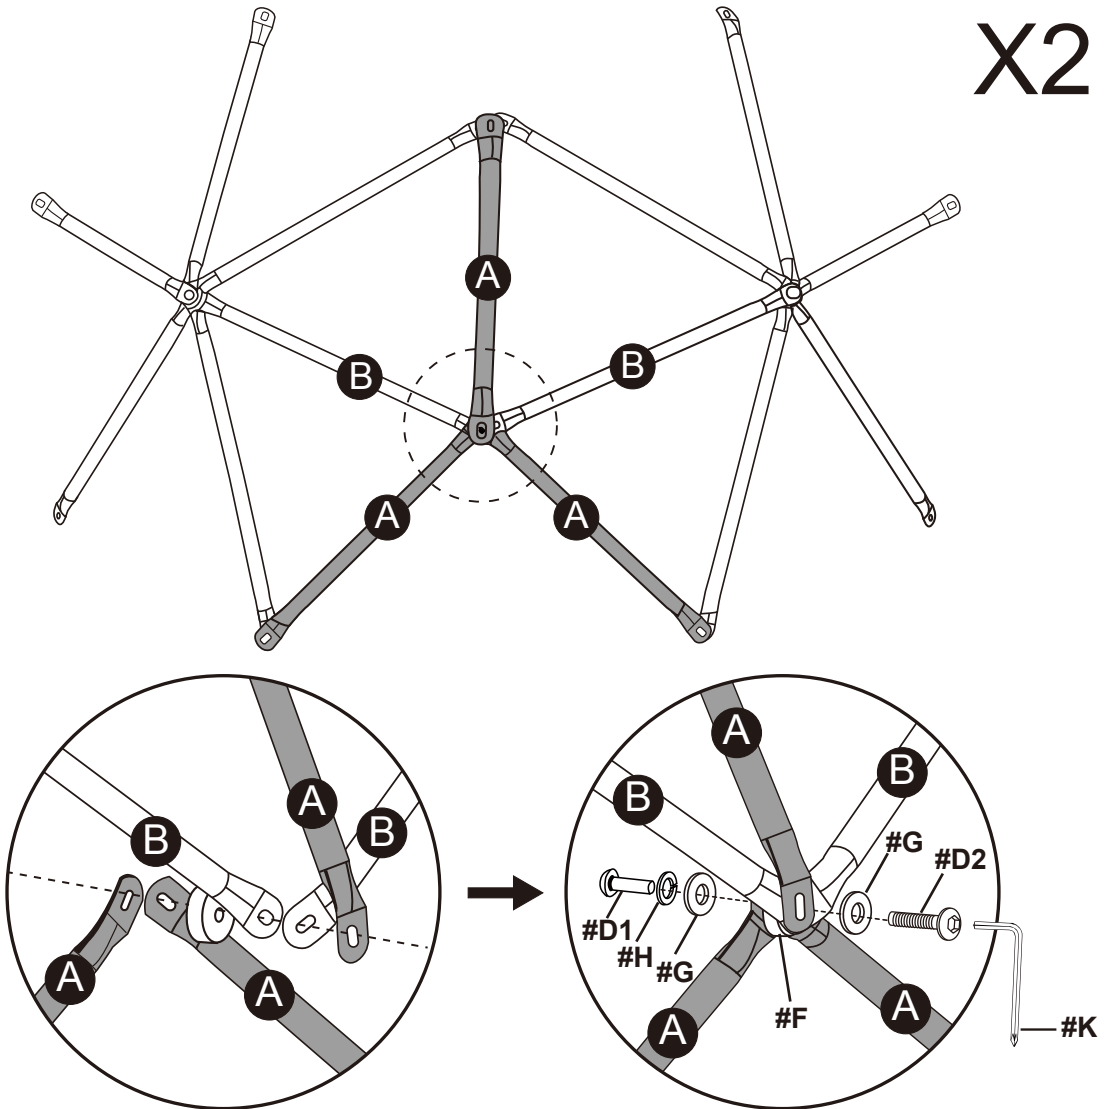
x 4	x 4	x 8	x 4	x 4
D1	D2	G	F	H






# ASSEMBLY

## step 3

Connect two sets of the B tubes assembled in the previous step together with three A tubes as shown in the enlarged diagram. Make sure the plastic connector #F is placed between 2 A tubes and 2 B tubes.

Repeat this step and assemble 2 sets.

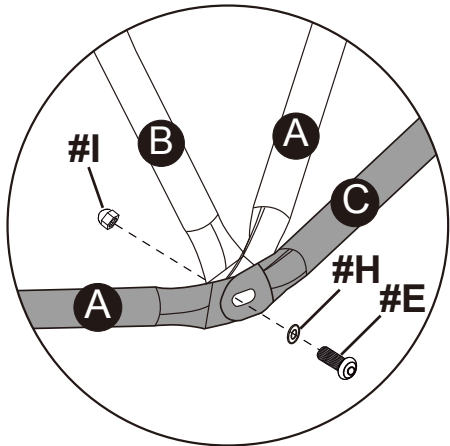
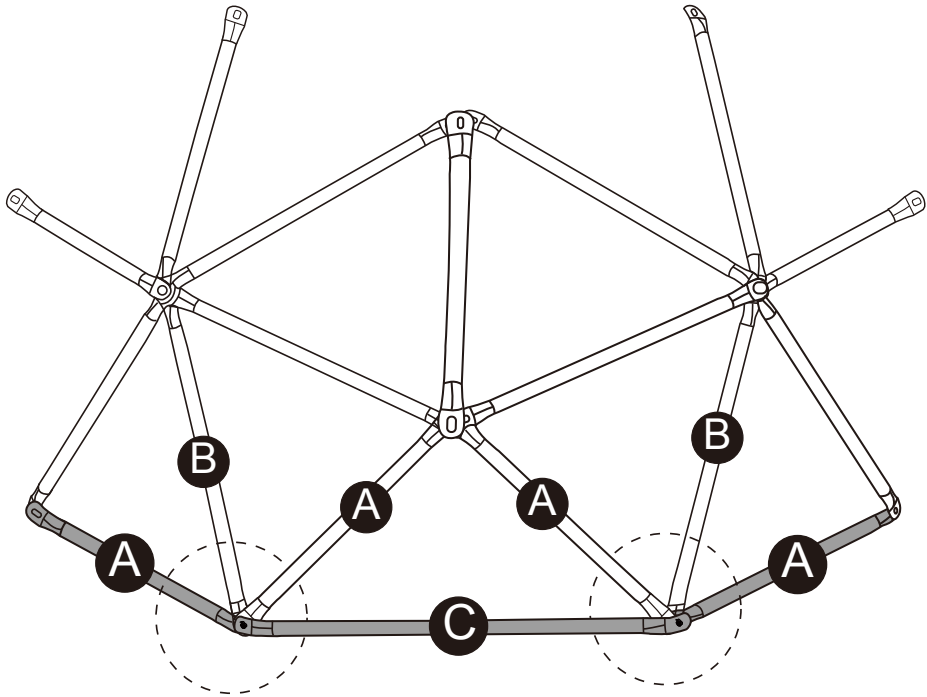





				
x 4	x 4	x 8	x 4	x 4
D1	D2	G	F	H

# ASSEMBLY

## step 4

Attach base tubes A and C to the frame assembled in the previous step as shown below. Repeat in the same manner for the other set.

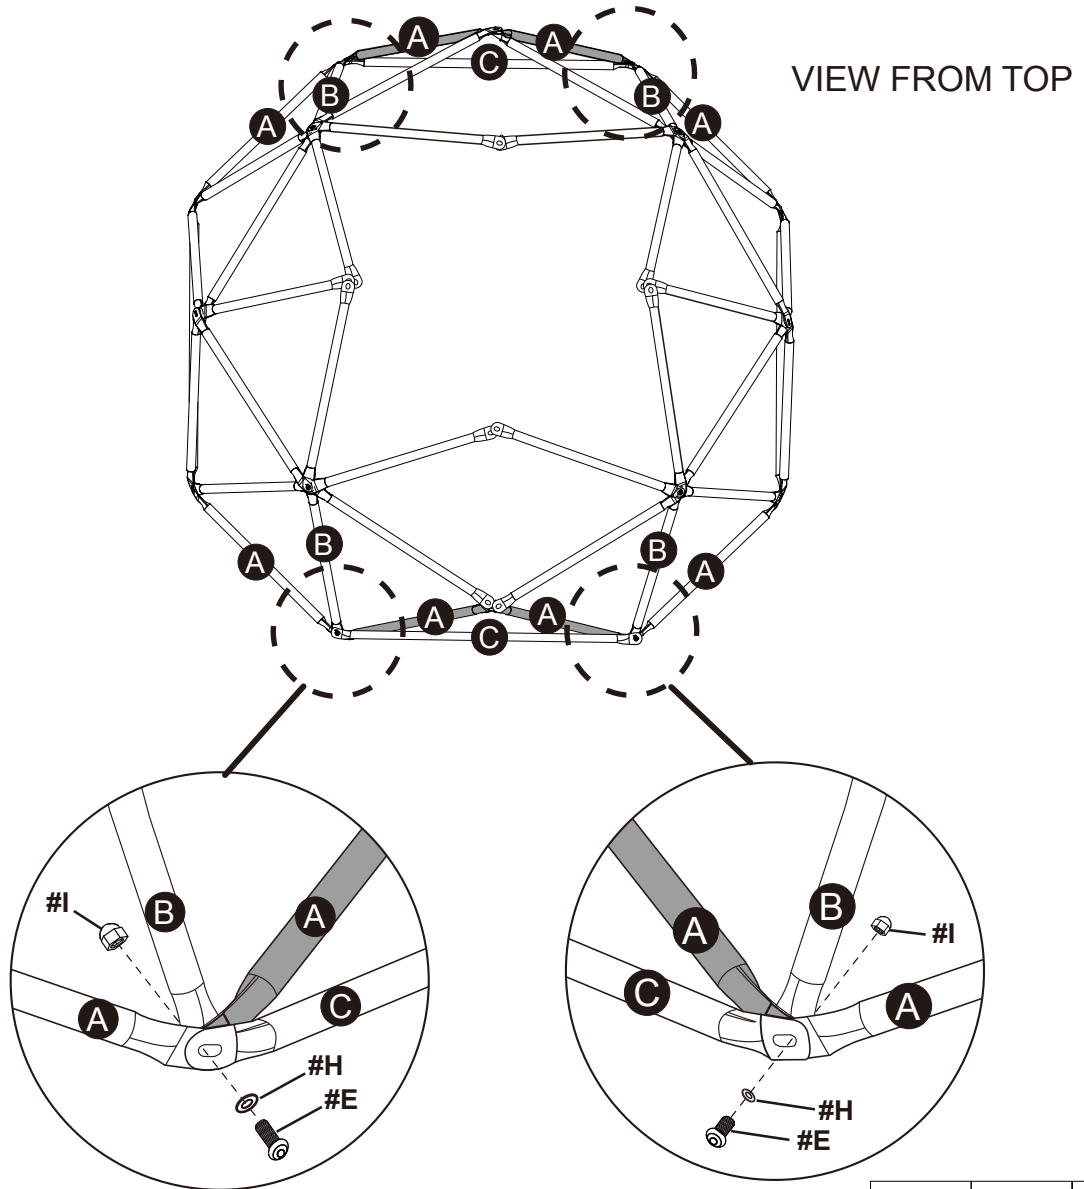





		
X 4	X 4	X 4
E	I	H

# ASSEMBLY

## step 5

Connect the two assembled halves to form the climber. Secure together by adding two A tubes as shown in the enlarged diagram. The picture below is showing the view from the top of the climber.



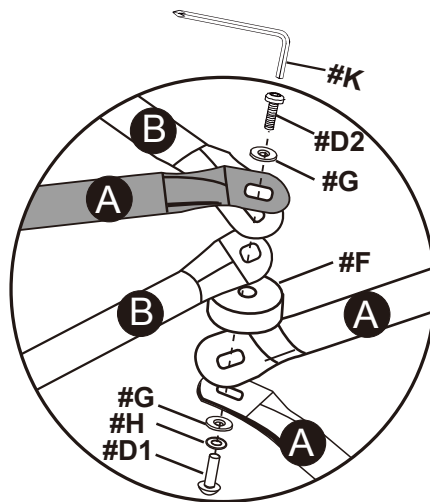
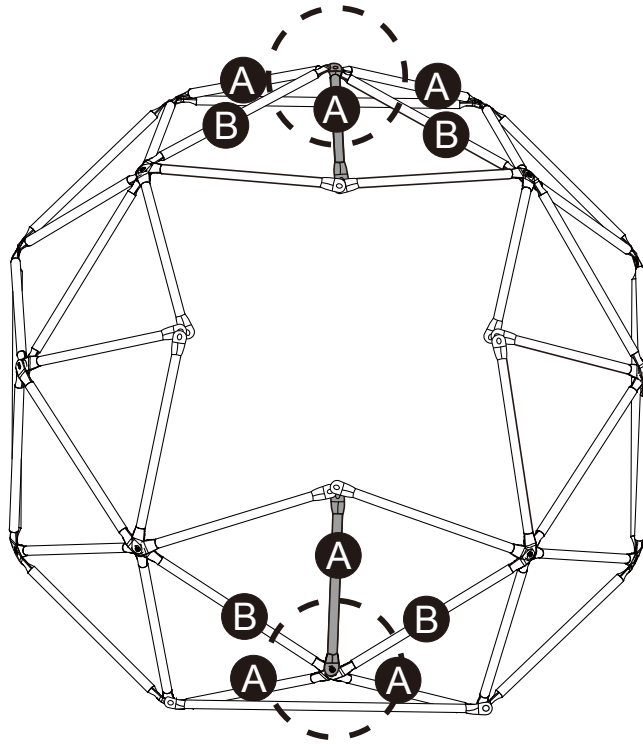
		
x4	x4	x4
E	I	H



# ASSEMBLY

## step 6

Add an A tube to connect the top part of the two sides as shown below. Make sure the plastic connection #F is placed between two A tubes and 2 B tubes.

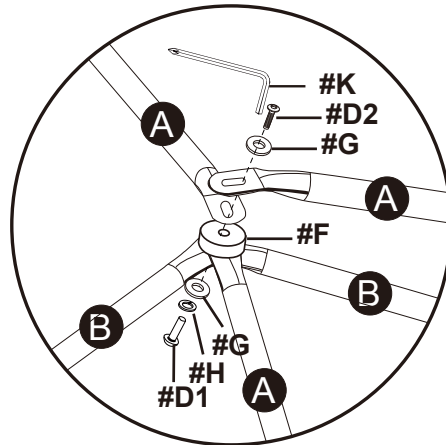
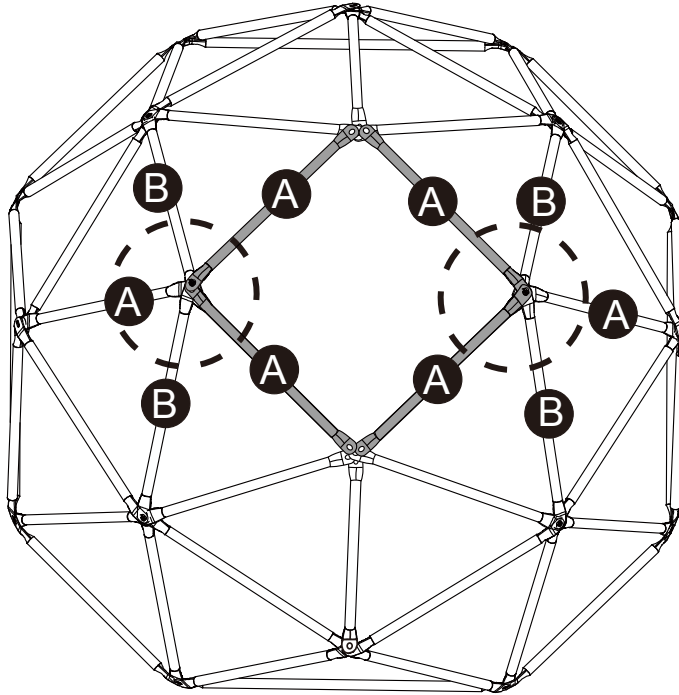







x 4	x 4	x 8	x 4	x 4
D1	D2	G	F	H

# ASSEMBLY

## step 7

Join the top of climber together by adding four A tubes as shown below.



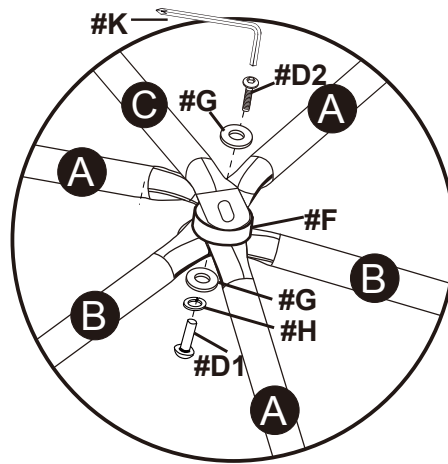
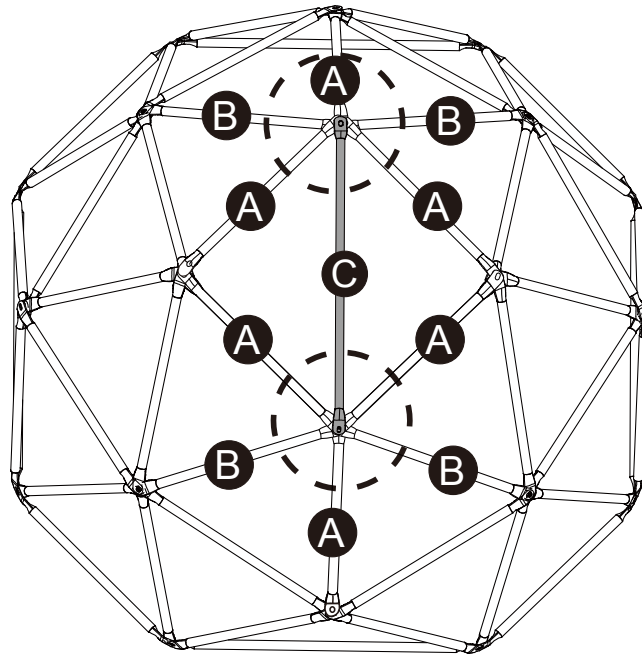
				
x 4	x 4	x 8	x 4	x 4
D1	D2	G	F	H






# ASSEMBLY

## step 8

Connect a C tube at the top to complete the climber frame.

**IMPORTANT REMINDER:** Now go back over the entire unit and fully tighten all nuts and bolts.

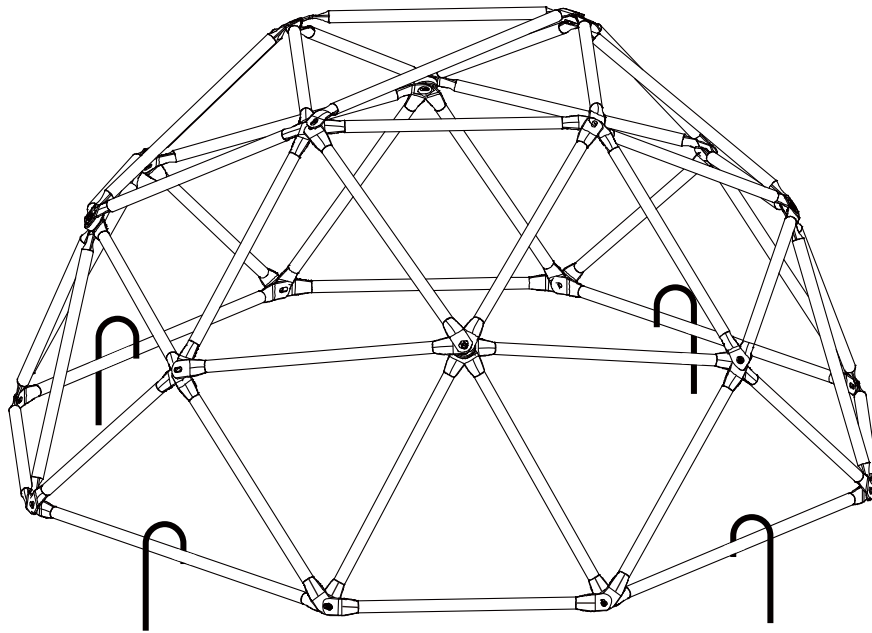


				
x 4	x 4	x 8	x 4	x 4
D1	D2	G	F	H

## ASSEMBLY

### step 9

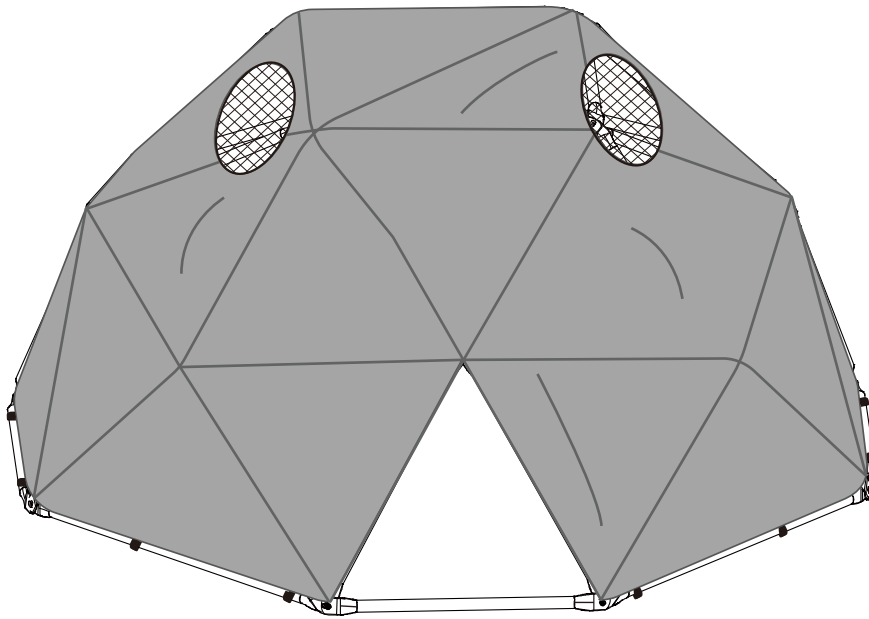
Secure the climber to the ground using the four anchors provided. Make sure the anchors are fully inserted into the ground to avoid any tripping hazards.



## ASSEMBLY

### step 10

The cover can be used as a tent for children to play inside. To install, place the cover over the climber and secure the bottom to the frame with Velcro.





## Warning

- NOT suitable for children under 36 months. Small parts choking hazard. Long cord strangulation hazard.
- Adult supervision is required at all times. Never leave children unattended.
- This product is only intended for outdoor domestic use.
- Only one child at any one time.
- Age recommendation for this product is 3-8 years.
- Max user weight is 45kg.
- Do not attach items to the equipment that are not specifically designed for use with this product. Such as, but not limited to skipping ropes and chains as they may cause strangulation hazards.
- Do not allow children to jump off the top of the climber.
- DO NOT allow children to climb or play on the product whilst the product is wet as slips or falls may occur.
- Ensure children wear suitable clothing whilst using the product. Do not allow loose clothing, clothing with draw-strings, jewellery or any article of clothing that might be potentially hazardous whilst using the product.
- DO NOT let children use this equipment in any manner other than the correct intended use. Teach children to use the product correctly.
- Please retain these instructions for future reference.

### ASSEMBLY GUIDANCE:

- Two adults are recommended to assemble the product.
- At the start of assembling DO NOT FULLY tighten bolts / nuts all the way so as to allow some possible adjustment for ease of assembly.
- DO NOT use pliers to tighten up screws as they can cause damage to paintwork and nuts and bolts.
- Product must be assembled and used on a flat and level surface at least 2 metres ( 7.5 feet ) from any structures or obstructions such as fences, walls, garden borders, washing lines, electrical cables.
- Ensure the product is installed over a soft surface, such as grass or sand, or wood bark which should have a depth of minimum 15 cm ( 6 inches). Installation area should be regularly checked and any shock absorbing materials replenished to maintain a correct depth regarded suitable for the product otherwise injuries may occur from a fall.
- DO NOT install the unit over concrete, asphalt, gravel or any hard surface which may cause injury should a fall occur.
- The product must be secured using the anchors provided. The anchors must be placed level with, or under the ground in order to reduce tripping hazards.
- DO NOT allow children to use the product until it has been properly assembled, anchored and checked by an adult.
- Remove and dispose of all packaging materials before the product is used.
- After all major components are assembled go back over all bolts and nuts and properly tighten all before using the product.



## Maintenance

- Carry out checks and maintenance of the main tubes, anchors, nuts and bolts before each play session and at least every two weeks.
- Check all nuts, bolts and fittings for tightness and tighten if required.
- Check unit for sharp edges which may have occurred during shipping, assembly, abuse or everyday usage. Replace if required.
- Check climbing frame for any evidence of deterioration, cracks or exposed edges which could cause injury.
- Check to ensure all tubes are correctly fixed to the climbing frame according to the instructions.
- To help maintain the products appearance, occasionally clean the metal framework with a damp cloth lightly – but do not use abrasive chemical cleaners.
- When you wish to disassemble or dispose of the product please completely disassemble the unit and discard of it in a safe place and manner so as not to present any hazard to any individual.

If any assistance is needed contact the **HELP LINE:** (+44) 0330 0904 420 by email [support@sportspowerfit4kids.com](mailto:support@sportspowerfit4kids.com), or visit [www.sportspowerfit4kids.com](http://www.sportspowerfit4kids.com) for replacement parts.

## PRODUCT WARRANTY

All warranty coverage extends only to the original purchaser of the product and is not assignable or transferable. The original store or online purchase receipt must be kept as proof of purchase in order for the warranty to be valid. These documents must be presented in the event of making a claim under warranty.

During the warranty period, Sportspower will provide repair or replacement of defective equipment or parts thereof covered by the warranty. Any handling, transportation, delivery and other incidental charges in respect of the servicing of the equipment shall be borne by the Purchaser. If the product includes a number of accessories, only the defective part or accessory will be replaced.

The warranty will become void if any defects or damages are associated with the use of unauthorized replacement parts. All replacement parts must be obtained from Sportspower authorized agents.

All decisions made by Sportspower in respect of the servicing of the equipment (including repairs, replacements or issues relating to defects of workmanship or materials) shall be conclusive and the Purchaser agrees to be bound by such decisions. Any defective equipment or part thereof replaced shall become the property of Sportspower.

In the event of a product or accessory being replaced during the guarantee, the guarantee on the replacement will expire at the original date, i.e. 90 days from the original purchase date.

This warranty excludes defects caused by the product not being used in accordance with instructions, accidental damage, misuse or being tampered with by unauthorized persons.

The Sportspower Limited Warranty does not cover:

(a) Products used for commercial or rental purposes.

(b) Loss or damage to product due to: (i) abuse, repairs and/or tampering by any person other than the authorized personnel of Sportspower; (ii) negligence and/or misuse (including foreign object, accident, improper storage, exposure to sun/moisture, excessive temperature, sand, dust, dirt, other pollution or other environmental conditions and failure to follow precautions or proper operating instructions stated in the User's Manual such as improper installations); (iii) fire, flood, lightning strike, wind storm or other acts of God; (iv) freight or improper transport damages, and (v) improper usage (including use by under-age, over-weight or excessive number of users permitted as stated in the User's Manual).

(c) Defects, damages or accidents due to the malfunction, connection to or use of non-Sportspower or unauthorized parts. In such event, Sportspower reserves the right to cancel the Limited Warranty coverage immediately.

To the extent allowed by the applicable local law, the remedies in the Limited Warranty are the Purchaser's sole and exclusive remedies.

SPORTSPOWER IS NOT RESPONSIBLE OR LIABLE FOR INDIRECT, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THE PRODUCT OR OTHER DAMAGES WITH RESPECT TO ANY ECONOMIC LOSS, LOSS OF PROPERTY, LOSS OF REVENUE OR PROFITS, LOSS OF ENJOYMENT OR USE, COST OF REMOVAL, INSTALLATION OR OTHER CONSEQUENTIAL DAMAGES. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. ACCORDINGLY, THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

THE WARRANTY EXTENDED HEREUNDER IS IN LIEU OF ALL OTHER WARRANTIES AND ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE IS LIMITED IN ITS SCOPE AND DURATION TO THE TERMS SET FORTH HEREIN. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS. ACCORDINGLY, THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE. THIS WARRANTY IS VALID ONLY IN THE UNITED STATES.

**CUSTOMER SERVICE/ SPARE PARTS -(+44 ) 0330 0904 420**  
by email [support@sportspowerfit4kids.com](mailto:support@sportspowerfit4kids.com),  
or visit [www.sportspowerfit4kids.com](http://www.sportspowerfit4kids.com)

**Geemac Sales & Marketing Ltd.**  
**20 Queensbridge Bedford Road Northampton,**  
**United Kingdom, NN4 7BF**

Sportspower Ltd.  
20/F, Parkview Centre, 7 Lau Li Street, Causeway Bay, Hong Kong  
[www.sportspowerltd.net](http://www.sportspowerltd.net)