

VIVOHOME

**THANK  
YOU!**

**NOTE:**

To continuously improve its products, VIVOHOME reserves the right to modify this information without prior notification.

For any questions regarding assembly, please watch the video on the product page or contact our customer service. Our customer service will gladly assist you with any additional questions, comments, or concerns.

Thank you for using VIVOHOME products in your home!


Thank You for Purchasing from

VIVOHOME  
Made in China

VIVOHOME

**HOW-TO**

**USER MANUAL**

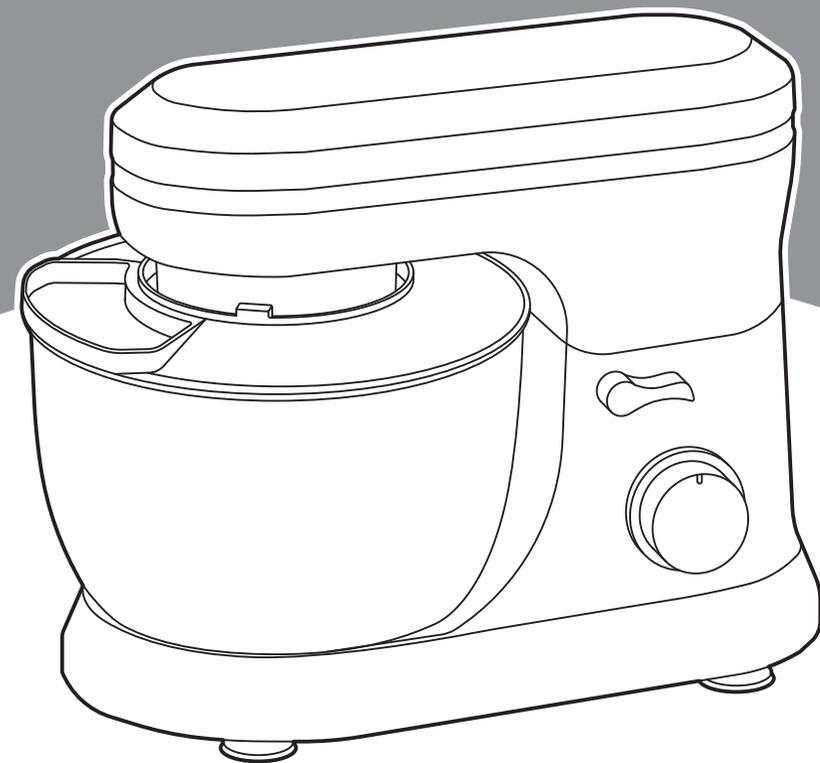

**4.75QT Stand Mixer**

**Assembly is EASY!**

**WE WANT  
YOU TO  
ENJOY LIFE  
AT HOME**

GO TO THE PRODUCT LISTING PAGE  
FOR AN INSTRUCTIONAL VIDEO!

## CONTENTS

Technical Data .....	1
General Safety Instructions .....	1
Name of Different Parts .....	3
How to Use the Machine .....	4
Suggestion .....	5
Recipe .....	6
Analysis of Common Problems .....	10
Cleaning .....	12
Disposal .....	13
Warranty .....	13

## SECTION A

# Technical Data



Model	SM-1510
Rated Voltage	AC 120V
Frequency	60Hz
Power Consumption	380W
Protection Class	II
Speed Knob	8-speed knob switch + Pulse gear
Mixing Bowl	Material is SUS304, and capacity is 4.5L (4.75QT)

## SECTION B

# General Safety Instructions



Read the operating instructions carefully before putting the appliance into operation, and keep the instructions, including the warranty, the receipt, and if possible, the box with the internal packing. If you give this device to other people, please also pass on the operating instructions.

- The appliance is designed exclusively for private use and for the intended purpose. This appliance is not fit for commercial use. Do not use it outdoors (except if it is designed to be used outdoors). Keep it away from sources of heat, direct sunlight, humidity (never dip it into any liquid), and sharp edges. Do not use the appliance with wet hands. If the appliance is humid or wet, unplug it immediately.
- When cleaning or putting it away, switch off the appliance and always pull out the plug from the socket (pull on the plug, not the cable) if the appliance is not being used, and remove the attached accessories.

- Do not operate the machine without supervision. If you should leave the workplace, always switch the machine off or remove the plug from the socket (pull the plug itself, not the lead).
- Check the appliance and the cable for damage on a regular basis. Do not use the appliance if it is damaged. Do not try to repair the appliance on your own. Always contact an authorized technician. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.
- Use only original spare parts.
- Pay careful attention to the following "Special Safety Instructions".

## Children and Frail Individuals

- In order to ensure your children's safety, please keep all packaging (plastic bags, boxes, polystyrene, etc.) out of their reach.  
**Caution!** Do not allow small children to play with the foil, as there is a danger of suffocation!
- When using an accessory blender and chopper, the appliance shall not be used by children. Keep the appliance and its cord out of the reach of children.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or a lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.


- Children should be supervised to ensure that they do not play with the appliance.

## Special safety Instructions for this Machine

- Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling, or cleaning.
- Switch off the appliance and disconnect from the supply before changing accessories or approaching parts that are in use. Do not use appliance for other than intended purpose.
- CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.
- Only operate this machine under supervision.
- Do not interfere with any safety switches.
- Do not insert anything into the rotating hooks while the machine is working.

- Place the machine on a smooth, flat, and stable working surface.
- Do not insert the mains plug.
- CAUTION: Ensure that the blender is switched off before removing it from the stand.
- This appliance is intended to be used in households and similar applications such as:
  - staff kitchen areas in shops, offices, and other working environments;
  - farm houses;
  - by clients in hotels, motels, and other residential type environments;
  - bed and breakfast type environments.

## SECTION C Name of Different Parts

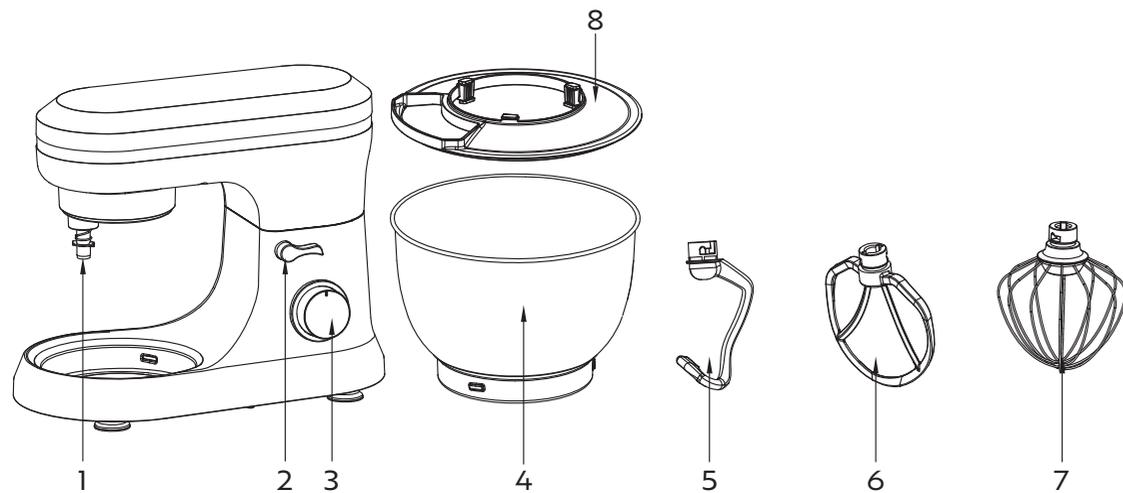


1	Output Shaft	5	Dough Hook
2	Rise Button	6	Beater
3	Speed Button	7	Whisk
4	Bowl	8	Bowl Cover

## SECTION D

# How to Use the Machine



1. Before use, wash the accessories with clean water, rinse, and dry.
2. Place the machine on a flat, clean, and dry table. Press the head of the machine, then rotate the rise button (2) clockwise, and the upper body will lift up automatically (PG 1 and 2).
3. Weigh the food and water to be processed into the mixing bowl, then assemble the mixing bowl (4) on the machine, rotating clockwise until the buckle is screwed in and locked (PG 2).
4. Do not exceed the amount of dough; the total weight can hold up to 0.9 kg.
5. Install the required accessories (5), (6), and (7) (only one of the three can be used at a time) onto the head mixing output shaft (1), push the accessories to the top, and then turn a quarter turn counterclockwise to the locking position (PG 3 and 4).
6. Press the head of the machine, and the machine will automatically lock the head button (2), which is in the horizontal position (PG 5).
7. Install the pot cover on the stirring end of the machine as per PG 6.
8. Then plug in the plug and turn on the power switch.
9. Control the speed knob (3) to the required speed; start mixing.
10. After the dough meets the requirements, turn the speed knob (3) back to gear 0 to finish.
11. Press the head of the machine by hand, rotate the lifting knob (2) clockwise, lift the upper body, rotate the mixing bowl counterclockwise, remove the mixing bowl, and take out the dough.
12. Switch off the appliance and disconnect from the supply before changing accessories or approaching parts that are in use.

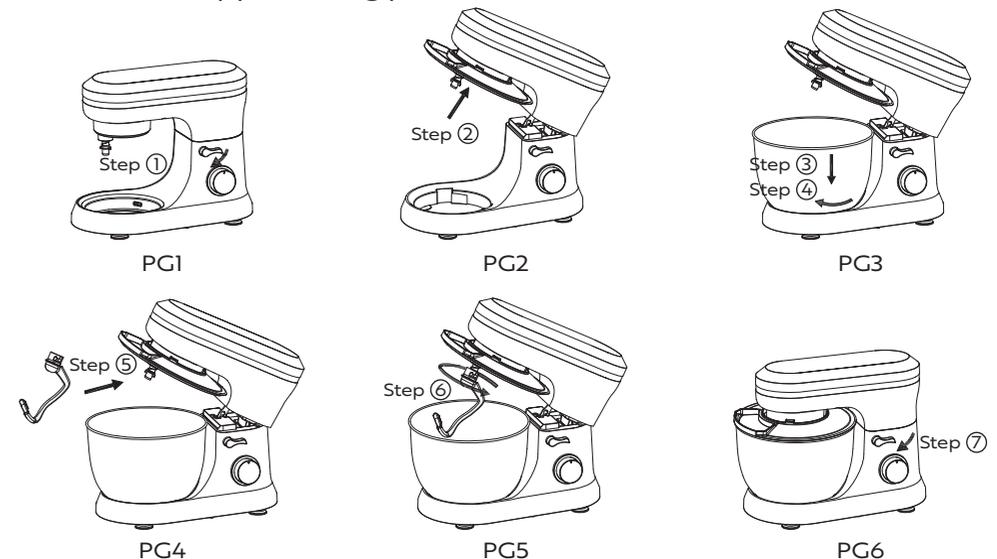



Adjusting the Levels and Using the Hook for not more than 0.9kg of Mixture.

Accessories	Picture	Speed	Time (Mins)	Maximum	Operation Method
Dough Hook		1-5	3-5	585g flour and 315g water	1/2 speed run for 30s, the 3/4 speed run for 30s, and then the 5 speed run for 2 min to 4 min to form a cluster.
Beater		2-6	3-10	400g flour and 500g water	2 speed run for 20s, the 6 speed run for more than 2 min 40s
Whisk		6-8	3-10	3 egg whites (Minimum)	Open 6-8 speed to run 3 min above.



### Linseed Bread Rolls

Ingredients: 30g linseed, 40g water, 250g bread flour, 3g dry yeast, 30g sugar, 3g salt, 10g milk powder, 20g butter, 15g egg liquid

Process:

1. Soak the 30 g of linseed in 40 g of water for 12 hours.
2. Put 250 g of bread flour, 3 g of dry yeast, 30 g of sugar, 3 g of salt, 10 g of milk powder, and 150 g of water into the mixing bowl. Use a dough hook to knead the ingredients into the dough at levels 1–3, and then add 20 g of butter and continue to knead the dough until smooth. Then add the soaked linseed until the dough is well kneaded. Cover with preservative film and allow fermenting to double its size in a warm place.
3. Knead thoroughly once more, remove from the bowl, and divide into six rolls. After being rounded, cover the rolls and allow them to ferment at 38 °C for 1 hour.
4. After the fermentation is finished, brush the surface of the bread with egg liquid, put it on the penultimate layer in the preheated oven, set the fire up and down at 180°C, and bake for 20 minutes, then remove the mold and put it on the grill to cool down.

### Toast Bread

Ingredients: 270g high-gluten flour, 30g low-gluten flour, 1 egg, 3g salt, 55g sugar, 4g yeast, 80g light cream, 10g milk powder, 90g water.

Process:

1. Put all the ingredients into the mixing bowl. Use a dough hook to knead the ingredients into dough at levels 1–3.
2. Keep the mixture in a warm place and allow it to ferment to double its size.
3. Knead thoroughly once more, remove it from the bowl, and divide it into 3 portions. Cover the dough with preservative film for 15 minutes.
4. Take one portion and roll it into a tongue shape, fold both sides toward the middle, and roll it up from bottom to top. After all three are rolled, cover the rolls with preservative film for 15 minutes.
5. After finishing three servings, put them into the mold for the second fermentation. Ferment at 80% of the mold height. Set the fire up and down at 170°C and bake for 40 minutes, then remove the mold and put it on the grill to cool down.

## Homemade Pizza

Raw materials: 170g high-gluten flour, 100g water, 1.5g edible salt, 15g white sugar, 2g yeast, 15g butter, and some stuffing.

Process:

1. Put 170g high-gluten flour, 100g water, 1.5g edible salt, 15g sugar, and 2g yeast into the mixing bowl. Mix with the dough hook at levels 1-3. After kneading into dough, add butter and continue to knead until it can pull out to be a flexible film.
2. Leave the dough fermenting to double its size in a warm place.
3. During the fermentation, the pizza stuffing can be made and reserved for future use.
4. Knead thoroughly once more, take half of the dough to roll it round, and relax for 5 minutes. Then, use a rolling pin to gently roll it to the size of a pizza pan, put it on the pizza pan, press it around the pizza pan with your hands, and finally, use a fork to make small holes.
5. Set the upper and lower tube heating modes of the oven, preheat 200°C. Brush the pie mold base with olive oil first, then scoop the pizza sauce and spread it evenly, and then, sprinkle a little mozzarella cheese and shredded onion, put the 8-inch pizza pan in the second layer of the preheated oven and bake for 8 minutes.
6. When the time is up, take out the pizza pan and spread a layer of bacon. Here you can put your favorite food and prepared stuffing in order.
7. Put it in the preheated oven, set the working time for 15 minutes until the cheese is melted and the crust is golden.

## Butter Bread

Ingredients: 375g high-gluten flour, 180g milk, 35g butter, 30g sugar, 11g milk powder, 4g yeast, 3g salt, 1 egg

Process:

1. Put all the ingredients into the mixing bowl except the butter, leaving 10 grams of egg for the final brushing.
2. Use the dough hook to mix at levels 1-3. After forming the dough, add softened butter and continue kneading into glove film status.
3. Cover the mixture with preservative film and allow it to ferment to double its size in a warm place.
4. Knead thoroughly once more, remove it from the bowl, and divide it into 10 portions. Take a portion of the dough and roll it into an oval shape, then roll it up from top to bottom.
5. Place the greased paper on the baking tray, then put the rolled bread dough on the tray. Allow the dough to ferment to double its size in a warm place.
6. Brush the egg liquid on the bread dough surface, preheat the oven to 160°C, put the bread dough in the middle layer, and bake for 20 minutes.

## French Bread

Ingredients: 250g high-gluten flour, 50g low-gluten flour, 150g water, 10g sugar, 3g yeast powder, 1g edible salt.

Process:

1. Put all the ingredients into the mixing bowl, use the dough hook to mix at levels 1-3, and knead the dough into a dough shape.
2. Cover the mixture with preservative film and allow it to ferment to double its size in a warm place.
3. Knead thoroughly once more, remove it from the bowl and divide it into 4 portions. Take a portion of the dough and roll it into an oval shape, then roll it up from top to bottom.
4. Then cover it with preservative film and allow it to ferment to double in size.
5. Brush the surface with sesame oil, preheat the oven to 180°C, put the bread dough in the middle layer, and bake for 20 minutes.

## Original Cake

Ingredients: 100g cake flour, 5 eggs, 50g edible oil, 80g sugar, a small amount of lemon juice, 55g milk.

Process:

1. Separate the egg white and egg yolk, add 20 grams of sugar to the egg yolk, and mix with the egg beater at level 6 until the sugar is completely melted. Add milk and continue to stir evenly at level 6.
2. Pour edible oil and continue beating until fully emulsified.
3. Pour the cake flour through a sieve and stir evenly into a fine egg yolk paste.
4. Put a few drops of lemon juice into the egg white, add sugar three times, and beat with an egg beater until it is cotton-like.
5. Take 1/3 of the egg whites, put them in the egg yolk paste, and stir evenly. Pour the paste back into the remaining egg whites and stir evenly to make a fine cake paste.
6. Brush edible oil on the surface of the cake mold, then pour the cake paste into the mold.
7. Preheat the oven to 150°C, set the upper and lower pipe heating modes and the baking time to 50 minutes, then bake it till golden.

## Chocolate Cake

Ingredients: 150g egg liquid, 50g pure milk, 40g cocoa powder, 80g white sugar.

Process:

1. Add 150 g of egg liquid, beat with an egg beater at level 6, until it is cotton-like, then take it out and set aside.
2. Put 80g white sugar, 50g milk, and 40g cocoa powder into a bowl and stir into a fine powder with a stirring paddle at level 6.
3. Pour the prepared fine powder into the beaten egg liquid and mix well.
4. Pour the mixed raw materials into the oil-brushed baking tray mold and put it in the oven for baking at 180°C.
5. After being baked and shaped, take them out of the mold and wait for them to cool down before eating.

## Chocolate Ice Cream Cake

Ingredients: 140g cream cheese, 140g dark chocolate, 220g milk, 100g powdered sugar, 240g whipped cream, 2g edible salt.

Process:

1. The outside of the square mold is wrapped with tin foil, and a circle of baking paper is put inside.
2. Add powdered sugar and a pinch of salt to the cream cheese and mix it with a stirring paddle.
3. Chop the dark chocolate and heat it to melt. Pour the melted chocolate into the cheese, then use a stirring paddle to stir evenly. Take it out and place it on a tray for later use.
4. Put whipped cream in the pot and then stir until it is almost cotton-like.
5. Add the whipped cream twice into the chocolate cheese and stir evenly, then pour the milk twice into it and mix it well again.
6. Finally, pour it into the mold and put it in the refrigerator for several hours. Take it out and de-mold it.



Phenomenons	Causes	Solutions
The machine suddenly stops working during use.	It may be that the machine runs too long, or the ambient temperature is too high, resulting in the machine's motor temperature being too high; the machine starts the overheating protection program, automatic shutdown.	Gear reset to "0", unplug the power, wait for the machine to return to room temperature can be restarted (generally need 15-30 minutes, the room temperature varies cooling time).
Turning the gear knob machine does not run	Check if the plug is in good contact with the socket.	Verify that the power plug is plugged into the outlet.
	Check if the power is out.	Wait for power before operating.
	Check if the rise button spring back in place.	Make sure the headstock is stuck in place.
Excessive noise when the machine is running	<ol style="list-style-type: none"> <li>① The machine will work louder in high gear than in low gear.</li> <li>② The amount of food stirred is too large, resulting in overloading the machine.</li> <li>③ Voltage is unstable.</li> <li>④ Working time is too long.</li> </ol>	<ol style="list-style-type: none"> <li>① Choose the right gear to stir food according to the recommendations in the manual</li> <li>② Reduce the amount of stirring.</li> <li>③ If the voltage is unstable, wait for the voltage to stabilize before using.</li> <li>④ If the working time is too long, stop and cool</li> </ol>

Phenomenons	Causes	Solutions
The machine speed drops, or the speed is unstable	<p>① Whether the room temperature is low, causing the lubricant in the machine to harden.</p> <p>② The ingredients stirred are too hard and too much, resulting in too much load on the machine.</p> <p>③ Whether the voltage suddenly becomes low.</p>	<p>① Remove the mixing bowl and let the machine idle for 5 minutes to soften the lubricant in the machine and restore the speed stability.</p> <p>② Reduce the mixing volume and let the machine work according to the normal workload.</p> <p>③ When the voltage is stable, use the machine again.</p>
Machine swaying and shaking when working	<p>① Check if the foot pad on the base is off.</p> <p>② Whether the machine is placed on a smooth and flat countertop for use.</p>	<p>① Check if the foot pad on the base is off.</p> <p>② Place on a smooth and flat countertop for use.</p>
The headstock can't spring back to reset after putting on the anti-splash cover and mixing bowl	Check that the anti-splash cover is in place and the mixing bowl is assembled.	Rotate the anti-splash cover and assemble it in place, and assemble the mixing pot in place.
Dough darkening found after use	Black powder falls onto the dough at the mixing head.	Please check that the mixing head and hook are dry and that no water or dust is present on the surface before use.



Body Cleaning	<p>1. Do not immerse the machine in the water. Do not use water to shower directly on top of the machine to prevent the host body from entering the water to avoid short circuits, electric shock, leakage, rust, and other failures.</p> <p>2. Do not use a dripping wet towel to wipe the machine</p> <p>3. Do not use detergent, vinegar, salt, or other corrosive, strongly acidic, or strong alkaline cleaning products to clean the machine body; otherwise, they may damage the machine's surface.</p> <p>4. Do not use sharp and rough tools, such as wire balls, to brush the accessories. Otherwise, it is easy to damage the surface of the accessories.</p>
Accessory Cleaning	<p>1. Do not put the cast aluminum parts into the dishwasher or wash them with corrosive, strongly acidic, or alkaline cleaning products. Please do not put them in the dishwasher for cleaning. (Except for stainless steel parts or surface-treated Teflon parts and electrophoresis parts)</p> <p>2. Do not soak for a long time in detergent, saltwater, vinegar, and other corrosive liquids; use in time to clean accessories.</p> <p>3. After cleaning, dry the accessories, mainly to keep the internal parts dry in time.</p>
Special Cleaning	<p>1. The rotating output shaft will produce a bit of black trace due to high speed and friction when the machine is working. After each use, please clean it promptly and keep the part dry.</p> <p>2. Pay attention to the sharp blade and related sharp edge parts or accessories.</p>
Preservation and maintenance	<p>1. You can use olive oil to apply to the blade's surface, knife plate, and mixing pot to ensure a dry and wet environment to oxidize it.</p> <p>2. When not in use, you can cover the machine with a packaging bag and place it in a dry environment.</p>

**Do not dispose of the device in normal domestic waste.**

Dispose of the device at a registered waste disposal firm or through your communal waste disposal facility.

Observe the currently valid regulations. In case of doubt, consult your waste disposal facility.



The VIVOHOME warranty program is our commitment to you.

We are committed to providing you with a high-quality product that meets your needs and expectations. To demonstrate our confidence in the durability and performance of our products, we offer the following warranty.

**Warranty Coverage**

This warranty program applies to any orders, purchases, receipts, or use of any products sold by VIVOHOME and is valid for a period of 1 year from the date of purchase. However, please note that this warranty period is only valid for the original order. If you receive a replacement order during the warranty period, it will not include a separate warranty period.

**Warranty Exclusions**

This warranty does not cover damage resulting from misuse, accident, unauthorized modification, or any other circumstances not directly related to the manufacturing and design of the product, including but not limited to:

- Parts lost during use.
- Normal wear and tear of products or parts.
- Incorrect installation (such as using the wrong voltage) or assembly.
- Exceeding the bearing capacity of the product.
- Use under extremely harsh conditions.
- Improper cleaning or maintenance.
- Damage caused by any reason other than the intended use of the product.
- Indirect loss or damage caused by the product.

**How to Make a Warranty Claim**

If you find any defects that affect the use of the product or if the product stops working and cannot be repaired during the warranty period, please contact our customer service team at our email or via Amazon & app's direct messaging service as soon as possible. Provide the following information to expedite the process:

- Order number
- Images and/or videos illustrating the issue
- A detailed description of the problem

VIVOHOME will provide technical support, replacement, refund, or other solutions based on the nature of the issue. If you wish to return the original package for any reason, please contact us for confirmation before proceeding. You can expect to receive a response within 48 hours.

Thank you for choosing VIVOHOME. We are committed to ensuring the quality and satisfaction of your purchase. If you have any questions or need assistance, please do not hesitate to contact our customer service team.