

CARE & MAINTENANCE

NOTE:

- **Always** clean the air fryer after every use.
- Lining the outer basket with foil may make cleanup easier.

1. Unplug the air fryer and allow it to cool completely before cleaning. Pull out the baskets for faster cooling.
2. Wipe the outside of the air fryer with a moist cloth.
3. The baskets are dishwasher safe. You can also wash the baskets with hot, soapy water and a non-abrasive sponge. Soak if necessary.

NOTE: Baskets have a non-stick coating. Avoid metal utensils and abrasive cleaning materials.

4. For stubborn grease:
 - a. In a small bowl, mix 118 mL (½ cup) of baking soda and a few tablespoons of water (1 tbsp = 15 mL) until forming a spreadable paste.
 - b. Use a sponge to spread the paste on the baskets and scrub. Before rinsing, let the baskets sit for 15 minutes.
 - c. Wash baskets with soap and water before using.

5. Clean the inside of the air fryer with a slightly moist, non-abrasive sponge or cloth. **Do not** immerse in water. [Figure 6.1]

6. Clean the heating coil, if needed, to remove food debris.
7. Dry before using.

NOTE: Make sure that the heating coil is dry before turning on the air fryer.

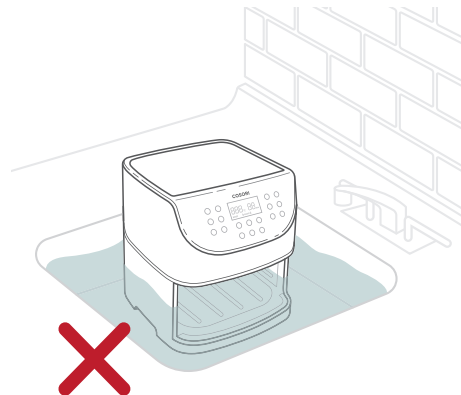


Figure 6.1