

# Portable Air Conditioner

## Owner's Manual

Original instructions



OX-14KHW 14,000 BTU



READ AND SAVE THESE INSTRUCTIONS

# TABLE OF CONTENTS

<b>1. BEFORE YOU BEGIN</b> .....	3
1.1. CUSTOMER SERVICE .....	3
1.2. BEFORE REQUESTING SERVICE .....	4
1.3. PRODUCT DESCRIPTION .....	8
1.4. SYMBOLS FROM THE UNIT AND USER MANUAL .....	9
1.5. PRODUCT DIAGRAM .....	11
1.6. PRODUCT FEATURES .....	12
<b>2. FOR YOUR SAFETY</b> .....	13
2.1. OPERATIONAL PRECAUTIONS .....	13
2.2. SAFETY PRECAUTIONS ON SERVICING .....	15
<b>3. INSTALLATION</b> .....	19
3.1. UNPACKING .....	19
3.2. CHOOSE YOUR LOCATION .....	20
3.3. ATTACH THE EXHAUST HOSE .....	21
<b>4. OPERATION</b> .....	24
4.1. CONTROL PANEL AND DISPLAY .....	24
4.2. WIFI CONNECTED .....	25
4.3. FUNCTION KEYS AND INDICATORS .....	27
4.4. SETTINGS .....	28
4.5. DRAINAGE .....	31
<b>5. CLEANING AND CARE</b> .....	33
5.1. CLEANING THE AIR FILTER .....	34
5.2. CLEANING UP OF REFRIGERANT .....	34
<b>6. OPERATION</b> .....	35
<b>7. DECOMMISSIONING</b> .....	36
7.1. STORAGE .....	36
7.2. DISPOSAL .....	36

# 1. BEFORE YOU BEGIN

## WELCOME

Thank you for purchasing this Wiytamo product. All Wiytamo products are manufactured with great care and are DOE、ETL certified. In addition, our products are tested and inspected strictly prior to shipment to ensure product quality and safety.

At Wiytamo we are very proud of our products and are completely committed to providing you with the best products and service possible. Your satisfaction is our number one priority.

To ensure optimal and safe use, please read the following installation carefully before attempting to install or use your product. If you have any questions, Please contact our Technical Service Department at:



[service@wiytamo.com](mailto:service@wiytamo.com)

### 1.1. CUSTOMER SERVICE

Wiytamo is committed to providing customers with premium Portable Air Conditioner.

In order to provide you with more effective services, if there is any problem with the unit you purchased, please contact us and be ready to provide information as listed in "REQUIRED INFORMATION" below, and our professional after-sales personnel will give you an answer as soon as possible. Do not just enter "no good", "it didn't work" or "defective part." Our Tech Personnel will ask for more details. Failure to include specific

information will delay the processing of the problem.

Please contact us: [service@wiytamo.com](mailto:service@wiytamo.com)

## Required Information

① Nature of malfunction(as accurately as possible)	<ul style="list-style-type: none"> <li>• Damaged: includes picture and video about damage parts</li> <li>• Quality Problem: includes picture about damage parts</li> <li>• Please follow the direction at “ BEFORE REQUESTINGSERVICE” below.</li> </ul>
② Serial number/Model number	<ul style="list-style-type: none"> <li>• On the rating label</li> <li>• On the carton</li> </ul>
③ Record of Purchase	<ul style="list-style-type: none"> <li>• Screenshot / Pictures</li> </ul>

## 1.2. BEFORE REQUESTING SERVICE


### 1.2.1 Receiving and Inspection

- Please check the appearance of outer packaging box and the inner contents when receiving the goods to protect your right and interest.
- If there is any damaged outer packaging, defect and damage product, missing parts or received the wrong item, please kindly take photos from all aspect or angle immediately and contact our customer service for verification and processing.
- We need these photos as evidence to ask claims to the FedEx / UPS Carrier for their bad shipping service. It also very vital for us to

improve the shipping box's strength from your information.

### 1.2.2 The Process of Receiving and Inspection

- **Step 1** Please check the outer shipping box and product carefully.
- **Step 2** If there is any problem, please take some photos and videos for evidence and contact us. Pictures or videos are required:
  - ① Take some pictures about the damage parts of outer package box and the whole image of the shipping box. e.g.

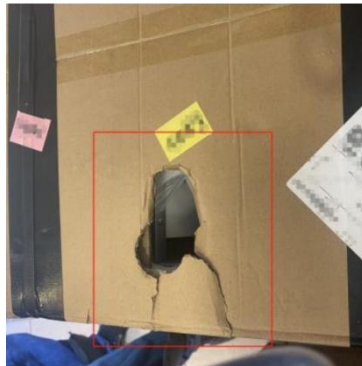

- ② Take some pictures about the damage parts of the product and the whole image of the product (include parts all parts that have been received).



- ③ Take some pictures about all the labels on the shipping box.



- ④ Take some videos to show the condition of the shipping box and inner product more intuitively.

#### How to take a useful video:

- To show the outer packaging box is damaged but not unpacked;
- To show the process of unpacking and the conditions of the inner content.

- ⑤ If the unit is delivered by a truck, please take the receipt with signature ( it must be noted:damaged / lost )

- **Step 3** Contact us with upon information, including serial number or model number, original order number, photos and videos of the damage parts, and we will provide satisfactory solution for you in time.

#### 1.2.3 Quality Problem

- Provide lifetime technical service and troubleshooting support for any quality question.
- Please check the following items first if you encounter problems with the unit.

**CAUTION**

To prevent any electrical shock hazards, do not disconnect the power cord plug from the wall outlet with wet hands.

<p>① The unit is not operating.</p>	<ul style="list-style-type: none"> <li>• Check the power connection in securely.</li> <li>• Check if the water level indicator lights up?</li> <li>• Check the room temperature.</li> </ul>
<p>② The unit works with reduced capacity.</p>	<ul style="list-style-type: none"> <li>• Check the air filter for dirt.</li> <li>• Check if the air duct is blocked.</li> <li>• Check if the room door or window is open.</li> <li>• Check if the desired operating mode is selected and the temperature is properly set.</li> <li>• The exhaust hose is detached.</li> </ul>
<p>③ Water Leakage</p>	<ul style="list-style-type: none"> <li>• Overflow while moving the unit.</li> <li>• Check if the drain hose is kinked or bends.</li> </ul>
<p>④ Excessive Noise</p>	<ul style="list-style-type: none"> <li>• Check if the unit is securely positioned.</li> <li>• Check if any loose, vibrating parts.</li> <li>• Noise sounds like water flowing.</li> </ul>

- If the problem persists after taking appropriate remedial measures, please unplug the power cord from the wall outlet and **please contact us with follows information(service@wiytamo.com) :**

- ① Photos and videos of the trouble part.
- ② Take some videos to show the working status and the specific problem.

The contents of this video should include, such as:

- ✓ The outer situation or environment around the machine;
  - ✓ To show the working status of the control panel;
  - ✓ To show the working status of the cooling fan;
- You will also need your model number and original order number to make an inquiry or help. Including photos, videos, and a description of problem, will help to expedite solve processing time.

### **1.3. PRODUCT DESCRIPTION**

Our powerful portable air conditioners are great cooling solutions for single rooms, creating a comfortable atmosphere in your space. It also has ventilation and dehumidifying function for circulating air and removal of moisture. They're self-contained systems that do not require any permanent installation allowing you to move to the space in which it is most needed. They're commonly used in kitchen, temporary-resided, computer rooms, garages, and many other places where installation of Air-conditioner Outdoor Unit is limited.

The environmentally friendly R32 is used as the refrigerant. R32 has no damaging influence on the ozone layer (ODP), a negligible greenhouse effect (GWP) and is available worldwide. Because of its efficient energy properties, R32 is highly suitable as a coolant for this application. Special precautions must be taken into consideration due to the coolant's high flammability.



## 1.4. SYMBOLS FROM THE UNIT AND USER MANUAL



### warning

This unit uses a flammable refrigerant.

If refrigerant leaks and comes in contact with fire or heating part, it will create harmful gas and there is risk of fire.



Read the USER MANUAL carefully before operation.



Further information is available in the USER MANUAL, SERVICE MANUAL, and the like.



Service personnel are required to carefully read the USER MANUAL and SERVICE MANUAL before operation.


## THE FOLLOWING SHOULD ALWAYS BE OBSERVED FOR SAFETY

- This appliance is intended to be used by expert or trained users in shops, in light industry and on farms, or for commercial use by lay persons.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- The unit is designed only for use with R32(propene) gas as the designated refrigerant.
- **The refrigerant loop is sealed. Only a qualified technician should attempt to service!**
- Do not discharge the refrigerant into the atmosphere.
- R32 (propene) is flammable and heavier than air.

- It collects first in low areas but can be circulated by the fans.
- If propane gas is present or even suspected, do not allow untrained personnel to attempt to find the cause.
- The propane gas used in the unit has no odor.
- The lack of smell does not indicate a lack of escaped gas.
- If a leak is detected, immediately evacuate all persons from the store, ventilate the room and contact the local fire department to advise them that a propane leak has occurred.
- Do not let any persons back into the room until the qualified service technician has arrived and that technician advises that it is safe to return to the room.
- No open flames, cigarettes or other possible sources of ignition should be used inside or in the vicinity of the units.
- Component parts are designed for propane and non-incentive and non-sparking. Component parts shall only be replaced with identical repair parts.

**FAILURE TO ABIDE BY THIS WARNING COULD RESULT IN AN EXPLOSION, DEATH, INJURY AND PROPERTY DAMAGE.**

## 1.5. PRODUCT DIAGRAM

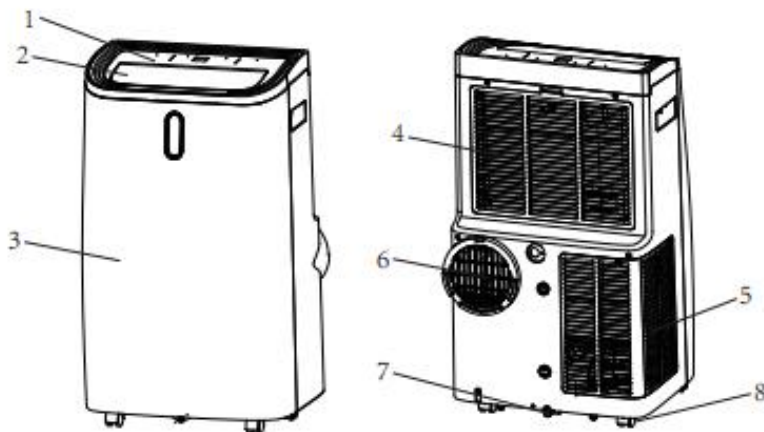

1	Control panel	4	Air inlet with air filter	7	Drain opening with sealing plug
2	Air outlet with adjustable louver	5	Recessed handle	8	Castor
3	Front Panel	6	Air Exhaust		

Note: The appearance is only for reference. Please see the real product for detailed information.

## 1.6. PRODUCT FEATURES

- ✓ High Capacity in a compact size with cooling, dehumidifying, Heating and ventilating function.
- ✓ Temperature setting and display
- ✓ LED Digital display
- ✓ Electronic control with built-in timer, sleep mode
- ✓ Self-evaporating system for better efficient
- ✓ Auto shut off when water tank is full
- ✓ Automatic restart in the event of power outage
- ✓ Auto defrosting function at low ambient temperatures
- ✓ WIFI intelligent control
- ✓ 3- speed fan
- ✓ Casters for easy mobility



## 2. FOR YOUR SAFETY

**Your safety is the most important thing we concerned!**



**WARNING**

**Please read this manual carefully and fully understand before operating your appliance.**



### 2.1. OPERATIONAL PRECAUTIONS

**WARNING- to reduce the risk of fire, electric shock or injury to persons or property:**

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The appliance shall be disconnected from its power source during service.
- Always operate the unit from a power source of equal voltage, frequency and rating as indicated on the product identification plate.
- Always use a power outlet that is grounded.
- Unplug the power cord when cleaning or when not in use.
- Do not operate with wet hands. Prevent water from spilling onto the unit.
- Do not immerse or expose the unit to rain, moisture or any other liquid.
- Do not leave the unit running unattended. Do not tilt or turn over the unit.
- Do not unplug while the unit is operating.

- Do not unplug by pulling on the power cord.
- Do not use an extension cord or an adapter plug.
- Do not put objects on the unit.
- Do not climb or sit on the unit.
- Do not insert fingers or other objects into the air outlet.
- Do not touch the air inlet or the aluminum fins of the unit.
- Do not operate the unit if it is dropped, damaged or showing signs of product malfunction.
- Do not clean the appliance with any chemicals.
- Ensure the unit is far away from fire, inflammable, or explosive objects.
- The unit shall be installed in accordance with national wiring regulations.
- Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacture.
- The appliance shall be stored in a room without continuously operation sources (for example: open flames, an operating gas appliance or an operating electric heater).
- The appliance shall be stored so as to prevent mechanical damage from occurring.
- Do not piece or burn, even after use.
- Be aware that refrigerants may not contain an odour.
- Pipe-work shall be protected from physical damage and shall not be installed in an unventilated space, if that space is smaller than 9m<sup>2</sup>.
- Compliance with national gas regulations shall be observed.

- Keep any required ventilation openings clear of obstruction.
- The appliance shall be stored in a well-ventilated area where the room size corresponds to the room area as specified for operation.

 <p>WARNING</p>	<p>Any person who is involved with working on or breaking into a refrigerant circuit should hold a current valid certificate from an industry-accredited assessment authority, which authorizes their competence to handle refrigerants safely in accordance with an industry, recognized assessment specification.</p>
 <p>WARNING</p>	<p>Servicing shall only be performed as recommended by the equipment manufacturer. Maintenance and repair requiring the assistance of other skilled personnel shall be carried out under the supervision of the person competent in the use of flammable refrigerants.</p>

**Note: If you don't understand something or need help, please contact the dealer services.**

## 2.2. SAFETY PRECAUTIONS ON SERVICING

Please follow these warnings when to undertake the following when servicing an appliance with R32.

### 2.2.1 Checks to the area

Prior to beginning work on systems containing flammable refrigerants, safety checks are necessary to ensure that the risk of ignition is minimized. For repair to the refrigerating system, the following precautions shall be complied with prior to conducting work on the system.

### **2.2.2 Work procedure**

Work shall be undertaken under a controlled procedure so as to minimize the risk of a flammable gas or vapor being present while the work is being performed.

### **2.2.3 General work area**

All maintenance staff and others working in the local area shall be instructed on the nature of work being carried out. Work in confined spaces shall be avoided. The area around the work space shall be sectioned off. Ensure that the conditions within the area have been made safe by control of flammable material.

### **2.2.4 Checking for presence of refrigerant**

The area shall be checked with an appropriate refrigerant detector prior to and during work, to ensure the technician is aware of potentially flammable atmospheres. Ensure that the leak detection equipment being used is suitable for use with flammable refrigerants, i.e. no sparking, adequately sealed or intrinsically safe.

### **2.2.5 Presence of fire extinguisher**

If any hot work is to be conducted on the refrigeration equipment or any associated parts, appropriate fire extinguishing equipment shall be available to hand. Have a dry powder or CO<sub>2</sub> fire extinguisher adjacent to the charging area.

### **2.2.6 No ignition sources**

No person carrying out work in relation to a refrigeration system which involves exposing any pipe work that contains or has contained flammable refrigerant shall use any sources of ignition in such a manner that it may lead to the risk of fire or explosion. All possible ignition sources, including cigarette smoking, should be kept sufficiently far away from the site of installation, repairing, removing and disposal, during which flammable



refrigerant can possibly be released to the surrounding space. Prior to work taking place, the area around the equipment is to be surveyed to make sure that there are no flammable hazards or ignition risks. "No Smoking" signs shall be displayed.

### **2.2.7 Ventilated area**

Ensure that the area is in the open or that it is adequately ventilated before breaking into the system or conducting any hot work. A degree of ventilation shall continue during the period that the work is carried out. The ventilation should safely disperse any released refrigerant and preferably expel it externally into the atmosphere.

### **2.2.8 Checks to the refrigeration equipment**

Where electrical components are being changed, they shall be fit for the purpose and to the correct specification. At all times the manufacturer's maintenance and service guidelines shall be followed. If in doubt consult the manufacturer's technical department for assistance.

The following checks shall be applied to installations using flammable refrigerants:

- The charge size is in accordance with the room size within which the refrigerant containing parts are installed;
- The ventilation machinery and outlets are operating adequately and are not obstructed;
- If an indirect refrigerating circuit is being used, the secondary circuit shall be checked for the presence of refrigerant;
- Marking to the equipment continues to be visible and legible. Markings and signs that are illegible shall be corrected;
- refrigeration pipe or components are installed in a position where they are unlikely to be exposed to any substance which may corrode refrigerant containing components, unless the components are

constructed of materials which are inherently resistant to being corroded or are suitably protected against being so corroded.

### 2.2.9 Checks to electrical devices

Repair and maintenance to electrical components shall include initial safety checks and component inspection procedures. If a fault exists that could compromise safety, then no electrical supply shall be connected to the circuit until it is satisfactorily dealt with. If the fault cannot be corrected immediately but it is necessary to continue operation, an adequate temporary solution shall be used. This shall be reported to the owner of the equipment so all parties are advised.

Initial safety checks shall include:

- those capacitors are discharged: this shall be done in a safe manner to avoid possibility of sparking;
- that there no live electrical components and wiring are exposed while charging, recovering or purging the system;
- that there is continuity of earth bonding.



#### **WARNING!**

Install the unit in rooms which exceed 4 m<sup>2</sup>.

Do not install the unit in a place where inflammable gas may leak.









#### **NOTE!**

The manufacture may provide other suitable example or may provide additional information about the refrigerant odour.

## 3. INSTALLATION

### 3.1. UNPACKING


- Unpack the carton and take the appliance and accessories out.
- Check the device after unpacking for any damage or scratches on it.
- Accessories:

Part	Description	Quantity	Part	Description	Quantity
	Exhaust hose	1		Remote control	1
	Hose connector	1		Window kit	1
	Window kit adapter	1		Drain Hose	1

**Note:** If there are any problems or missing parts, please contact us after-sales promptly and we will try our best to help you solve the problem (**service@wiytamo.com**)

## 3.2. CHOOSE YOUR LOCATION

- **If tipped more than 45°, allow the unit to set upright for at least 24 hours before start up.**
- Place the unit on a firm, level surface in an area with at least 70cm of free space around it to allow for proper air circulation.
- Do not operate in close proximity to walls, curtains, or other objects that may block air inlet and outlet. Keep the air inlet and outlet free of obstacles.
- **Never** install the unit where it could be subject to:
  - Heat sources such as radiators, heat registers, stoves or other products that produce heat.
  - Direct sunlight
  - Mechanical vibration or shock
  - Excessive dust
  - Lack of ventilation, such as cabinet or bookcase
  - Uneven surface

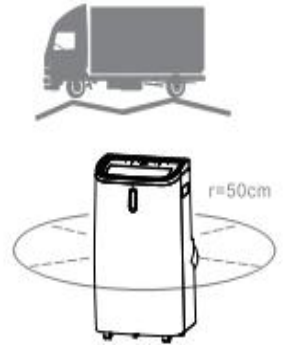

### **WARNING!**

Install the unit in rooms which exceed 4 m<sup>2</sup>.

Do not install the unit in a place where inflammable gas may leak.



### **NOTE!**


The manufacture may provide other suitable example or may provide additional information about the refrigerant odour.

### 3.3. ATTACH THE EXHAUST HOSE


The air conditioner requires being vented outside so that the exhaust air can escape the room which coming from the appliance contains waste heat and moisture.

**Do not replace or extend exhaust hose which will result in decreased efficiency, even worse shut down the unit due to low backpressure.**

**Step 1:** Connect the hose connector to one end of the exhaust hose.

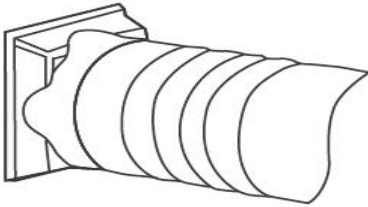


**Step 2:** Connect the windows kit adapter to the other end of the exhaust hose.

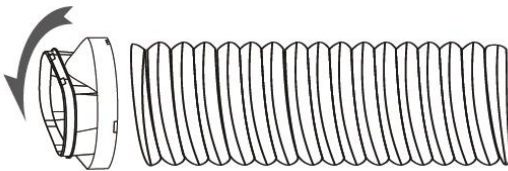


**Step 3:** Extend the adjustable window kit the length of your window.  
Connect the exhaust hose to the window kit.



**Step 4:** Close your window to secure the kit in place. It needs to hold the windows kit firmly in place, secure the window kit with duct tape if required. It is recommended that the gap between the adapter and the sides of the window should be sealed off for maximum efficiency.

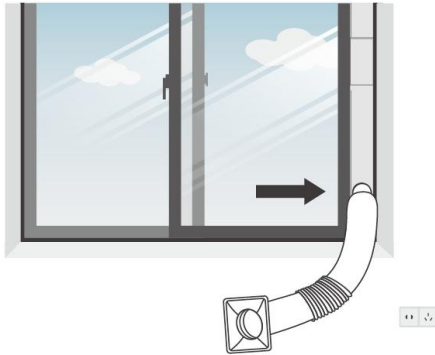

**Step 5:** Attach the hose connector to the exhaust air outlet of unit.

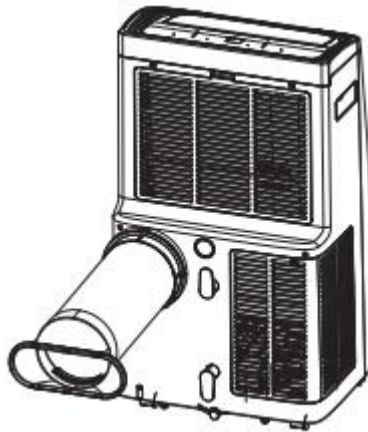

**Step 6:** Adjusting the length of the flexible exhaust hose, to make sure the distance between the unit and the window will be more than 70cm, height from exhaust hose to the floor will be more than 90cm. And avoid bends in the hose. Then place AC near an electrical outlet.




**Step 7:** Adjust the louver at the air outlet, and then switch on the unit.

**Note:** To ensure proper function, DO NOT overextend or bend the hose. Make sure that there is no obstacle around the air outlet of the exhaust hose (in the range of 500mm) in order to the exhaust system works properly. All the illustrations in this manual are for explanation purpose only. Your air conditioner may be slightly different. The actual shape shall prevail.



## 4. OPERATION

### 4.1. CONTROL PANEL AND DISPLAY

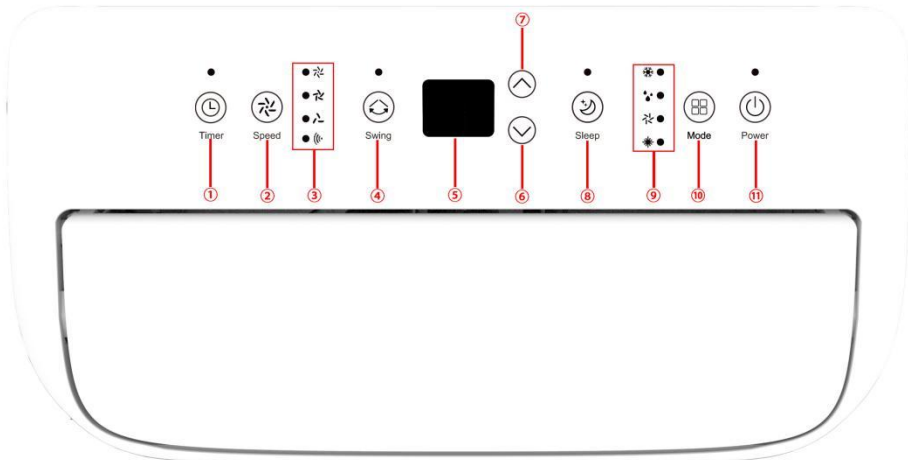

①	Press the key to set timing value.	②	Toggle between high, medium, and low fan speeds.
③	LED for fan speed (high, medium, low) and wifi status	④	Automatic swing mode of air outlet plate
⑤	Displays timer setting and room temperature.	⑥	Decreasing the desired temperature or timer setting.
⑦	Increase the desired temperature or timer setting.	⑧	Turn on sleep mode
⑨	LED for four operation modes selecting by press mode button.	⑩	Mode button When pressed, the operation mode can be switched between cooling, drying, fan and heating.
⑪	Press to switch the machine on or off.		



## 4.2. WIFI CONNECTED

### Information on the App “Smart Life”

The “**Smart Life**” app is available for android and iOS.

Scan the corresponding QR code to get directly to the download.



Download Smart Life App



### Information on How to Use the App

This appliance allows you to operate the appliance via your home net-work. A prerequisite is a permanent WIFI connection to your router and the free app “**Smart Life**”.

1. Install the “**Smart Life**” app. Create a user account.
2. Activate the WIFI function in the settings of your appliance.
3. Place the appliance at a distance of about 5 meters to your router.
4. As long as the power is turned on, the WIFI indicator flashes. After 3 minutes, the status will be canceled if there is no network configuration, and the indicator light is off. If you need to re-connect the WIFI, long press the “timer” button for 5 Second to start the network configuration, the WIFI indicator flashes again.

**• Method 1**

1. First, power on the device, the device is under network configuration mode as default within the 3 minutes after power on.
2. Turn on your phone or other device's Bluetooth and connect to your home WIFI.
3. Click "Add" on the corresponding product model, Select WiFi, enter the WiFi password and enter the network configuration. Try to keep your router, phone and device as close as possible.
4. Wait for the network configuration to succeed. After that you can rename the device.

**• Method 2**

1. When WIFI indicator flashes, select "**Add Device**"-"**Large Home Appliances**"-"**Portable Air Conditioner**", and follow the instructions on the display.
2. Check the status of the WIFI indicator and choose the correct status. If the WIFI indicator flash rapidly, it can connected directly.
3. If the WIFI indicator flash slowly, press "**Go to Connect**" to connect the WIFI named "**SmartLife-XXXX**", then back to the APP.
4. WIFI will connect ok.

**Remarks:**

- Once the appliance has been successfully connected, the WIFI lamp lights up. Now you can operate the appliance using the app.
- Press and hold the timer button for about 5 seconds, the device disconnects and the WIFI light blinks back on.

**NOTE:**

If you need a more detailed operation process, you can refer to the customer service book, and feel free to contact our technical staff with any questions: **service@wiytamo.com**



### 4.3. FUNCTION KEYS AND INDICATORS



1	<b>POWER</b>	Press to switch the machine on or off.
2	<b>Timer</b>	Press the key to set timing value.
3	<b>COOL</b>	Press the button to set the cool mode
4	<b>Dry</b>	Press the button to set the dry mode
5	<b>Fan</b>	Press the button to set the room air to be circulated, but not cooled.
6	▲ ▼	Adjust the temperature range or adjust the timing time range
7	<b>Heat</b>	Press the button to set the heating mode
8	<b>Speed</b>	Press to switch the fan speed in HIGH、 middle and LOW.
9	<b>Swing</b>	Adjust the air flow direction vertically.
10	<b>Sleep</b>	Press the button to set the sleep mode
11	<b>°C/°F</b>	Press the button to toggle between Celsius and Fahrenheit.

## 4.4. SETTINGS

### 4.4.1. Start-up and Shutdown





- ⇒ Press the  to turn the unit on.  
The unit runs in in FAN as default.
- ⇒ Press MODE button to select the desired operation mode.
- ⇒ Press the  again to turn off the power.

### 4.4.2. Operation mode

- The unit has four operation modes: Cool, fan, dry, sleep, heat.
- The ambient temperature required for the unit to work is 16-35°C in the cooling mode and 5-27°C in the heating mode.


#### A. Cooling your room

Select the cool mode to lower the temperature in your room.

- ⇒ Press the  button until the LED of COOL operation lights up.
- ⇒ Press the   button to adjust the temperature which is displayed on the screen. The temperature can be set between 61°F - 90°F (16 - 32°C) .
- ⇒ Press the  button until the desired fan speed indicator lights up.  
To control the direction of the air flow horizontally, please press the SWING button on.


Note: The air conditioner stops if the room temperature is lower than selected temperature.

#### B. Ventilating your room

- ⇒ Press the  button repeatedly until the LED of FAN operation lights up.
- ⇒ In ventilation mode the room air is circulated, but not cooled.

⇒ Press the  button repeatedly to select the fan speed as desired.


### C. Drying your room



⇒ Press the  button on the control panel or remote control, the LED of DRY operation lights up. The fan speed is unable to select.

⇒ **The user should connect a hose to the drainage port at the bottom of the unit to facilitate continuous drainage of the unit.**

Note: In this mode, the fan speed switches over to low speed and the temperature cannot be selected.

### D. Heating your room

⇒ Press  button repeatedly until the LED of HEAT operation lights up.

⇒ Press   button to set the temperature higher than the room temperature.

Note: **The user should connect a hose to the drainage port at the bottom of the unit to facilitate continuous drainage of the unit.**

### E. Sleep mode

The sleep mode can be activated when in cool mode and heat mode.

#### ■ In cool mode :

After 1 hour the preset temperature is increased by 1 °C, after another hour the preset temperature will again be increased by 1 °C.


#### ■ In heat mode :

After 1 hour the preset temperature is decreased by 1 °C, after another hour the preset temperature will again be decreased by 1 °C.


Then the temperature is kept constant for 10 hours. And all the indicators dim to dark. The fan speed may switch over to low speed for silent operating and cannot be selected.

### 4.4.3. TIMER SETTING (1hour-24hours) :

The timer has two ways of operation:

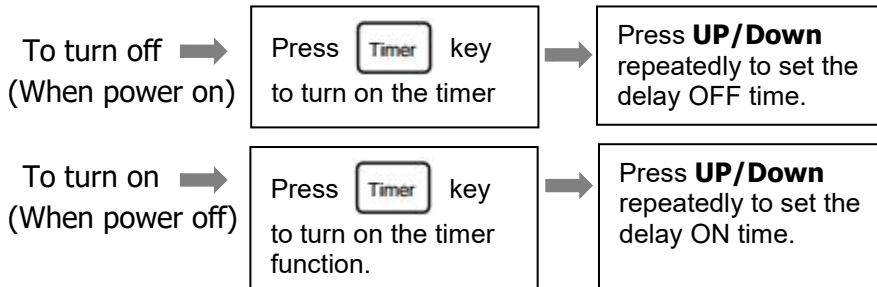

Cancel timer

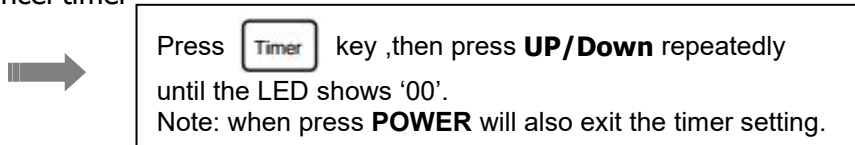

### 4.4.4. Automatic Defrost

At low room temperatures, frost may buildup at the evaporator during operation. The unit will automatically start defrosting and the **POWER** LED blinking. The defrost control sequence is as follows:

- A. When the unit operates in the cooling operation, drying operation, the ambient temperature sensor senses the evaporator coil temperature is below  $-1^{\circ}\text{C}$ , after the compressor will stop operating for 10 minutes or the coil temperature up to  $7^{\circ}\text{C}$ , the unit restart to cool operating mode.
- B. When the unit operates in the heating operation, drying operation, once the coil temperature sensor senses the temperature of the evaporator is below  $40^{\circ}\text{C}$  and the differential temperature between coil temperature and room temperature is below  $19^{\circ}\text{C}$  after the compressor operation for 20minutes, the unit start defrosting for 5 minutes and the power indicator blinking.

### 4.4.5. Overload Protection

**In the event of a power loss, to protect the compressor there is a 3-minute delay until the compressor restarting.**

## 4.5. DRAINAGE

### Manual drainage:

1) When the machine stops after the water is full, please unplug the power plug.

Notes: Please move the machine carefully, so as not to spill the water in the water pan at the bottom of the body.

2) Place the water container below the side water outlet behind the body.

3) Unplug the water plug, the water will automatically flow into the water container.

Notes:


1. Keep the water plug properly.

2. During drainage, the body can be tilted slightly backwards.

3. If the water container cannot hold all the water, before the water container is full, stuff the water outlet with the water plug as soon as possible to prevent water from flowing to the floor or the carpet.

4) When the water is discharged, stuff the water plug.

Notes: 1. Restart the machine after the water plug and drainage cover are installed, otherwise condensate water of the machine will flow to the floor or the carpet.

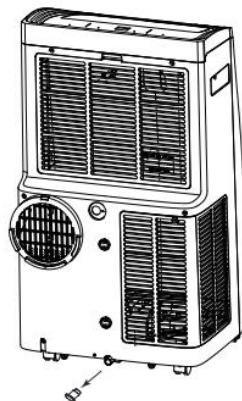


## Continuous drainage

The self-evaporating system uses the collected water to cool the condenser coils for better efficient performance. It is no need to empty the drainage tank in cooling operation except in heating operation, drying operation and high humidity conditions. The condensate water evaporates at the condenser and evacuated through the exhaust hose.

**For continuous operation or unattended operating in drying operation, please connect the attached drain hose to the unit. Condensate water can be automatically flow into a bucket or drain by gravity.**

- Switch off the unit before operating.
- Remove the plug of the water outlet opening, and keep it in safe area.
- Securely and properly connect the drain hose and make sure it is not kinked and clear of obstruction.
- Place the outlet of hose over a drain or bucket and ensure that water could freely flow out of the unit.
- Do not submerge the end of hose into water; otherwise it can cause "Air Lock" in the hose.

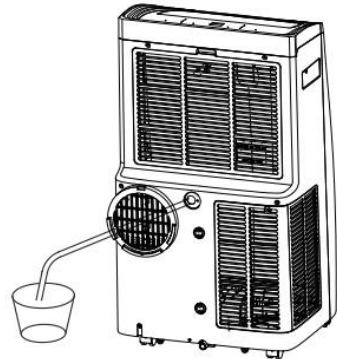

### To avoid water spillage:

- As the negative pressure of condensate drain pan is large, tilt the drain hose downward toward the floor. It is appropriate that the degree of inclination should exceed 20 degrees.
- Straighten the hose to avoid a trap existing in the hose.




## 5. CLEANING AND CARE

### 5.1. CLEANING THE AIR FILTER (every two weeks)


Dust collects on the filter and restricts the airflow. The restricted airflow reduces the efficiency of the system and if it becomes blocked it can cause damage to the unit.

The air filter requires regular cleaning. The air filter is removable for easy cleaning. Do not operate the unit without an air filter, or the evaporator may be contaminated.

1. Press POWER button to switch off the unit and unplug the power cord.
2. Remove the filter mesh from the unit.
3. Use a vacuum cleaner to suck dust from the filter.
4. Turn the filter over and rinse the air filter under running water. Let the water run through the filter in the opposite direction of air flow. Set aside and allow the filter to air dry completely before reinstalling.

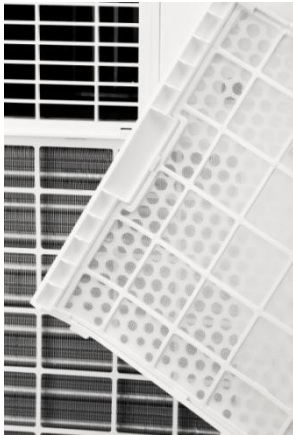

Pic1. Switch off the unit and remove the two air filters.

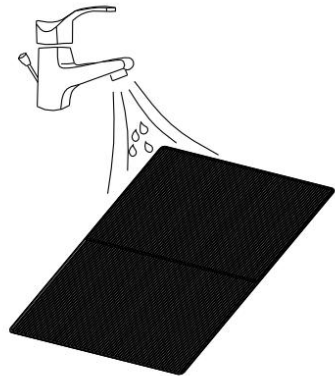

Pic2. Rinse the air filter under running water.



Do not touch the evaporator surface with bare-hand, or could cause injury of your fingers.

## 5.2. CLEANING UP OF REFRIGERANT

### General Measures:

1. Gas/vapor heavier than air. May accumulate in confined spaces, particularly at or below ground level.
2. Eliminate every possible source of ignition.
3. Use appropriate personal protection equipment (PPE).
4. Evacuate unnecessary personnel, isolate, and ventilate area.
5. Do not get in eyes, on skin, or on clothing. Do not breathe vapors or gas.
6. Prevent entry to sewers and public waters.
7. Stop the source of the release, if safe to do so. Consider the use of water spray to disperse vapors.
8. Isolate the area until gas has dispersed. Ventilate and gas test area before entering. Contact competent authorities after a spill.

## 6. OPERATION

Symptom		Inspection	Solution
The unit is not operating.		✓ Check the power connection in securely.	➤ Insert the power cord securely into the wallOutlet.
		✓ Check if the water level indicator lights up?	➤ Empty the drain pan by remove the rubber plug.
		✓ Check the room temperature.	➤ The range of operating temperature is 5-35°C.
The unit works with reduced capacity.		✓ Check the air filter for dirt.	➤ Clean the air filter as necessary.
		✓ Check if the air duct is blocked.	➤ To clear the obstacle.
		✓ Check if the room door or window is open.	➤ Keep the door and windows closed.
		✓ Check if the desired operating mode is selected and the temperature is properly set.	➤ Set the mode and temperature at proper set-point according the manual. ➤ (refer to page16)
		✓ The exhaust hose is detached.	➤ Make sure the exhaust hose is securely attached.
Water Leakage		✓ Overflow while moving the unit.	➤ Empty the water tank before transport.
		✓ Check if the drain hose is kinked or bends.	➤ Straighten the hose to avoid a trap existing.
Excessive Noise		✓ Check if the unit is securely positioned.	➤ Place the unit on horizontal and firm ground.
		✓ Check if any loose, vibrating parts.	➤ Secure and tight the parts.
		✓ Noise sounds like water flowing.	➤ Noise comes from flowing refrigerant. This is normal.
Error Codes	E0	✓ Communication faults between main PCB and display PCB.	➤ Check the wire harness of the display PCB for damage.
	E1	✓ Ambient temperature sensor failure	➤ Check connection or replace it. To clean or replace the temperature sensor.
	E2	✓ Coil temperature sensor failures.	➤ Check connection or replace it. To clean or replace the temperature sensor.
	Ft	✓ Condensate water high level alarm.	➤ Empty the drain pan by removal the rubber plug.

## 7. DECOMMISSIONING

### 7.1. STORAGE

Long-Term Storage - If you will not be using the unit for an extended period of time (more than a few weeks) it is best to clean the unit and dry it out completely. Please store the unit per the following steps:

1. Unplug the unit and remove exhaust hose and window kit store with the unit.
2. Drain the remaining water from the unit.
3. Clean the filter and let the filter dry completely in a shaded area.
4. Collect the power cord at the water tank.
5. Re-install the filter at its position.
6. The unit must be kept in upright position when in storage.
7. Preserving the machine in ventilating, dry, non- corrosive gas and safe place indoor.

#### **ATTENTION:**

The evaporator inside the machine has to be dried out before the unit is packed to avoid component damage and molds. Unplug the unit and place it in a dry open area for days to dry it out. Another way to dry the unit is to set the humidity point more than 5% higher than the ambient humidity to force the fan to dry the evaporator for a couple of hours.

### 7.2. DISPOSAL



#### **WARNING!!!**

Releasing refrigerant into atmosphere is strictly forbidden!

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain damaging your health and well-being.

