

homeLabs™

Quiet Portable Air Conditioner

7,200/8,600 BTU

SKU: HME020379N
SKU: HME020235N

Thank you for purchasing our appliance.
Please be sure to read the entirety of this user
manual carefully prior to using this appliance.
If you have any questions regarding the use of
this product, please contact Customer Service
at homelabs.com/help or help@homelabs.com.





Before First Use

To prevent any internal damage, it is very important to keep the unit upright throughout its journey. Please leave it standing upright and outside the box for **24 HOURS** before plugging it in.

In the event this product malfunctions, or you believe it is defective, please contact Customer Service at homelabs.com/help or help@homelabs.com and hold on to the product (pending further instruction). The product should be clearly marked or stored where it cannot be used by mistake. Failure to keep the product in its original quality from the time of receipt may impede hOmeLabs's ability to correct any legitimate problem and may limit the extent to which hOmeLabs may provide recourse.

Table of Contents

Important Safety Instructions..... 6

Parts Overview.....12

Installation Instructions..... 13

Operation.....16

Remote Controller.....22

Maintenance..... 28

Design and Compliance Notes..... 28

Troubleshooting..... 29

Warranty..... 30

Manufacturing Info..... 30

Warning..... 30

Contact Us..... 30

Specifications..... 30

Congratulations
on bringing home your new appliance!



Don't forget to register your product at homelabs.com/reg
for updates, coupons, and other relevant information.

Although greatly appreciated, product registration is not
required to activate any warranty.

IMPORTANT SAFETY INSTRUCTIONS

Read all instructions thoroughly before use and save them for future reference.
To prevent death or injury to the user or other people and property damage, the following instructions must be followed.
Incorrect operation due to ignoring of instructions may cause death, harm or damage.

WARNING

-  **This symbol indicates the possibility of personnel injury or loss of life.**
- Installation must be performed according to the installation instructions. Improper installation can cause water leakage, electrical shock, or fire.
 - Use only the included accessories and parts, and specified tools for the installation. Using non-standard parts can cause water leakage, electrical shock, fire, injury, or property damage.
 - Make sure that the outlet you are using is grounded and has the appropriate voltage. The power cord is equipped with a three-prong grounding plug to protect against shock. Voltage information can be found on the nameplate of the unit.
 - Your unit must be used in a properly grounded wall receptacle. If the wall receptacle you intend to use is not adequately grounded or protected by a time delay fuse or circuit breaker (the fuse or circuit breaker needed is determined by the maximum current of the unit. The maximum current is indicated on the nameplate located on unit), have a qualified electrician install the proper receptacle.
 - Install the unit on a flat, sturdy surface. Failure to do so could result in damage or excessive noise and vibration.
 - The unit must be kept free from obstruction to ensure proper function and to mitigate safety hazards.
 - Do not modify the length of the power cord or use an extension cord to power the unit.
 - Do not share a single outlet with other electrical appliances. Improper power supply can cause fire or electrical shock.
 - Always grasp the power plug to remove it from the wall outlet. Do not pull on the power cord itself.
 - Do not install your Air Conditioner in a wet room such as a bathroom or laundry room. Too much exposure to water can cause electrical components to short circuit.
 - Do not install the unit in a location that may be exposed to combustible gas, as this could cause fire.
The unit has wheels to facilitate moving. Make sure not to use the wheels on thick carpet or to roll over objects, as these could cause tipping.
 - Do not operate a unit that has been dropped or damaged.
 - Do not touch the unit with wet or damp hands or when barefoot.
 - If the Air Conditioner is knocked over during use, turn off the unit and unplug it from the main power supply immediately. Visually inspect the unit to ensure there is no damage. If you suspect the unit has been damaged, contact a technician or customer service for assistance.
 - In a thunderstorm, the power must be cut off to avoid damage to the machine due to lightning.
 - Your Air Conditioner should be used in such a way that it is protected from moisture (e.g. condensation, splashed water, etc.). Do not place or store your Air Conditioner where it can fall or be pulled into water or any other liquid. Unplug immediately if it occurs.
 - All wiring must be performed strictly in accordance with the wiring diagram located inside of the unit.
 - The unit's circuit board (PCB) is designed with a fuse to provide overcurrent protection. The specifications of the fuse are printed on the circuit board, such as: T 3.15 A /250 V, etc.
 - When the water drainage function is not in use, keep the upper and the lower Drain Plug firmly on the unit to get rid of choking. When the Drain Plug is not in use, keep it carefully to help prevent choking.
 - Do not use this unit for any purpose other than its intended use.

SAVE THESE INSTRUCTIONS
For Household Use Only

IMPORTANT SAFETY INSTRUCTIONS

CAUTION

-  **This symbol indicates the possibility of property damage or serious consequences.**
- This appliance can be used by children aged from 8 years and above and person with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. (be applicable for the European Countries)
 - This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance. Children must be supervised around the unit at all times. (be applicable for other countries except the European Countries)
 - If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
 - Prior to cleaning or other maintenance, the appliance must be disconnected from the supply mains.
 - Do not remove any fixed covers. Never use this appliance if it is not working properly, or if it has been dropped or damaged.
 - Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
 - Do not operate unit with a damaged cord, plug, power fuse or circuit breaker. Discard unit or return to an authorized service facility for examination and/or repair.
 - To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.
 - The appliance shall be installed in accordance with local and/or national wiring regulations.
 - Contact the authorized service technician for repair or maintenance of this unit.
 - Contact the authorized installer for installation of this unit.
 - Do not cover or obstruct the inlet or outlet grilles.
 - Do not use this product for functions other than those described in this instruction manual.
 - Before cleaning, turn off the power and unplug the unit.
 - Disconnect the power if strange sounds, smell, or smoke comes from it.
 - Do not press the buttons on the Control Panel with anything other than your fingers.
 - Do not remove any fixed covers. Never use this appliance if it is not working properly, or if it has been dropped or damaged.
 - Do not operate or stop the unit by inserting or pulling out the power cord plug.
 - Do not use hazardous chemicals to clean or come into contact with the unit. Do not use the unit in the presence of inflammable substances or vapour such as alcohol, insecticides, petrol, etc.
 - Always transport your Air Conditioner in a vertical position and stand it on a stable, level surface during use.
 - Always contact a qualified person to carry out repairs. If the damaged power supply cord must be replaced with a new power supply cord obtained from the product manufacturer and not repaired.
 - Turn off the product when not in use.

NOTE ABOUT FLUORINATED GASSES

1. Fluorinated greenhouse gases are contained in hermetically sealed equipment. For specific information on the type, the amount and the CO₂ equivalent in tonnes of the fluorinated greenhouse gas (on some models), please refer to the relevant label on the unit itself.
2. Installation, service, maintenance and repair of this unit must be performed by a certified technician.
3. Product uninstallation and recycling must be performed by a certified technician.

WARNING FOR USING R32 REFRIGERANT

- Do not use any means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer.
- The appliance shall be stored in a room without continuously operating ignition sources (for example: open flames, an operating gas appliance or an operating electric heater).
- Do not pierce or burn.
- Be aware that the refrigerants may not contain an odor.
- Appliance should be installed, operated and stored in a room with a floor area according to the amount of refrigerant to be charged. For specific information on the type of gas and the amount, please refer to the relevant label on the unit itself. When there are differences between the table and the manual on the Min. room area description, the description on label shall prevail.
- Compliance with national gas regulations shall be observed.
- Keep ventilation openings clear of obstruction.
- The appliance shall be stored so as to prevent mechanical damage from occurring.
- Appliance shall be stored in a well-ventilated area where the room size corresponds to the room area as specified for operation.
- Any person who is involved with working on or breaking into a refrigerant circuit should hold a current valid certificate from an industry-accredited assessment authority, which authorizes their competence to handle refrigerants safely in accordance with an industry recognized assessment specification.
- Servicing shall only be performed as recommended by the equipment manufacturer. Maintenance and repair requiring the assistance of other skilled personnel shall be carried out under the supervision of the person competent in the use of flammable refrigerants.
- Please follow the instruction carefully to handle, install, clear, service the Air Conditioner to avoid any damage or hazard. Flammable Refrigerant R32 is used within Air Conditioner. When maintaining or disposing the Air Conditioner, the refrigerant (R32) shall be recovered properly, shall not discharge to air directly.
- No any open fire or device like switch which may generate spark/arcing shall be around Air Conditioner to avoid causing ignition of the flammable refrigerant used.
Please follow the instruction carefully to store or maintain the Air Conditioner to prevent mechanical damage from occurring.
- Flammable refrigerant R32 is used in Air Conditioner. Please follow the instruction carefully to avoid any hazard. For specific information on the type of gas and the amount, please to the relevant label on the unit itself.



CAUTION: Risk of fire/flammable materials
(Required for R32 units only)

Explanation of symbols displayed on the unit (For the units adopt R32 Refrigerant only):

	WARNING This symbol shows that this appliance used a flammable refrigerant. If the refrigerant is leaked and exposed to an external ignition source, there is a risk of fire.
	CAUTION This symbol shows that the operation manual should be read carefully.
	CAUTION This symbol shows that service personnel should be handling this equipment with reference to the installation manual.
	CAUTION This symbol shows that information is available such as the operating manual or installation manual.

- 1. Transport of Equipment Containing Flammable Refrigerants**
See transport regulations

2. Marking of Equipment Using Signs
See local regulations

3. Disposal of Equipment Using Flammable Refrigerants
See national regulations.

4. Storage of Equipment/Appliances
The storage of equipment should be in accordance with the manufacturer's instructions.

5. Storage of Packed (Unsold) Equipment
Storage package protection should be constructed such that mechanical damage to the equipment inside the package will not cause a leak of the refrigerant charge. The maximum number of pieces of equipment permitted to be stored together will be determined by local regulations.

6. Information on Servicing

1) Inspect the area
Prior to beginning work on systems containing flammable refrigerants, safety checks are necessary to ensure that the risk of ignition is minimized. For repair to the refrigerating system, the following precautions shall be complied with prior to conducting work on the system.

2) Work procedure
Work shall be undertaken under a controlled procedure so as to minimise the risk of a flammable gas or vapour being present while the work is being performed.

3) General work area
All maintenance staff and others working in the local area shall be instructed on the nature of work being carried out. Work in confined spaces shall be avoided. The area around the workspace shall be sectioned off. Ensure that the conditions within the area have been made safe by control of flammable material.

4) Checking for presence of refrigerant
The area shall be checked with an appropriate refrigerant detector prior to and during work, to ensure the technician is aware of potentially flammable atmospheres. Ensure that the leak detection equipment being used is suitable for use with flammable refrigerants, i.e., non-sparking, adequately sealed or intrinsically safe.

5) Presence of fire extinguisher
If any hot work is to be conducted on the refrigeration equipment or any associated parts, appropriate fire extinguishing equipment shall be available to hand. Have a dry powder or CO₂ fire extinguisher adjacent to the charging area.

6) No ignition sources
No person carrying out work in relation to a refrigeration system which involves exposing any pipe work that contains or has contained flammable refrigerant shall use any sources of ignition in such a manner that it may lead to the risk of fire or explosion. All possible ignition sources, including cigarette smoking, should be kept sufficiently far away from the site of installation, repairing, removing and disposal, during which flammable refrigerant can possibly be released to the surrounding space. Prior to work taking place, the area around the equipment is to be surveyed to make sure that there are no flammable hazards or ignition risks. No Smoking signs shall be displayed.

7) Ventilated area
Ensure that the area is in the open or that it is adequately ventilated before breaking into the system or conducting any hot work. A degree of ventilation shall continue during the period that the work is carried out. The ventilation should safely disperse any released refrigerant and preferably expel it externally into the atmosphere.

8) Checks to the refrigeration equipment
Where electrical components are being changed, they shall be fit for the purpose and to the correct specification. At all times the manufacturer's maintenance and service guidelines shall be followed. If in doubt consult the manufacturer's technical department for assistance.

Important Safety Instructions

The following checks shall be applied to installations using flammable refrigerants:
The charge size is in accordance with the room size within which the refrigerant containing parts are installed;
The ventilation machinery and outlets are operating adequately and are not obstructed;
If an indirect refrigerating circuit is being used, the secondary circuit shall be checked for the presence of refrigerant; Marking to the equipment continues to be visible and legible. Markings and signs that are illegible shall be corrected;
Refrigeration pipe or components are installed in a position where they are unlikely to be exposed to any substance which may corrode refrigerant containing components, unless the components are constructed of materials which are inherently resistant to being corroded or are suitably protected against being so corroded.

9) Checks to electrical devices – Repair and maintenance to electrical components shall include initial safety checks and component inspection procedures. If a fault exists that could compromise safety, then no electrical supply shall be connected to the circuit until it is satisfactorily dealt with. If the fault cannot be corrected immediately but it is necessary to continue operation, an adequate temporary solution shall be used. This shall be reported to the owner of the equipment so all parties are advised.
Initial safety checks shall include:
That capacitors are discharged: this shall be done in a safe manner to avoid possibility of sparking;
That there no live electrical components and wiring are exposed while charging, recovering or purging the system;
That there is continuity of earth bonding.

NOTE: The use of silicon sealant may inhibit the effectiveness of some types of leak detection equipment. Intrinsically safe components do not have to be isolated prior to working on them.

7. Repairs to Sealed Components

1) During repairs to sealed components, all electrical supplies shall be disconnected from the equipment being worked upon prior to any removal of sealed covers, etc. If it is absolutely necessary to have an electrical supply to equipment during servicing, then a permanently operating form of leak detection shall be located at the most critical point to warn of a potentially hazardous situation.
2) Particular attention shall be paid to the following to ensure that by working on electrical components, the casing is not altered in such a way that the level of protection is affected. This shall include damage to cables, excessive number of connections, terminals not made to original specification, damage to seals, incorrect fitting of glands, etc.
Ensure that apparatus is mounted securely.
Ensure that seals or sealing materials have not degraded such that they no longer serve the purpose of preventing the ingress of flammable atmospheres. Replacement parts shall be in accordance with the manufacturer’s specifications.

8. Repair to Intrinsically Safe Components

Do not apply any permanent inductive or capacitance loads to the circuit without ensuring that this will not exceed the permissible voltage and current permitted for the equipment in use. Intrinsically safe components are the only types that can be worked on while live in the presence of a flammable atmosphere. The test apparatus shall be at the correct rating. Replace components only with parts specified by the manufacturer. Other parts may result in the ignition of refrigerant in the atmosphere from a leak.

9. Cabling

Check that cabling will not be subject to wear, corrosion, excessive pressure, vibration, sharp edges or any other adverse environmental effects. The check shall also take into account the effects of aging or continual vibration from sources such as compressors or fans.

10. Detection of Flammable Refrigerants

Under no circumstances shall potential sources of ignition be used in the searching for or detection of refrigerant leaks. A halide torch (or any other detector using a naked flame) shall not be used.

11. Leak Detection Methods

The following leak detection methods are deemed acceptable for systems containing flammable refrigerants. Electronic leak detectors shall be used to detect flammable refrigerants, but the sensitivity may not be adequate, or may need re-calibration. (Detection equipment shall be calibrated in a refrigerant-free area.) Ensure that the detector is not a potential source of ignition and is suitable for the refrigerant used. Leak detection equipment shall be set at a percentage of the LFL of the refrigerant and shall be calibrated to the refrigerant employed and the appropriate percentage of gas (25% maximum) is confirmed. Leak detection fluids are suitable for use with most refrigerants but the use of detergents containing chlorine shall be avoided as the chlorine may react with the refrigerant and corrode the copper pipe-work. If a leak is suspected, all naked flames shall be removed/ extinguished. If a leakage of refrigerant is found which requires brazing, all of the refrigerant shall be recovered from the system, or isolated (by means of shut off valves) in a part of the system remote from the leak. Oxygen free nitrogen (OFN) shall then be purged through the system both before and during the brazing process.

12. Removal and Evacuation

When breaking into the refrigerant circuit to make repairs or for any other purpose conventional procedures shall be used. However, it is important that best practice is followed since flammability is a consideration.

Important Safety Instructions

The following procedure shall be adhered to: Remove refrigerant; Purge the circuit with inert gas; Evacuate; Purge again with inert gas; Open the circuit by cutting or brazing.
The refrigerant charge shall be recovered into the correct recovery cylinders. The system shall be flushed with OFN to render the unit safe. This process may need to be repeated several times. Compressed air or oxygen shall not be used for this task. Flushing shall be achieved by breaking the vacuum in the system with OFN and continuing to fill until the working pressure is achieved, then venting to atmosphere, and finally pulling down to a vacuum. This process shall be repeated until no refrigerant is within the system. When the final OFN charge is used, the system shall be vented down to atmospheric pressure to enable work to take place. This operation is absolutely vital if brazing operations on the pipe-work are to take place. Ensure that the outlet for the vacuum pump is not close to any ignition sources and there is ventilation available.

13. Charging procedures

In addition to conventional charging procedures, the following requirements shall be followed. Ensure that contamination of different refrigerants does not occur when using charging equipment. Hoses or lines shall be as short as possible to minimise the amount of refrigerant contained in them.
Cylinders shall be kept upright.
Ensure that the refrigeration system is earthed prior to charging the system with refrigerant.
Label the system when charging is complete (if not already).
Extreme care shall be taken not to overfill the refrigeration system. Prior to recharging the system it shall be pressure tested with OFN. The system shall be leak tested on completion of charging but prior to commissioning. A follow up leak test shall be carried out prior to leaving the site.

14. Decommissioning

Before carrying out this procedure, it is essential that the technician is completely familiar with the equipment and all its detail. It is recommended good practice that all refrigerants are recovered safely. Prior to the task being carried out, an oil and refrigerant sample shall be taken in case analysis is required prior to re-use of reclaimed refrigerant. It is essential that electrical power is available before the task is commenced.
a) Become familiar with the equipment and its operation.
b) Isolate system electrically.
c) Before attempting the procedure ensure that: Mechanical handling equipment is available, if required, for handling refrigerant cylinders; All personal protective equipment is available and being used correctly; The recovery process is supervised at all times by a competent person; Recovery equipment and cylinders conform to the appropriate standards.
d) Pump down refrigerant system, if possible.
e) If a vacuum is not possible, make a manifold so that refrigerant can be removed from various parts of the system;
f) Make sure that cylinder is situated on the scales before recovery takes place.
g) Start the recovery machine and operate in accordance with manufacturer’s instructions.
h) Do not overfill cylinders. (No more than 80% volume liquid charge).
i) Do not exceed the maximum working pressure of the cylinder, even temporarily.
j) When the cylinders have been filled correctly and the process completed, make sure that the cylinders and the equipment are removed from site promptly and all isolation valves on the equipment are closed off.
k) Recovered refrigerant shall not be charged into another refrigeration system unless it has been cleaned and checked.

15. Labelling


Equipment shall be labelled stating that it has been de-commissioned and emptied of refrigerant. The label shall be dated and signed. Ensure that there are labels on the equipment stating the equipment contains flammable refrigerant.

16. Recovery

When removing refrigerant from a system, either for servicing or decommissioning, it is recommended good practice that all refrigerants are removed safely. When transferring refrigerant into cylinders, ensure that only appropriate refrigerant recovery cylinders are employed. Ensure that the correct number of cylinders for holding the total system charge is available. All cylinders to be used are designated for the recovered refrigerant and labelled for that refrigerant (i.e. special cylinders for the recovery of refrigerant). Cylinders shall be complete with pressure relief valve and associated shut-off valves in good working order. Empty recovery cylinders are evacuated and, if possible, cooled before recovery occurs. The recovery equipment shall be in good working order with a set of instructions concerning the equipment that is at hand and shall be suitable for the recovery of flammable refrigerants. In addition, a set of calibrated weighing scales shall be available and in good working order. Hoses shall be complete with leak-free disconnect couplings and in good condition. Before using the recovery machine, check that it is in satisfactory working order, has been properly maintained and that any associated electrical components are sealed to prevent ignition in the event of a refrigerant release. Consult manufacturer if in doubt. The recovered refrigerant shall be returned to the refrigerant supplier in the correct recovery cylinder, and the relevant Waste Transfer Note arranged. Do not mix refrigerants in recovery units and especially not in cylinders. If compressors or compressor oils are to be removed, ensure that they have been evacuated to an acceptable level to make certain that flammable refrigerant does not remain within the lubricant. The evacuation process shall be carried out prior to returning the compressor to the suppliers. Only electric heating to the compressor body shall be employed to accelerate this process. When oil is drained from a system, it shall be carried out safely.

PREPARATION

All the illustrations in the manual are for explanation purpose only. Your machine may be slightly different. The actual shape will prevail. The unit can be controlled by the unit Control Panel alone or with the Remote Controller. This manual does not include Remote Controller Operations. [See Page > 22 for Remote Controller details.](#)

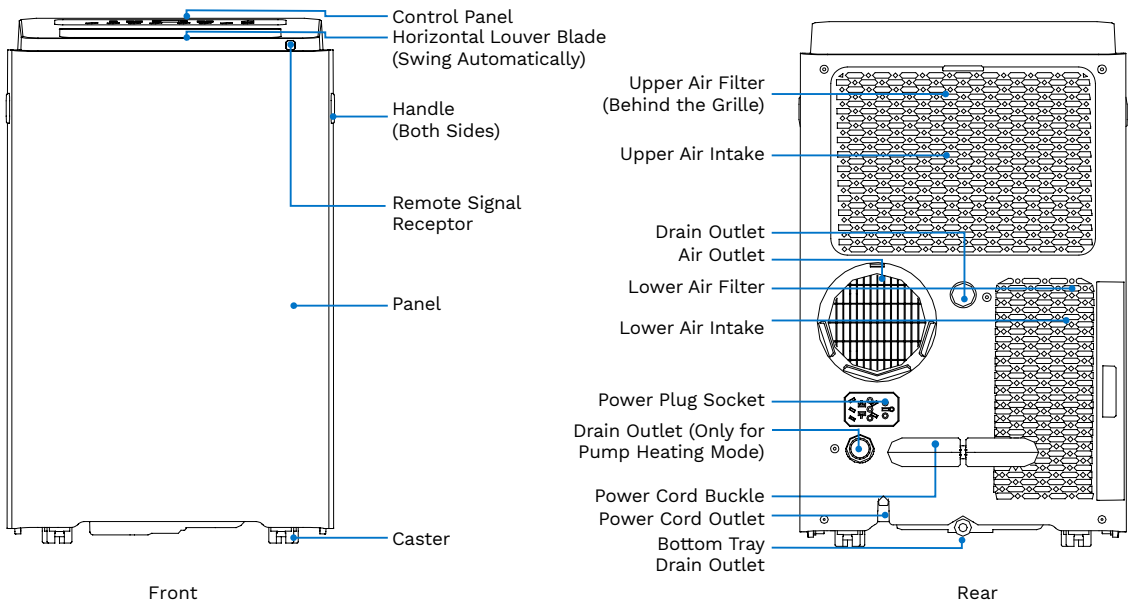

DESIGN NOTICE

In order to ensure the optimal performance of our products, the design specifications of the unit and Remote Controller are subject to change without prior notice.

AMBIENT TEMPERATURE RANGE FOR UNIT OPERATING

MODE	TEMPERATURE RANGE	MODE	TEMPERATURE RANGE
Cool	62–95°F (17–35°C)	Heat (pump heat mode)	41–86°F (5–30°C)
Dry	55–95°F (13–35°C)	Heat (electrical heat mode)	86°F (≤ 30°C)


EXHAUST HOSE INSTALLATION

The Exhaust Hose and Adapter must be installed or removed in accordance with the usage mode.

- For “Cool”, “Heat” (heat pump type) or “Auto” mode must be installed Exhaust Hose.
- For “Fan”, “Dry” or “Heat” (electrical heat type) mode must be removed Exhaust Hose.

[See Page > 14–16 for more details.](#)

CHOOSING THE RIGHT LOCATION

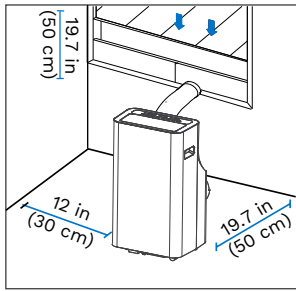


Your installation location should meet the following requirements:

- Make sure that you install your unit on an even surface to minimize noise and vibration.
- The unit must be installed near a grounded plug, and the Collection Tray Drain (found on the back of the unit) must be accessible.
- The unit should be located at least 12 in (30 cm) from the nearest wall to ensure proper air conditioning. The horizontal louver blade should be at least 19.7 in (50 cm) away from obstacles.

CAUTION:
Do not cover the Instakes, Outlets or Remote Signal Receptor of the unit, as this could cause damage to the unit.

RECOMMEND INSTALLATION

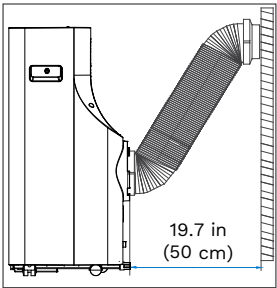

ENERGY RATING INFORMATION

The energy rating and noise information for this unit is based on the standard installation using an un-extended exhaust duct (Diameter: 150 mm, Length: 1.5 m) without Window Slider Adapter or Wall Exhaust Adapter A. The unit with 3 meters extended exhaust duct is running by using 2 exhaust ducts (Diameter: 150 mm, Length: 1.5 m + Diameter: 130 mm, Length: 1.5 m). The Energy rating and noise information for unit with 3 meters extended exhaust duct is not assessed. (For some models).

NOTE:
We recommend that operating the unit at room temperature below 95°F (35°C). Since there is a risk that the unit with 3 meters extended exhaust duct would not work at room temperature above 95°F (35°C) under some extreme conditions, such as the Lower Air Intake be blocked for 50%.

HOW TO STAY COOL WITH A NEW PORTABLE AIR CONDITIONER
(FOR MODELS COMPLYING WITH THE REQUIREMENTS OF U.S. DEPARTMENT OF ENERGY)

Because of a new federal test procedure for Portable Air Conditioners, you may notice that the cooling capacity claims on Portable Air Conditioner packaging are significantly lower than that of models produced prior to 2017. **This is due to changes in the test procedure, not to the Portable Air Conditioners themselves.**

What should I look for first when purchasing a Portable Air Conditioner?

The right Air Conditioner helps you cool a room efficiently. An undersized unit won’t cool adequately while one that’s too large will not remove enough humidity, leaving the air feeling damp. To find the proper Air Conditioner, determine the square footage of the room you want to cool by multiplying the room length by its width. You also need to know the Air Conditioner’s BTU (British Thermal Unit) rating, which indicates the amount of heat it can remove from a room. A higher number means more cooling power for a larger room. (Be sure you are comparing only newer models to each other – older models may appear to have a higher capacity, but are actually the same). Be sure to “size up” if your Portable Air Conditioner will be placed in a very sunny room, in a kitchen, or in a room with high ceilings. After you’ve found the right cooling capacity for your room, you can look at other features.

Why is the cooling capacity lower on newer models than on older units?

Federal regulations require manufacturers to calculate cooling capacity based on a specific test procedure, which was changed in 2017. Models manufactured before 2017 were tested under a different procedure and cooling capacity is measured differently than in prior years models. So, while the BTUs may be lower, the actual cooling capacity of the Air Conditioners has not changed.

What is SACC?



SACC is the representative value of Seasonally Adjusted Cooling Capacity, in BTU/h, as determined in accordance with the DOE test procedure at title 10 Code of Federal Regulations (CFR) 430, subpart B, appendix CC and applicable sampling plans.

TOOLS NEEDED

- Medium Philips screwdriver;
- Tape measure or ruler;
- Knife or scissors;
- Saw (on some models, to shorten Window Adapter for narrow windows)

ACCESSORIES


NOTE: Items with (*) are on some models. Slight variations in design may occur. North America

ACCESSORIES	DESCRIPTION	QUANTITY
	Unit Adapter	1 pc
	Exhaust Hose	1 pc
	Window Slider Adapter	1 pc
	Bolt	1 pc
	Window Slider A	1 pc
	Window Slider B	1 pc
	Foam Seal A (Adhesive)	2 pc
	Foam Seal B (Adhesive)	2 pc
	Foam Seal C	1 pc
	Security Bracket and 2 Screws	1 set
	Drain Hose	1 pc
	Power Cord Wrap (must attach to back of unit)	1 pc
	Remote Controller and 2 × AAA Batteries	1 set

INSTALLATION

Your installation location should meet the following requirements:

- Make sure that you install your unit on an even surface for minimal noise and vibration.
- The unit must be installed near a grounded plug and the Bottom Tray Drain Outlet (on the back of the unit) must be accessible.
- The side of this unit should be at least 12 in (30 cm) from a wall or obstruction to ensure proper air flow.
- Do not cover the Intakes, Outlets, or Remote Signal Receptor of the unit, as this could cause damage to the appliance.
- In addition, the top and back of the AC unit should be at least 19.7 in (50 cm) away from a wall or obstruction.

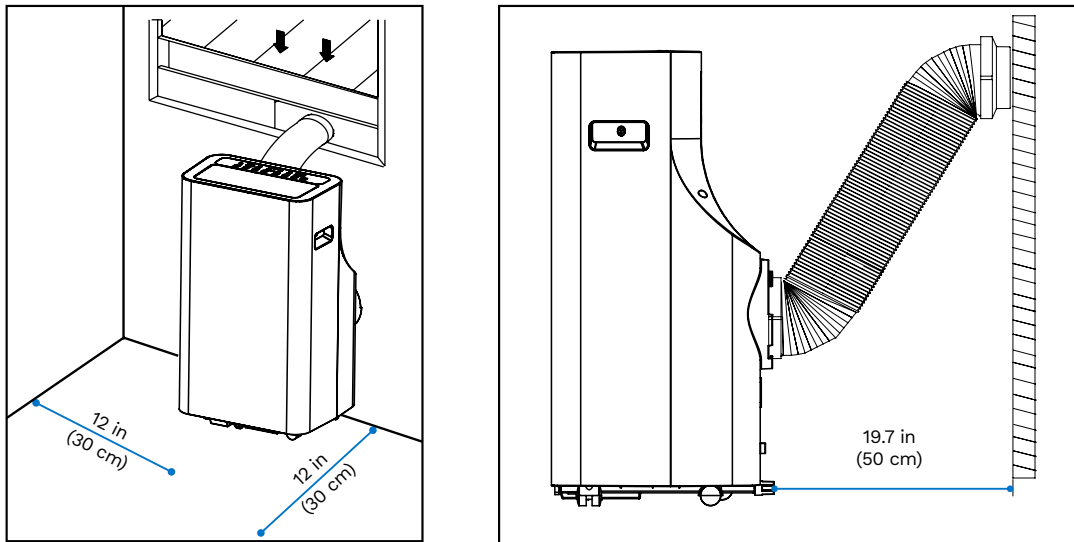


WINDOW INSTALLATION KIT

TOOLS NEEDED:

- Medium Philips screwdriver
- Knife or scissors
- Tape measure or ruler
- Saw (optional, to shorten Window Slider Adapter for narrow windows)


1. Preparing the Exhaust Hose Assembly

Keep the gray, foam tabs on each corner of the Window Slider Adapter in place as assembled. Press the Exhaust Hose into the Window Slider Adapter and Unit Adapter. They will clamp together automatically by the elastic buckles of the Adapters. You will hear all 4 corners click once the unit is properly assembled.

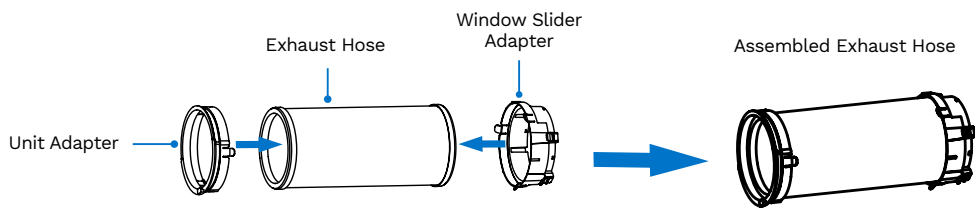

2. Installing the Exhaust Hose Assembly to the Unit

Insert the Unit Adapter (the Unit Adapter hook should remain right-side up) of the Exhaust Hose assembly into the lower groove of the Air Outlet while the hook of the Adapter is aligned with the Air Outlet. Slide down the Unit Adapter. The Hose will slide in and lock in place.

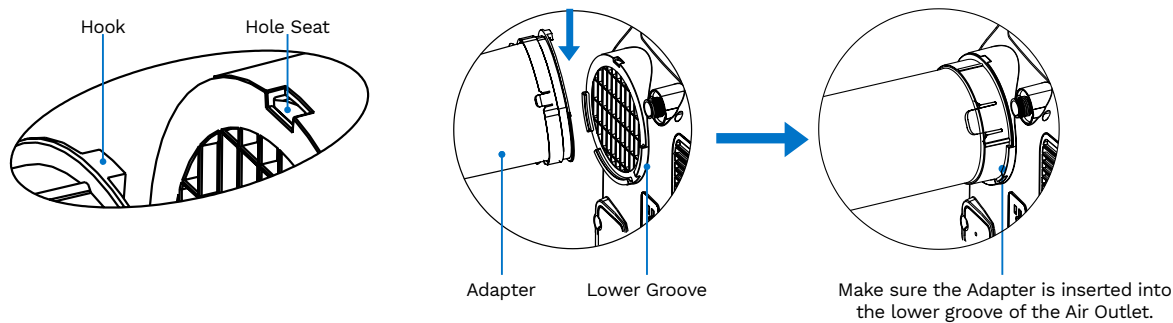


INSTALLATION

3. Preparing the Adjustable Window Slider

- Based on the size of your window, adjust the size of the Window Slider.
- If the length of the window requires two Window Sliders, use the Bolt to fasten the Window Sliders once they are adjusted to the proper length.


NOTE:
Your Window Installation Kit fits windows 26.5–48 in (67.5–123 cm) and can be shortened for smaller windows.

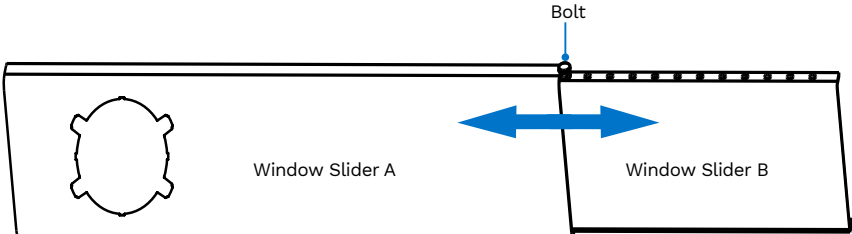


NOTE:
Once the Exhaust Hose assembly and Adjustable Window Slider are prepared, choose from one of the following two installation methods. (For Type 2: See page > 18)

TYPE 1: Hung Window Installation

1. Cut Foam Seal A and B strips to the proper lengths and remove the adhesive backing. Attach them to the window sash and frame as shown.
2. Insert the Window slider assembly into the window opening.
3. Cut the non-adhesive Foam Seal C strip to match the width of the window. Insert the seal between the glass and the window frame to prevent air and insects from getting into the room.
4. OPTIONAL: Install the security bracket with 2 screws as shown.
5. Insert the Window Slider Adapter into the hole of the Window Slider.

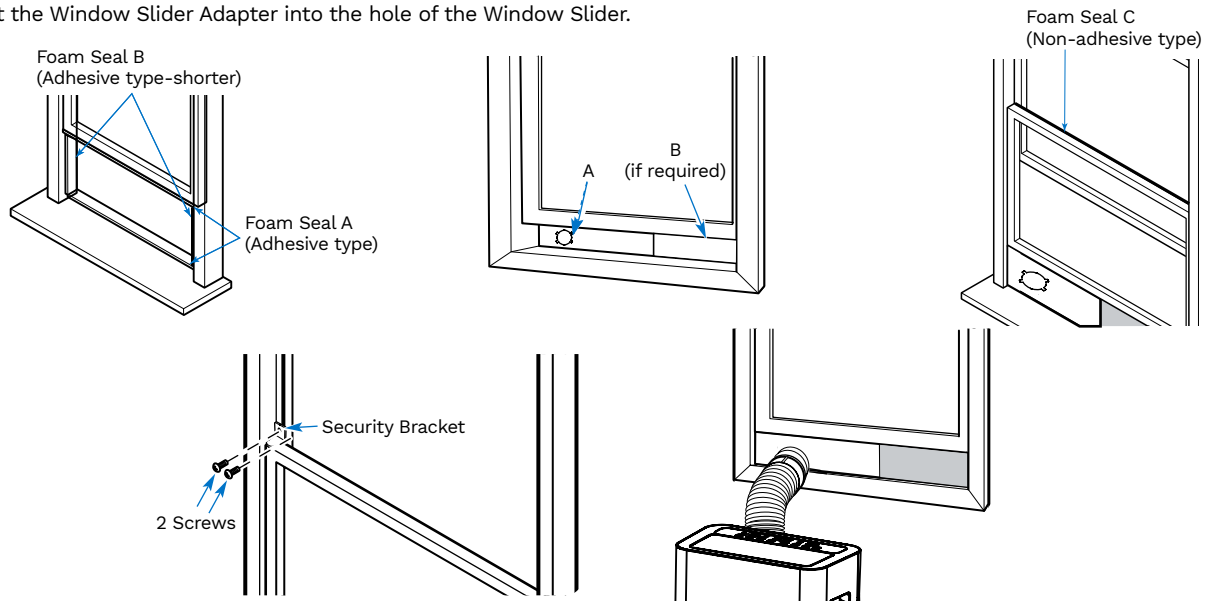


NOTE:
To ensure proper functioning, do not over-extend or bend the Hose. To ensure the exhaust system works properly, make sure that there is no obstacle around the Air Outlet of the Exhaust Hose (in the range of 19.68 in or 500 mm).

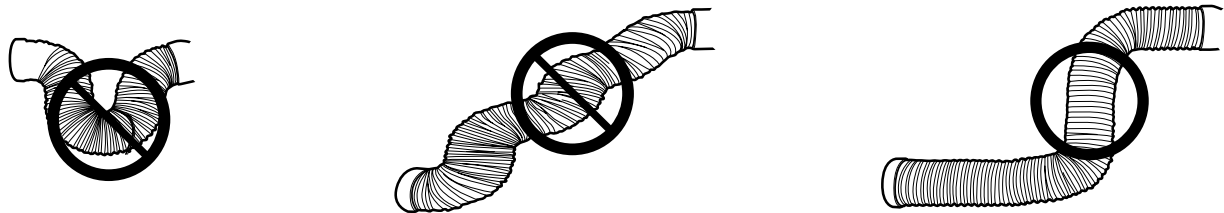

INSTALLATION


TYPE 2: Sliding Window Installation

- 1. Cut Foam Seal A and B strips to the proper lengths and remove the adhesive backing. Attach them to the window sash and frame as shown.
- 2. Insert the Window Slider assembly into the window opening.
- 3. Cut the non-adhesive Foam Seal C strip to match the width of the window. Insert the seal between the glass and the window frame to prevent air and insects from getting into the room.
- 4. If desired, install the security bracket with 2 screws as shown.
- 5. Insert the Window Slider Adapter into the hole of the Window Slider.

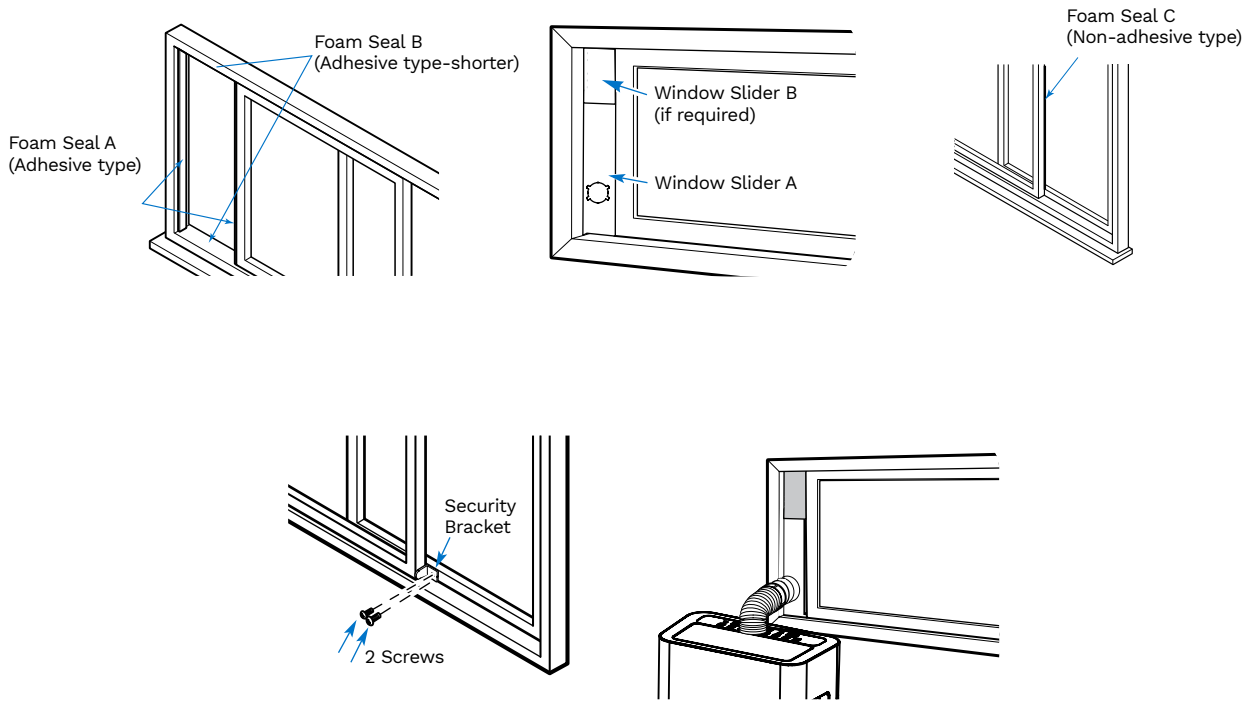


CORD MANAGEMENT

Snap the Power Cord Wrap onto the back of the unit.

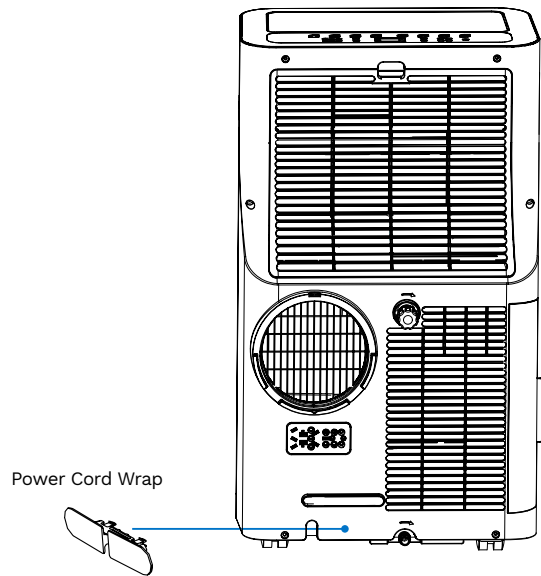

CONTROL PANEL

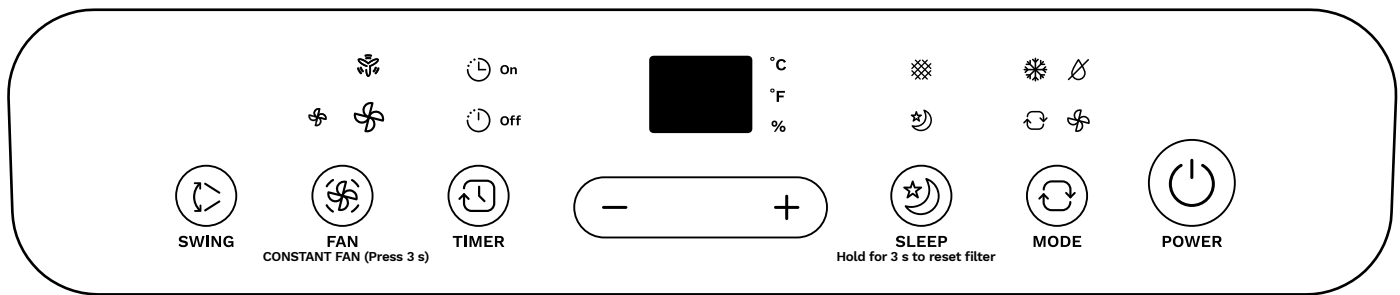

SWING

“Swing” Button: Press to initiate the Auto swing feature. When the AC unit is ON, use this button to start/stop Air Outlet Door movement. When swinging, air flows in multiple directions. When stopped, air flows in one direction. A complete swing (up/down) takes about 30 seconds.

CAUTION:

Use “Swing” button on Control Panel or Remote Controller to adjust Air Outlet Door; DO NOT move the door manually.



FAN
CONSTANT FAN
(Press 3 s)

“Fan” Button: Press to control the fan speed, which cycles through “Low”, “High”, and “Auto”. The fan speed indicator light will illuminate except under “Auto” speed.

ON SOME MODELS: During cooling or dry mode, press and hold the fan button for 3 seconds to turn “On/Off” the constant fan function.



TIMER

“Timer” Button: Use to initiate either “Auto On” start “Timer” or “Auto Off” stop “Timer”. Button is used with the +/- buttons. [See Page > 20 for details.](#)



SLEEP

“Sleep (Eco)” / “Filter” Button: Press this button to initiate “Sleep/Eco”, which adjusts the temperature while you sleep.

NOTE:

After 250 hours of operation, the filter indicator light will illuminate to remind you to clean the Air Filter for more efficient operation. Press and hold this button for 3 seconds to cancel the reminder.



MODE

“Mode” Button: This button allows you to select the appropriate operating mode. Each time you press the button, a mode is selected in a sequence that goes from “Auto”, “Cool”, “Dry” and “Fan”. The mode indicator light will illuminate under the different mode settings.

ON SOME MODELS: On the “Dry” mode, you can adjust the humidity for models with the humidity sensor.



“Up” (+) and “Down” (-) Buttons: Adjust these increasing/decreasing settings:

- Temperature settings in 1°F (1°C) increments in a range of 62°F (17°C) to 86°F (30°C).
- “Timer” settings in a range of 0–24 h.
- Humidity level in a range of 35% RH (Relative Humidity) to 85% RH (Relative Humidity) in 5% increments.

NOTE: To convert the displaying temperature between Fahrenheit and Celsius, press and hold the “Up” and “Down” buttons at the same time for 3 seconds.



POWER

“Power” Button: Press to power “On/Off”.



LED DISPLAY: Shows the set temperature in °C or °F, the “Auto-Timer” settings, and the humidity settings. When using “Dry” and “Fan” modes, it shows the room temperature.

INDICATOR LIGHTS



“Timer On”



“Fan” Mode



Degrees Fahrenheit



“Sleep” Mode



“Timer Off”



“Cool” Mode



High Fan



Humidity



“Dry” Mode



Degrees Celsius



Low Fan



Constant Fan Light



“Auto” Mode



Filter Light

OPERATION INSTRUCTIONS

NOTE:
The unit can be operated by use of the Control Panel or the Remote Controller (See Page > 20).
Expect a 1-second delay when using the Remote Controller to operate.

“Cool” Operation

- Press the “Mode” button until the “Cool” indicator light illuminates.
- Press the “Adjust” button “+” or “-” to select your desired room temperature.
The temperature can be set within a range of 62~86°F (17~30°C).
- Press the “Fan” button to choose the fan speed.

“Dry” Operation

- Press the “Mode” button until the “Dry” indicator light illuminates.
- Under this mode, you cannot select fan speed or adjust the temperature. The fan motor operates at “Low” speed.
- Keep windows and doors closed for the best dehumidifying effect.
- You can set the humidity level as the unit has a humidity sensor. Put the Drain Hose in the Drain Outlet for the best dehumidifying effect. You don't have to connect the duct to the window.

“Auto” Operation

Under this mode, the AC unit will automatically adjust the room temperature with cooling or fan only operation, depending on:

- 1) the temperature you have selected
- 2) the room's specific temperature.
- Under “Auto” mode, you are not able to select the fan speed.

“Fan” Operation

- Press the “Mode” button until the “Fan” indicator light illuminates.
- Press the “Fan” button to choose the fan speed. The temperature cannot be adjusted.
- When using the fan function, the exhaust duct can be uninstalled or kept on the window.

“Timer” Operation

When the unit is on, press the “Timer” button to initiate the “Auto-Off” program, and the “Timer Off” indicator light will illuminate. Press the “Up” or “Down” button to select the desired “Auto-Off” time. Press the “Timer” button again within 5 seconds, and the “Auto-On” program will be initiated and the “Timer On” indicator light will illuminate. Press the “Up” (+) / “Down” (-) button to select the desired “Auto-On” time.

- When the unit is off, press the “Timer” button to initiate the “Auto-On” program. Press it again within 5 seconds to initiate the “Auto-Off” program.
- Press and hold the “Up” (+) or “Down” (-) button to change the Auto time by 0.5-hour increments for up to 10 hours, then at 1-hour increments for up to 24 hours.
- If there is no operation in 5 seconds, the system will automatically revert back to display the previous temperature setting.
- Turning the unit “On” or “Off” at any time or adjusting the “Timer” setting to 0.0 will cancel the “Timer” program.
- When a malfunction occurs, the “Timer” program will be canceled.

“Sleep/Eco” Operation

By pressing this button, the selected temperature will increase (cooling) or decrease (heating) by 2°F (1°C) after 30 minutes has passed. The temperature will then increase (cooling) or decrease (heating) by another 2°F (1°C) after an additional 30 minutes. This will be maintained for 7 hours before it returns to the original temperature. The unit will continue to operate as originally programmed.

NOTE:
This feature is unavailable under “Fan” or “Dry” mode.

OTHER FEATURES

“Auto-Restart”

If the unit shuts off unexpectedly due to a power outage, it will restart with the previous function settings automatically when the power resumes.

Wait for 3 Minutes Before Resuming Operation

After the unit stops working, do not restart operation for the next 3 minutes to protect the unit. Operation will automatically start again after 3 minutes.

Air Flow Direction Adjustment

The Air Outlet Door can be adjusted automatically. Adjust the air flow direction automatically:

- When the “Power” is on, the Air Outlet Door opens fully.
- Press the “Swing” button on the panel or Remote Controller to initiate the “Auto Swing” feature.
The Air Outlet Door will swing up and down automatically.
- Please do not adjust the Air Outlet Door manually.

WATER DRAINAGE

During the dehumidifying process, remove the upper Drain Plug from the back of the unit, install the Drain Hose (5/8" universal female mender) with ¾" Hose (locally purchased). For the models without the drain connector, just attach the Drain Hose to the hole. Place the open end of the Hose directly over the drain area in your basement floor or a water reservoir.

- When you set the humidity level, put the Drain Hose in the water outlet for the best dehumidifying effect. You don't have to connect the duct to the window.

NOTE:
Make sure the Hose is secure so there are no leaks. Aim the Hose directly toward the drain, making sure that there are no kinks that will stop the water from flowing. Place the end of the Hose into the drain and make sure the end of the Hose is pointed downward to let the water flow smoothly. The moisture capacity of the unit measures 1.96 L / hour. When the Drain Hose is not used, ensure that the Drain Plug and the knob are installed firmly to prevent leakage.


When the water level of the Bottom Tray reaches a predetermined level, the unit beeps 8 times and the digital display shows “P1”. At this time, the air conditioning/dehumidifying process will immediately stop, however, the fan motor will continue to operate (this is normal).

Emptying the Bottom Tray (container tray)

1. Carefully move the AC unit to the drain location.
2. Remove the Bottom Drain Plug and let the water drain out.
3. Reinstall the Bottom Drain Plug.
4. Move the AC unit carefully back to its location and restart the unit until the “P1” symbol disappears.

If the error repeats, call a service agent or a professional to repair the unit.


NOTE:
Be sure to reinstall the bottom Drain Plug firmly to prevent leakage before using the unit.

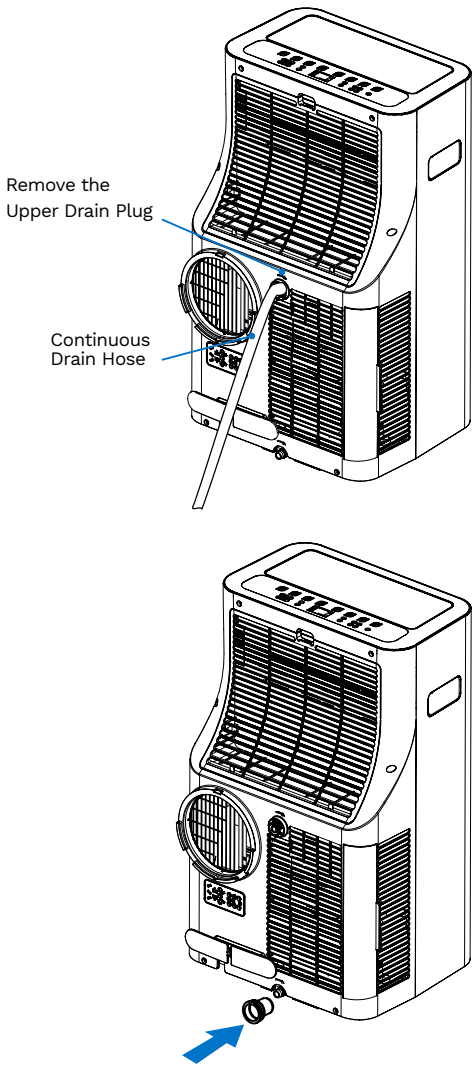

SPECIFICATIONS & FUNCTION BUTTONS

Applied Model:	HME020379N, HME020235N
Rated Voltage:	3.0 V (Dry batteries R03/LR03 × 2)
Signal Receiving Range:	26 ft (8 m)
Operating Environment:	23°F~140°F (-5°C~60°C)

Before you begin using your new Air Conditioner, make sure to familiarize yourself with its Remote Controller. For instructions on how to operate your Air Conditioner, refer to the **How to Use Basic Functions** section of this manual (See Page > 24).

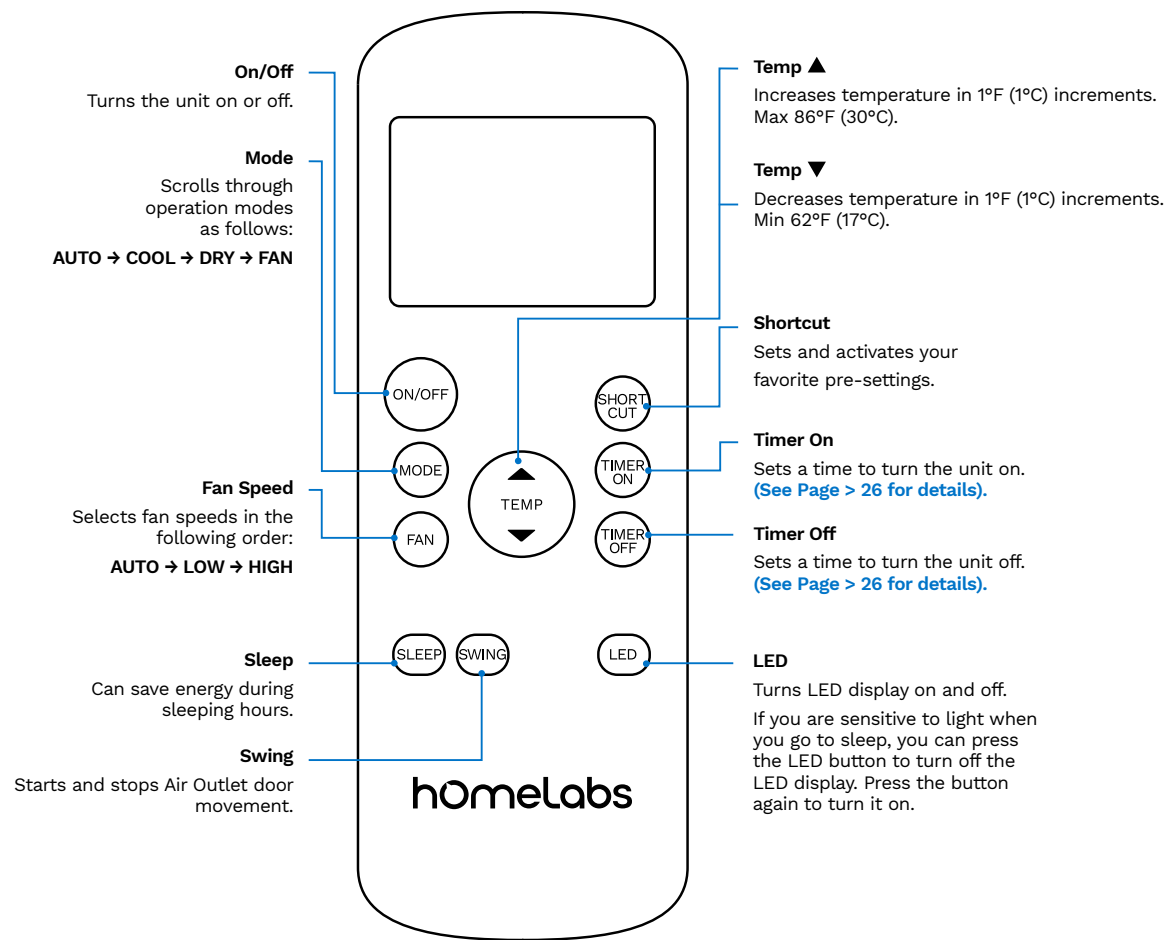

NOTE:
See Page > 23 for Remote Controller LED Screen details.

NOTE:
Button designs on your unit may differ from the example shown. If the unit does not have a particular function, pressing that function button on the Remote Controller will have no effect. When there are differences between the Remote Controller illustration and the USER MANUAL on function description, the description on the USER MANUAL should prevail.

HANDLING THE REMOTE CONTROLLER

Inserting and Replacing Batteries

Your Remote Controller comes with two AAA batteries. Put the batteries in the Remote Controller before use:

1. Slide the back cover from the Remote Controller downward to open the battery compartment.
2. Insert the batteries. Be careful to match the (+) and (-) ends of the batteries with the symbols inside the battery compartment.
3. Slide the battery cover back to close.

Battery Notes

For optimum performance and safety, do not mix old and new batteries, or batteries of different types. Do not leave batteries in the Remote Controller if you don't plan on using the device for more than 2 months.


Battery Diposal

Do not dispose of batteries as unsorted municipal waste. Refer to local laws for proper disposal of batteries.

Tips for Using Remote Controller


- The Remote Controller must be used within 26.2 ft (8 meters) of the unit.
- The unit will beep when the remote signal is received.
- Curtains and direct sunlight can interfere with the infrared signal receiver.
- Remove batteries when the Remote Controller is not intended to be used for 2 months.

REMOTE CONTROLLER LED SCREEN

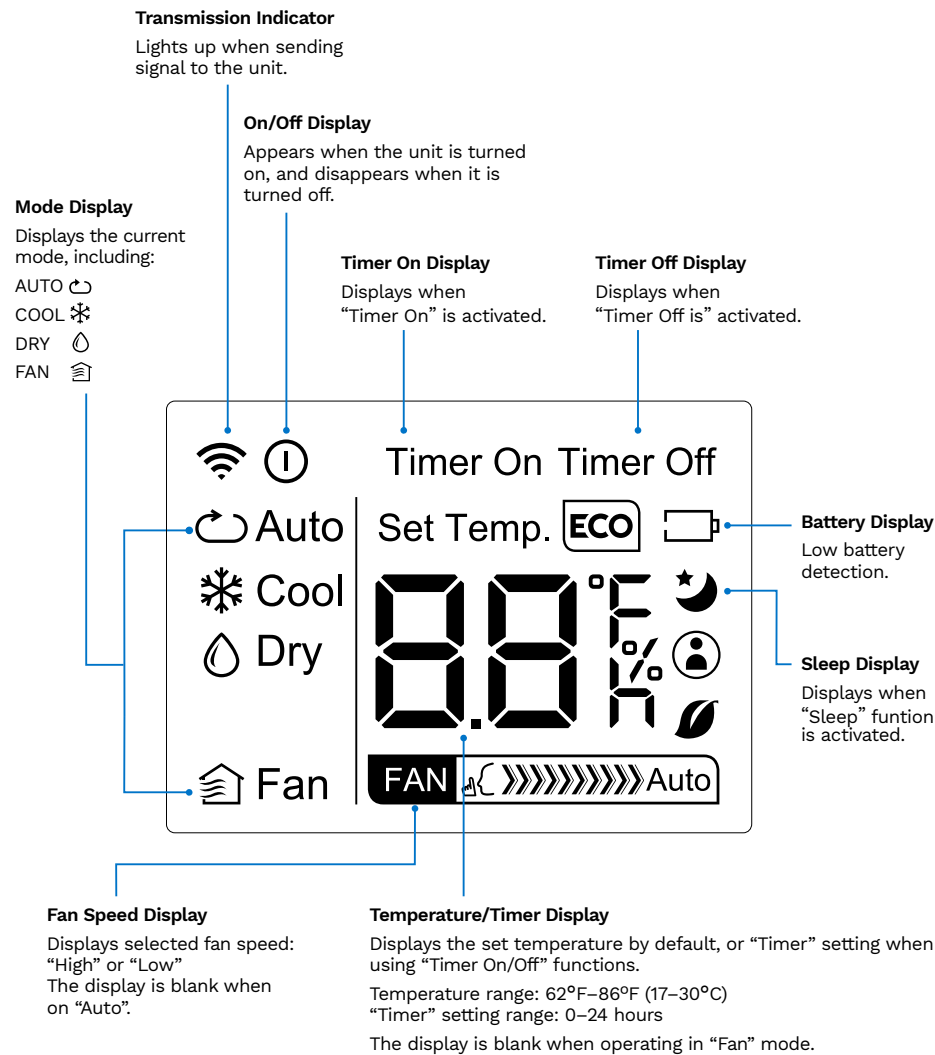

HOW TO USE THE BASIC FUNCTIONS

- **“Cool” Operation**
 1. Press the “Mode” button. Select “Cool” mode.
 2. Set your desired temperature using the “Temp” ▲ or “Temp” ▼ button.
 3. Press the “Fan” button to select the fan speed: “Auto”, “Low” or “High”.
 4. Press the “On/Off” button to start the unit.

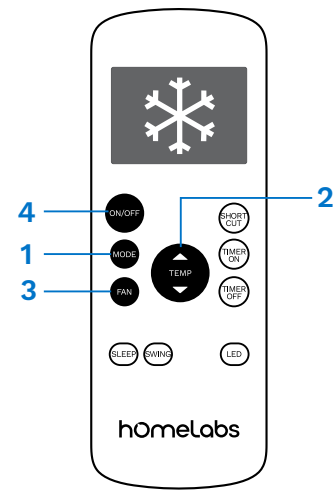


- **Setting Temperature**

The operating temperature range for units is 62–86°F (17–30°C). You can increase or decrease the set temperature in 1°F (1°C) increments.
- **“Auto” Operation**

In “Auto” mode, the unit will automatically select the “Cool”, “Fan”, or “Dry” mode based on the set temperature.


 1. Press the “Mode” button to select “Auto” mode.
 2. Set your desired temperature using the “Temp” ▲ or “Temp” ▼ button.
 3. Press the “On/Off” button to start the unit.

NOTE: “Fan” speed cannot be adjusted in “Auto” mode.

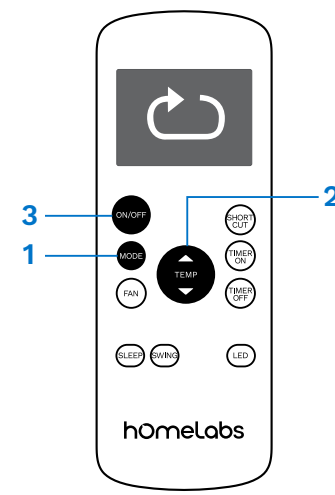


- **Operation (Dehumidifying)**
 1. Press the “Mode” button to select “Dry” mode.
 2. Set your desired temperature using the “Temp” ▲ or “Temp” ▼ button.
 3. Press the “On/Off” button to start the unit.

NOTE: “Fan” speed cannot be adjusted in “Dry” mode.

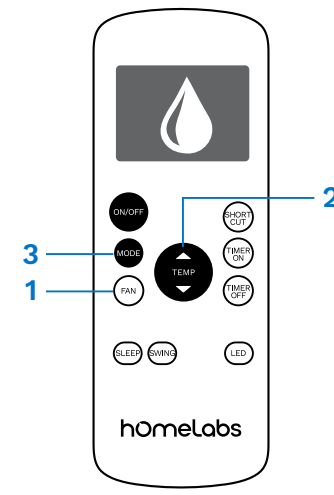

- **“Fan” Operation**
 1. Press the “Mode” button to select “Fan” mode.
 2. Press “Fan” button to select the “Fan” speed: “Auto”, “Low” or “High”.
 3. Press the “On/Off” button to start the unit.

NOTE: Temperature cannot be adjusted in “Fan” mode. As a result, there will be no temperature information on your Remote Controller.

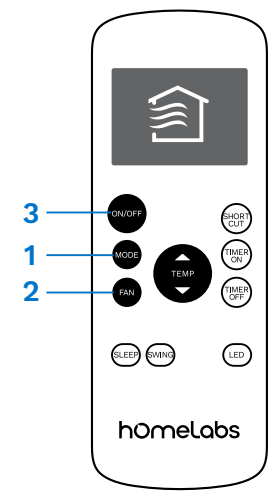

HOW TO USE THE ADVANCED FUNCTIONS

“Sleep” Function
Used to decrease energy use while you sleep.

NOTE:
The “Sleep” function is not available in “Fan” or “Dry” mode.

“Swing” Function
Used to stop or start the Air Outlet door movement and set the desired up/down air flow direction. When pressing for more than 2 seconds, the Air Outlet door “Auto Swing” feature will be activated.

“Shortcut” Function
Used to restore the current settings or resume previous settings.
Press this button when the Remote Controller is on and the system will automatically revert back to the previous settings, including “Operating” mode, setting temperature, fan speed and “Sleep” feature (if activated).
If pressed for more than 2 seconds, the system will automatically restore the current operational settings, including “Operating” mode, setting temperature, fan speed, and “Sleep” feature (if activated).


- NOTE:**
- The button design might be different from the actual one you purchased.
 - All the functions described are based on the model. If the unit is designed without a particular feature, nothing will happen when pressing the relative button on the Remote Controller.
 - The device complies with the local and national regulations. In Canada, it complies with CAN ICES-3(B)/NMB-3(B). In the USA, this device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
 - This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and the receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. Changes or modifications not approved by the party responsible for compliance could void user authority to operate the equipment.

SETTING THE “TIMER” FUNCTION

When setting the “Timer On” or “Timer Off” functions for up to 10 hours, the time will increase in 30-minute increments with each press. Between 10 hours and 24 hours, it will increase in 1-hour increments. The “Timer” will revert to zero after 24 hours. You can turn off either function by setting its “Timer” to “0.0 h”.

Your Air Conditioning Unit has two timer-related functions:

- **“Timer On”**
Sets the amount of time after which the unit will automatically turn on.
- **“Timer Off”**
Sets the amount of time after which the unit will automatically turn off.

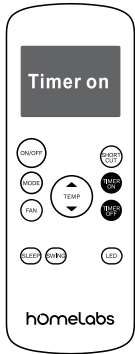

Continue to press “Timer On” or “Timer Off” until desired time is reached.


“Timer On” Function

The “Timer On” function allows you to set a period of time after which the unit will automatically turn on.

1. Press the “Timer On” button. By default, the previous time period (shown as a number), plus an “h” (indicating hours) will appear on the display.

NOTE: For example, if you set “Timer On” for 2 hours, “2.0 h” will appear on the screen, and the unit will turn on after 2 hours.

2. Press the “Timer On” button repeatedly to set a countdown/future time (in hours) when you want the AC unit to turn on automatically.
3. Wait 2 seconds. The “Timer On” function will be activated. The time display on your Remote Controller will then change to the temperature display.

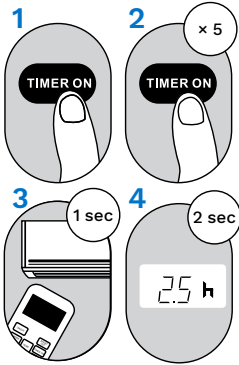

Example: Setting your Air Conditioner to turn on after 2.5 hours.


“Timer Off” Function

The “Timer Off” function allows you to set a period of time after which the unit will automatically turn off.

1. Press the “Timer Off” button. By default, the previous time period (shown as a number), plus an “h” (indicating hours) will appear on the display.

NOTE: This number indicates the time countdown that you want the unit to turn off. For example, if you set “Timer Off” for 2 hours, “2.0 h” will appear on the screen, and the unit will turn off after 2 hours.

2. Press the “Timer Off” button repeatedly to set a countdown/future time (in hours) when you want the AC unit to turn off automatically.
3. Wait 2 seconds. The “Timer Off” function will be activated. The time display on your Remote Controller will then change to the temperature display.

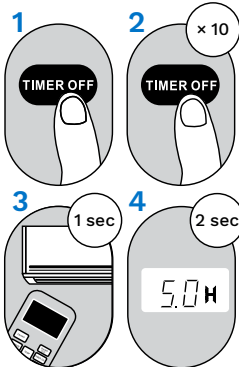

Example: Setting your Air Conditioner to turn off after 5 hours.


SETTING THE “TIMER” FUNCTION

Setting Both “Timer On” and “Timer Off” at the Same Time

Keep in mind that the time periods you set for both functions refer to hours after the current time.


Example 1:

If the current time is 1:00 p.m. and you want the unit to turn on automatically at 7:00 p.m., work for 2 hours, then automatically turn off at 9:00 p.m.

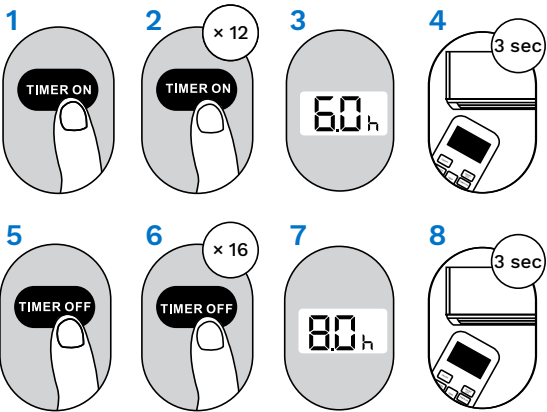

Example 2:

Setting the unit to turn on after 6 hours, work for 2 hours, then turn off automatically. Follow the steps below:

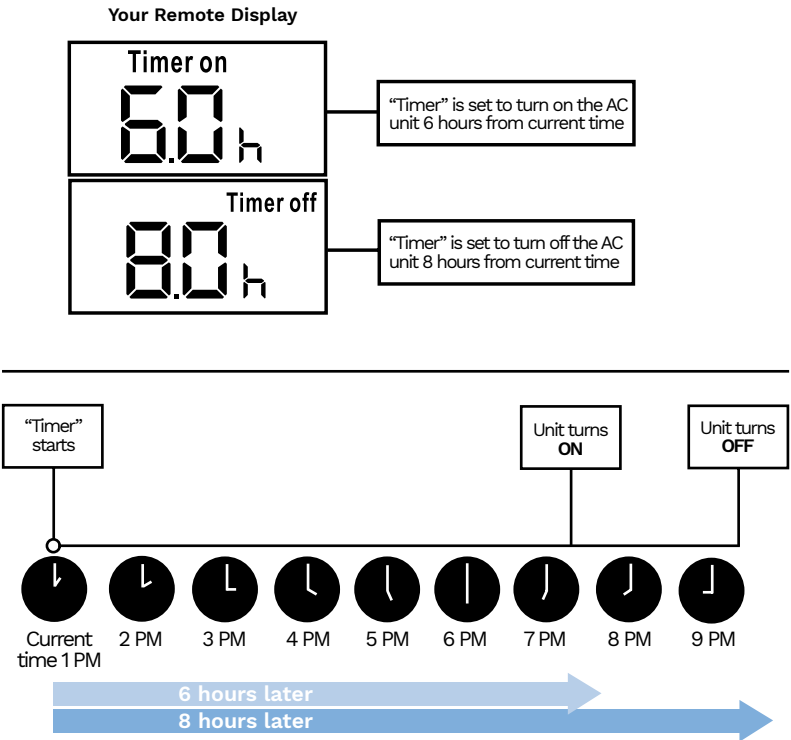



WARNING:

- Always unplug the unit before cleaning or any repairs.
- Do not use flammable liquids or chemicals to clean the unit.
- Do not wash the unit under running water.
- Do not operate the unit if the power supply was damaged during cleaning.

A damaged power cord must be replaced with a new cord from the manufacturer.

Clean the Unit
Clean the unit with a damp cloth and mild detergent. Dry the unit with a dry cloth.

Clean the Air Filter



CAUTION:
Do not operate the unit without the filter. Dirt and lint will clog the unit and reduce performance.

- Maintenance Tips:
- Be sure to clean the Air Filter every 2 weeks for optimal performance.
 - The Water Collection Tray should be drained immediately after a P1 error occurs, and before storage to prevent mold.
 - In households with animals, you will have to periodically wipe down the grill to prevent blocked airflow caused by animal hair.

Store the Unit When Not in Use

- Drain the water collection tray (See Page > 21).
- Run the appliance on “Fan” mode for 12 hours in a warm room to dry and prevent mold.
- Turn off the unit and unplug it.
- Clean the Air Filter according to the instructions in the previous sections. Reinstall the clean, dry filter before storing.
- Remove the batteries from the Remote Controller.
- Be sure to store the unit in a cool and dark place. Exposure to direct sunlight or extreme heat can shorten the lifespan of the unit.

Design Notice
In order to ensure the optimal performance of our products, the design specifications of the unit and its Remote Controller are subject to change without prior notice.

Energy Rating Information

The Energy Rating for this unit is based on installation using an unextended Exhaust Hose without a Window Slider Adapter (as shown in the Installation section of this manual).

Exhaust Hose Installation

The Exhaust Hose and Adapter must be installed or removed in accordance with the usage mode.
For “Cool” or “Auto” mode, the Exhaust Hose must be installed.
For “Fan” or “Dehumidify” mode, the Exhaust Hose must be removed.

Disposal

Do not dispose of this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.
It is prohibited to dispose of this appliance in domestic household waste.
For disposal, there are several possibilities:

- Your local city or municipality has established collection systems where electronic waste can be disposed free of charge.
- As old products contain valuable resources, they can be sold to scrap metal dealers.

Wild disposal of waste in forests and landscapes endangers your health. Hazardous substances leak into the groundwater and find their way into the food chain.

PROBLEM	POSSIBLE CAUSES	SOLUTION
The unit does not turn on when pressing the “On/Off” button.	P1 Error Code	Water Collection Tray is full. Turn off the unit, drain the water from the Water Collection Tray and restart the unit.
	In “Cool” mode: the room temperature is lower than the set temperature.	Reset the temperature to a lower degree.
The unit does not cool well.	The Air Filter is blocked with dust or animal hair.	Turn off the unit and clean the filter according to the instructions.
	The Exhaust Hose is not connected or is blocked.	Turn off the unit, disconnect the Hose, check for blockage, and reconnect the Hose.
	The unit is low on refrigerant.	Call a service technician to inspect the unit and add refrigerant.
	Temperature setting is too high.	Decrease the set temperature.
	The windows and doors in the room are open.	Make sure all windows and doors are closed.
	The room area is too large.	Double-check the cooling area.
	There are heat sources inside the room.	Remove the heat sources if possible.
The unit is noisy and vibrates often.	The Air Filter is blocked with dust or animal hair.	Place the unit on a flat, level surface.
	The Air Filter is blocked with dust or animal hair.	Turn off the unit and clean the filter according to instructions.
The unit makes a gurgling sound.	This sound is caused by the flow of refrigerant inside the unit.	This is normal.

ERROR CODES AND PROTECTION CODE	
E1	Room temperature sensor error.
E2	Evaporator temperature sensor error.
E3	Condenser temperature sensor error.
E4	Display panel communication error.
P1	Bottom Tray is full-connect the Drain Hose and drain the collected water.

NOTE: When one of the above malfunctions occurs, turn off the unit and check for any obstructions. Restart the unit if the malfunction is still present. Contact the manufacturer, its service agent, or a similarly qualified person for repair.

Warranty

hOmeLabs offers a limited one-year warranty (“warranty period”) on all of our products purchased new and unused from hOme Technologies, LLC or an authorized reseller, with an original proof of purchase and where a defect has arisen, wholly or substantially, as a result of faulty manufacture, parts, or workmanship during the one-year warranty period. The warranty does not apply where damage is caused by other factors, including without limitation to: (a) normal wear and tear; (b) abuse, mishandling, accident, or failure to follow operating instructions; (c) exposure to liquid or infiltration of foreign particles; (d) servicing or modifications of the product other than by hOmeLabs; (e) commercial or non-household use.

The hOmeLabs warranty covers all costs related to restoring the proven defective product through repair or replacement of any defective part and necessary labor so that it conforms to its original specifications. A replacement product may be provided instead of repairing a defective product. hOmeLabs’s exclusive obligation under this warranty is limited to such repair or replacement.

A receipt indicating the purchase date is required for any claim, so please keep all receipts in a safe place. We recommend that you register your product on our website: homelabs.com/reg. Although greatly appreciated, the product registration is not required to activate any warranty and product registration does not eliminate the need for the original proof of purchase. The warranty becomes void if attempts at repair are made by non-authorized third parties and/or if spare parts, other than those provided by hOmeLabs, are used. You may also arrange for service after the warranty expires at an additional cost.

These are our general terms for warranty service, but we always urge our customers to reach out to us with any issue, regardless of warranty terms. If you have an issue with a hOmeLabs product, please contact Customer Service at homelabs.com/help or help@homelabs.com.

This warranty gives you specific legal rights, and you may have other legal rights which vary from state to state, country to country, or province to province. The customer may assert any such rights at their sole discretion.

Manufacturing Info

This manual is to be used with all items with the model number

HME020379N

HME020235N

SKU#: HME020379N, HME020235N
RATING: 115 V~, 60 Hz, 1350/1370 W

**WARNING: Keep all plastic bags
away from children.**

Contact Us

CHAT WITH US


homelabs.com/help

EMAIL US

help@homelabs.com

Specifications

- **Temperature Range:** Cool 62–95°F (17–35°C), Dry 55–95°F (13–35°C)
- **Voltage:** 115 V~
- **Dimensions:** H 30.7 × W 17.9 × D 15 in

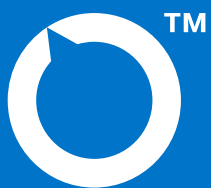

For Household Use Only

Distributed by hOmeLabs™, LLC
350 Springfield Avenue, Suite #200,
Summit, NJ 07901

help@homelabs.com
homelabs.com/help

All rights reserved, hOmeLabs™
Made in China.