

Vanity

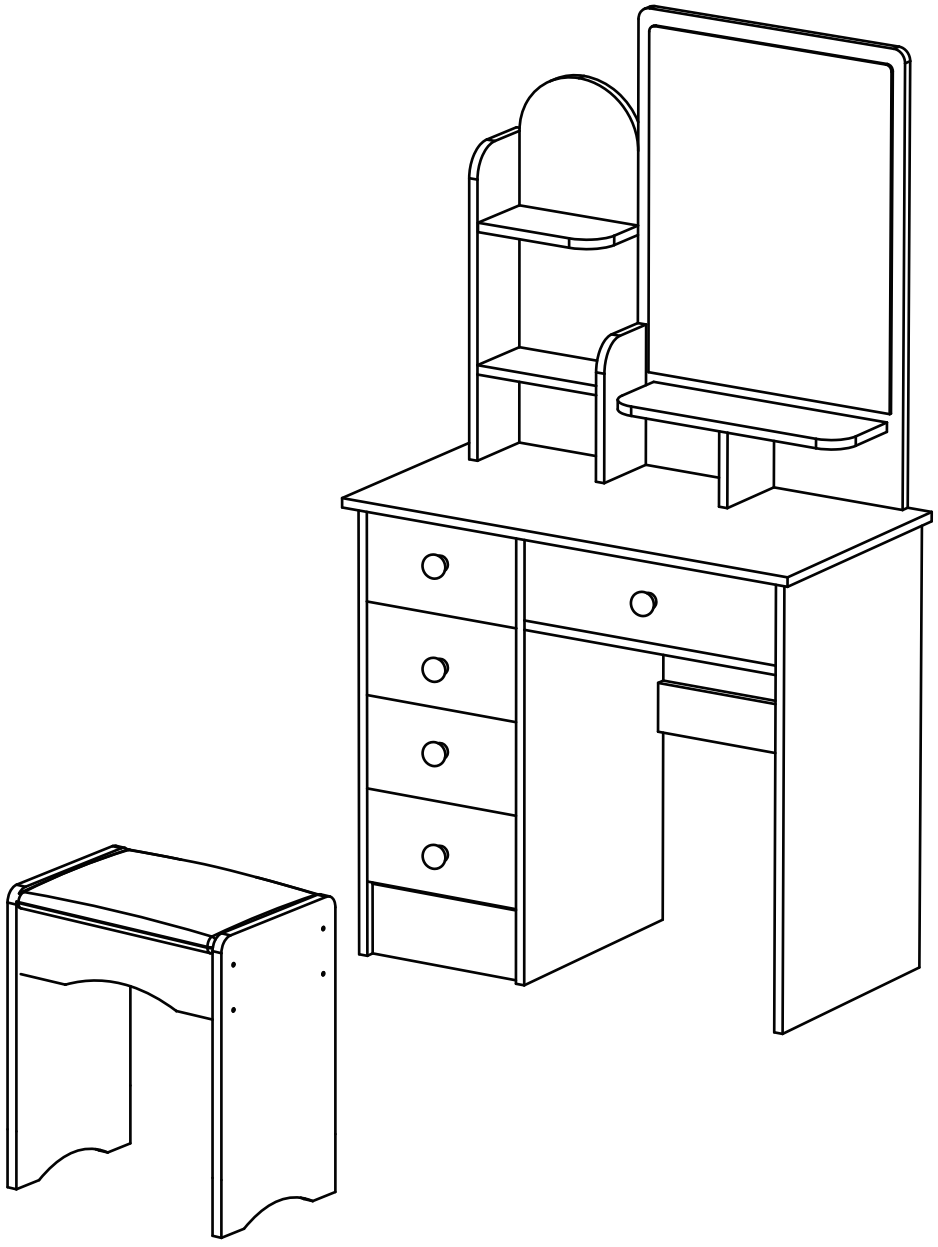

FUFU&GAGA

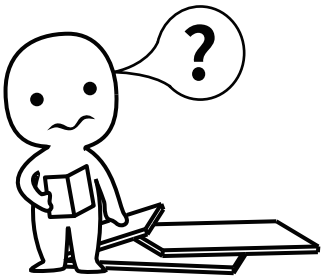

IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product.follow the manual thoroughly and keep it for further reference.




AVOID SCRATCHES!

In order to avoid scratching this furnuture should be assembled on a soft layer-could be a rug.



IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

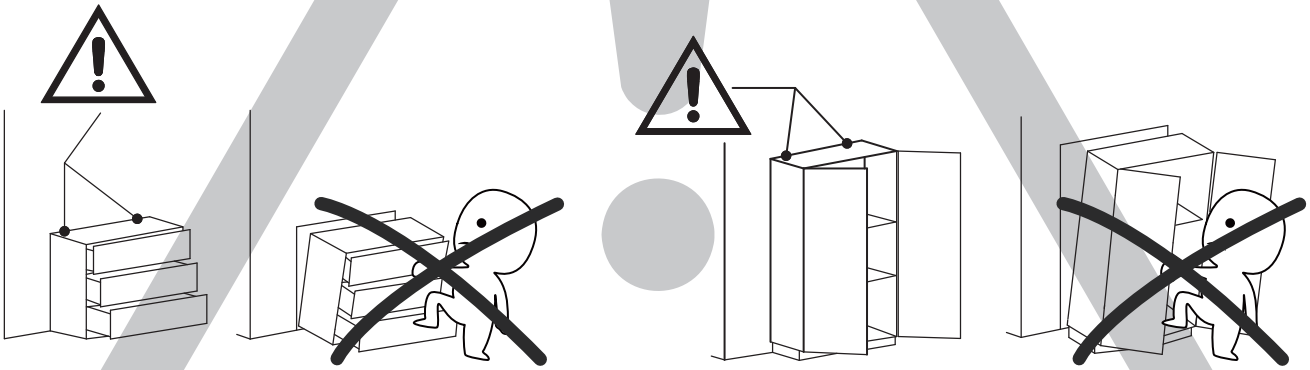

ANTI-TOPPLE WARNING !


Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !

It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly,and once every 3 months - in order to assure stability through-out the lifespan of the product.



For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag.For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.


Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

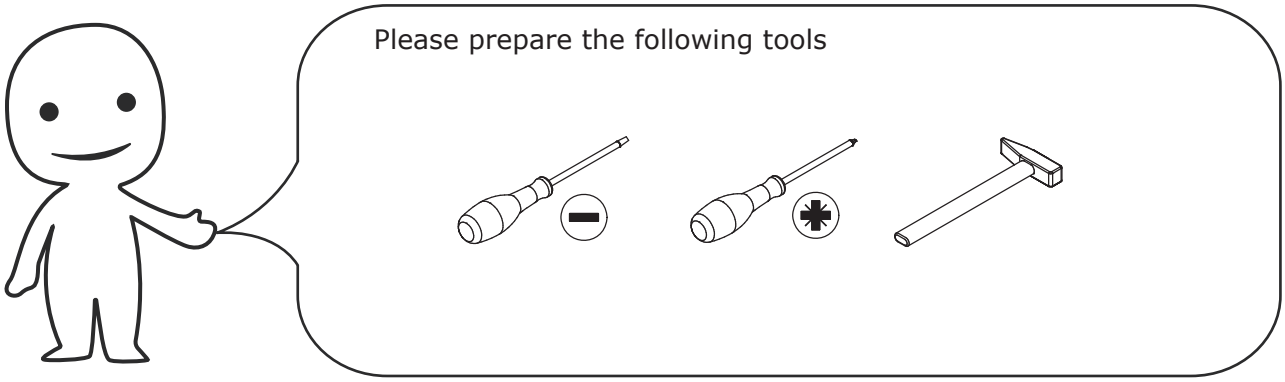





When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

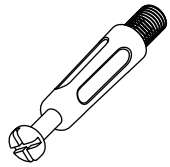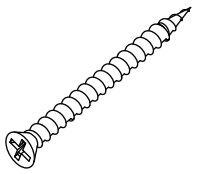A x 62	B x 62	C x 24	D x 24
 M6 x 35 mm	 ∅12 x 9.5 mm	 M5 x 45 mm	 ∅9 x 9 mm

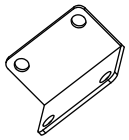E x 10	F x 5	G x 12	H x 2
 M6 x 10 mm	 M4 x 18 mm	 M3.5 x 12 mm	

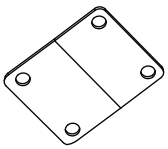
I x 5	J x 1	K x 10
		

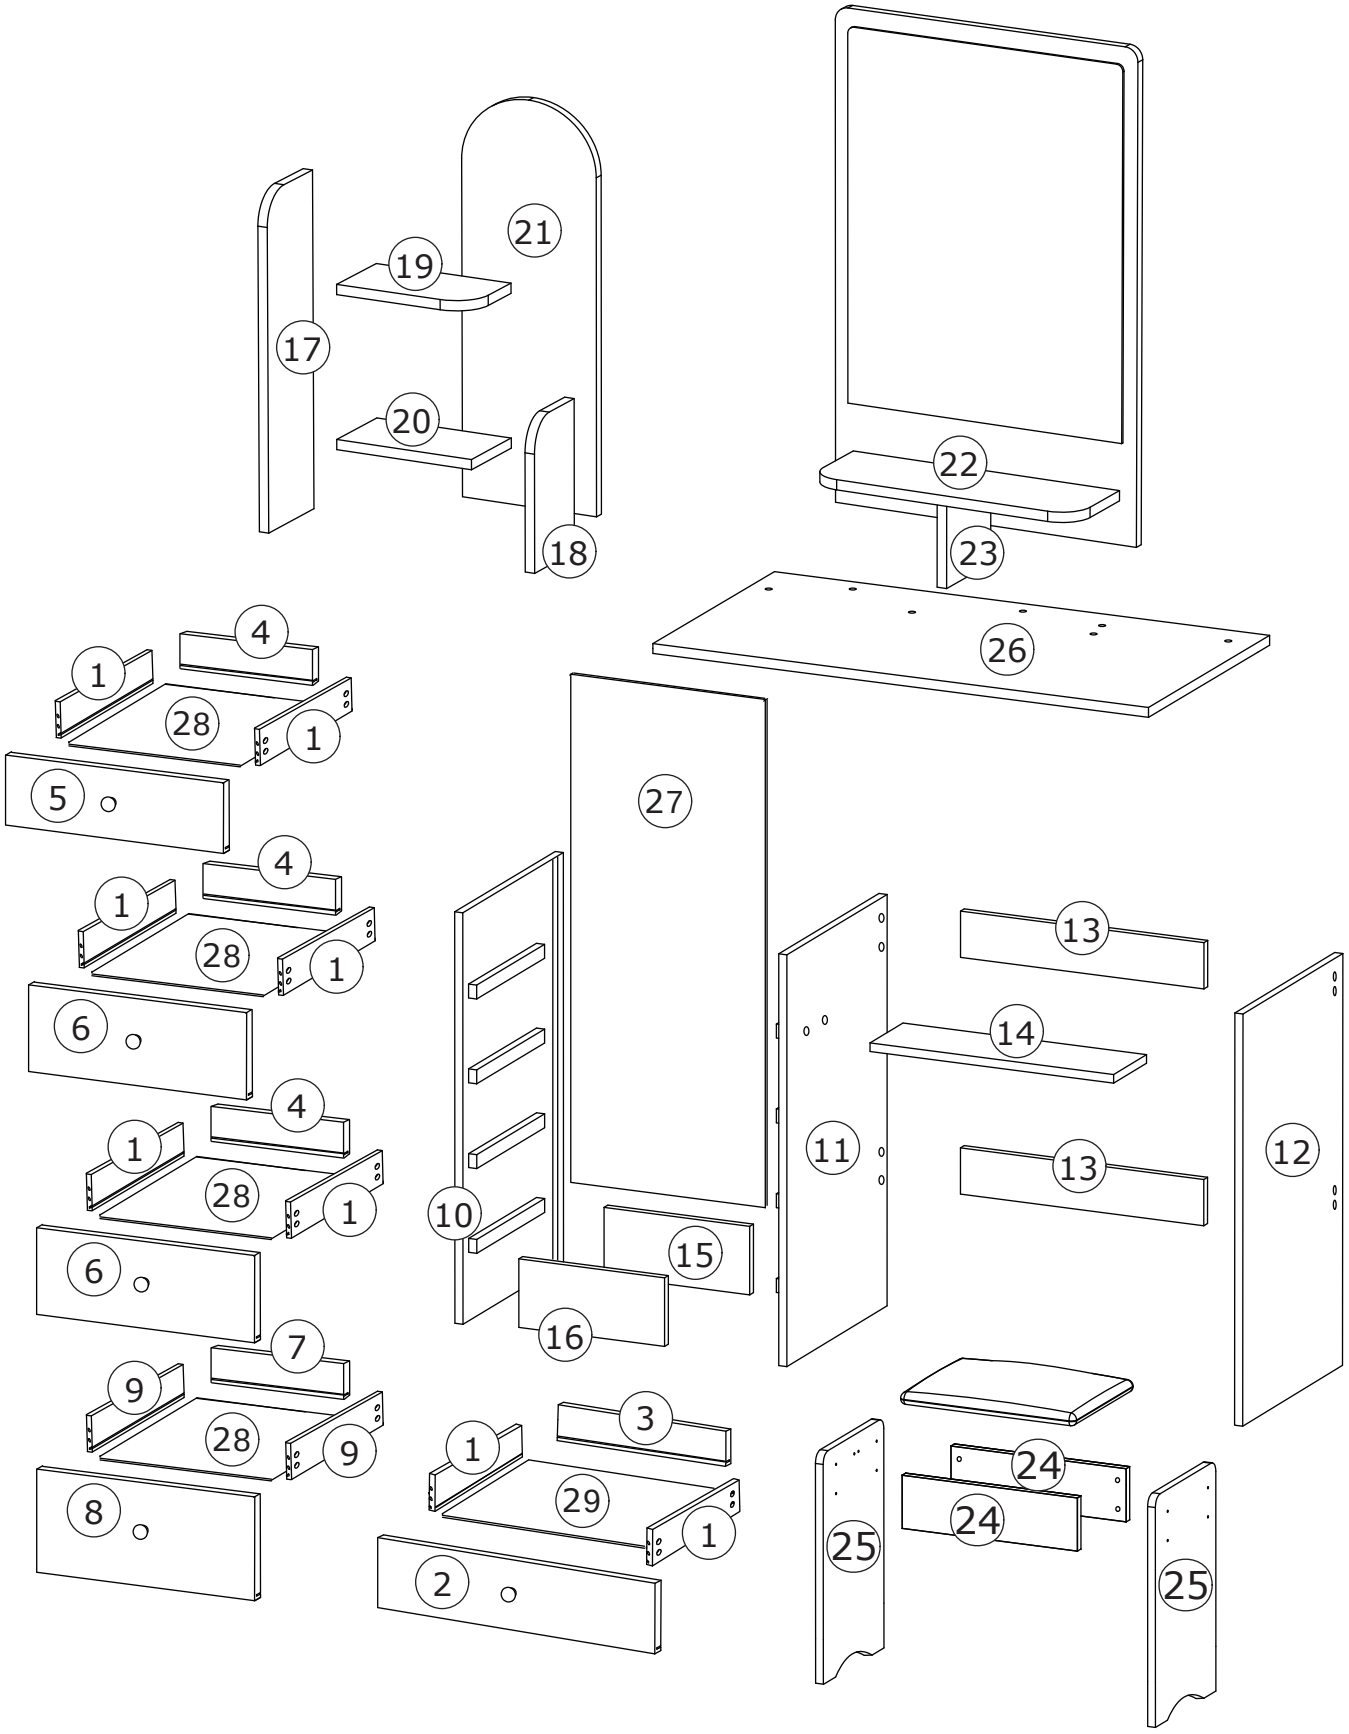
21
19
17
20
18
22
23
26
4
1
28
1
5
27
4
1
28
1
6
13
14
4
1
28
1
6
11
12
13
10
15
16
7
9
28
9
8
3
1
29
1
2
24
24
25
25


1


D x 4

∅9 x 9 mm



Place part(D) into corresponding holes in plate 15 and plate 16 at first.
Please pay attention to its orientation as picture shown.

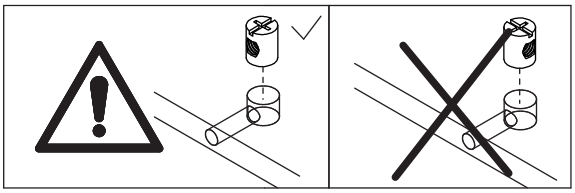


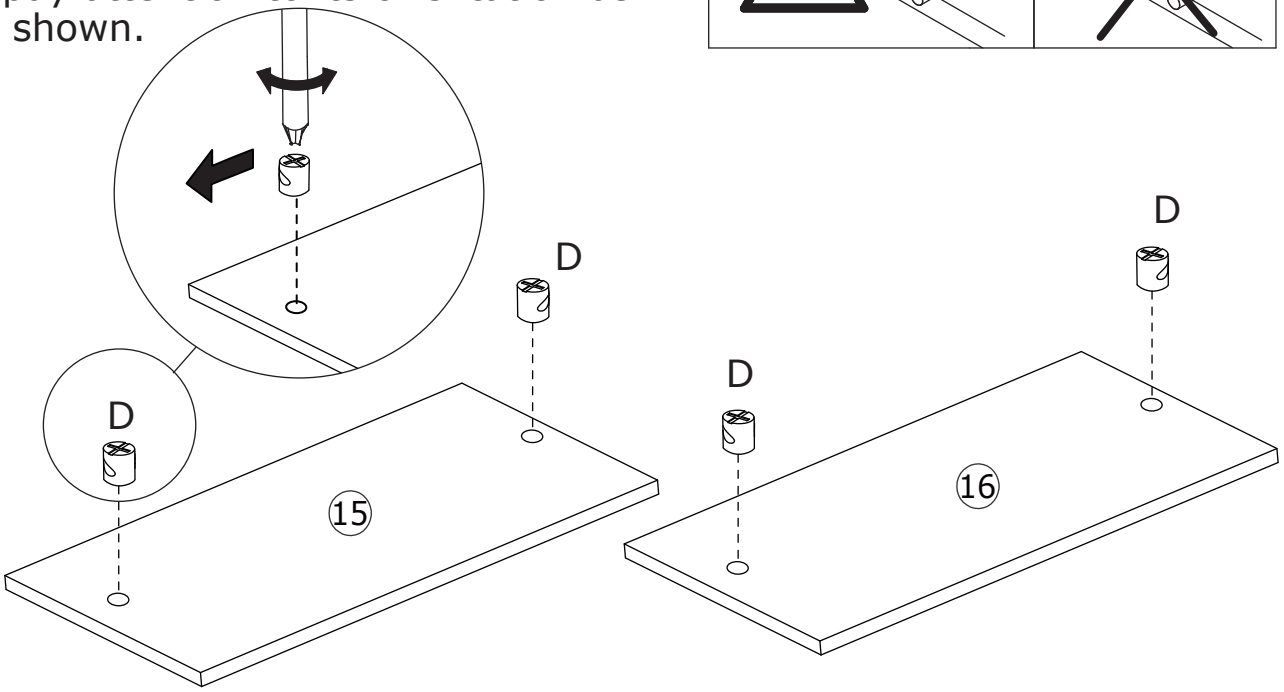


2

C x 4


M5 x 45 mm




Connect plate 10 and 11 with plate 15 and 16, fix using screw(C) as shown.



Attention:
When placing C, make sure that the round hole is aligned with the direction of D.

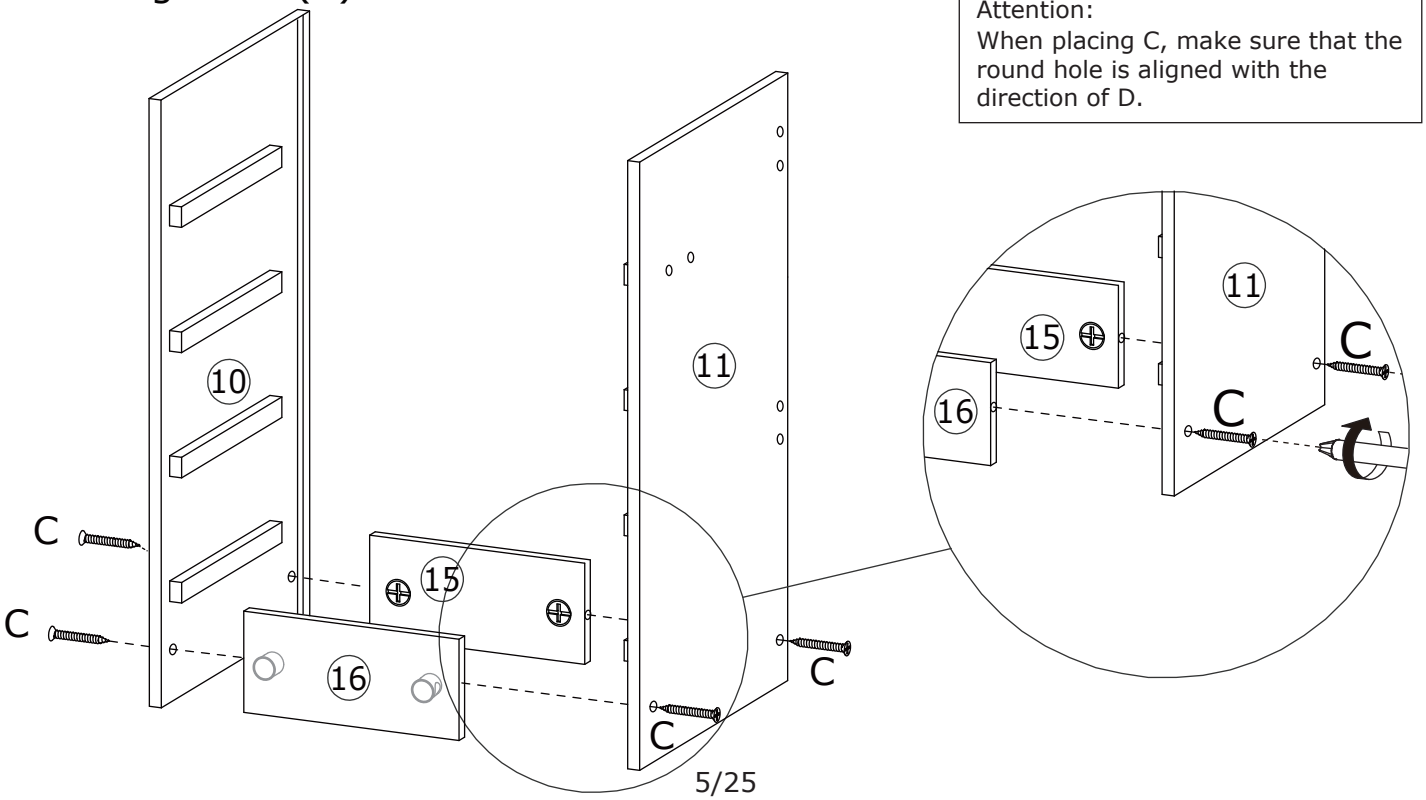



3

A x 4	K x 6	
 M6 x 35 mm		


Insert quickfit screw(A) into corresponding holes in plate 11 and 12 as shown.

Knock foot peg(K) into the the bottom of plate 10,11 and 12 as shown.

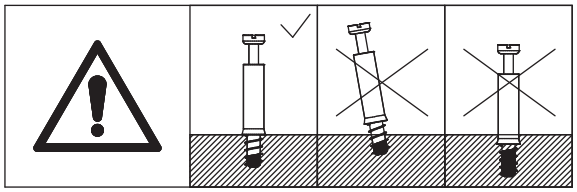

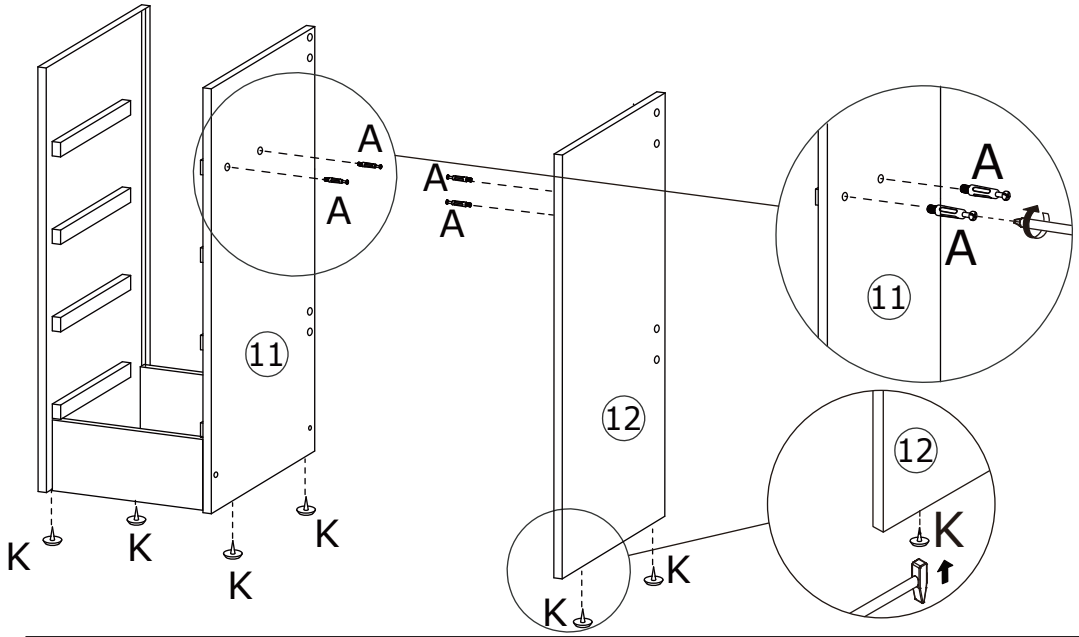



4

D x 8	
 ∅9 x 9 mm	

Place part(D) into corresponding holes in plate 13 at first.


Please pay attention to its orientation as picture shown.

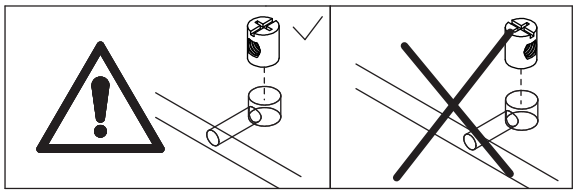

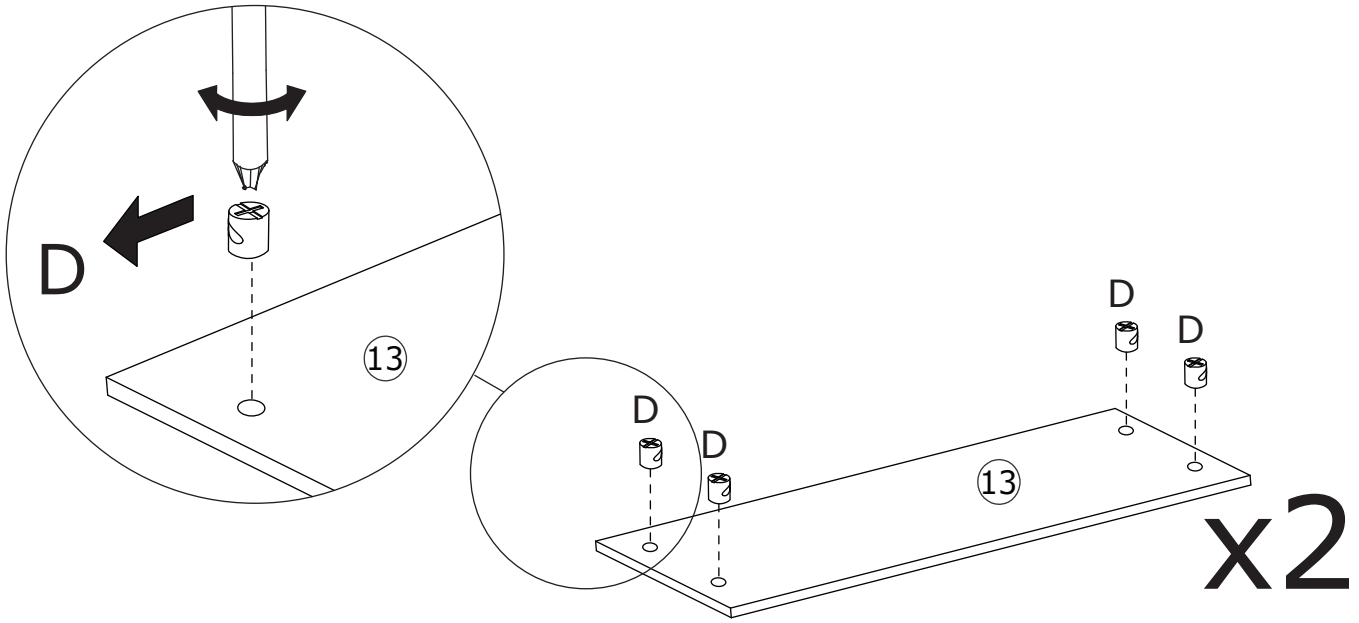



FUFU&GAGA

5


B x 4	C x 8	
		
∅12 x 9.5 mm	M5 x 45 mm	

Connect plate 11 and 12 with plate 14 at first, insert cam lock(B) into plate 14 and turn clockwise to tighten as shown.
Connect plate 11 and 12 with plate 13 then fix using screw(C) as shown.

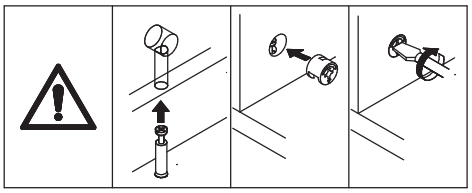




Attention:
When placing C, make sure that the round hole is aligned with the direction of D.

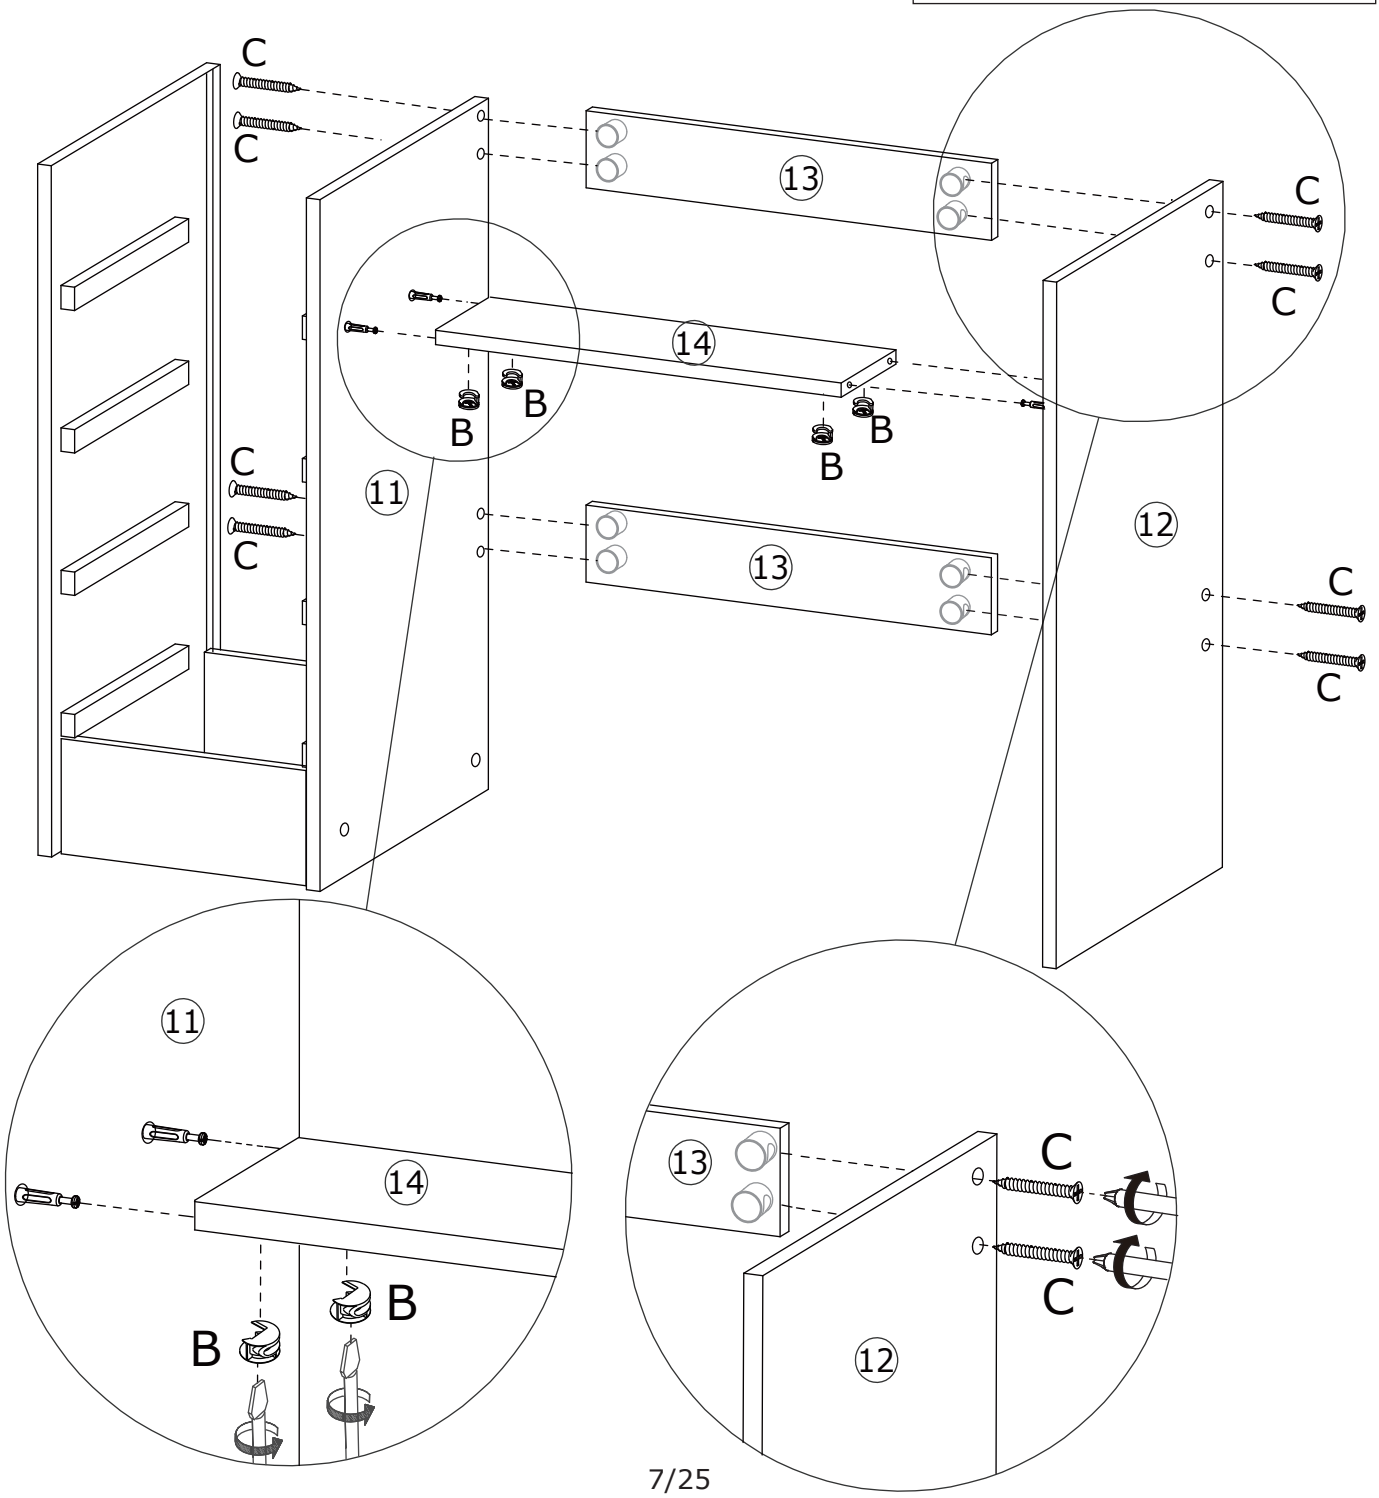

6

Slide the cabinet back plate 27 along the grooves as shown.

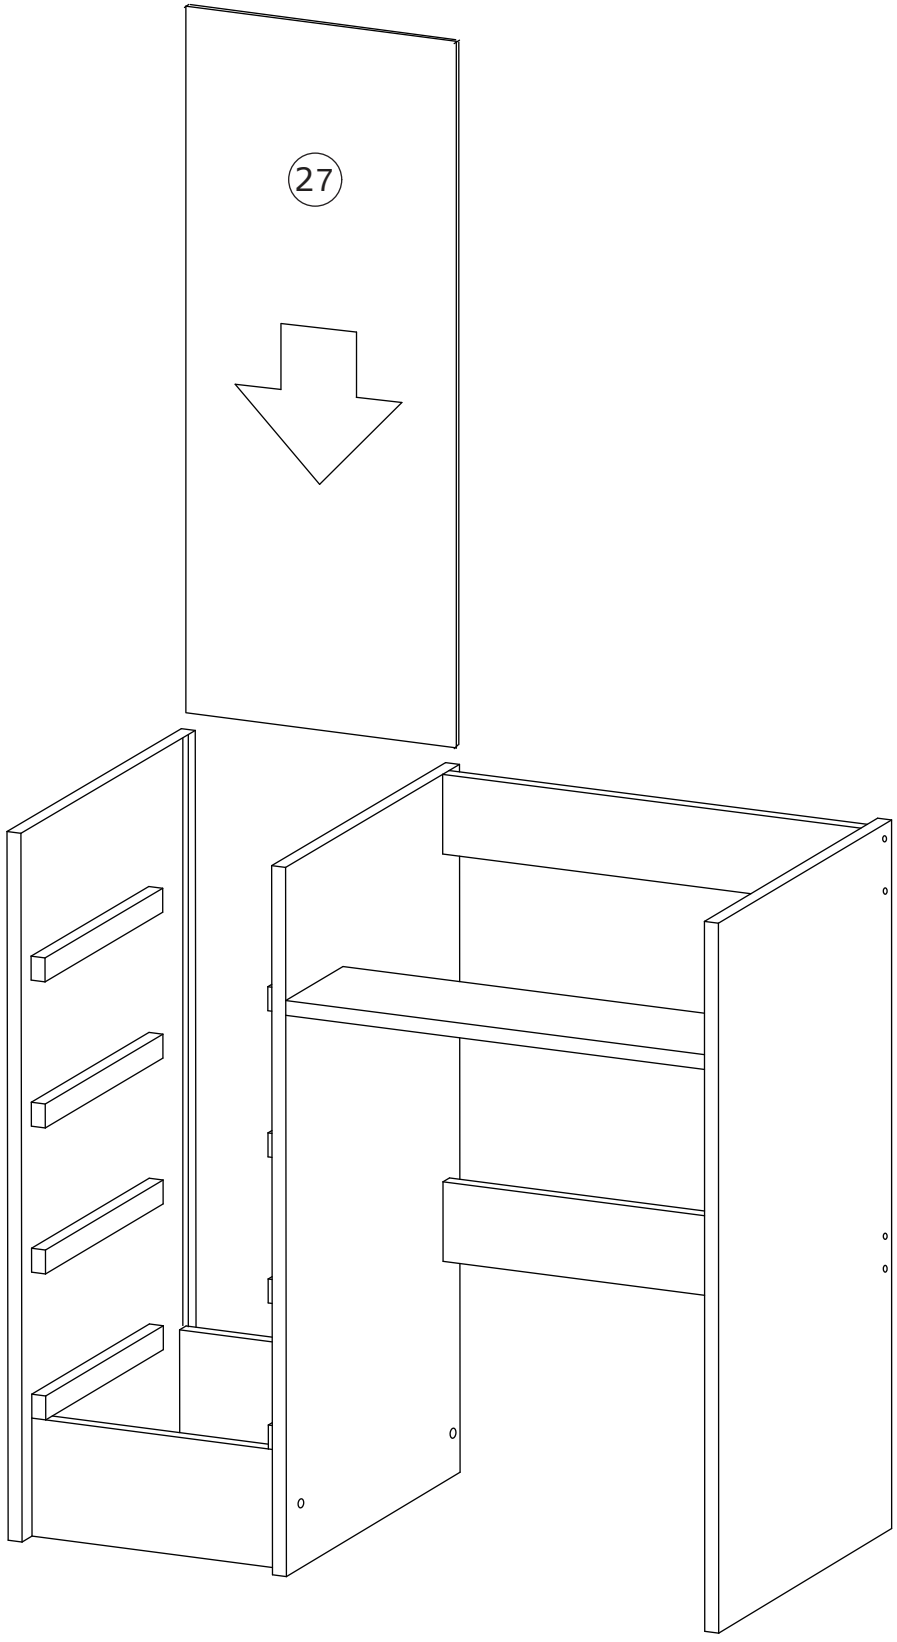


7


A x 6




M6 x 35 mm




Insert quickfit screw(A) into corresponding holes in plate 26 with a screwdriver as shown.

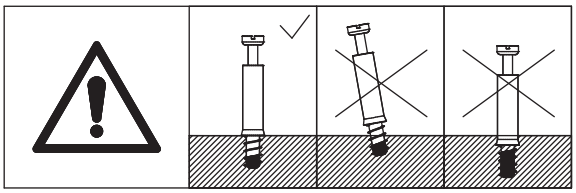


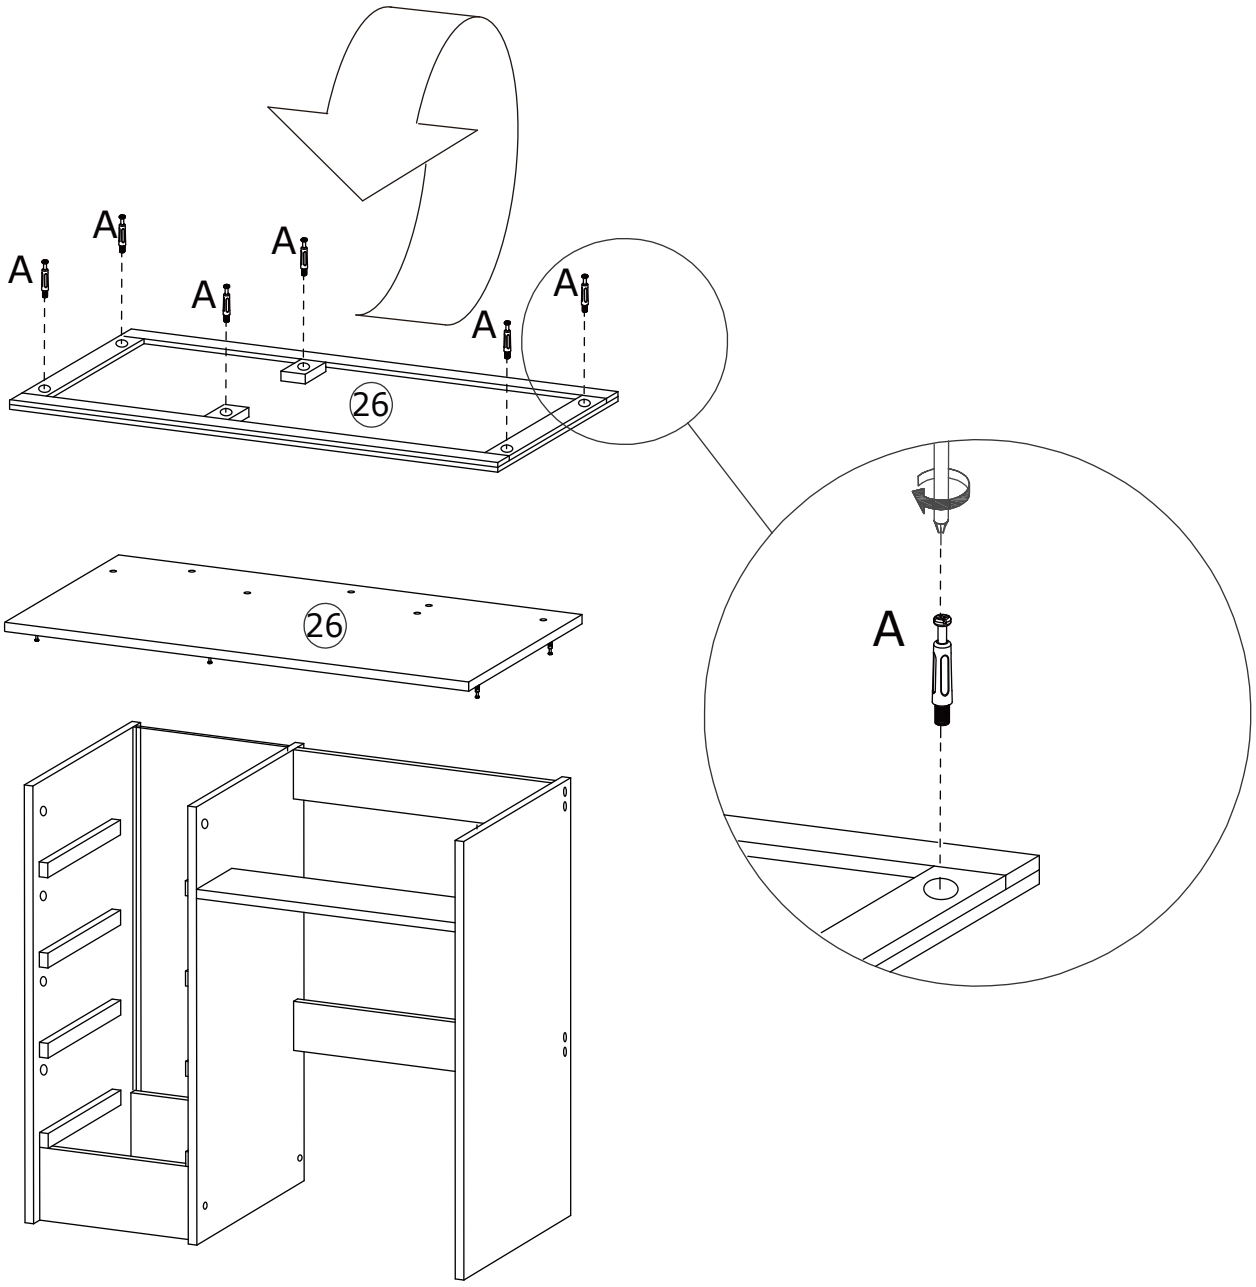


FUFU&GAGA

8

B x 6	E x 10	
		
∅12 x 9.5 mm	M6 x 10 mm	

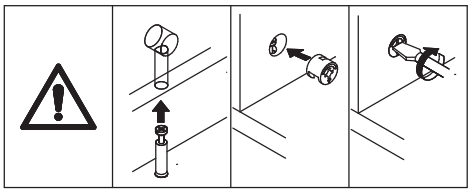

Cover plate 26 to the top of the unit, insert cam lock(B) into plate 10,11,12 and turn clockwise to tighten as shown.
Screw part(E) into corresponding holes in plate 10,11 and 12 as shown.

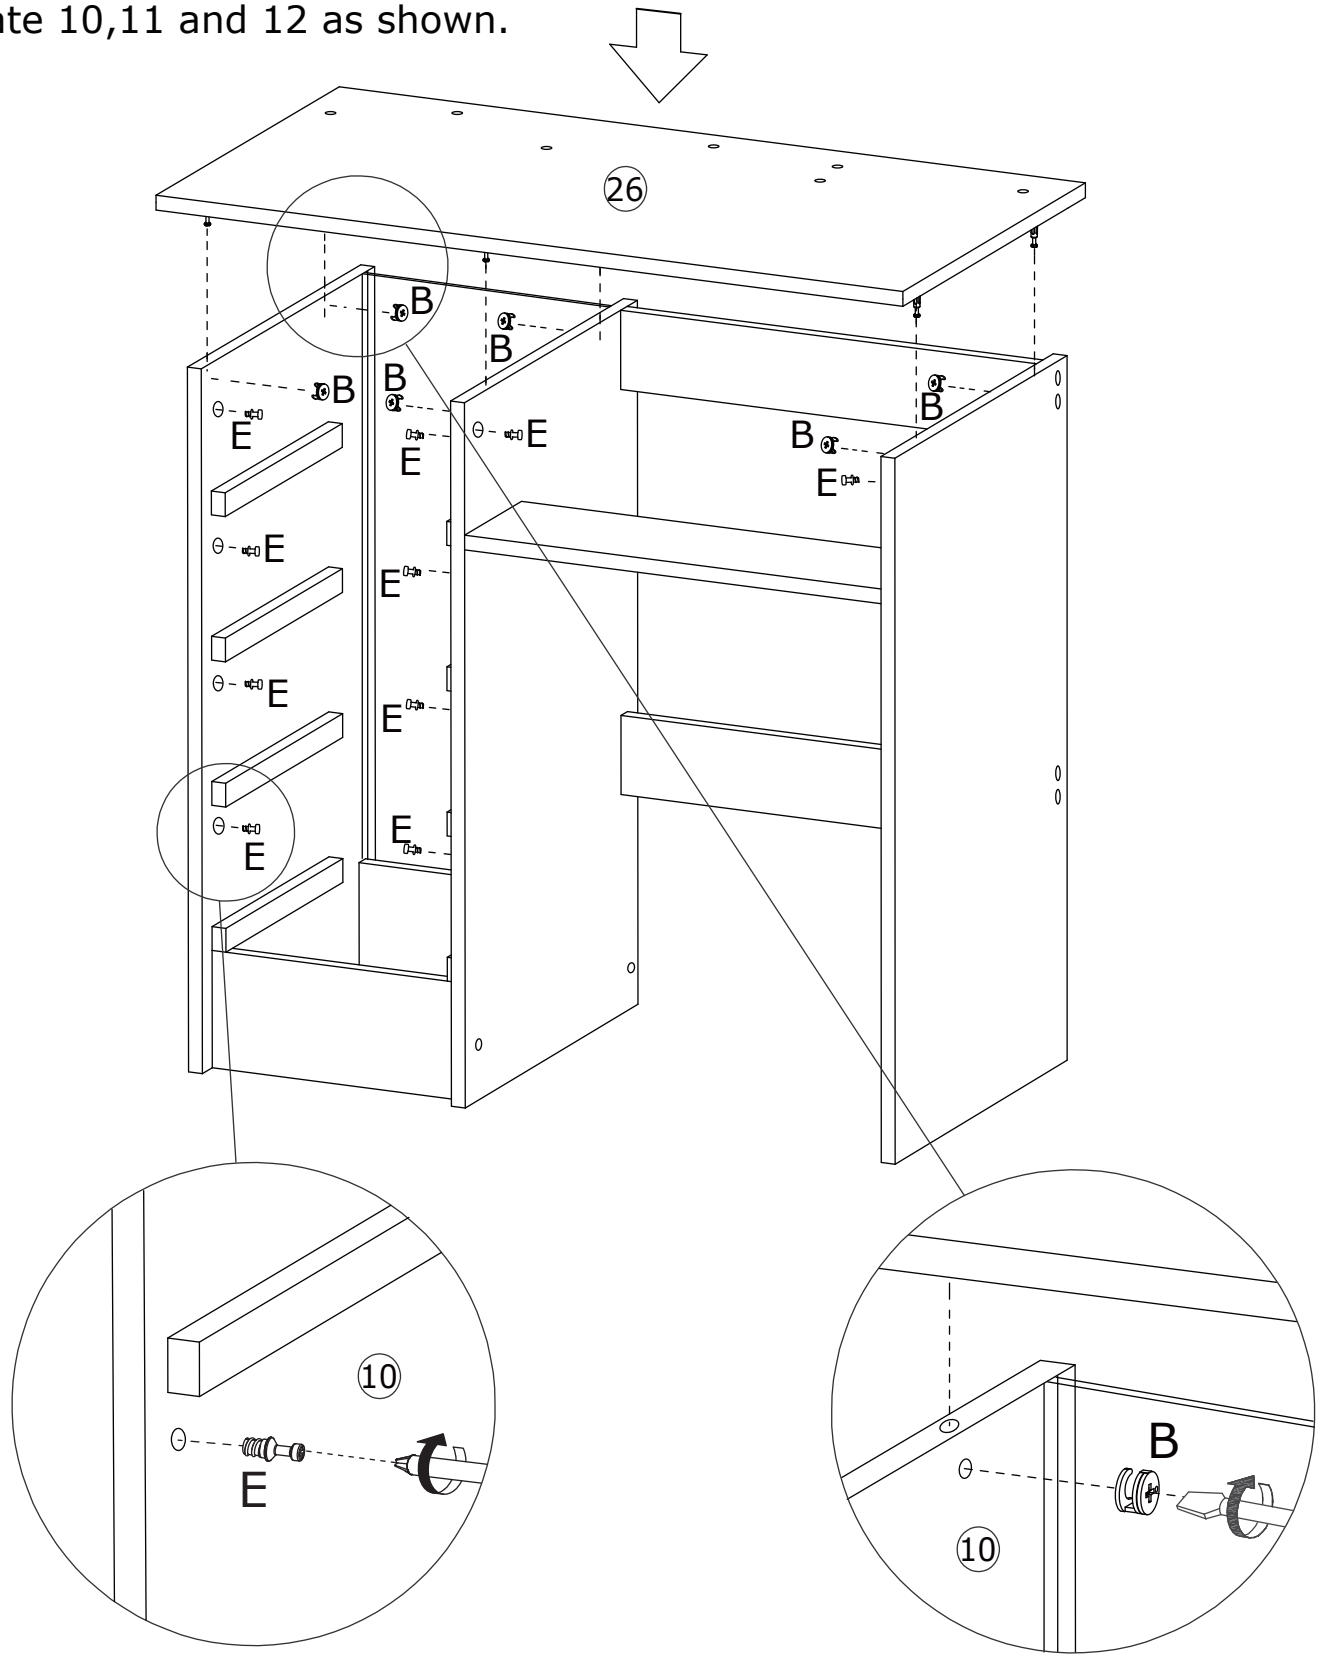


FUFU&GAGA


9


A x 40




∅6 x 35 mm




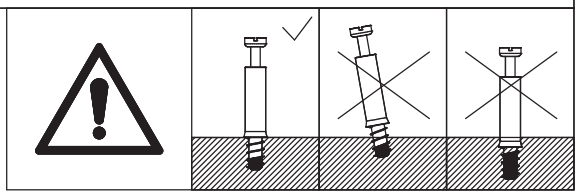


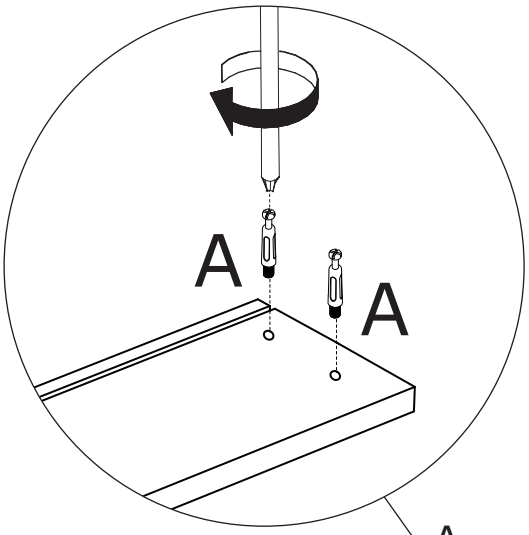



Insert quickfit screw(A) into plate 2,3,5,7,8,6 and 4 with a screwdriver as shown.

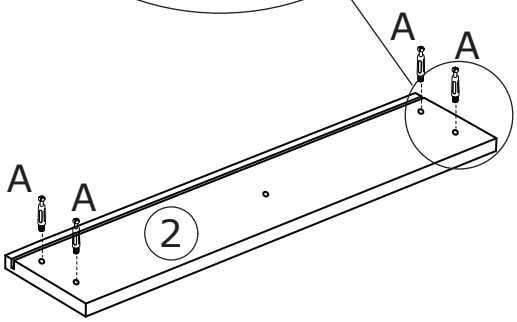


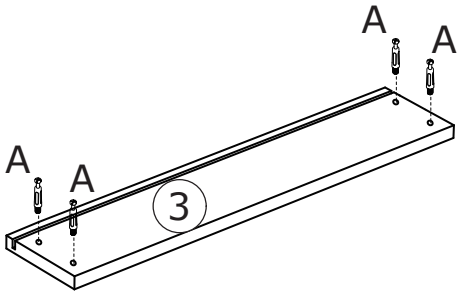


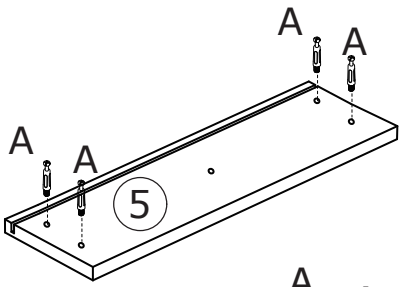

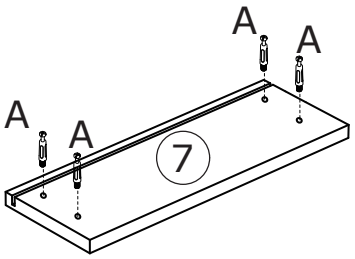

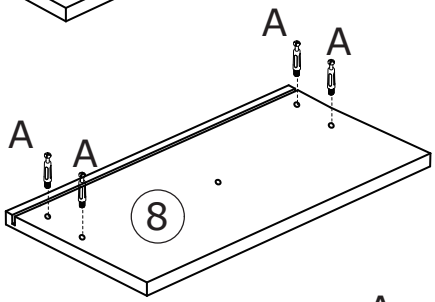

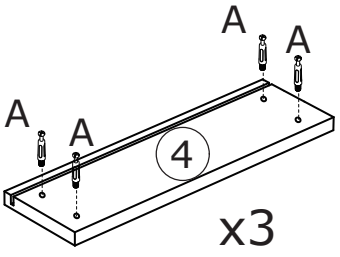


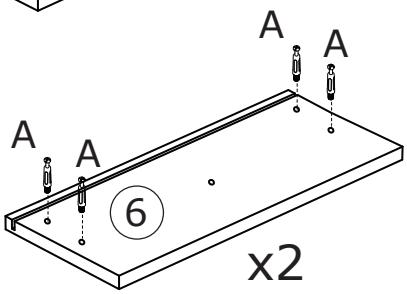

FUFU&GAGA


10


B x 8	F x 1	I x 1	
∅12 x 9.5 mm	∅4 x 18 mm	∅25 mm	

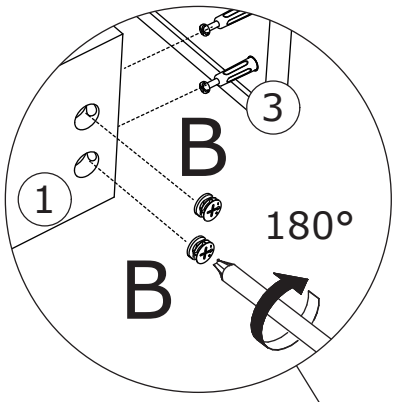



Attach plate 1 to plate 3, turn cam lock(B) in plate 1 clockwise to tighten as shown.

Slide BIG drawer bottom plate 29 along the grooves.

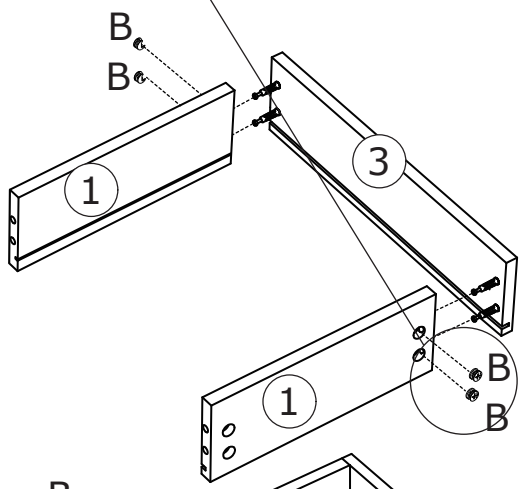


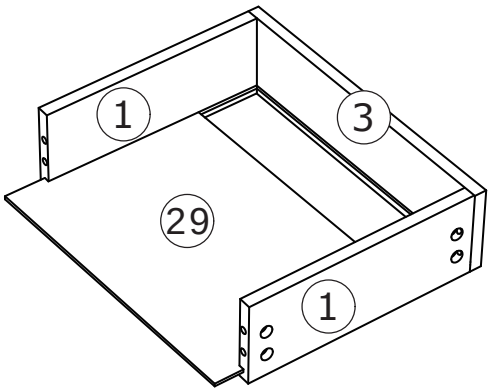


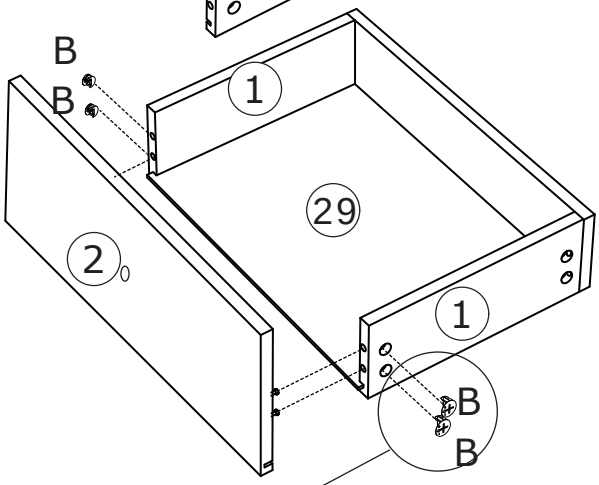

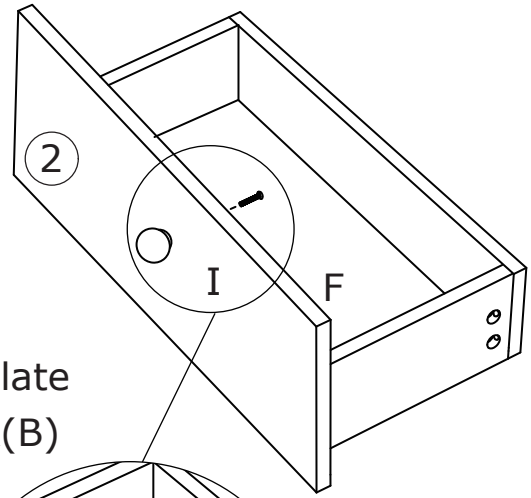

Attach drawer face plate 2, and turn cam lock(B) clockwise to tighten as shown.

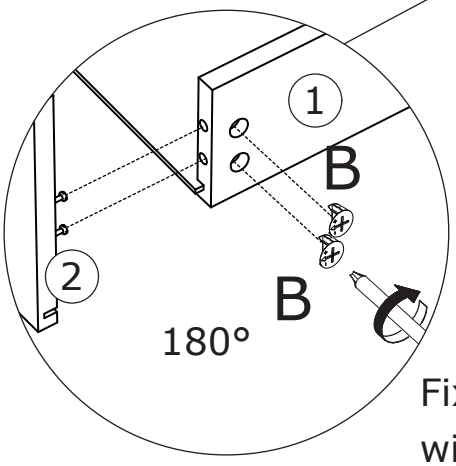


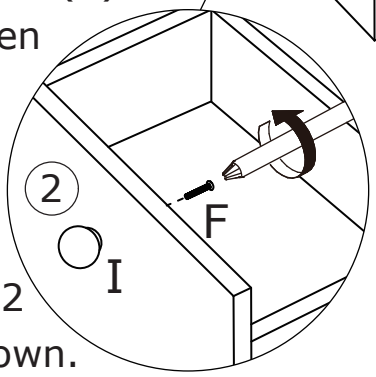


Fix knob(I) to plate 2 with screw(F) as shown.


11

B x 8	F x 1	I x 1	
∅12 x 9.5 mm	∅4 x 18 mm	∅25 mm	

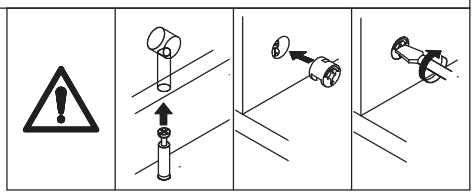


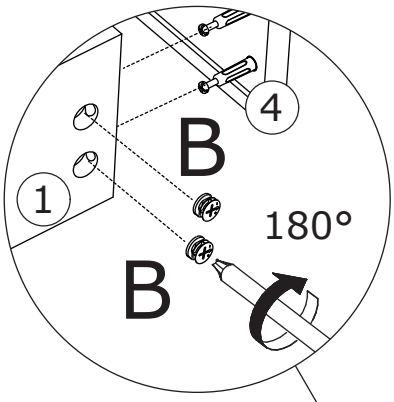



Attach plate 1 to plate 4, turn cam lock(B) in plate 1 clockwise to tighten as shown.

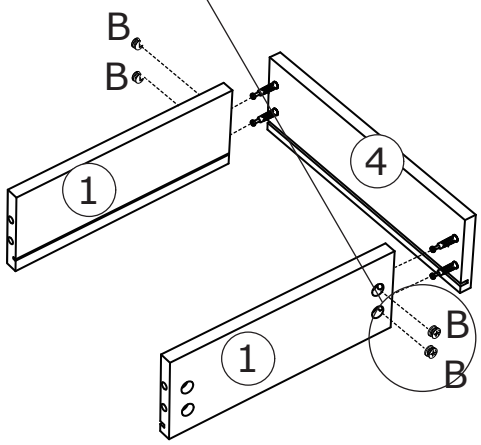


Slide SMALL drawer bottom plate 28 along the grooves.

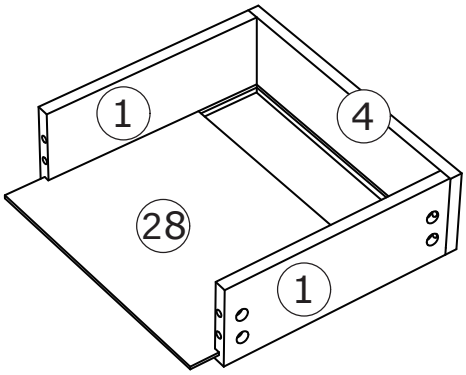


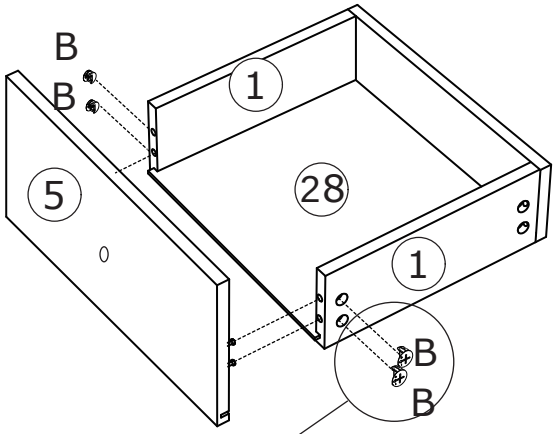

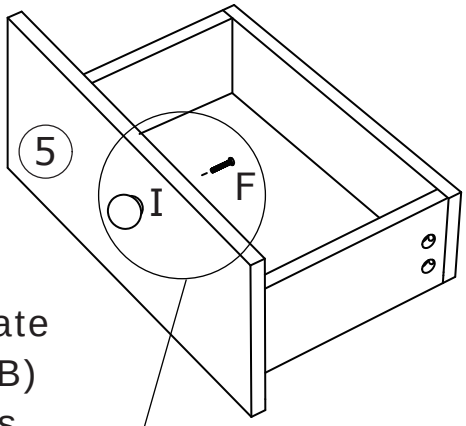


Attach drawer face plate 5, and turn cam lock(B) clockwise to tighten as shown.

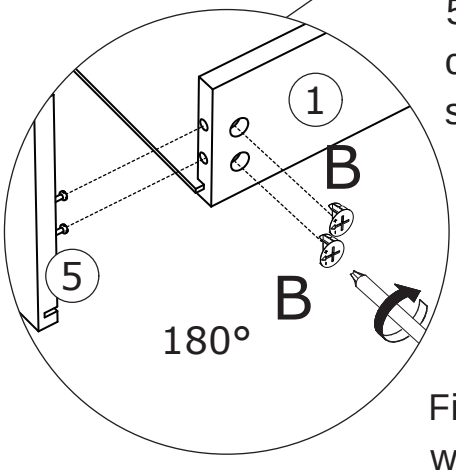


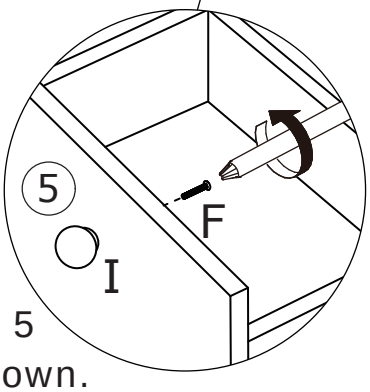


Fix knob(I) to plate 5 with screw(F) as shown.


12

B x 16	F x 2	I x 2	
			
∅12 x 9.5 mm	∅4 x 18 mm	∅25 mm	

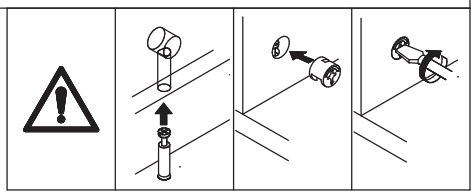


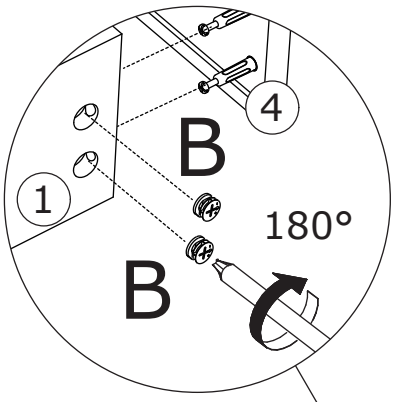



Attach plate 1 to plate 4,
turn cam lock(B) in plate 1
clockwise to tighten as shown.

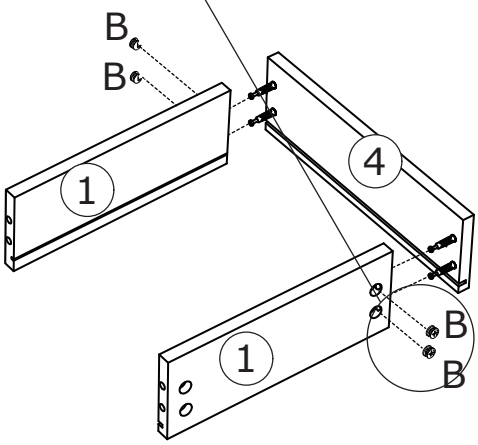


Slide SMALL drawer bottom
plate 28 along the grooves.

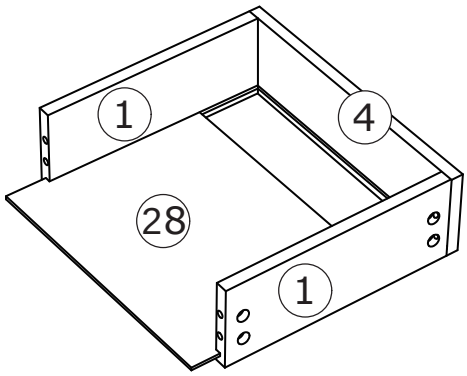


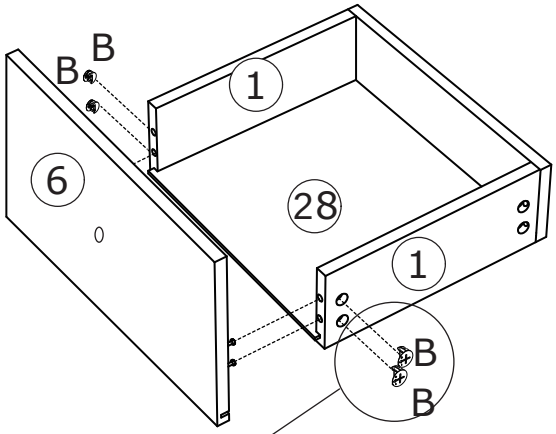

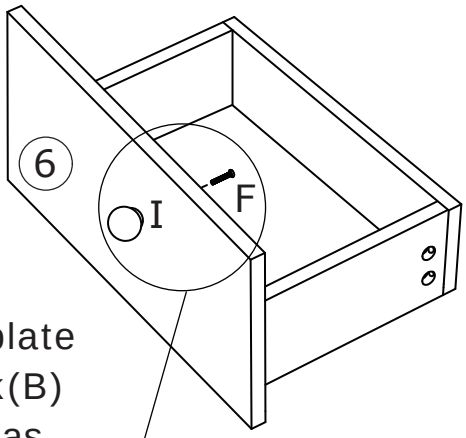

Attach drawer face plate
6, and turn cam lock(B)
clockwise to tighten as
shown.

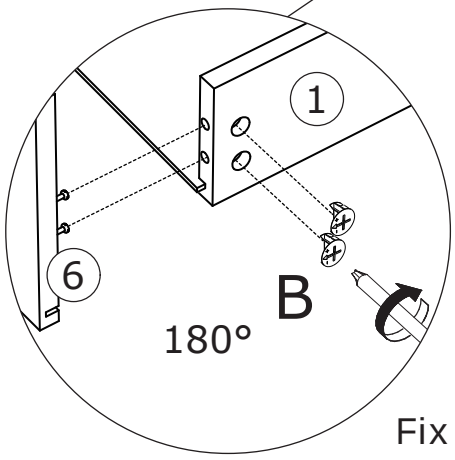

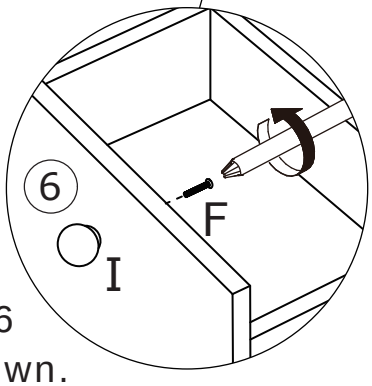


Fix knob(I) to plate 6
with screw(F) as shown.

x2


FUFU&GAGA

13


B x 8	F x 1	I x 1	
∅12 x 9.5 mm	∅4 x 18 mm	∅25 mm	

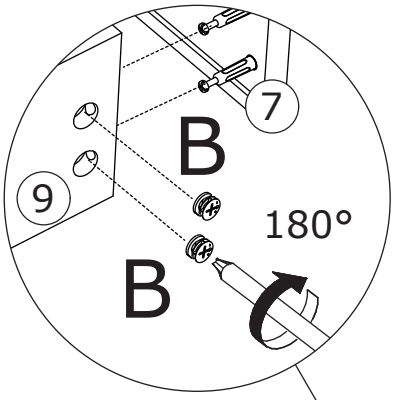



Attach plate 9 to plate 7, turn cam lock(B) in plate 9 clockwise to tighten as shown.

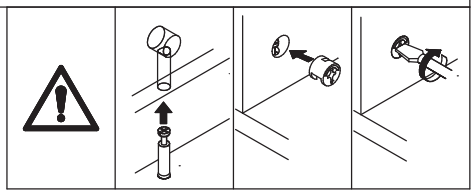


Slide SMALL drawer bottom plate 28 along the grooves.

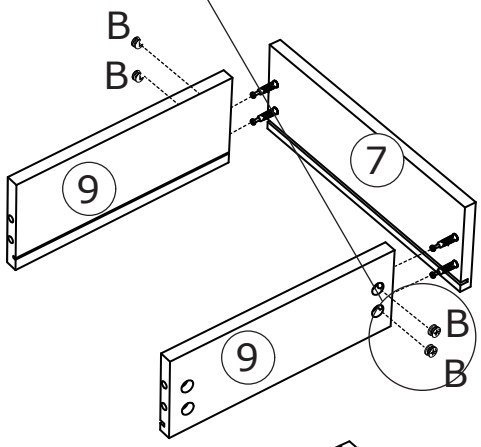


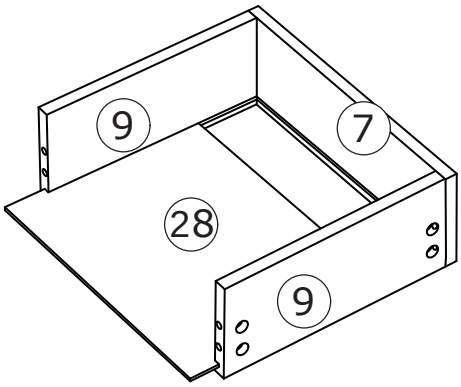


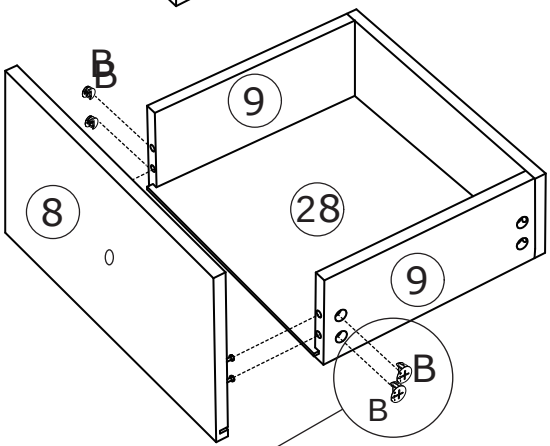

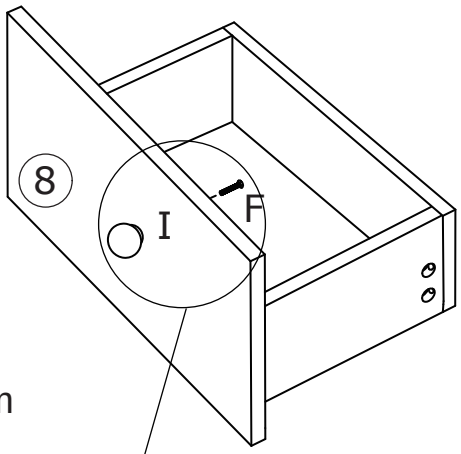

Attach drawer face plate 8, and turn cam lock(B) clockwise to tighten as shown.

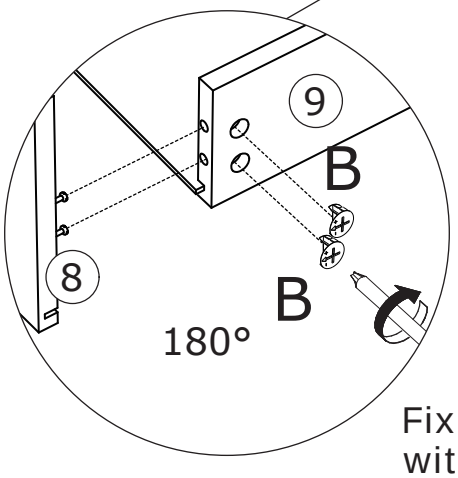


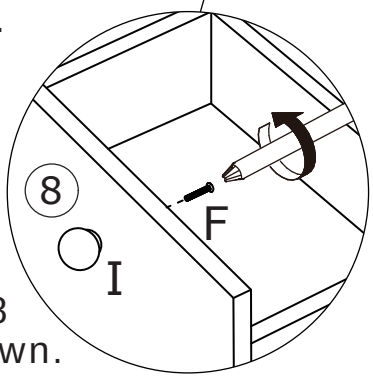

Fix knob(I) to plate 8 with screw(F) as shown.

14

Place drawers to correct positions.

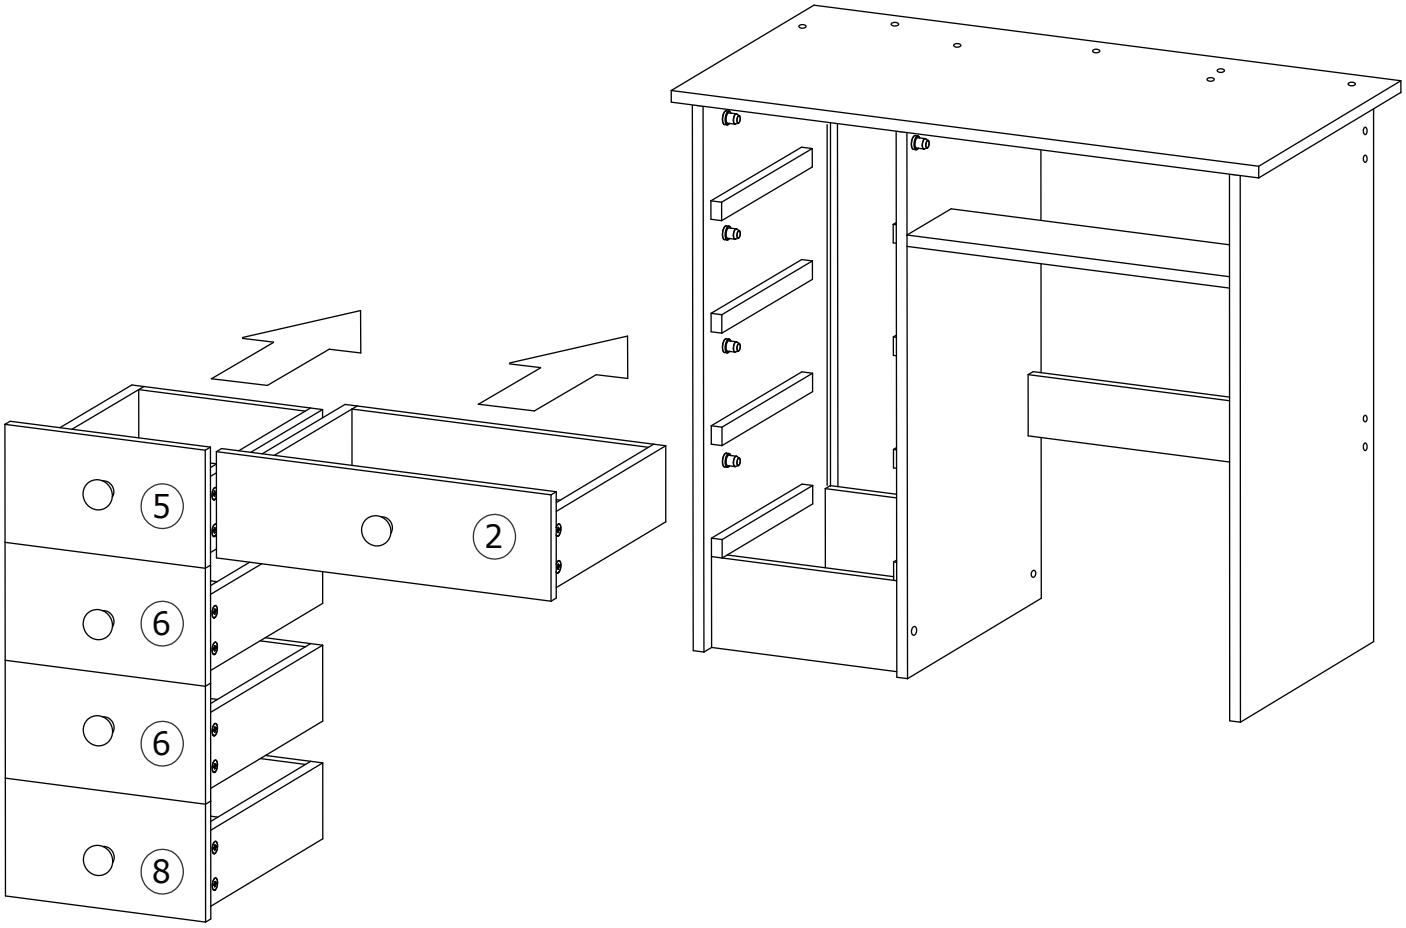


15


A x 3




M6 x 35 mm



Insert quickfit screw(A) into corresponding holes in plate 17 and 18 as shown.

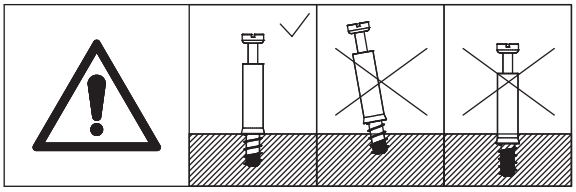

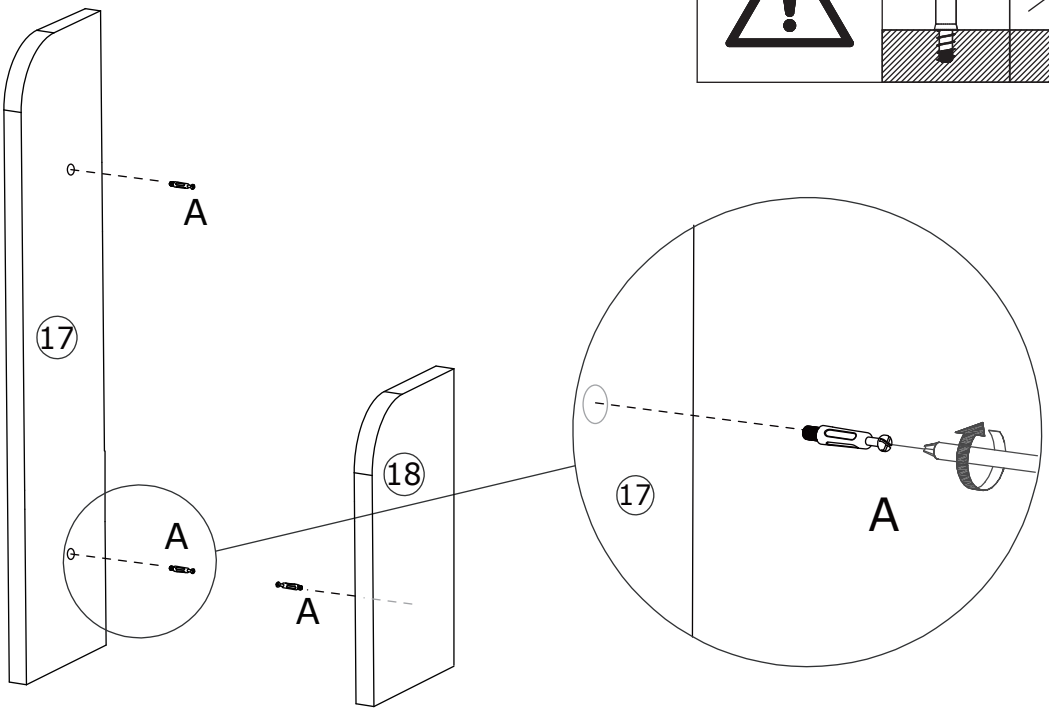


16

B x 3





∅12 x 9.5 mm

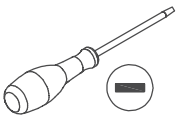

Connect plate 17 and 18 with plate 20, turn cam lock(B) in plate 20 clockwise to tighten as shown.

Attach plate 19 to plate 17, turn cam lock(B) in plate 19 clockwise to tighten as shown.

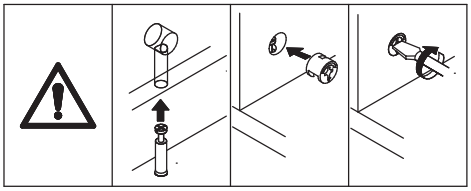

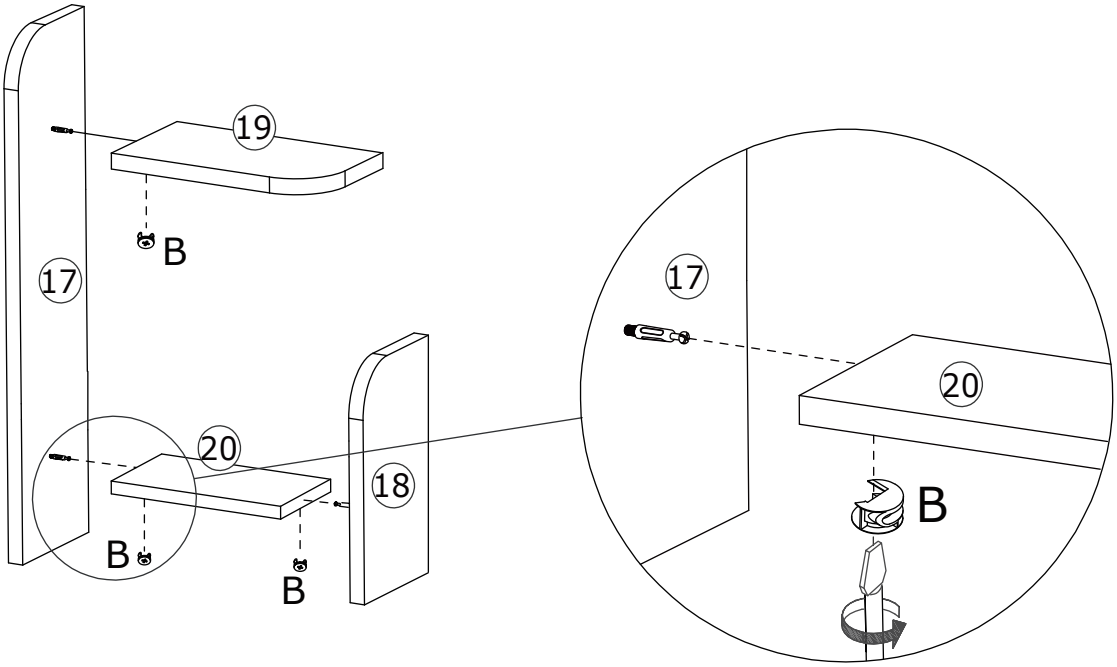


17


D x 2




∅9 x 9 mm



Place part(D) into corresponding holes in plate 19 and 20 as shown.

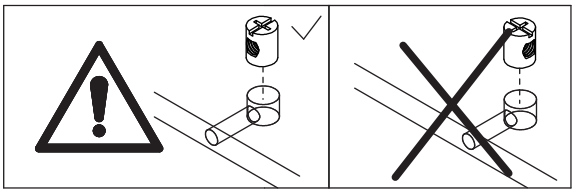

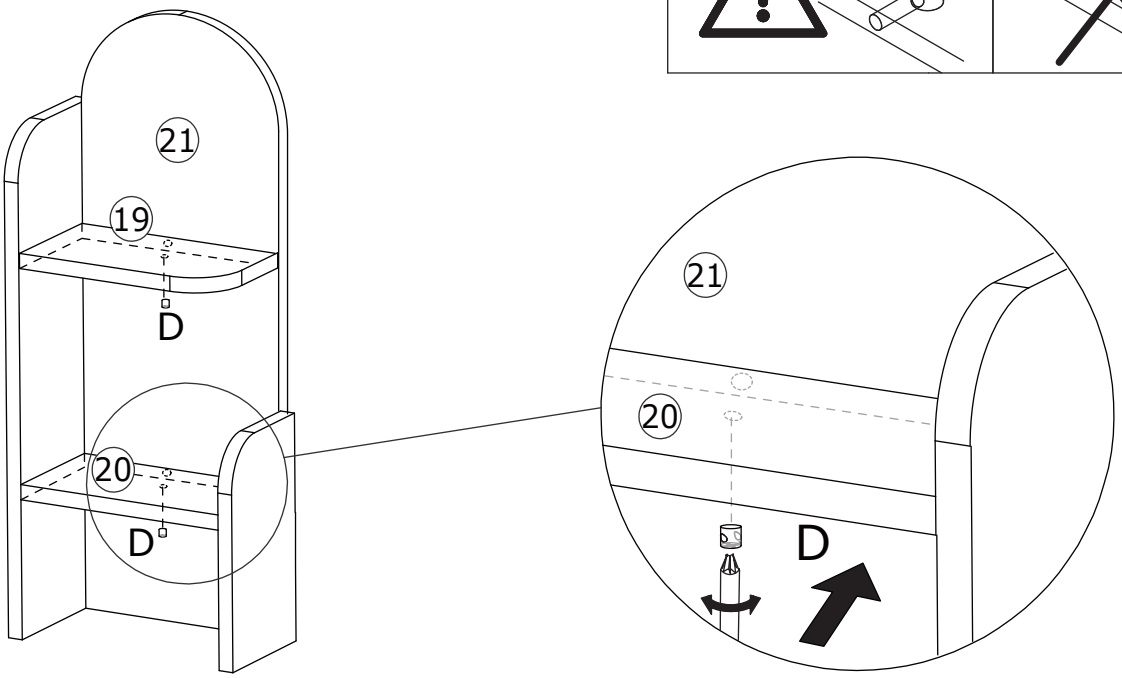


18


C x 2




M5 x 45 mm



Attach plate 21 to plate 19 and 20, and fix using screw(C) as shown.



Attention:
When placing C, make sure that the round hole is aligned with the direction of D.

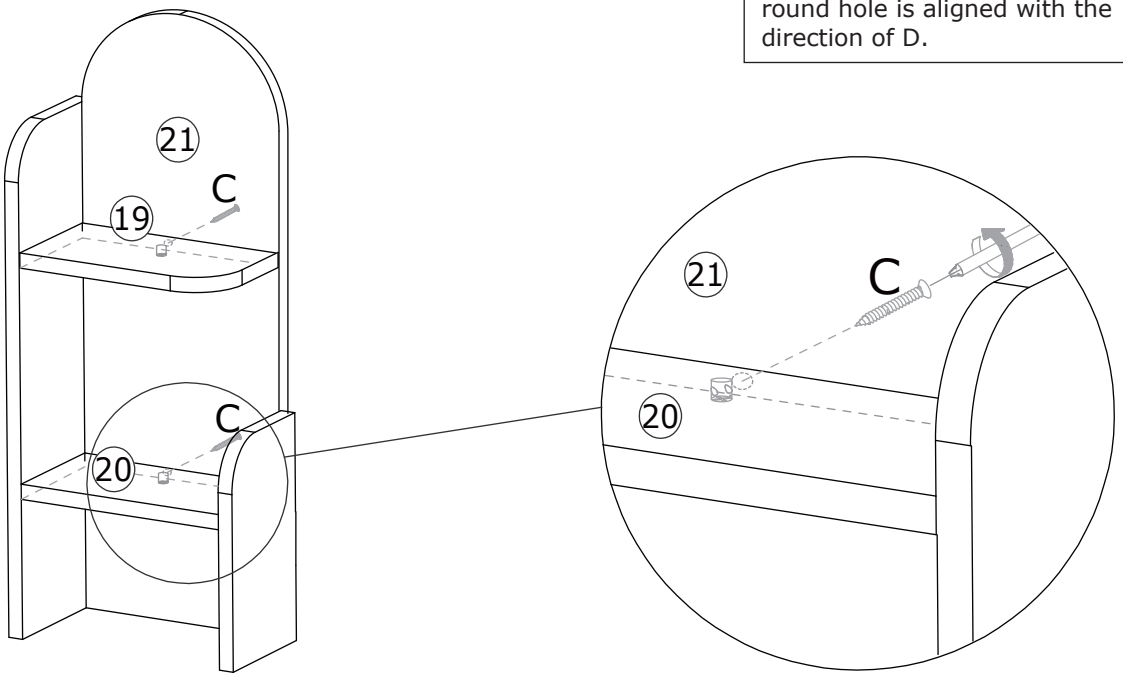


19


A x 7




M6 x 35 mm



Insert quickfit screw(A) into corresponding hole in plate 26 as shown.

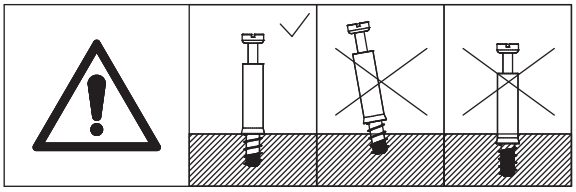

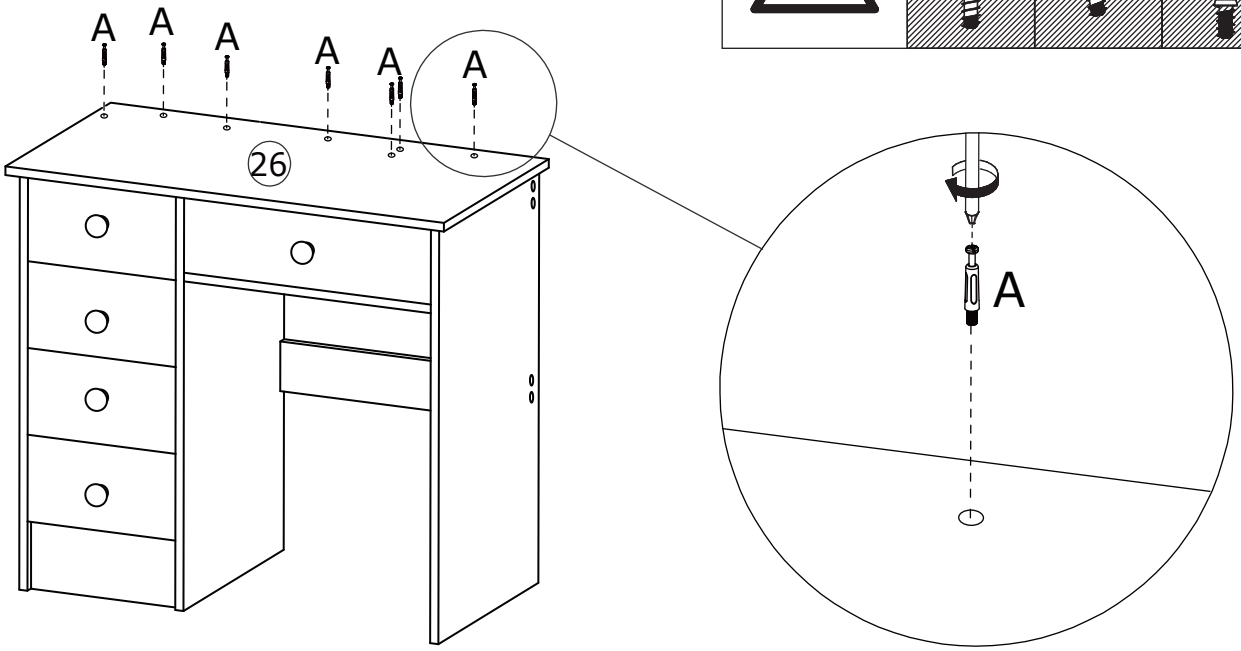



20

B x 3




∅12 x 9.5 mm



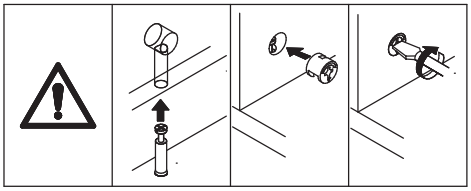

Attach the component (assembled in step 18) to plate 26, and turn cam lock(B) clockwise to tighten as shown.

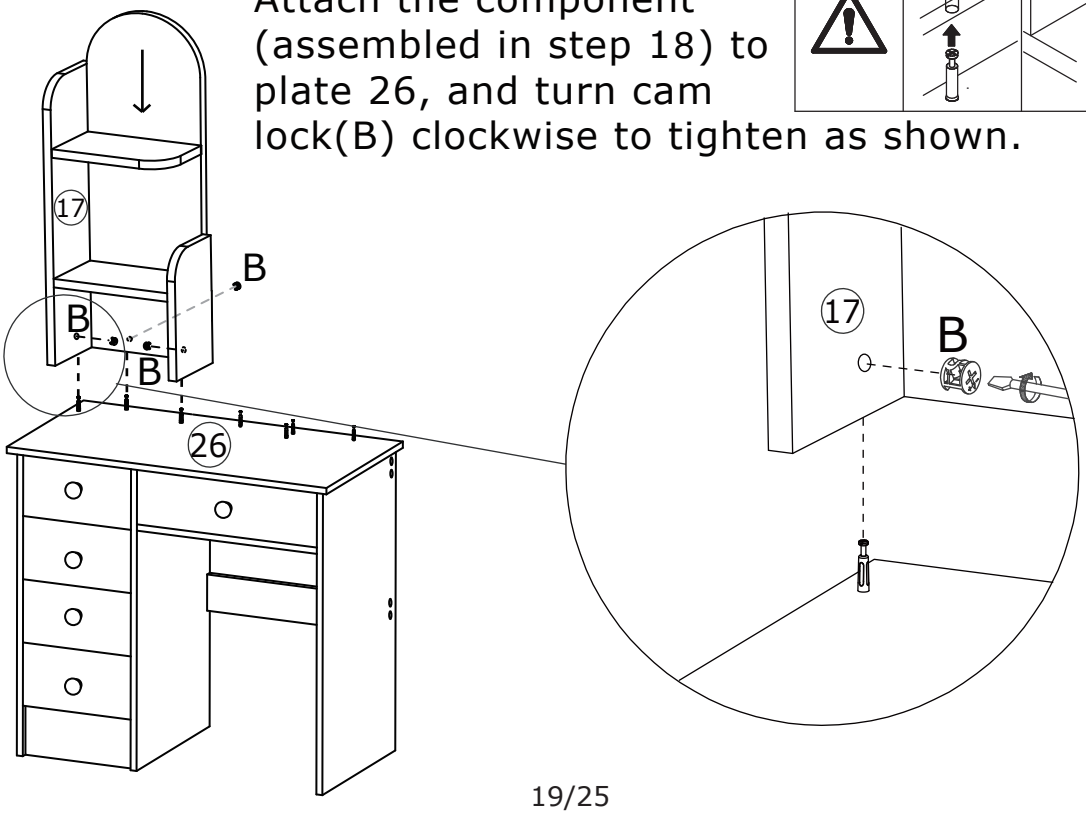


21


B x 2




∅12 x 9.5 mm



Attach plate 23 to plate 26, and turn cam lock(B) clockwise to tighten as shown.

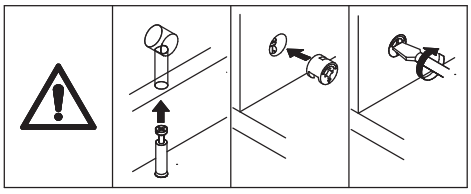

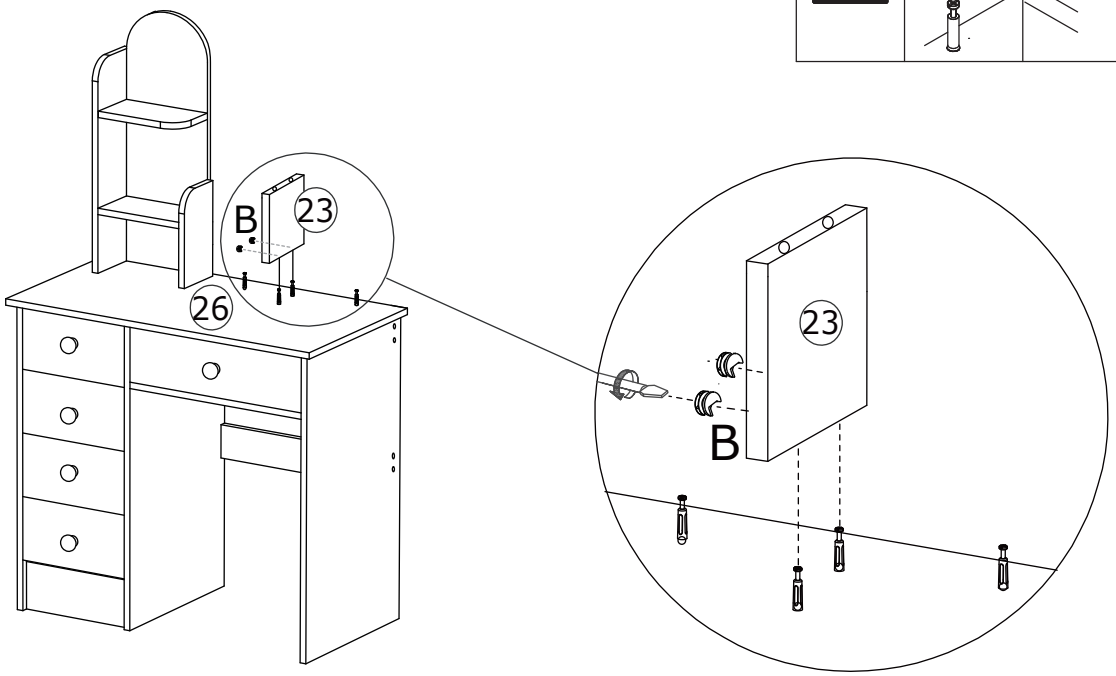


22


B x 2




∅12 x 9.5 mm


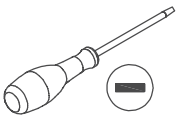


Attach the mirror to plate 26, and turn cam lock(B) clockwise to tighten as shown.

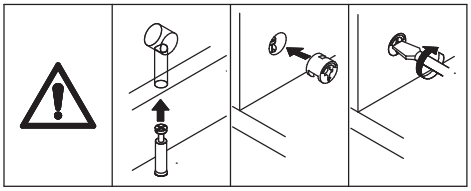


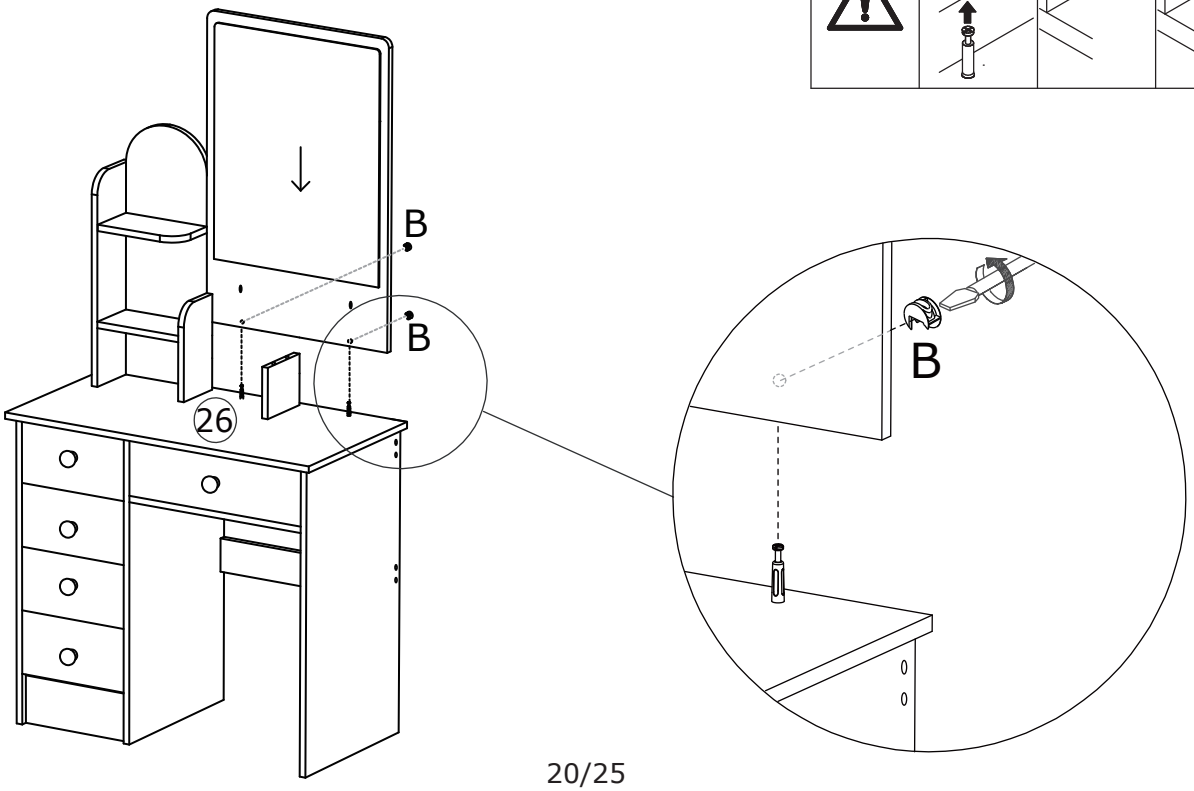


23

G x 4	J x 1	
 M3.5 x 12 mm		


Connect plate 21 with mirror together
using iron sheet(J) and screw(G) as shown.

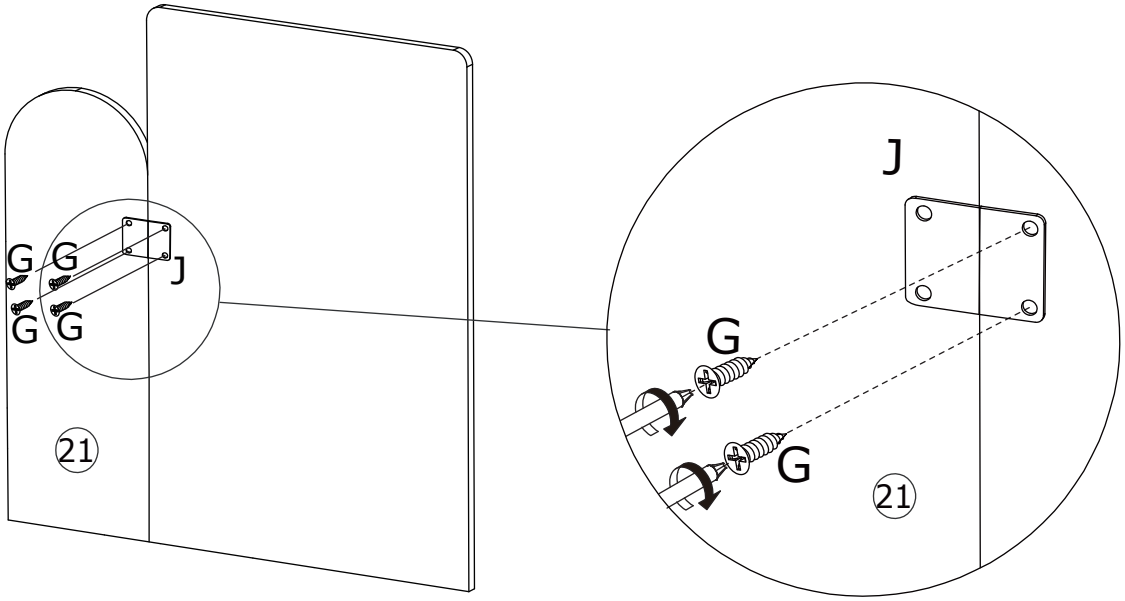


24

A x 2	
 M6 x 35 mm	

Insert quickfit screw(A) into plate 22.

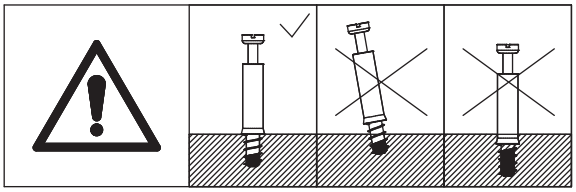

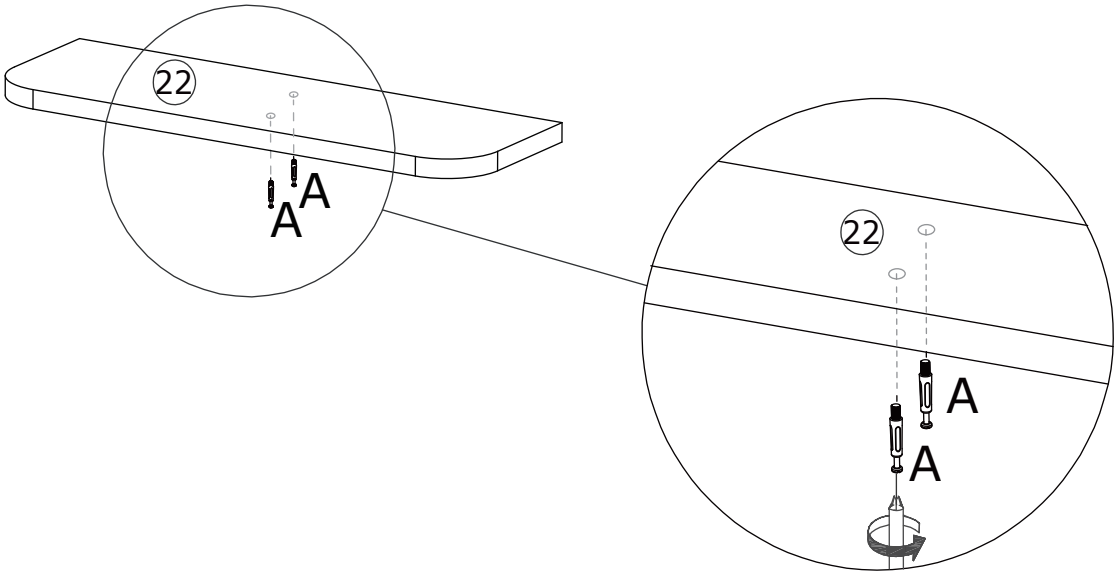


25


B x 2




∅12 x 9.5 mm



Attach plate 22 to plate 23, and turn cam lock(B) in plate 23 clockwise to tighten as shown.

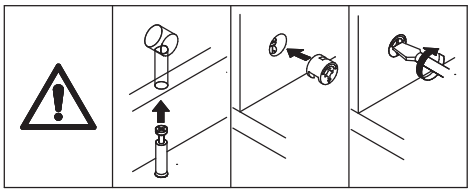

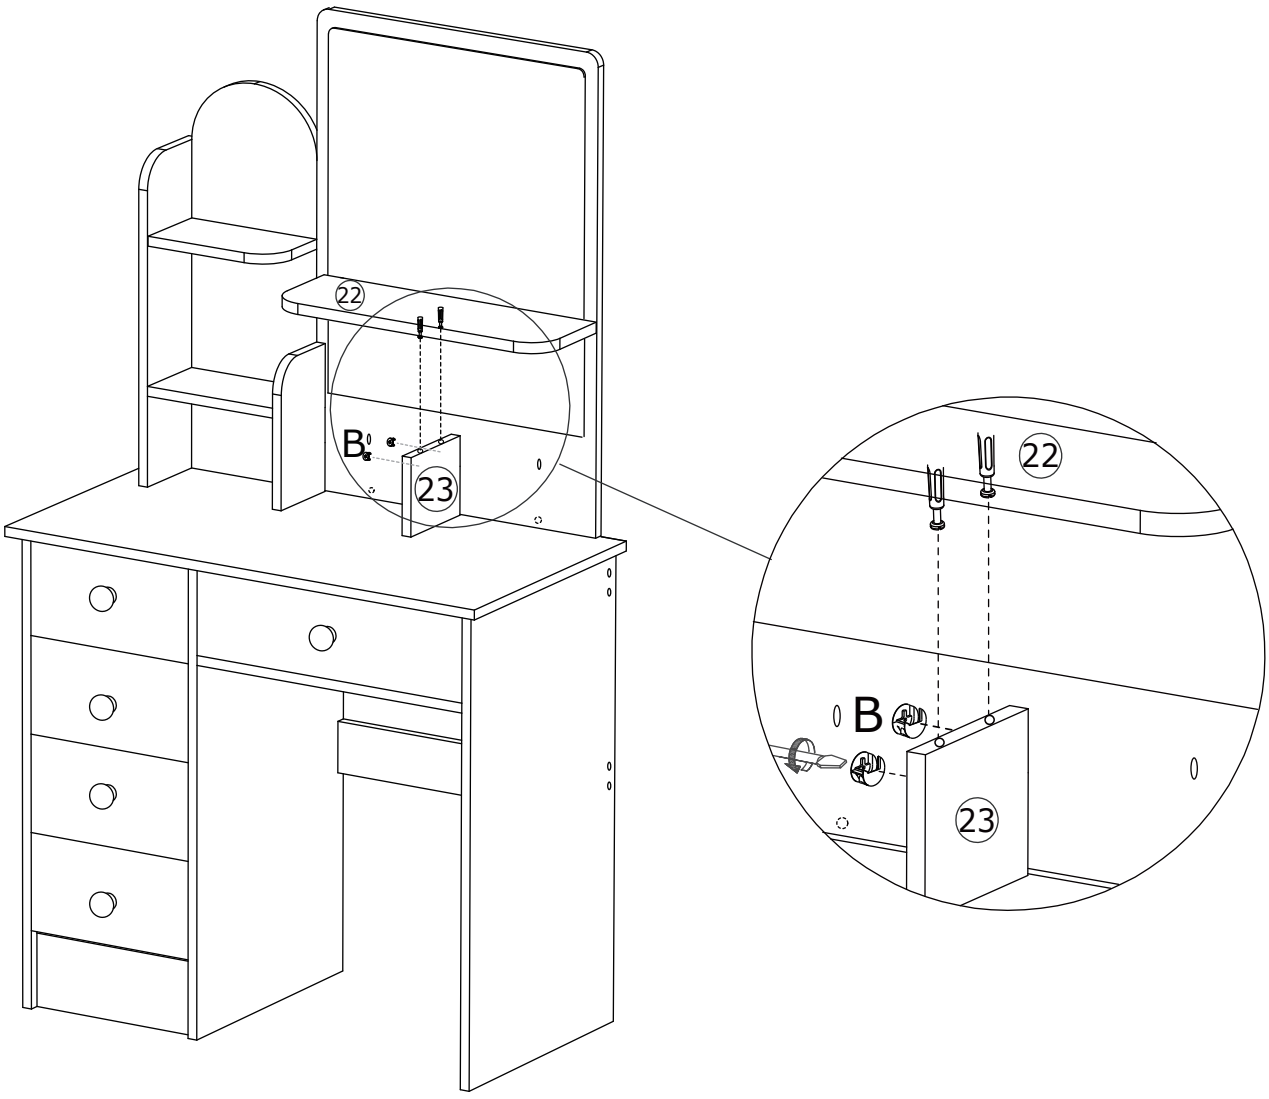


26


D x 2




∅9 x 9 mm



Place part(D) into plate 22 as shown.

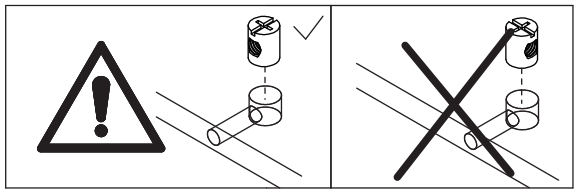

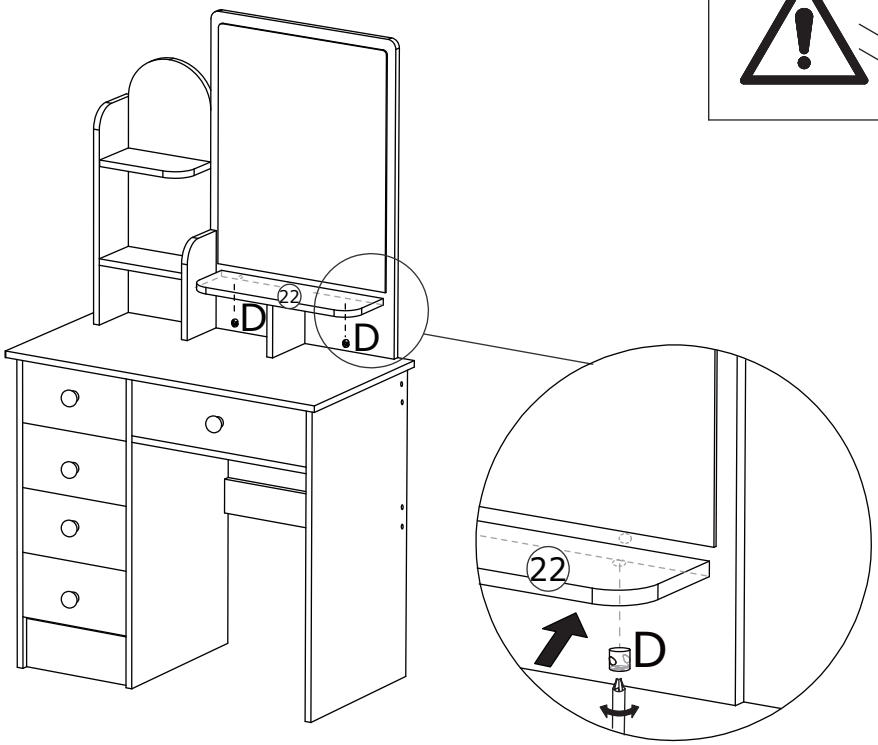


27


C x 2




M5 x 45 mm



Fix plate 22 to the mirror with screw(C) as shown.




Attention:
When placing C, make sure that the round hole is aligned with the direction of D.

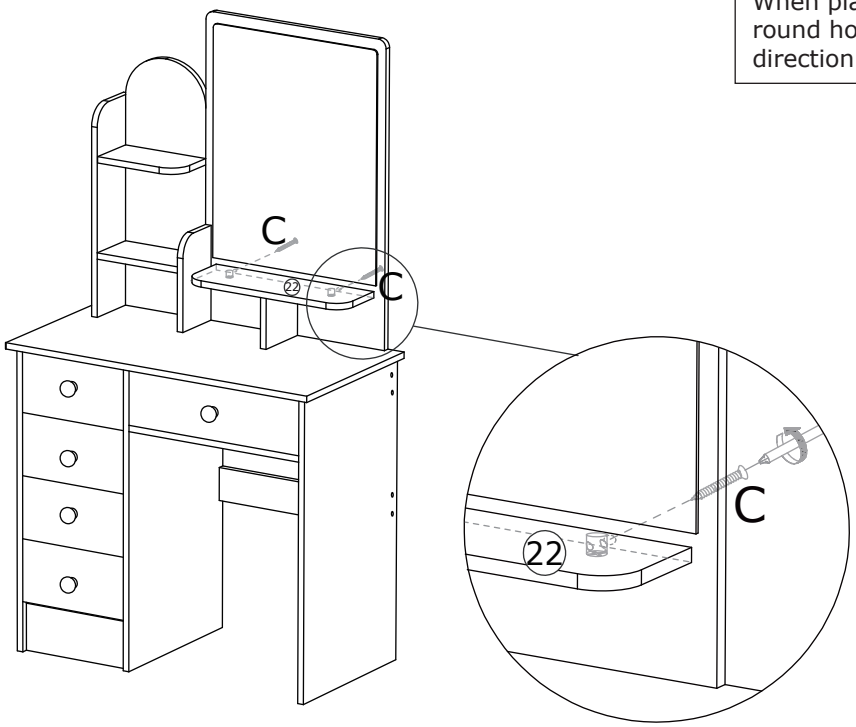


28


D x 8

∅9 x 9 mm



Place part(D) into plate 24 at first.

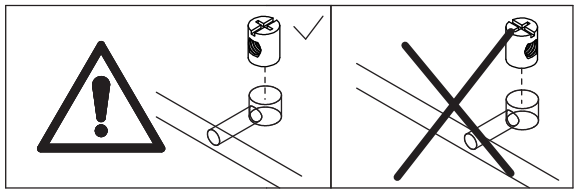

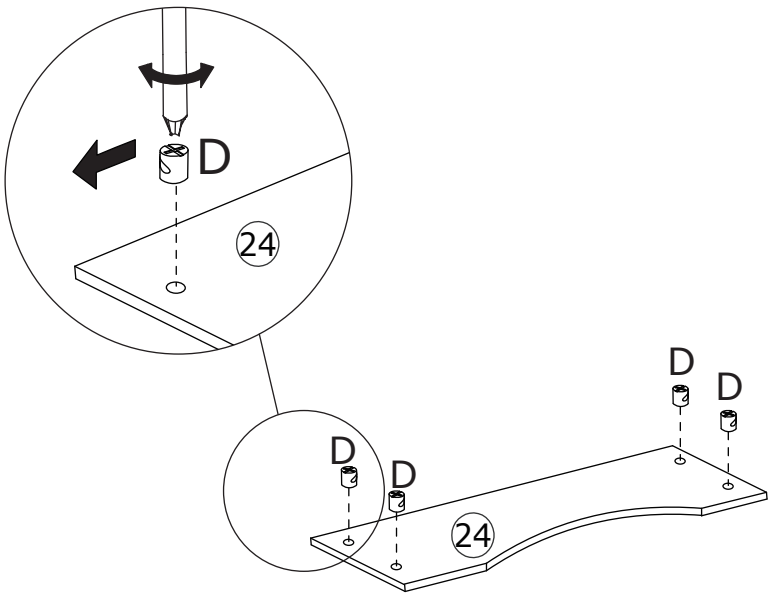


x2


29

C x 8


M5 x 45 mm



Connect plate 25 with plate 24 using screw(C) as shown.





Attention:
When placing C, make sure that the round hole is aligned with the direction of D.

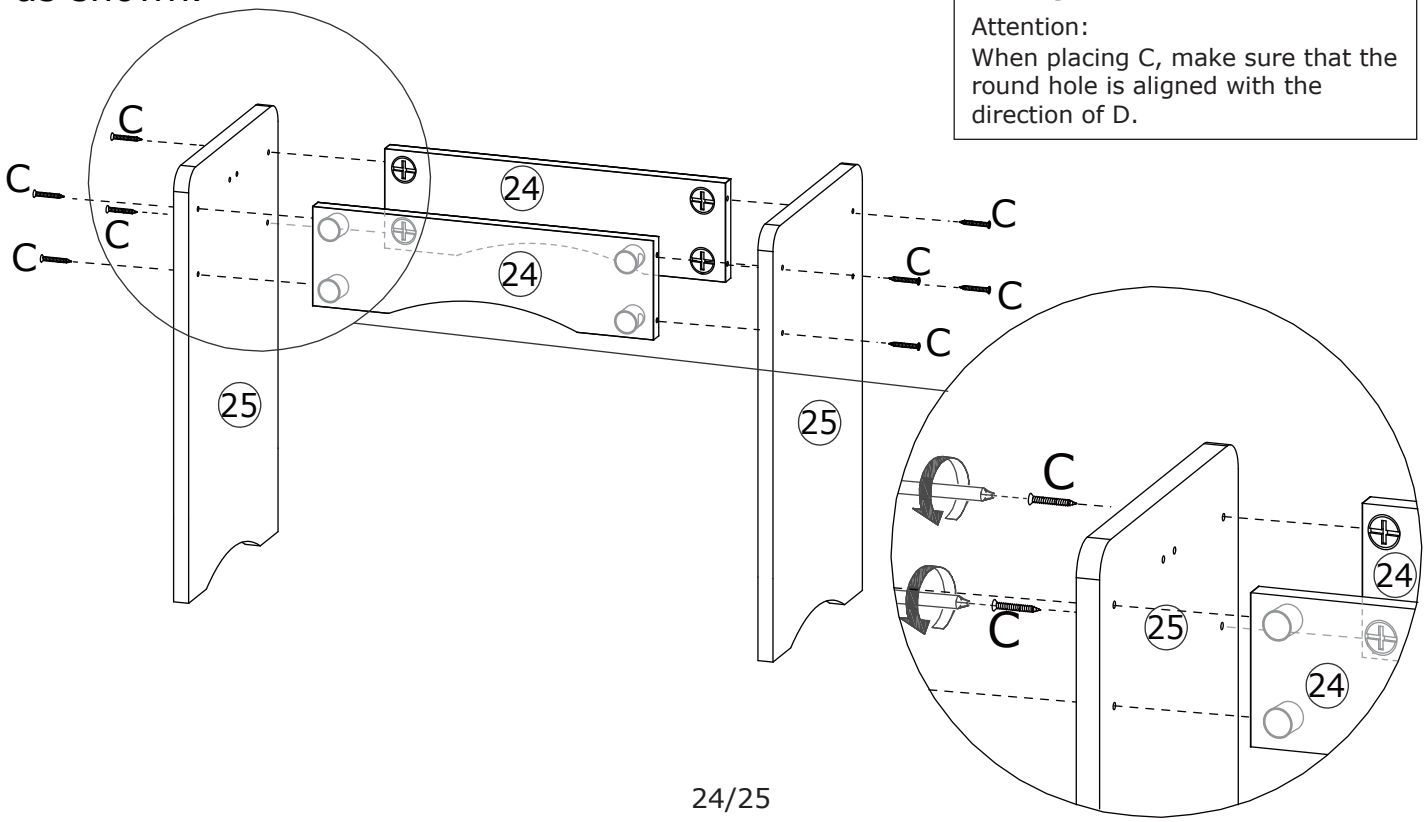


FUFU&GAGA


30

G x 4	H x 2	
 M3.5 x 12 mm		


Fix iron part(H) to the side of two plate 25 with screw(G) as shown.

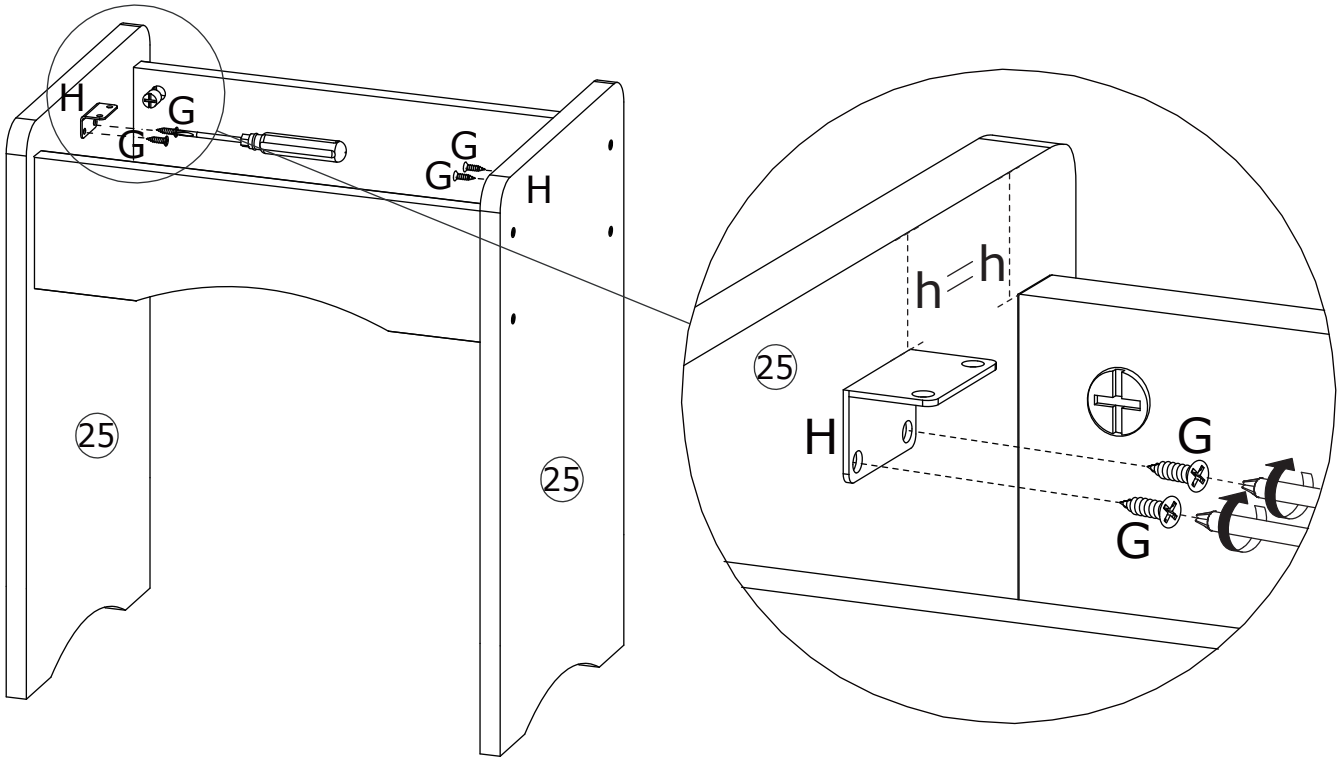

31

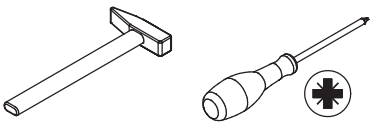G x 4	K x 4	
 M3.5 x 12 mm		

Knock foot peg(K) into the bottom of plate 25.
Attach seat plate and fix with iron sheet using screw(G) as shown.

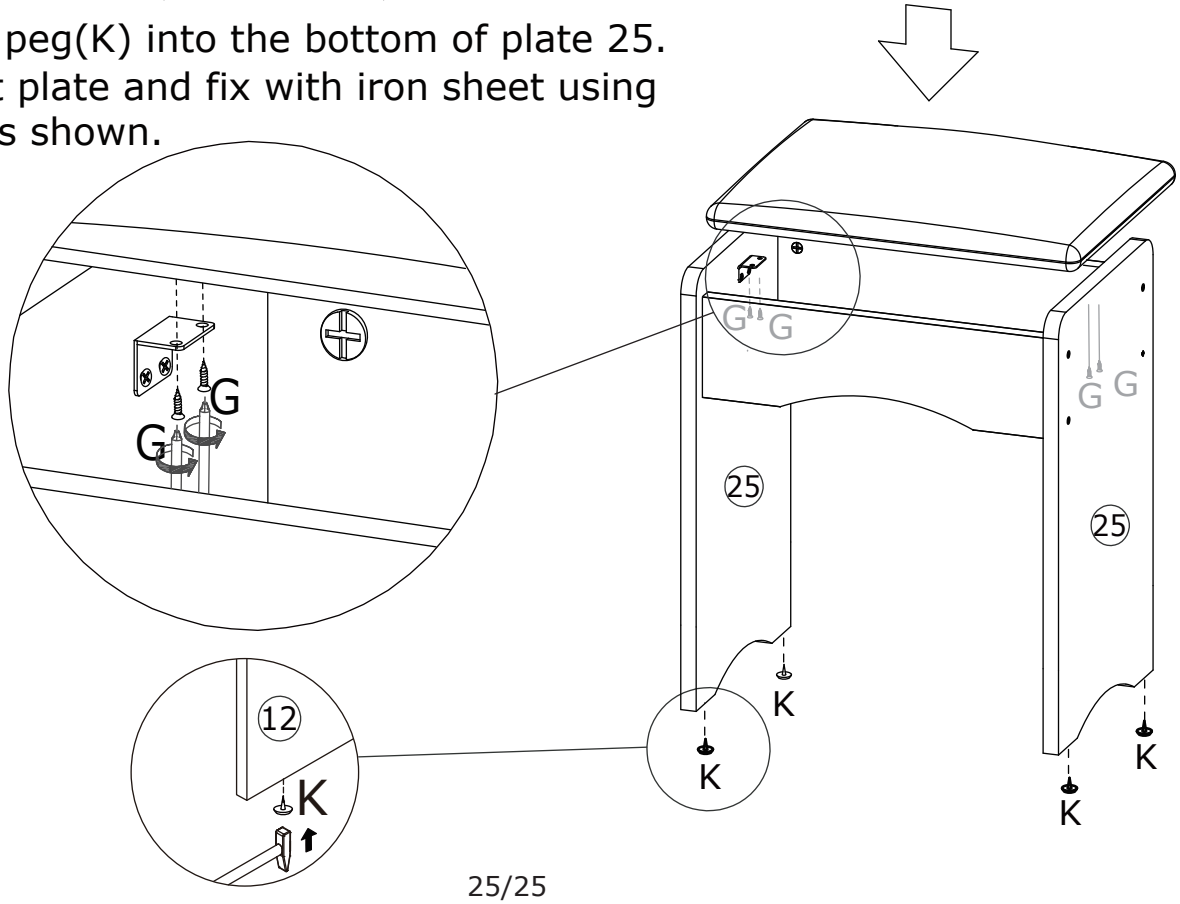

FUFU&GAGA

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.

- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.

- The product must be used in accordance with the instructions provided. For health reasons.

- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.

- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.

- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.

- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOU ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
  In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.