ELECTRIC RANGE
(Fingerprint Resistant)

MODELS:

WFES5030RB0 (Black)
WFES5030RW0 (White)

09/25/2024
© 2024 Whirlpool Corporation
Part No. W11743070 Rev. B

COOKTOP PARTS

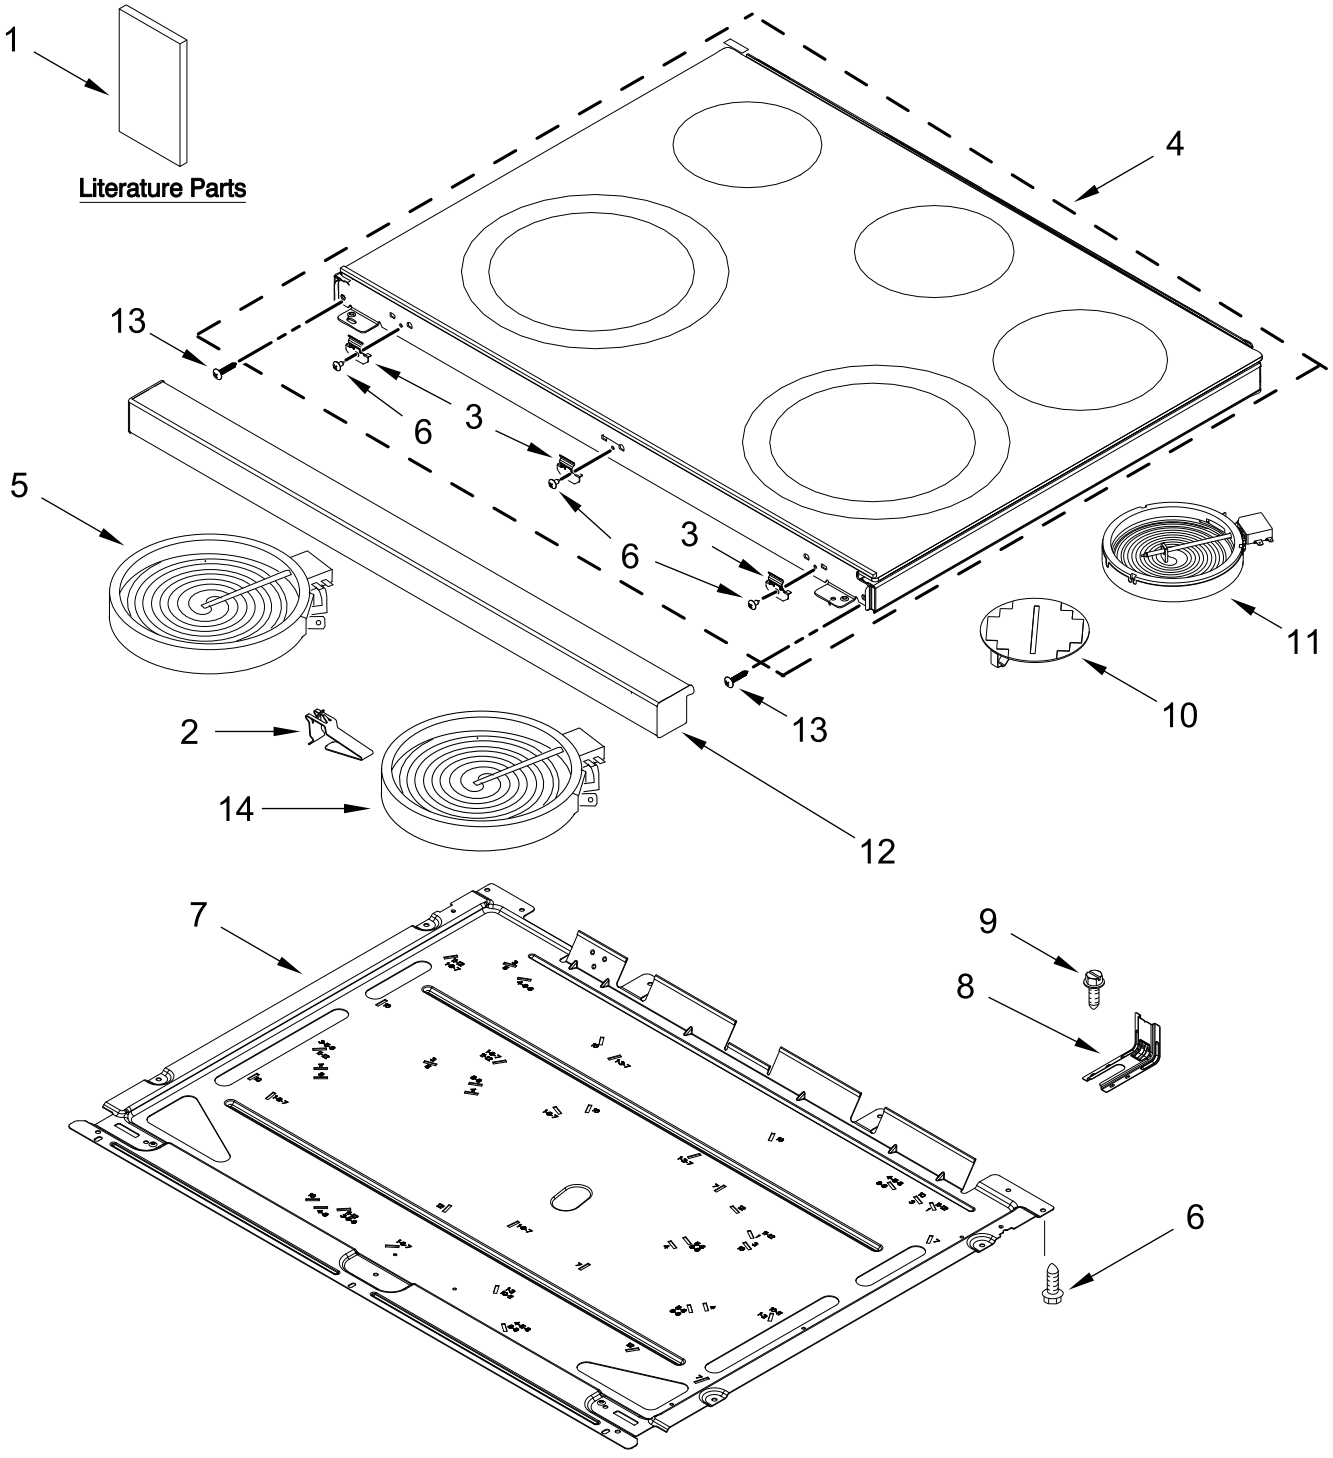

COOKTOP PARTS

Illus. No.	Part No.	Description
1		Literature Parts
	W11640146	Owner's Manual
	W11638798	Quick Start Guide
	W11639163	Tech Sheet
2	W11600012	Spring, Element
3	W11593284	Bracket, Cooktop
4		Cooktop
	W11629534	Black (includes, Cooktop Bracket)
5	W11282542	Element (3000W Dual) (Left Front)
6	3196169	Screw
7	W11640572	Pan, Radiant Element
8	W11379945	Bracket, Anti-Tip
9	7101P485-60	Screw, Anti-Tip Kit
10	W11668631	Element, Warm Zone (Center)
11	8273994	Element (1200W) (Left Rear and Right Rear)
12		Bullnose
	W11353384	Black
	W11353380	White
13	3400080	Screw
14	W10711900	Element (3000W) (Right Front)
		FOLLOWING PARTS NOT ILLUSTRATED
	W11696452	Harness, Main
	W11706379	Harness, Cooktop
	W11172528	Harness, Hidden Bake
	3196520	Clip, Wire
	3196896	Clip, Wire

CONTROL PANEL PARTS

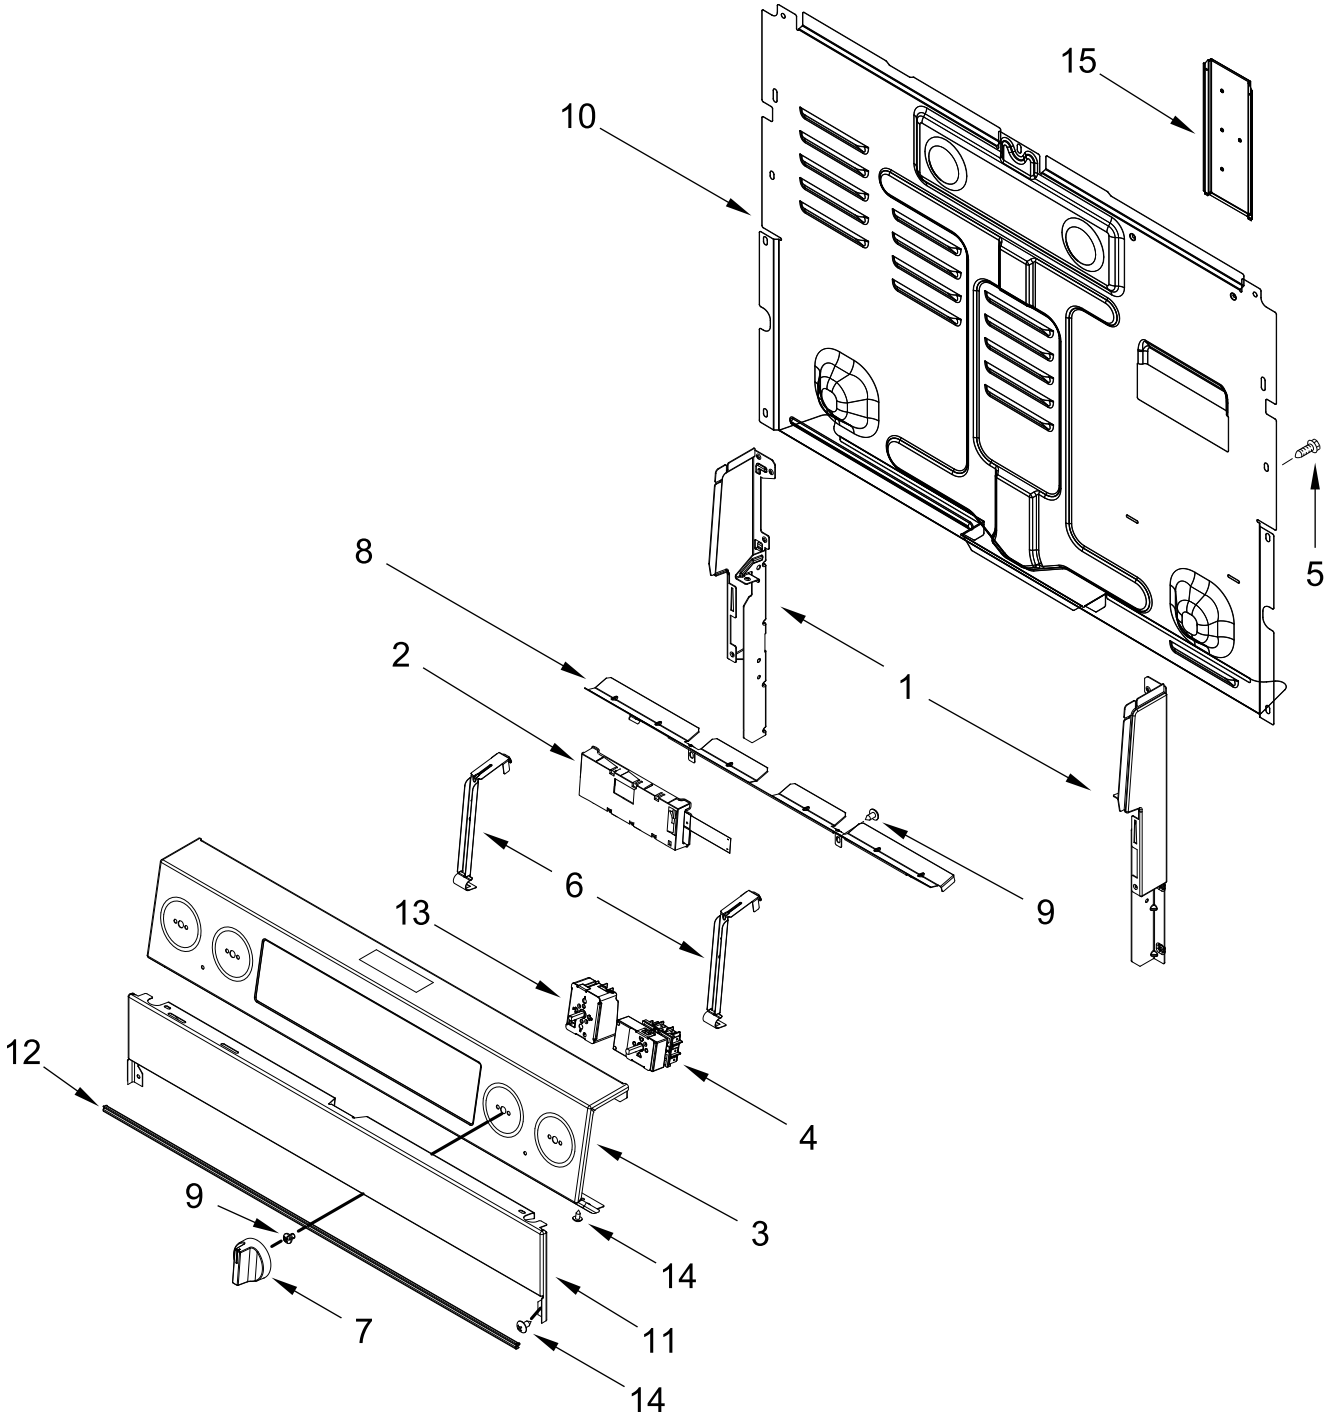

CONTROL PANEL PARTS

Illus. No.	Part No.	Description
1		Endcap
	W11327041	Black (Left)
	W11327043	Black (Right)
	W11327042	White (Left)
	W11327044	White(Right)
2		Control, Electronic (LCX)
	W11652497	Black
3		Panel, Console
	W11299259	Black
	W11299260	White
4	W10437092	Switch, Infinite (Left Front and Right Front)
5	3196178	Screw
6	W11290750	Bracket, Control
7		Knob
	W11621687	Black
	W11621686	White
8	W11363806	Shield, Heat
9	3400882	Screw
10	W11393668	Cover, Upper Rear
11		Panel, Lower
	W11625413	Black
	W11625412	White
12	W11643797	Gasket, Lower Panel
13	W10578768	Switch, Infinite (Left Rear, Right Rear)
14	3196169	Screw
15	W11394231	Cover, Rear Flue

CHASSIS PARTS

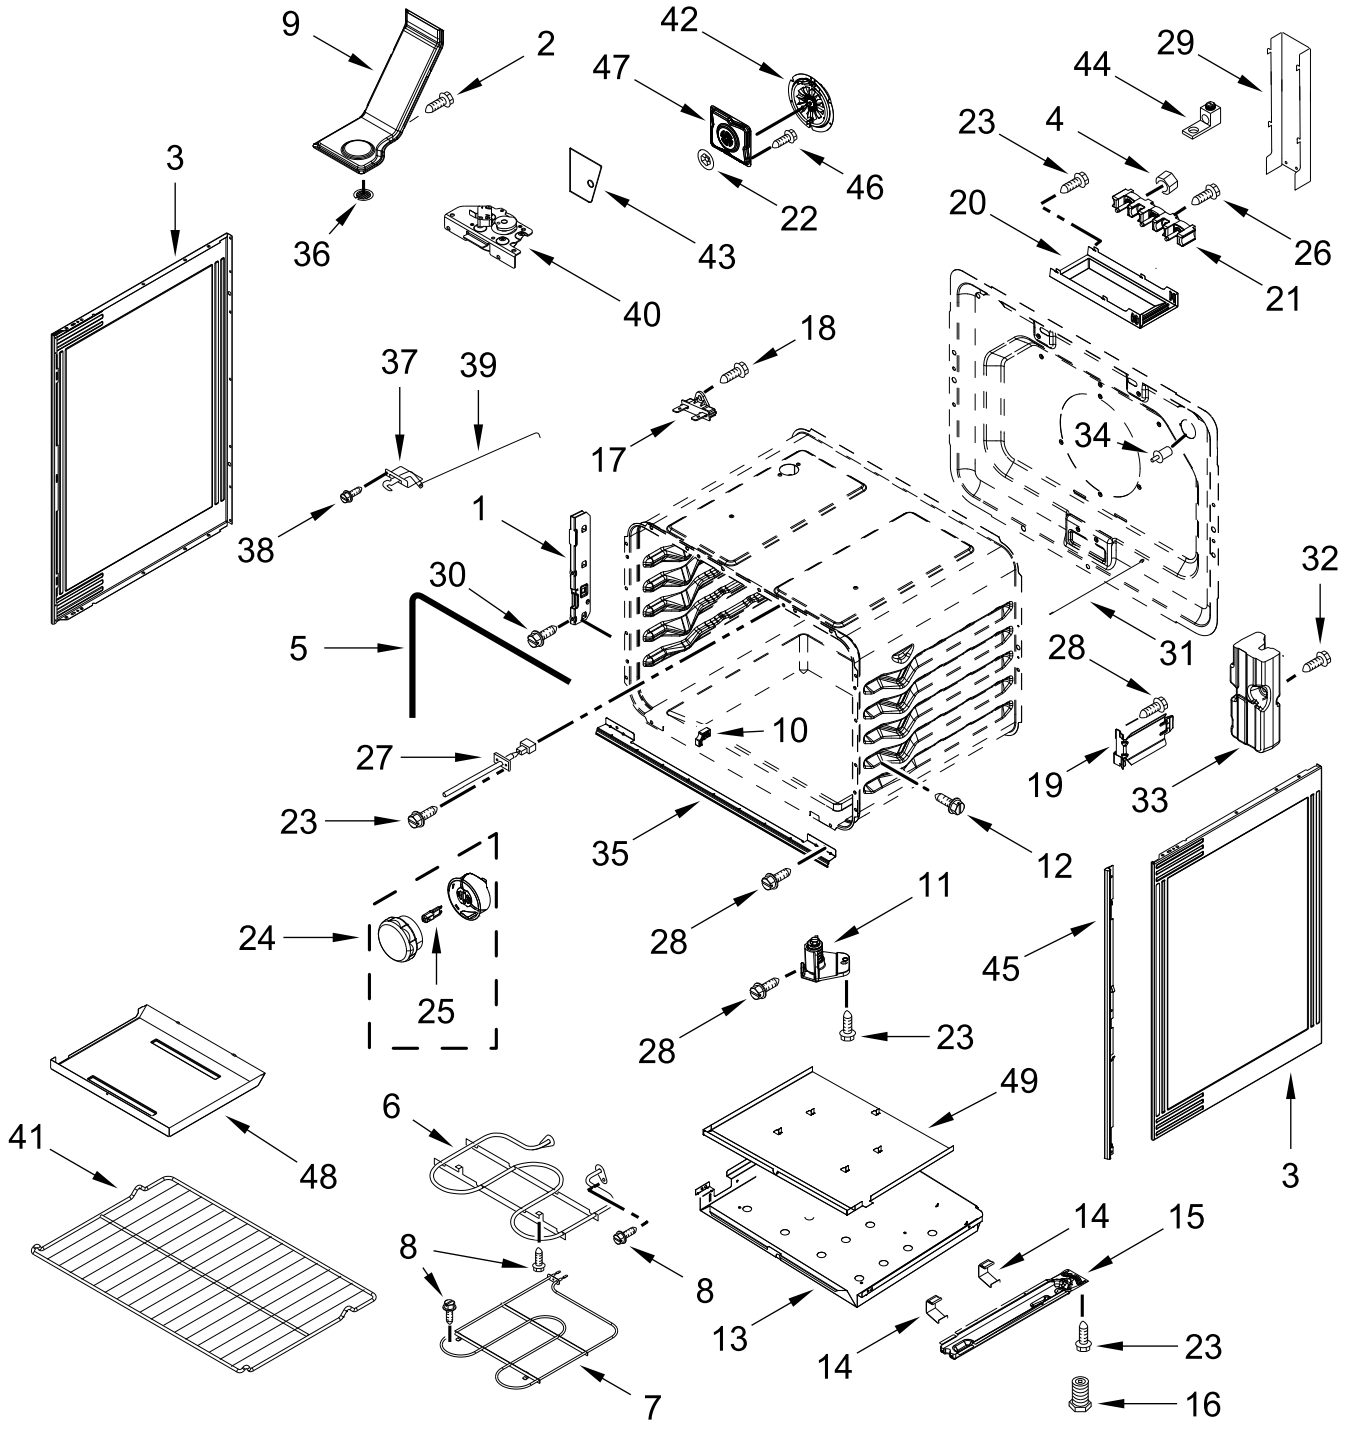

CHASSIS PARTS

Illus. No.	Part No.	Description
1	W10289077	Receiver, Hinge
2	W10362924	Screw
3		Panel, Side
	W11445467	Black
	W11445761	White
4	3400029	Nut
5	W11491751	Seal, Door
6	W10308476	Element, Broil
7	9755770	Element, Bake
8	3196174	Screw
9	W11621245	Tube, Vent
10	W10674705	Glide, Drawer Front
11	W10341186	Front Foot Assembly
12	W10067840	Screw
13	W10134121	Tray, Insulation
14	W10137382	Clip, Panel
15	W10390008	Base Rail Assembly (Left)
	W10390007	Base Rail Assembly (Right)
16	W10058460	Foot, Leveling
17	3196548	Fuse, Thermal
18	3196172	Screw
19	W10404688	Clip, Oven Support
20	W11673744	Bracket, Service
21	W11750818	Block, Terminal (without Ground Strap)
22	3400968	Nut
23	3196178	Screw
24	W11634772	Light Assembly
25	W10571723	Bulb, Halogen 40 Watts
26	3400016	Screw
27	W10586204	Sensor
28	3196169	Screw
29	W10326122	Cover, Terminal Block
30	W10031780	Screw
31	9757239	Rod, Door Switch
32	W11034869	Screw
33	W10910404	Counterweight
34	W11511828	Switch, Door
35	W11464547	Bracket, Front Frame
36	W11092984	Screen, Vent
37	9761013	Front Door Latch Assembly
38	3196560	Screw
39	W10078380	Rod, Latch
40	W10107820	Rear Door Latch Assembly
41	W11173792	Rack, Oven
42	W11353930	Fan, Convection
43	W10646923	Card, Insulator
44	W10281322	Kit, Bare Wire Adapter Block
45	W11510560	Barrier Rail, Rubber (Left and Right)
46	W10516115	Screw
47	W11373155	Cover, Conv Fan
48	W10183712	Tray, Hidden Bake
49	W10134125	Shield, Heat
		FOLLOWING PARTS NOT ILLUSTRATED
	W10774939	Insulation, Wrap
	W11407378	Insulation, Back
	W11404469	Insulation, Flue

DOOR PARTS

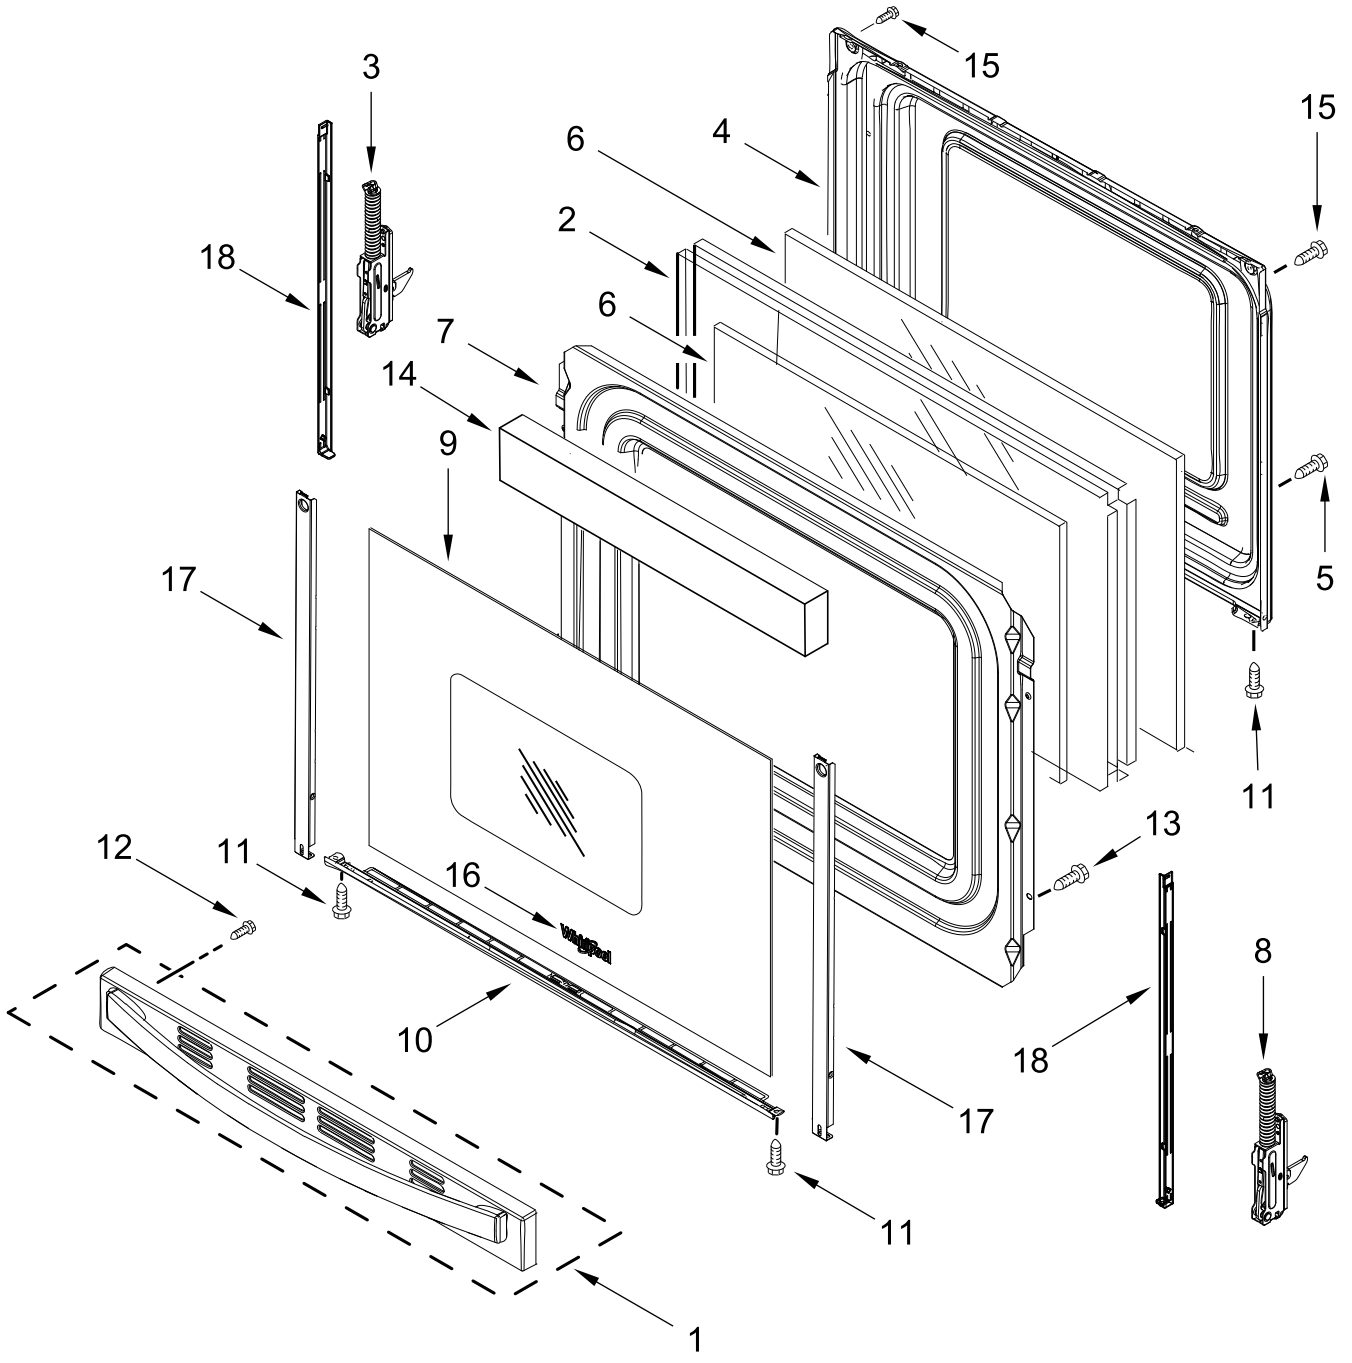

DOOR PARTS

Illus. No.	Part No.	Description
1		Handle and Vent Assembly
	W11353052	Black
	W11353053	White
2	W10316950	Frame, Glass
3	W10388635	Hinge, Door (Active)
4	9761344	Liner, Door
5	W10031790	Screw
6	9758162	Glass, Inner
7	W11380222	Retainer, Insulation
8	W10440013	Hinge, Door (Active)
9		Glass Assembly, Outer Door
	W11729636	Black
	W11729637	White
10		Trim, Lower
	W11444043	Black
	W11444042	White
11	W10327235	Screw
12	W10465158	Screw
13	W10031780	Screw
14	W10278991	Insulation, Door Strip
15	W10200660	Screw
16	W10884775	Badge
17	W11379944	Strap, Door
18		Trim, Side
	W10746436	Black (Left)
	W10746435	Black (Right)
	8523172	White (Left)
	8523166	White (Right)

DRAWER PARTS

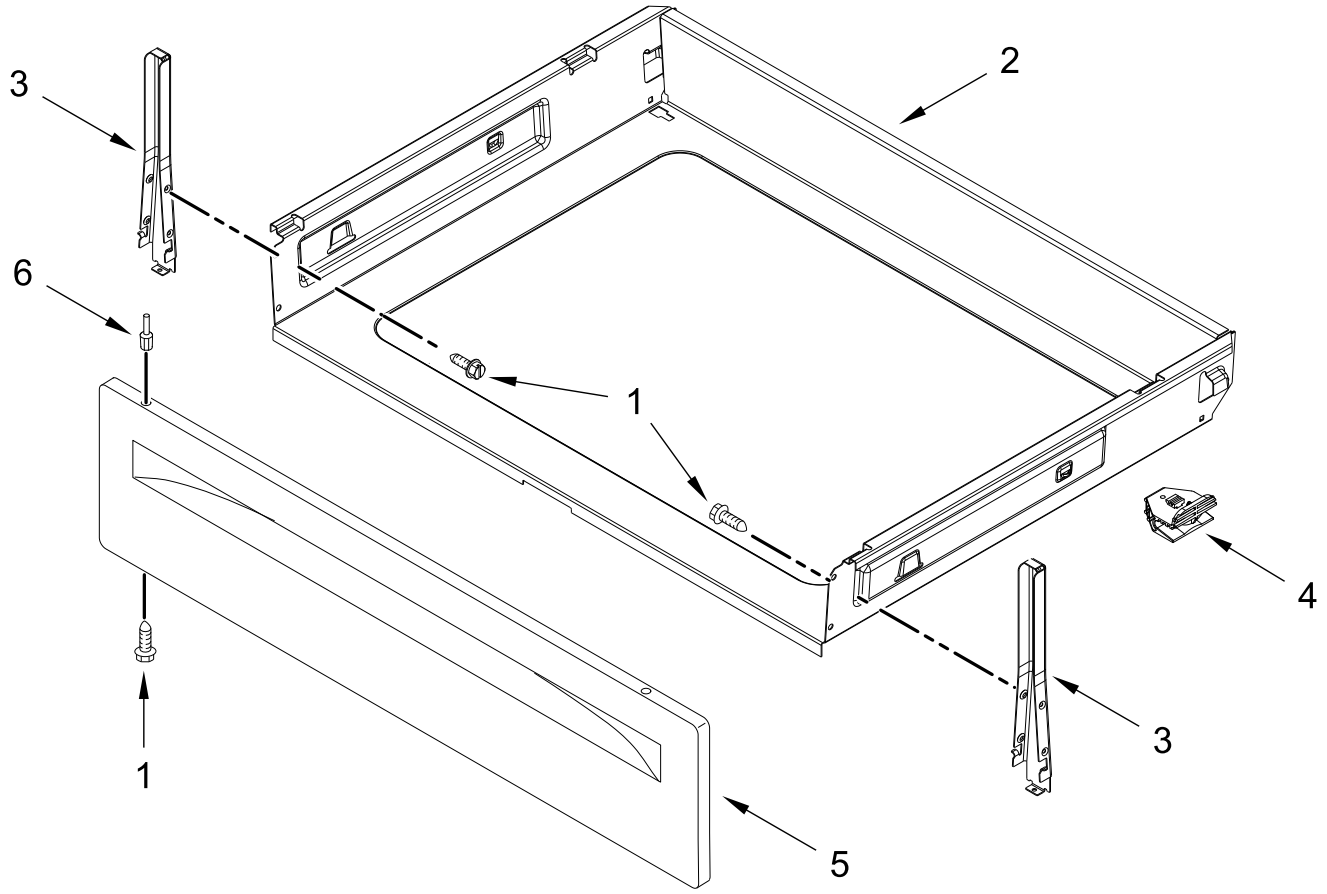

DRAWER PARTS

Illus. No.	Part No.	Description
1	3196169	Screw
2	W10688022	Drawer, Storage
3	W10462912	Bracket, Mounting Drawer
4	W10674708	Glide, Drawer Rear
5		Panel, Drawer Front
	W11123900	Black
	W11123901	White
6		Rivet, Push
	3196813	Black
	3196814	White

OPTIONAL PARTS

REFINISHING MATERIAL

Illus. No.	Part No.	Description
	242756	Oven Liner Touch Up Paint

INSULATION

Illus. No.	Part No.	Description
	261514	Insulation (1-1/2 x 24 x 120 in)
	240132	Insulation (2-1/2 x 22 x 120 in)

PAINT, TOUCH-UP (1/2OZ.)

Illus. No.	Part No.	Description
	72017	White
	511873	White Porcelain (2 oz.)

PAINT, PRESSURIZED SPRAY (12 OZ.)

Illus. No.	Part No.	Description
	350930	White
	285006	Black
	206922	Primer (White)

PAINT, BULK (1 QT.)

Illus. No.	Part No.	Description
	799344	White (Uncut)

ACCESSORY PARTS

Illus. No.	Part No.	Description
	W10355051	Cleaner, Cooktop
	WA906B	Scraper, Cooktop
	W11601635	Griddle
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan and Roasting