Model number FMPPC2- Tested by CSA International

⚠ DANGER

If you smell gas:

1. **Shut off gas to the appliance.**
2. **Extinguish any open flame.**
3. **If odor continues, keep away from the appliance and immediately call your gas supplier or fire department.**

⚠ WARNING

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

An LP-cylinder not connected for use shall not be stored in the vicinity of this or any other appliance.

⚠ WARNING

For outdoor use only

⚠ DANGER	CARBON MONOXIDE HAZARD
	This appliance can produce carbon monoxide which has no odor. Using it in an enclosed space can kill you. Never use this appliance in an enclosed space such as a camper, tent, car or home.

⚠ WARNING
Improper installation, adjustment, alteration, service or maintenance can cause injury or property damage. Read the installation, operating and maintenance instructions thoroughly before installing or servicing this equipment.

WARNING: If the information in this manual is not followed exactly, a fire or explosion may result causing property damage, personal injury or loss of life. Installation and service must be performed by a qualified installer, service agency or the gas supplier.

LP safety: (a) Do not store a spare LP-gas cylinder under or near this appliance. (b) Never fill the cylinder beyond 80 percent full. (c) If the information in "(a)" and "(b)" is not followed exactly, a fire causing death or serious injury may occur.
Do not use this appliance under overhead combustible surfaces.
Minimum Clearances:
Bottom: Non-Combustible Surface
Top: 80 inches
Sides: 36 inches
For Installation on (or over) Noncombustible Floors Only
Max. Input: 58,000 BTU (17.0kW) Max gas supply pressure: 250 PSI
This appliance shall be used only outdoors in a well-ventilated space and shall not be used in a building, garage or any other enclosed area. If this appliance is not in use, the gas must be turned off at the supply cylinder .Indoor storage of this appliance is permissible only if the cylinder is disconnected and removed from the appliance. Cylinders must be stored outdoors in a well ventilated area out of the reach of children. Disconnected cylinders must have threaded valve plugs tightly installed and must not be stored in a building, garage or any other enclosed area. The gas pressure regulator provided with this appliance must be used, and must be the same model as supplied with the unit. The cylinder supply system must be arranged for vapor withdrawal. Cylinders used with this unit must have a collar to protect the cylinder valve.
The use of an LP-cylinder stabilizer is recommended when the appliance is in use.to avoid tipping over the cylinder.
Replacement parts and a list of such parts are available from FMI Brands Inc. through the contact information provided at the top of the page.
Please ensure that all adults and children which use or are near a unit in use are aware of the hazard of high-surface temperatures present on the unit during use and should use caution and stay away to avoid burns or clothing ignition. Carefully supervise young children in the area of this appliance. Clothing or other flammable materials should not be hung from the appliance or placed on or near the appliance. Any guard or other protective device removed for servicing the appliance must be replaced prior to operating the appliance. Installation and repair should be done by a qualified service person. The appliance should be inspected before use and at least annually by a qualified service person. More frequent cleaning may be required as necessary. It is imperative that control compartment, burners and circulating air passageways of the appliance be kept clean.
All LP cylinders to be used with this appliance must be:

-Constructed and marked in accordance with the specifications for LP-gas cylinders Standard, *CAN/CSA B339, Cylinders, Spheres and Tubes for the Transportation of Dangerous Goods.*

- Provided with a listed overfilling prevention device.
- Provided with a cylinder connection device compatible with the connection for outdoor cooking appliances.

-The LP gas cylinder used for this appliance must not have a capacity larger than 20 lb. (9 kg): Approximately 18" (46cm) high & 12" (30cm) diameter.

The use of an approved LP gas cylinder stabilizer is recommended when using this appliance in order to prevent the LP gas cylinder from tipping over.

Enclosures For Self-Contained LP Gas Supply Systems

An enclosure for an LP-gas cylinder shall be ventilated by openings at both the upper and lower levels of the enclosure. This shall be accompanied by one of the following:

a. One side of the enclosure shall be completely open; or
b. For an enclosure having four sides, a top, and a bottom:

1. At least two ventilation openings (see Part IV, Definitions) shall be provided in the sidewalls of the enclosure, located within 5 in (217 mm) of the top of the enclosure, equally sized, spaced a a minimum of 90 degrees (1.57 rad), and unobstructed. The opening(s) shall have a total free area of not less than 1 $in^2 \cdot lb$ (14.2 $cm^2 \cdot kg$) of stored fuel capacity.

2. Ventilation opening(s) shall be provided at floor level of the enclosure and shall have a total fre area of not less than $^1/_2$ $in^2 \cdot lb$ (7.1 $cm^2 \cdot kg$) of stored fuel capacity. If ventilation openings at floo level are in a side wall, there shall be at least two openings. The bottom of the openings shall b 1 in (25.4 mm) or less from the floor level and the upper edge no more than 5 in (127 mm) above the floor level. The openings shall be equally sized, spaced at a minimum of 90 degrees (1.57 rad), and unobstructed.

3. Every opening shall have minimum dimensions so as to permit the entrance of a $^1/_8$ in (3.2 mm diameter rod.

4. Ventilation openings in sidewalls shall not communicate directly with other enclosures of the appliance.

⚠-Warning-Ensure that the LP gas cylinder is kept at a minimum distance of three feet (36 inches) away from the appliance.

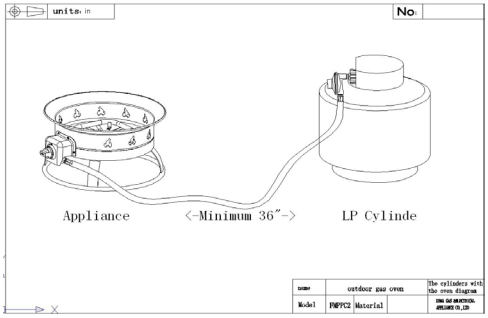

CONNECTION

1. Be sure the cylinder valve and appliance valves are "off"

2. Place full LP gas cylinder on tank ring bracket.3. Center the nipple in the cylinder valve and hold in place.
3. Using the other hand, turn the hand wheel clockwise until
there is a positive stop. Do not use tools. **Hand tighten only.**
When making the connection, hold the regulator in a straight line with the cylinder valve, so as not to cross thread the connection.

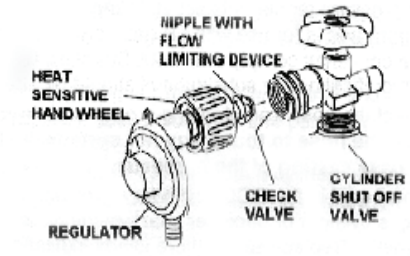

4. Leak test the connection. See “leak test”.

LEAK TEST

1. **DO NOT USE OR PERMIT SOURCES OF IGNITION IN THE AREA WHILE DOING THE LEAK TEST. THIS INCLUDES SMOKING**
2. Leak testing should be done once per year or whenever the LP gas cylinder or any other gas system part
is replaced, whichever is more frequent.
3. The leak testing solution should be half liquid detergent and half water.
4. Apply the solution to the LP gas delivery system at points shown in the illustration.
5. Bubbles in the soap solution indicate that a leak is present.
6. The leak(s) must be stopped by tightening the loose joints, if possible, or by replacing the faulty parts(s) with the part(s) recommended by the appliance manufacturer.

THE APPLIANCE IS NOT TO BE USED UNTIL ANY LEAK IS CORRECTED.

A gas appliance repairman or LP gas dealer should be called if attempts to stop the leak(s) are unsuccessful
and, in such case, the LP gas supply must be shut off at the cylinder valve or the cylinder must be removed from the appliance until the leak(s) is corrected.

Inspect hose prior to each use of the unit. The hose assembly must be replaced prior to the appliance being put into operation if there is evidence of excessive abrasion or wear, or if the hose is damaged. Contact FMI Brands Inc. should you require a replacement hose.

Inspect burner prior to each use. Burner must be replaced prior to the appliance being put into operation if there is evidence of damage. Replacement burners are available from FMI Brands Inc.

Should any part of this appliance (including the burner) become soiled or dirty, wipe lightly with a damp cloth. Do not use flammable or corrosive cleaning products on or near this unit.

Ensure that gas hose is placed in an area where it is unlikely to be tripped over (such as pathways or trails) or subject to other accidental damage.

Keep the appliance area clear and free from combustible materials, gasoline and other flammable vapors and liquids.

Solid fuels shall not be burned in this appliance.

Installation must conform with local codes or, in the absence of local codes, with either the *National Fuel Gas Code, ANSI Z223.1/NFPA 54, Natural Gas and Propane Installation Code, CSA B149.1* or *Propane Storage and Handling Code, B149.2, or* the *Standard for Recreational Vehicles, ANSI A 119.2/NFPA 1192, and CSA Z240 RV Series, Recreational Vehicle Code*, as applicable.

Note to Installer: Leave this guide with the consumer.

Note to consumer: Please retain this guide for future use.

⚠WARNING: If the information in this manual is not followed exactly, a fire or explosion may result causing property damage, personal injury or loss of life.
Installation and service must be performed by a qualified installer, service agency or the gas supplier.

Owner's Manual, FMI Fire Bowl

Section 1: Assembly

Enclosed are two bags of artificial rocks and one 10' propane-rated hose with attached regulator.
1. Remove plastic bags containing ceramic rocks and hose assembly.

2. Open bag containing smaller rocks and arrange in burner area. Open bag of larger rocks and arrange in any desired formation you wish. Our preferred configuration is pictured below. Never handle rocks which have not been allowed to cool from exposure to flame. Never attempt to rearrange rocks while unit is ignited. (Note: Rocks are not to exceed a maximum weight of 5 KGS or 11 LBS.)

8. Attach small end of included hose to valve on campfire by hand. Use a small wrench to tighten. Be careful not to over tighten, as this can deform the brass fitting.

(Note to User: Before igniting the unit for the first time, follow steps one through 5 in the below "Ignition" section. Mix a solution of liquid soap and water in a spray bottle, and apply to the gas fittings you have just connected. If parts of the fitting begin to produce bubbles, spray liquid, or if you smell liquid propane gas, immediately close the valve on the tank, and leave the unit for at least an hour undisturbed to allow excess gas to escape. After an hour, disconnect the hose and take the unit to a certified propane technician for consultation.)

Section 2: Ignition

1. Ensure that unit valve dial is in the "off" position by pushing and turning clockwise until the dial stops.

2. Securely attach regulator (large end of hose) to your propane cylinder

3. Extend hose to full length and ensure that the propane tank is as far as safely possible from the Fire Bowl.
4. Slowly* turn cylinder valve to "open" position.
* Opening the valve too quickly may activate the excess-flow valve in your propane cylinder, decreasing gas flow dramatically. In this case, shut valve off and re-open very slowly.
5. Using a lighter or match, ignite lighter and hold flame slightly above the burner, then open the valve on the appliance slowly by turning (counter-clockwise) until the unit ignites. Ensure that no part of your body, clothing, or any other combustible material are above burner before, during and after ignition.

6. Set dial to desired flame height.

Section 3: Extinguishing appliance

1. Turn cylinder valve to "close" position.
2. Turn appliance valve to the "off" position by pushing and turning knob clockwise. Allow unit to cool for at least five (5) minutes before relighting.

Notes:

- FMI Brands Inc. recommends that you ignite this unit only when safely placed on a non-combustible surface as pictured above.
- This is NOT a toy. Children should be supervised at all times when using this unit without exception.
- Do not place any objects other than supplied rocks inside the burner component of the Fire Bowl
- Do not add wood or any other materials to the fire. It is designed to safely combust propane only.
- Do not connect to a remote gas supply
- Do not use this appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system and any gas control which has been under water.

Replacement parts list:

Part	Price	Number to order	Cost
Burner Assembly	$10.00		
Fire Bowl	$18.00		
Floor Stand	$20.00		
Regulator and Hose	$25.00		
Rock Set (2 Bags)	$8.00		
Switch Cover	$6.00		
Valve	$8.50		
Valve Knob	$3.50		
Tin Base Plate	$3.00		
Owner's Manual	$3.00		

All prices are in Canadian Dollars (CAD) Subtotal: $_____
Please add $10.00 per order for handling.
All shipments sent postage collect.
Canadian residents please add applicable HST/GST
Subtotal:_____+ Handling: $10.00 + HST/GST(if applicable)_____= Total charge: _____
Replacement part orders can be sent by mail to the address on page 1 of this booklet, or faxed to (888)797-9931
Should you have any questions or comments regarding this appliance, please do not hesitate to contact FMI Brands Inc. at (888) 514-1663. E-Mail: sales@fmibrands.com