
VISSANI™

Item #1000 000 000
Model #YH1588

USE AND CARE GUIDE

CLEAR BALL ICE

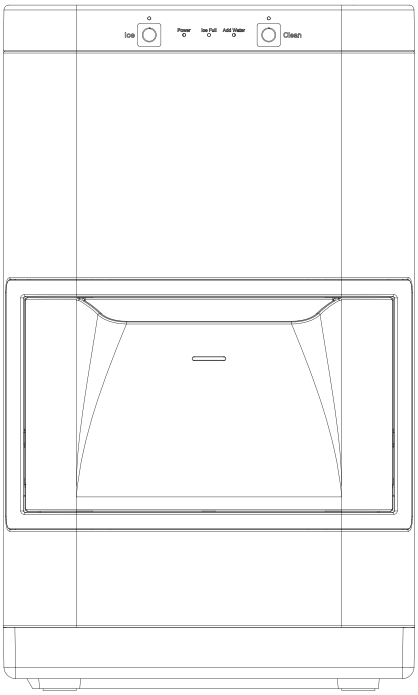

Questions, problems, missing parts?
Before returning to the store, call Vissani Customer Service
8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-855-VISSANI (1-855-847-7264)

HOMEDEPOT.COM

THANK YOU

We appreciate the trust and confidence you have placed in Vissani through the purchase of this clear ball ice. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Vissani!

Table of Contents

Safety Information 2
Warranty 4
Pre-Installation 5
Operation. 6
Specification 10
Troubleshooting 10

Safety Information

WELCOME TO OUR FAMILY

Thank you for bringing our transparent ball shaped ice maker to your home! We consider your purchase as the beginning of a long-term partnership.
This manual is a resource for your use and care of products. Please read before using your device. Keep it at hand for quick

reference. If something seems wrong, the troubleshooting section will help you solve common problems.

SCOPE OF APPLICATION

This appliance is intended to bet used in household and similar applications such as Staff kitchen areas in shops, offices and other working environments;

- □ Farm houses and by clients in hotels, motels and other residential type environments;
- □ Bed and breakfast type environments;
- □ Catering and similar non-retail applications

Installation checklist

- □ Door
- □ levelling
- □ Electric Power
- □ Ice Maker
- □ Final Checks
- □ Ice basket is completely closed
- □ Ice maker is turned ON
- □ House power turned on
- □ Shipping material removed

IMPORTANT SAFETY INFORMATION

WARNING: Please read all instructions before using this appliance.

This is a safety warning sign. Used to warn of potential personal injury hazards.

Please follow all safety instructions following this sign to avoid possible injury or death.

DANGER: Indicates a hazard which, if not avoided, will result in death or serious injury.

WARNING: Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION: Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury..

IMPORTANT: Indicates installation, opera tion or maintenance information which is important but not hazard-related.

SAFETY INSTRUCTIONS

DO NOT store or use gasoline, or other flammable liquids in the vicinity of this or any other appliance. Read product labels for warnings regarding flammability and other hazards.

Avoid contact with any moving parts of automatic ice maker.

Remove all staples from the carton.Staples can cause severe cuts, and also destroy finishes if they come in contact with other appliances or furniture.

Please do not put your hands into the ice outlet when it is working.

This product is not intended for use by children.

Flammable refrigerant used! When handing, moving and use of the refrigerator, make sure to avoid either damaging the refrigerant tubing, or increasing the risk of a leak.

Component parts shall be replacedwith like components and that servicing shall be done by factory authorized service personnel, to minimize the risk of possible ignition due to incorrect parts or improper service.

The ice maker is to be installed in accordance with the Safety Standard for

Refrigeration Systems, ASHRAE 15.

The ice maker shall not be installed in corridors or hallways of public buildings.

Safety Information

CHILD SAFETY

Destroy or recycle the carton, plastic bags, and any exterior wrapping material immediately after the Ice Maker is unpacked. Children should NEVER use these items to play. Cartons covered with rugs, bedspreads, plastic sheets or stretch wrap may become airtight chambers, and can quickly cause suffocation.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safetv

Children should be supervised to ensure that they do not play with the appliance.

IMPORTANT INFORMATION

The refrigerant isobutene (R600a) is contained within the refrigerant circuit of the appliance, a natural gas with a high level of environmental compatibility, which is neverthe less flammable. During transportation and installation of the appliance, ensure that none of the components of the refrigerant circuit becomes damaged.

Safety definitions:



The symbol is a warning symbol for risk of fire/flammable material.



The refrigerant (R600a) is flammable.



Caution: Risk of fire.

ATTENTION

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Do not store explosive substances such as aerosol cans with a flammable propellant in this

appliance.

When disposing of the appliance do so only at an authorized waste disposal centre. Do not expose to flame.



WARNING: Fill with potable water only for the ice maker.



WARNING: Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.



WARNING: Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.



WARNING: Do not damage the refrigerant circuit.



WARNING: Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.



WARNING: When positioning the appliance, ensure the supply cord is not trapped or damaged.



WARNING: Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.

Warranty

PORTABLE ICE MARKER LIMITED WARRANTY

Your product is protected by this Limited Warranty:

Warranty service must be obtained from VISSANI Consumer Services or an authorized VISSANI servicer.

Warranty

- □ One year Limited Warranty from original purchase date.
- □ VISSANI, through its authorized servicers will:
- □ Pay all costs for repairing or replacing parts of this appliance which prove to be defective in materials or workmanship. Consumer will be responsible for:
- □ Diagnostics, removal, transportation and reinstallation cost required because of service.
- □ Costs of service calls that are a result of items listed under NORMAL RESPONSIBILITIES OF THE CONSUMER**
- □ VISSANI replacement parts shall be used and will be warranted only for the period remaining on the original warranty.

NORMAL RESPONSIBILITIES OF THE CONSUMER**

This warranty applies only to products in ordinary household use, and the consumer is responsible for the items listed below:

1. Proper use of the appliance in accordance with instructions provided with the product.
2. Routine maintenance and cleaning necessary to keep the good working condition.
3. Proper installation by an authorized service professional in accordance with instructions provided with the appliance and in accordance with all local plumbing, electrical and / or gas codes.
4. Proper connection to a grounded power supply of sufficient voltage, replacement of blown fuses, repair of loosened connections or defects in house wiring.
5. Expenses for making the appliance accessible for servicing.
6. Damages to finish after installation.

EXCLUSIONS

This warranty does not cover the following:

1. Failure caused by damage to the unit while in your possession (other than damage caused by defect or malfunction), by its improper installation, or by unreasonable use of the product, including without limitation, failure to provide reasonable and necessary maintenance or to follow the written Installation and Operating Instructions.
2. Products purchased “as-is” or refurbished are not covered by this warranty.
3. Product that has been transferred from its original owner.
4. Interior or exterior rust on the unit.
5. Damages caused by services performed by persons other than authorized VISSANI servicers; use of parts other than VISSANI replacement parts; obtained from persons other than such VISSANI customer service; or external causes such as abuse, misuse, inadequate power supply or acts of God.
6. Service calls resulting from improper installation of your product.
7. Service calls to instruct you on the use of your product.
8. Surcharges including, but not limited to, any after hour, weekend, or holiday service calls, tolls, ferry trip charges, or mileage expense for service calls to remote areas, including the state of Alaska.
9. If the unit is put to commercial, business, rental, or other use or application other than for consumer use, we make no warranties, express or implied, including but not limited to, any implied warranty of merchantability or fitness for particular use or purpose.
10. Product that has been removed outside the USA or Canada.
11. Products without original serial numbers or products that have serial numbers which have been altered or cannot be readily determined.



NOTE: Some states do not allow the exclusion or limitation of incidental or consequential damages. So this limitation or exclusion may not apply to you.

IF YOU NEED SERVICE

Keep your bill of sale, delivery slip, or some other appropriate payment record. Should service be required, the date on the bill establishes the warranty period commencement date.

If service is performed, it is in your best interest to obtain and keep all receipts.


This written warranty gives you specific legal rights. You may also have other rights that vary from state to state.

NOTICE:Some states do not allow the exclusion or limitation of incidental or consequential damages. So this limitation or exclusion may not apply to you.

Service under this warranty must be obtained by: Contact the Customer Service Team at 1-855-847-7264.

Pre-Installation

PACKAGE CONTENTS

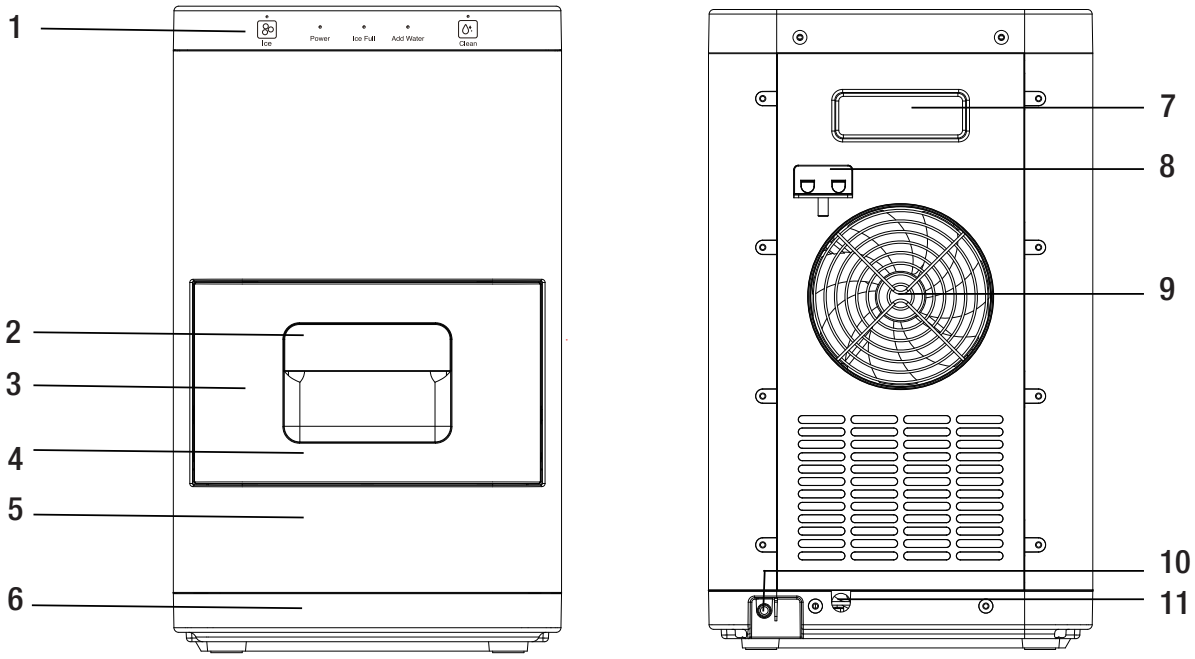

1. Control Panel:
   Indicator light: Ice, Power, Ice Full, Add Water, Clean.
   Button: Ice, Clean
2. Handle for ice basket
3. Observation window: See how much ice has been stored in the ice basket
4. Ice basket
5. Water reservoir
6. Drip tray: Insert to the unit before use
7. Hole for moving this product
8. Water drain cap: After cleaning procedure, remove drain cap from the back of the appliance, pull out the cap from the drainpipe, empty the tank under the ice basket, then reinsert the cap and put it back again.
9. Hot Air outlet
10. Drainage pipe outlet: After cleaning procedure, you can collect dirty water from the drainpipe
11. Power cord

Please contact 1-855-VISSANI (1-855-847-7264) for further assistance.

Operation

UNPACKING YOUR ICE MAKER

1. Remove the exterior and interior packaging, and then check all the accessories are included.

If any parts are missing, please contact our customer service.

Remove all the tapes on the unit; take out the accessory parts inside.

Clean the interior with lukewarm water and a soft cloth.

Locating your ice maker on a level counter table far from direct sunlight and other sources of heat (i.e.: stove, furnace, and radiator). Make sure that there is at least 11 inches between the back and sides of your ice maker with the wall.

Allow one hour for the refrigerant fluid to settle down before plugging your ice maker in.

The power plug must be accessible directly.

WARNING: fill with potable water only. Only use drinking water.

CONNECTING YOUR ICE MAKER

DANGER: *Improper use of the grounded plug can result in the risk of electrical shock. If the power cord is damaged please call our customer service.

This unit should be properly grounded for your safety. The power cord of this appliance is equipped with a grounding plug which mates with standard grounding wall outlets to minimize the possibility of electric shock.

Plug your appliance into an exclusive, properly installed, grounding wall outlet. Do not under any circumstances; damage the grounding means of the plug. Any questions concerning power and or grounding should be directed toward a certified electrician.

This appliance requires a standard 110-120 Volt, 60Hz electrical outlet with good grounding means.

It is strongly recommended that the unit not be used with a power outlet that is equipped with GFCI protection.

CLEANING AND MAINTAINING YOUR ICE MAKER

Before using your ice maker, it is strongly recommended to clean it thoroughly. Unplug the unit before cleaning or making any maintenance.


1. Take out the ice basket from the unit.
2. Clean the interior with diluted detergent, warm water and a soft cloth. First pour the warm water with diluted detergent into the internal water reservoir, and then use the sott cloth to wipe the surface.
3. Again use the fresh water to rinse the inside parts, and drain out the water by unplugging the drain pipe on the back to the water container or a sink.
4. The outside of the ice maker should be cleaned regularly with a mild detergent solution and warm water.
5. Dry the interior and exterior with a soft cloth.
6. When the appliance is not in use for a long time, drain out water completely from water reservoir before storage.

NOTE: Please make sure that ice basket is closed completely. If this ice basket isn't closed completely that will not work, due to there is a safety switch inside of basket.

Don't open the ice basket frequently, that will impact making ice capacity..


FILLING WATER TO THE RESERVOIR

1. Hold the ice basket handle gently and pull it out along the horizontal direction until the back of the ice basket contacts the front panel.
2. Gently lifted it up the ice basket at a certain angle and pulled it out.
3. Place the funnel (included) to the front edge of the water reservoir and make sure it is stable enough for filling water.
4. Pour drinking water into the reservoir through a funnel, with a maximum of 0.34 gallon (1.3 liters) of water at a time. Do not fill it with water pipe MAX.
5. Reload the ice basket back to the unit, you tilt the ice basket in the same direction at a certain angle. First, you put the back side of the ice basket into the front panel, slowly flatten the ice basket, and then gently push it into full closure.

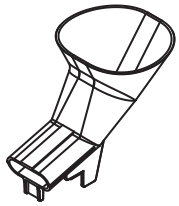

Funnel (included)

OPERATION AND DISPLAY AREAS

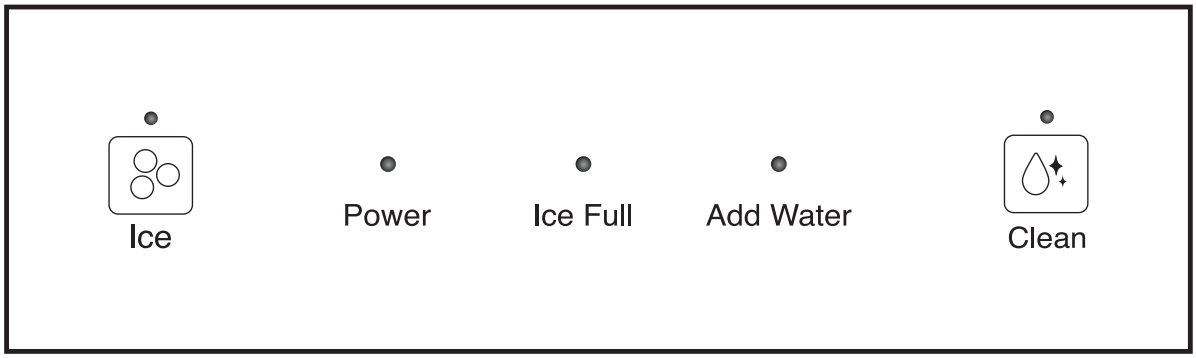

Insert the power cord and the power indicator light will light up in white. There are three types of indicator lights (Power indicator light, Ice Full indicator light, Add Water indicator light), and you can operate the device through the buttons on the touch panel. The main functions include ice making c cleaning.

BALLICE

Ice making speed:

The ice maker can make 2 ice balls in 60mins

Ice size:

This ball ice maker produces clear ice spheres with a diameter of 1.97 inches 50 mm).

Clear ice ball:

This ball ice maker can produce clear spherical ice.


Operation (continued)

CLEANING INSTRUCTION

For the first time, or the clean procedure has not been ran for a long time, it is highly recommended to run this procedure at first.

Before start the cleaning process, please check the drain pipe and make sure it is with the cap and hang on the back of the machine.

1. Unplug the unit before to run the cleaning procedure.
2. Wipe exterior of the ice maker and the interior of water reservoir with a soft cloth and wipe dry to avoid any deposits.
3. Prepare a sanitizing solution with 1:1 mix of white vinegar and distilled or purified water and pour into water reservoir not exceed the maximum fill level.
4. Power on the unit and press "Clean" button and the "Clean" indicator lights up, it will run cleaning procedure for around 3 minutes, then the "Clean" indicator goes out auto matically.
5. After cleaning procedure, move the unit to the edge of the desktop, make sure that the appliance is placed steady, place a water container under the unit, pull out the drain pipe on the back, sanitizing solution in water reservoir and the evaporator will drain into the water container, then reinsert the plug and put it back again.
6. Flush the water reservoir with fresh water and run through the cleaning procedure 3-4 times, unplugging and draining the unit for each rinse.
7. When rinsing process is completed, plug the unit back and add fresh water ready for ice-making.
8. Change water in the water reservoir every 24 hours to ensure a reasonable hygiene level and run the cleaning procedure once a week.

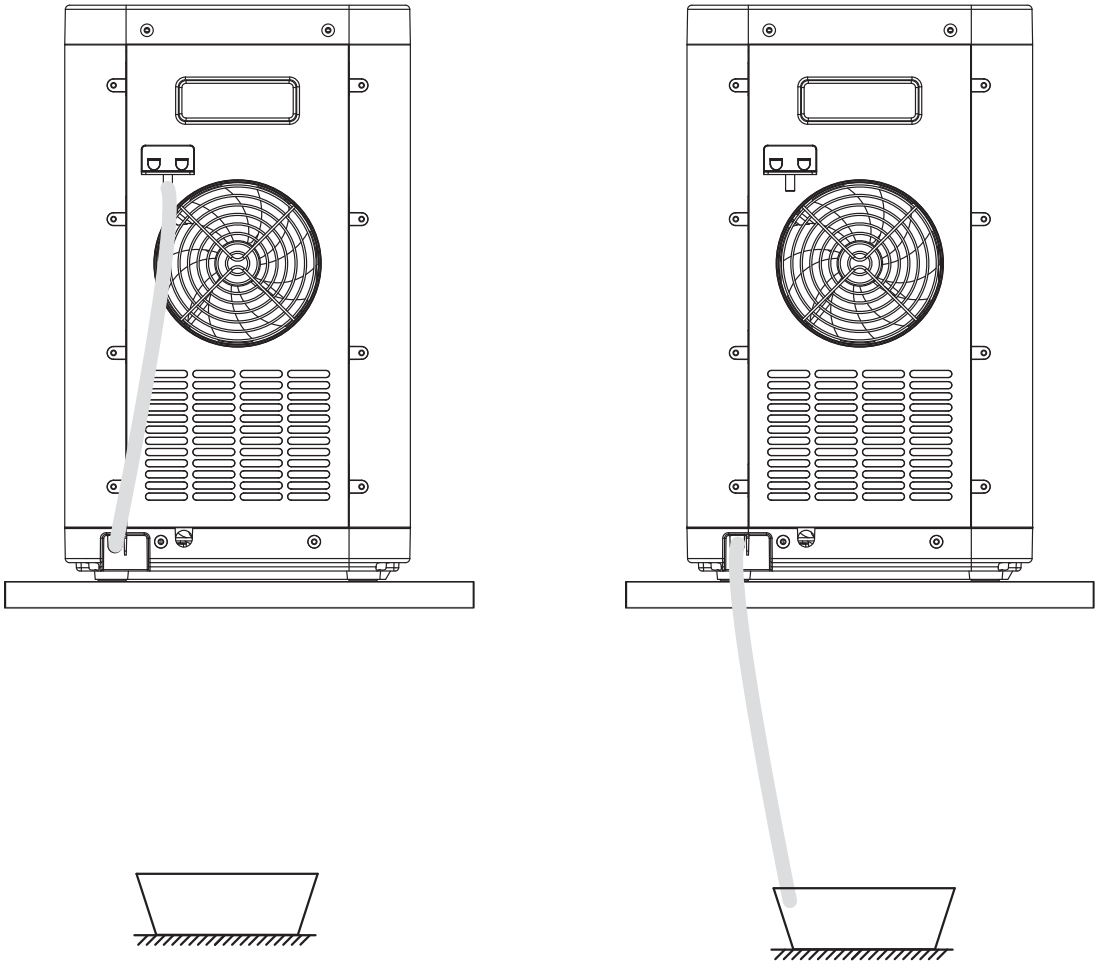

HOW TO OBTAIN THE ICE CUBE


Before starting the ice making process, please check the drain pipe plug hang on the back of the unit.

Press the "Ice" button, the Ice Indicator lights up in white color, it begin to work, Press this button again, it will stop making ice. During ice making procedure, you can see how much ice has been stored in the ice basket through the observation window. For the first time, or if the unit has not been used for a long time, it is recommended to clean this unit before you start to make ice.

While the ice-maker is on, verify water level periodically. If water pump can't pump out water, the ice maker will stop automatically, and the

"Add water" indicator will on in red color. Need to pour water into the water reservoir inside.

We suggest you should press "Ice" button to turn off the unit first, then fill water up, again press "Ice" button to restart the unit. Allow the refrigerant liquid inside the compressor at least 3 minutes to settle before restarting.

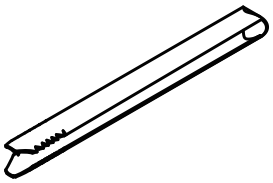

Ice Tong
(included)

NOTE: Do not use tap water, milk, coke or any other kind of liquid.

WHEN ICE FULL INDICATOR IS ON

The ice maker automatically stops working when 8-10 ice cubes is fully made inside and the "Ice

Full" Indicator is on.

If the ice does not take out from this ice basket for a long time, it will re-detect in each 2 hours.

It will resume to make ice immediately when the ice were took out and closed the basket com pletely.

TURN OFF THE UNIT

If you want to stop making ice, press the "Ice" button again and the "Ice" indicator will go off immediately, but it will keep running for a few minutes to let the ice fall down to ice basket. The power indicator will keep on in white color and ready for "Ice" or "Clean" or unplug the power cord from the power supply if you are no longer in use.

Specification

Model	YH1588
Input Voltage	120V ~ 60Hz
Ice Bin Volume	8-10 pcs
Refrigerant	R600a
Insulation Material	Cyclopentane
Dimensions	248x344x413mm
Power Consumption	40pcs/2.3kg
Content	22g
Material	SUS430+ABS+PC
Operating Temperature	12°C-32°C

Troubleshooting

BEFORE CALLING FOR SERVICE, PLEASE TRY THE SUGGESTION BELOW.

Problem	Possible cause	Solution
“Add Water” indicator lights up.	□ Lack of Water.	□ Pull out ice basket, fill water to the water tank and then closed the ice basket completely, it will start making ice again.
“Ice Full” indicator lights up.	□ There is too much ice.	□ Suggest you to obtain the sphere ice.
	□ (No ice cube inside).	□ Remove the probable obstacle inside or clean the inside wall of the ice storage. Check the ice basket to push into the right position to ensure not to block the infrared sensor.
All indicators flashing.	□ Ambient temperature or water temperature in reservoir is too high.	□ It may be the ambient temperature is too low.
	□ Synchronous motor is broken.	□ Press the ice button to turn off this unit and wait for 1 hour, then turn on this unit to restart making ice. If this problem show up again, please verify by a qualified technician.
	□ Pipe in the cooling system is blocked.	
	□ The room temperature is lower than 41°F, or the water temperature is lower than 32°F.	□ Please operate the ice maker in an environment of 54°F~90°F.
	□ There is a foreign object stuck in the mold and cannot be closed.	□ Please do not insert hard objects or other objects into the ice outlet.
	□ Switch damaged or open circuit.	□ Professional maintenance is required.

Troubleshooting

Problem	Possible cause	Solution
Making Ice too slowly.	□ Hot Air outlet has been blocked by something.	□ Hot Air outlet must be guaranteed to have more than 6 inches of ventilation distance.
	□ Water temperature in reservoir is too high.	□ Water temperature requirement between 45°F~90°F.
	□ Refrigeration system malfunctions.	□ Verify by a qualified technician.
Water leakage.	□ Drain plug not in place.	□ Put the drain plug in place.
	□ Pipe Joint in the appliance may Loose.	□ Verify by a qualified technician.
	□ The seal has reached service life.	□ Verify by a qualified technician.
The ice making light is on, but no ice is being made.	□ Ice basket not pushed in place.	□ Recheck that the ice basket is pushed into right place.
	□ Damaged door control switchv	□ Need professional inspection and maintenance.
Ice cube not complete in sharp.	□ Foreign matter clogging the water pump inlet.	□ Please check the water pump inlet.
	□ After a long time of water shortage or full ice, the ice is not taken in time , and the ice stays for a long time.	□ Press the ice making button again to make ice.
	□ Mis-operation and abnormal shut down during the ice making process.	□ Turn on the ice maker again.
Not making ice.	□ No power.	□ Check the power LED light and make sure that power plug to plug the power outlet.
	□ Didn't power on.	□ Press ICE button to make ice.
	□ Not close the ice basket.	□ Closed the ice basket completely.

Please contact 1-855-VISSANI (1-855-847-7264) for further assistance.

VISSANI™

Questions, problems, missing parts?
Before returning to the store, call Vissani Customer Service
8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-855-VISSANI (1-855-847-7264)

HOMEDEPOT.COM

Retain this manual for future use.