




Item #1000015422,
1000015190
Model #ES4763OB4-D,
ES4763SBA-D

USE AND CARE GUIDE PENDANT FIXTURE

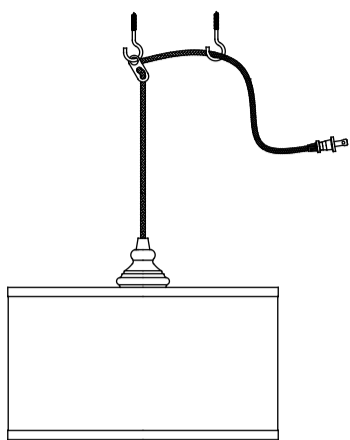

THANK YOU

We appreciate the trust and confidence you have placed in Hampton Bay through the purchase of this pendant fixture. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Hampton Bay!

Warranty

5-YEAR LIMITED WARRANTY

The manufacturer warrants this lighting fixture against defects in materials and workmanship for a period of five year(s) from the date of purchase. If within this period the product is found to be defective in material or workmanship, the product must be returned, with a copy of the bill of sale as proof of purchase, to the original place of purchase. The manufacturer will, at its option, repair, replace, or refund the purchase price to the original purchaser or consumer. This warranty does not cover light bulbs or the fixture becoming damaged due to misuse, accidental damage, improper handling and/or installation, and specifically excludes liability for direct, incidental, or consequential damages. Some states do not allow exclusions or limitations on an implied warranty, so the above exclusions and limitations may not apply. This warranty gives you specific rights and you may also have other rights that vary from state to state.

Contact the Customer Service Team at 1-877-527-0313 or visit www.homedepot.com.



Questions, problems, missing parts? Before returning to store,

call Hampton Bay Customer Service
8 a.m. - 6 p.m., EST, Monday - Friday

1-877-527-0313

HOMEDEPOT.COM

Retain this manual for future use.

Safety Information

IMPORTANT SAFETY INSTRUCTIONS (Save These Instructions)

- This portable luminaire has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit only one way into a polarized outlet. If the plug does not insert fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician for assistance. Never use this product with an extension cord unless the plug can be fully inserted. Do not alter the plug in any way, as serious injury or damage may result.
- Make sure the power is turned off at the electrical panel box before beginning your installation. Turning the power off at the wall switch is not sufficient to prevent electrical shock.
- Read all instructions prior to beginning the installation process.
- All electrical connections must be in accordance with local codes and the National Electrical Code. If you are unfamiliar with methods of installing electrical wiring, secure the services of a qualified licensed electrician.

WARNING: Do not install this lighting system in a wet location.

CAUTION: Turn off/unplug the light and allow it to cool before replacing the bulb.

CAUTION: Keep the lamp away from materials that may burn.


Pre-Installation

TOOLS REQUIRED



HARDWARE INCLUDED


NOTE: Hardware not shown to actual size.

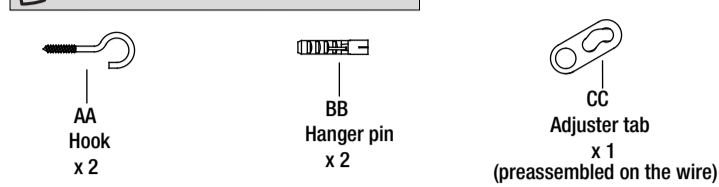

Installation

1 Installing the shade and bulb

- Unscrew the socket ring (B) from the fixture body (A).
- Place the fabric shade (C) over the fixture body (A).
- Screw the socket ring (B) back onto the fixture body (A) to secure the shade (B) in place.
- Install the bulb (not included) into the bulb socket on the fixture body (A).

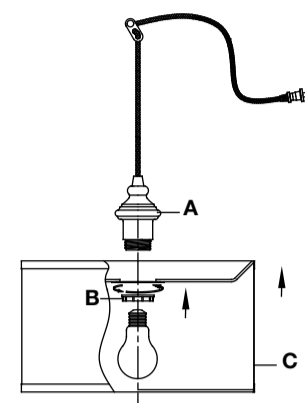


Maintenance

REPLACING THE BULB


CAUTION: Refer to the re-lamping label located on the fixture. Do not exceed the recommended wattage.

- Turn off the power to the light fixture.
- Remove the old light bulb, and install the new light bulb.
- Restore power to the light fixture.

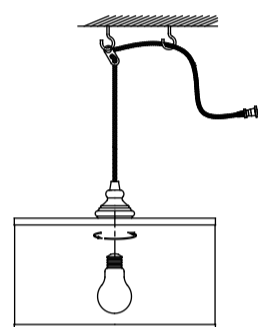

Pre-Installation

PACKAGE CONTENTS

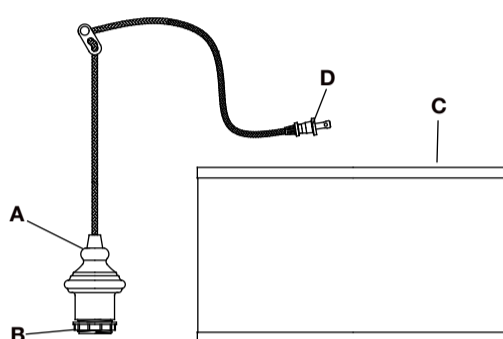


Part	Description	Quantity
A	Fixture body	1
B	Socket ring [preassembled on the fixture body (A)]	1
C	Fabric shade	1
D	Polarized plug	1

Installation


2 Installing the hardware

- Install the hanger pins (BB) in the desired locations using the drill and hammer (not included.)
- Install the hooks (AA) into the hanger pins (BB).

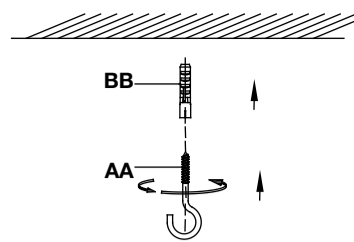

3 Installing the fixture body

- Adjust the height of the adjuster tab (CC) to the desired location.
- Hang the adjuster tab (CC) on the hook (AA).

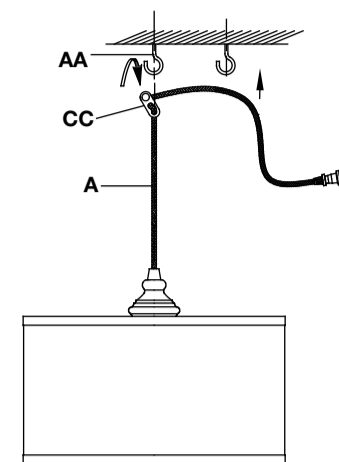

Care and Cleaning

CAUTION: Do not use chemical solvents or harsh abrasives to clean the fixture or components, as damage may occur.

- To clean the fixture, unplug it from the outlet.
- Use a dry or slightly dampened, clean cloth (use clean water, never use a solvent) to wipe the interior and exterior surfaces of the fixture.
- Allow the fixture to dry completely before power is restored.


Troubleshooting

Problem	Possible Cause	Solution
The light bulb will not illuminate.	The light bulb is burned out.	Replace the light bulb.
	The power is off.	Make sure the power supply is on.
	There is a faulty wire connection.	Check the wiring. Contact a qualified and licensed electrician if you are not comfortable troubleshooting wiring problems.
	There is a faulty switch.	Test or replace the switch.
The fuse blows or the circuit breaker trips when the light bulb is illuminated.	There are crossed wires, or the power wire is not properly grounded.	Check the wire connections.



Artículo#1000015422,
1000015190
Modelo núm.#ES4763OB4-D,
ES4763SBA-D

GUÍA DE USO Y MANTENIMIENTO LÁMPARA COLGANTE

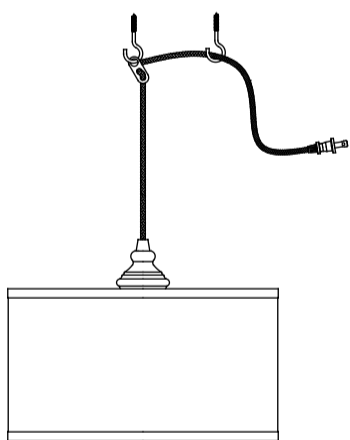

GRACIAS POR TU COMPRA

Apreciamos la confianza que has depositado en Hampton Bay al comprar esta lámpara colgante. Nos esforzamos para continuamente crear productos de calidad diseñados para mejorar tu hogar. Visítanos por Internet para ver nuestra línea completa de productos disponibles para las necesidades de mejoras de tu hogar. ¡Gracias por elegir Hampton Bay!

Garantía

GARANTÍA LIMITADA DE 5 AÑOS

El fabricante garantiza que esta lámpara no presentará defectos materiales o de fabricación por un periodo de cinco años a partir de la fecha de compra. Si este producto presenta defectos materiales o de fabricación durante el periodo de garantía, debe devolverlo al lugar de compra con una copia del recibo de compra como prueba. El fabricante, a su discreción, reparará, reemplazará o reembolsará el precio de compra al comprador o consumidor original. Esta garantía no cubre las bombillas ni el daño de la lámpara debido a uso indebido, daños accidentales, manipulación y/o instalación indebida, y específicamente excluye la responsabilidad por daños directos, incidentales o consecuentes. Algunos estados no permiten exclusiones o limitaciones en las garantías implícitas, por lo que las exclusiones o limitaciones que se mencionan pueden no aplicarse en su caso. Esta garantía le otorga derechos específicos y es posible que tenga derechos adicionales que varían según el estado.

Comuníquese con el equipo de servicio al cliente al 1-877-527-0313 o visite www.homedepot.com.



¿Preguntas, problemas o piezas faltantes?

Antes de regresar a la tienda, llama al servicio al cliente de Hampton Bay, de 8 a.m. a 6 p.m., hora estándar del Este, de lunes a viernes

1-877-527-0313

HOMEDEPOT.COM

Conserva este manual para uso en el futuro.

Información de seguridad

INSTRUCCIONES DE SEGURIDAD IMPORTANTES (Guarda estas instrucciones)

- Esta lámpara portátil tiene un enchufe polarizado (una clavija más ancha que la otra) para reducir el riesgo de descarga eléctrica. Este enchufe encaja sólo de una forma en un tomacorriente polarizado. Si el enchufe no encaja completamente en el tomacorriente, inviértelo. Si aún no encaja en el tomacorriente, contacta a un electricista certificado para que te ayude. Nunca utilices este producto con un cable de extensión a menos que el enchufe pueda entrar por completo. No modifiques el enchufe de ninguna forma ya que esto podría causar daños o lesiones.
- Asegúrate de que la corriente esté desconectada en el panel de electricidad antes de comenzar la instalación. Cortar el suministro de electricidad en el interruptor de pared no es suficiente para evitar una descarga.
- Lee todas las instrucciones antes de comenzar la instalación.
- Todas las conexiones se deben hacer conforme con el Código Nacional de Electricidad y con los códigos de electricidad locales. Si no estás familiarizado con los métodos de instalación del cableado eléctrico, contrata los servicios de un electricista certificado y calificado.

ADVERTENCIA: No instales este sistema de iluminación en un lugar húmedo.

PRECAUCIÓN: Apaga /desenchufa la lámpara y deja que la bombilla se enfríe antes de reemplazarla.

PRECAUCIÓN: Mantén la bombilla alejada de materiales potencialmente inflamables.


Preinstalación

HERRAMIENTAS NECESARIAS



HERRAJES INCLUIDOS


NOTA: No se muestra el tamaño real de los herrajes.

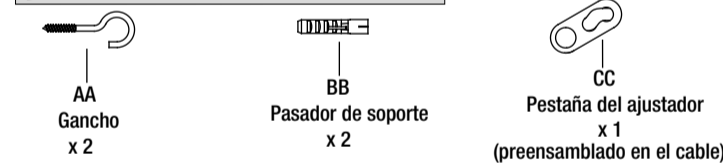

Instalación

1 Cómo instalar la pantalla y la bombilla


- Desenrosca el aro de portabombillas (B) del cuerpo de la lámpara (A).
- Coloca la pantalla de tela (C) sobre el cuerpo de la lámpara (A).
- Desenrosca el aro de portabombillas (B) del cuerpo de la lámpara (A) para sujetar la pantalla (B) en su lugar.
- Instala la bombilla (no incluida) en el portalámparas del cuerpo de la lámpara (A).

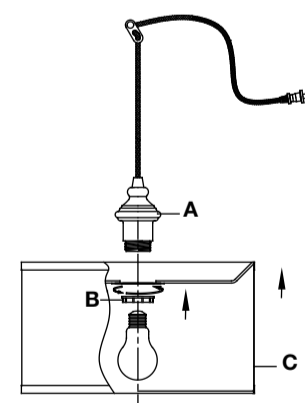

Instalación


2 Cómo instalar los herrajes

- Instala los pasadores del colgador (BB) en las ubicaciones deseadas utilizando el taladro y el martillo (no incluidos.)
- Instala los ganchos (AA) en los pasadores del colgador (BB).

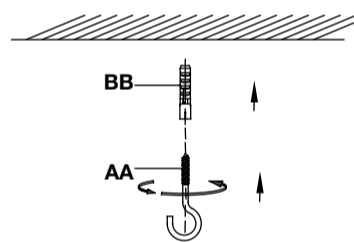

3 Cómo instalar el cuerpo de la lámpara

- Ajusta la altura de la pestaña del ajustador (CC) en la ubicación deseada.
- Cuelga la pestaña del ajustador (CC) en el gancho (AA).

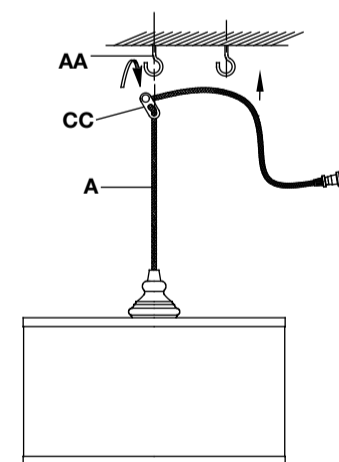

Mantenimiento y limpieza

PRECAUCIÓN: No uses solventes químicos ni abrasivos fuertes para limpiar la lámpara o los componentes, porque se pueden dañar.

- Para limpiar la lámpara, desconéctala del tomacorriente.
- Usa un paño limpio, seco o ligeramente húmedo (usa sólo agua limpia, nunca un solvente) para limpiar el interior y exterior de la lámpara.
- Deja secar la lámpara completamente antes de restablecer la electricidad.

Solución de problemas

Problema	Causa posible	Solución
La bombilla no se enciende.	La bombilla se fundió.	Reemplaza la bombilla.
	La electricidad está apagada.	Asegúrate de que el suministro de electricidad está encendido.
	Hay una conexión defectuosa del cable.	Revisa el cableado. Comunícate con un electricista certificado y calificado si no estás satisfecho con la solución de problemas del cableado.
	Hay un interruptor defectuoso.	Prueba o reemplaza el interruptor.
El fusible se funde o el cortacircuitos se activa en el momento en que enciendes la bombilla.	Hay cables cruzados o el cable de alimentación no está haciendo tierra.	Revisa las conexiones de los cables.