
SOOHOW

Assembly Manual
Dining Chair

CAM0475GR/CAM0476GR

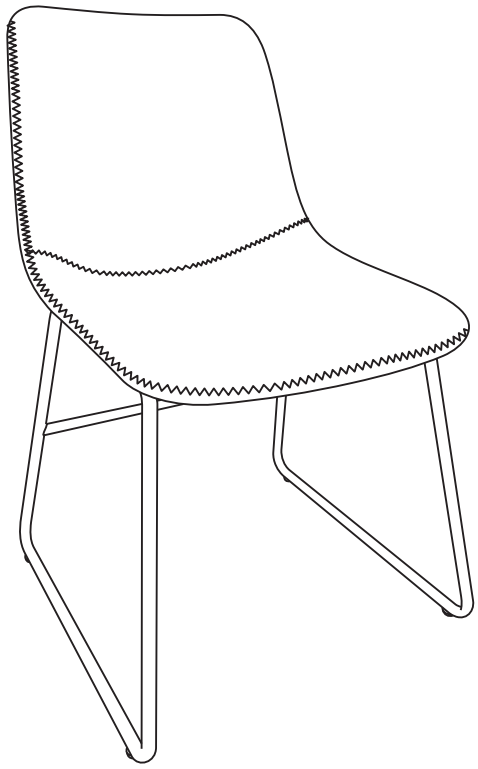


Please read this manual carefully before any operation and keep it properly for future use.

Customer Service: ecservice@isunon. com


Assembly note:



Put a protective mat on the ground and handle the product with care.

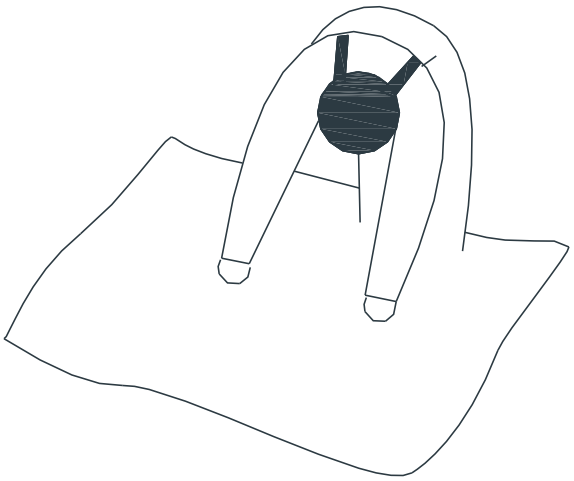

Two people are preferred.

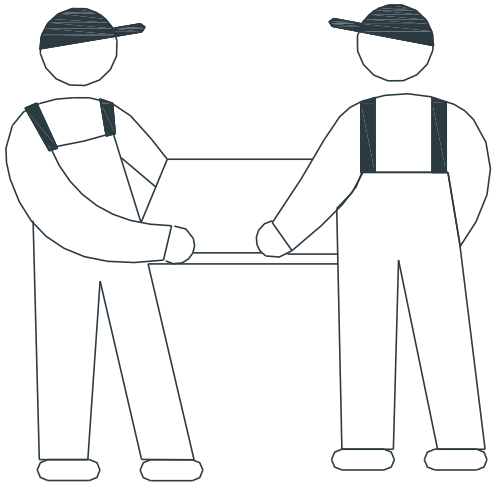


Contact us if you have any confusions.



Contact us


If you have any problems or concerns about your purchase, please get in touch with our customer service(ecservice@isunon. com) as soon as possible and we will do everything we can to help. You' ll be highly appreciated if you can put your order number in the email title so that we can deal with it efficiently.

Exploded diagram:

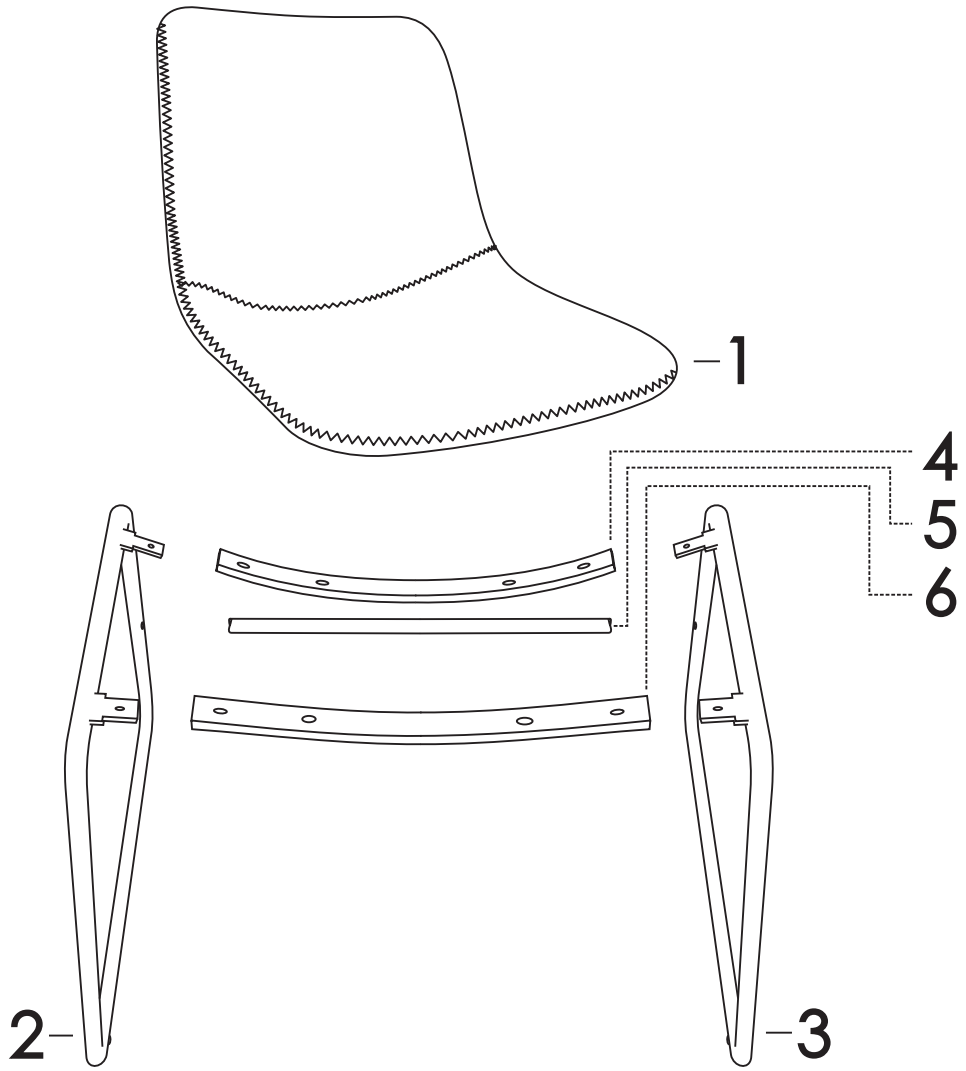

No.	Name	Pcs
1	Seat	1
2	Leg-1	1
3	Leg-2	1
4	Connecting tubing-1	1
5	Cross bar	1
6	Connecting tubing-2	1


Accessory list:


A			B			C		
								
Bolt	M6x22mm	4+1	Bolt	M6x30mm	2+1	Bolt	M8x10mm	4+1


D		
		
Allen key	M6	1

Note: The number after "+" sign indicates the extra piece(s).

1. Connect the legs(**2** and **3**) with crossbar(**5**) and connecting tubing(**4** and **6**).Scurely the crossbar with bolts(**D**).Don't fully tighten the bolts. This will allow you to make slight adjustments to the positions during assembly process.

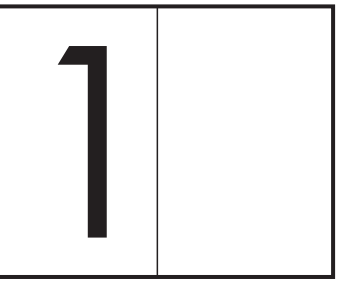

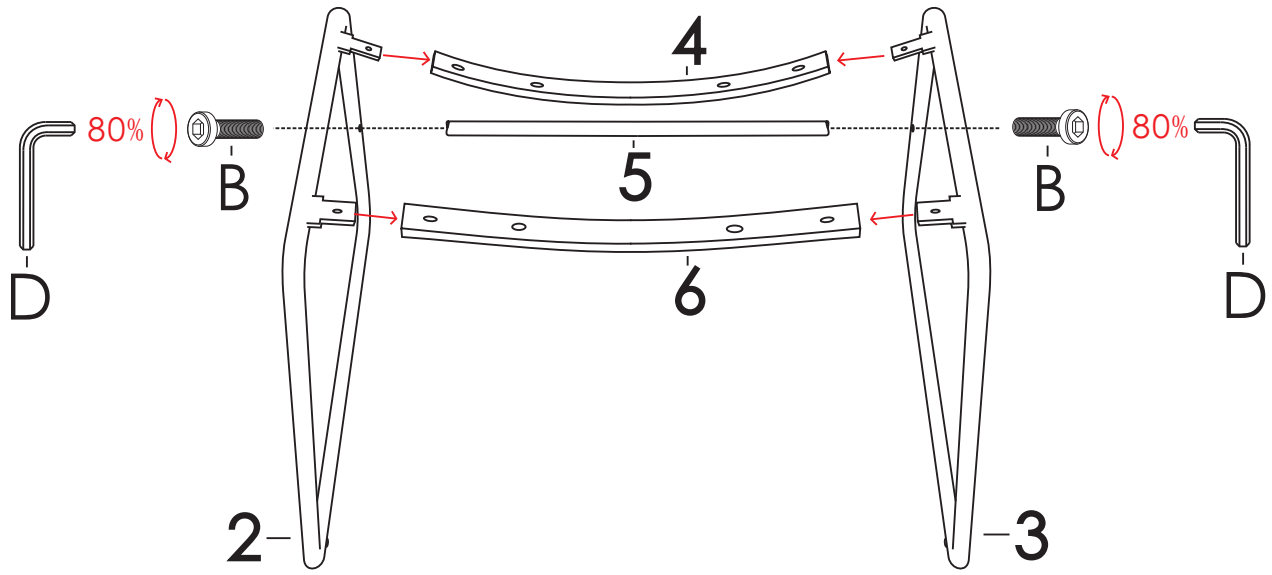




Ⓑ M6x30mm
(X2)

2. Fasten the connecting tubing to the chair legs using the bolts(**C**).


2

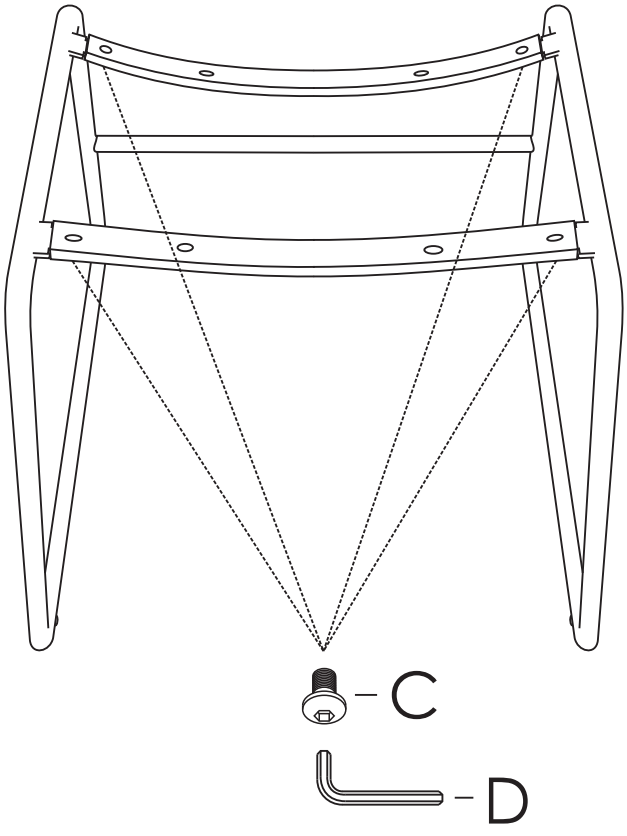


© M8x10mm
(X4)

3. Tighten the bolts (**D**) completely to secure the crossbar in place. And then attach the frame to the seat pan with bolts(**A**). Don't fully tighten the bolts until all of them are in the right holes. This will allow you to make slight adjustments to the positions during assembly process.

3

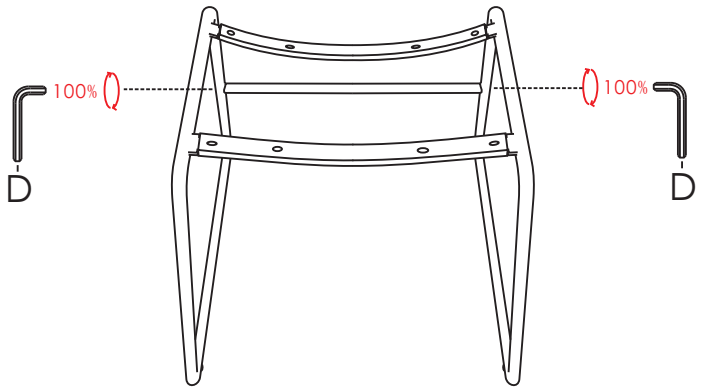


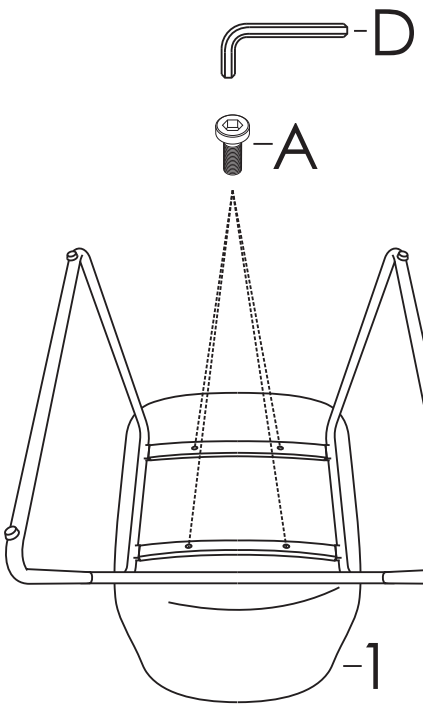



Ⓐ M6x22mm
(X4)

Done

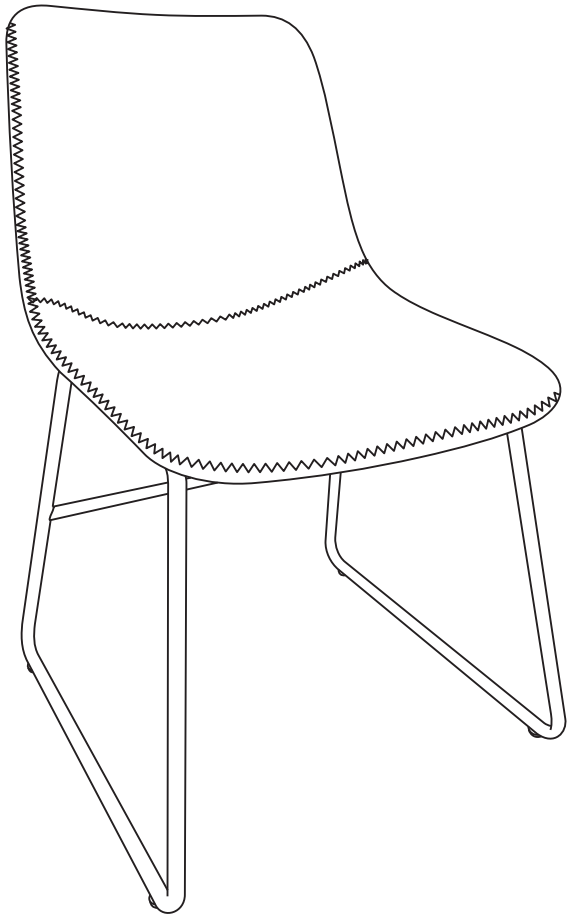

Warning

- Please keep the product away from children while assembling.
- Do not let children play or jump on the product.
- Do not stand on the item or use as a step ladder.
- Prior to use, please check to see if there's any loosening screw or part.
- Make sure that each screw and part is correctly installed and securely fastened.

Care and Maintenance

- Use a soft clean cloth that will not scratch the surface when dusting.
- There's no need to use furniture polish. If you need, test it first in an inconspicuous area.
- Using solvents of any kind on your furniture may damage the finish.
- Never use water to clean your furniture as it may cause damage to the finish.
- Liquid spills should be removed immediately.
- Gently blot the spill with a soft clean cloth to avoid rubbing.

Further advice about the furniture care

- It is best to keep your furniture in a climate-controlled environment.
- Extreme temperatures and humidity changes can cause fading, warping, shrinking and spitting of wood.
- We recommend to keep furniture from sunlight exposure to avoid possible surface damage.
- Proper maintenance and cleaning at home will extend the life of your purchase.
- Following these important and helpful tips will help retain your furniture's performance even when it ages.
- Periodically (every 90 days) make sure the screws are fully tightened.

Weight capacity: **300LBS**.

Warmly after-sales service

Please check all the hardware and the furniture before assembling. Once there is anything missing, please feel free to contact us (**ecservice@isunon.com**). If you only leave a message on the platform, we cannot help you to solve the problem effectively. Timely communication helps us understand your situation and gives you the best shopping experience.

Have a question for Soohow Furniture?

Thank you for your support to our company.
If you have any issues with your purchase, please feel free to let us know! We will always do our best to work out a solution that you will be happy with.

Return Policy

Length of return period:

Items can be returned within 30 days of receipt of shipment.
Who is responsible for the return shipping fee?
We will cover the return shipping fees if:
l. Your item has a manufacturing defect in materials or workmanship.
2. Your item has been damaged in transit.
3.You received the wrong box(es)due to a warehouse error. We will send you a prepaid shipping label after photos are sent of the wrong boxes.
4. One or more boxes are lost in transit.We will send you a prepaid shipping label if you no longer want the item.

*However, we still hope to work with you for a better solution instead of a return.Please don't hesitate to reach out to us. Customer will cover the return shipping fees if:
l. You don't like the product(s)after receiving the box(es).
2. You no longer need the product(s) but you have received the box(es).
3. You buy the product(s) by mistake but you have received the box(es).
What to do before FedEx picks it up:
Make sure everything is back in the original packaging and the prior opening will not affect the reselling of the product. First, you can try to get Amazon prepaid labels for UPS express return.Or we will provide prepaid shipping labels after you provide the photos of before & after packaging.Just stick the label on the box and call FedEx to pick it up.

When will I be refunded?

The refund is released once the goods have been returned to our warehouse. If you have any questions,Please reach out to us and we will come up with a solution to make sure you are satisfied.