
USA Item 1015060149
CAN Item 1001954043
Model 26SV24841

USE AND CARE GUIDE

4.5FT Grave & Bones Animated LED Cabernet Casualty

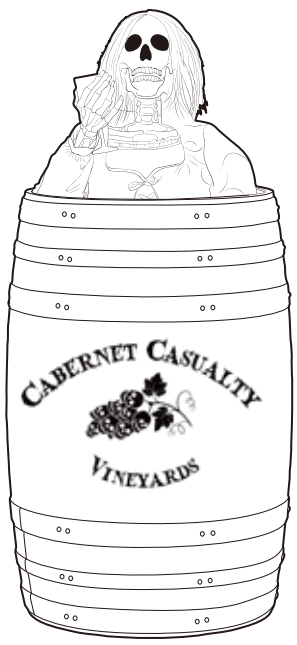

Questions or feedback? Our customer support team is ready to help! To learn more about our policies, get assembly assistance, shop parts, and connect to our community, visit sviservice.com or email us at customerservice@svius.com or call Home Accents Holiday Customer Service 8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-855-HD-HOLIDAY (1-855-434-6543)
HOMEDEPOT.COM


PARTS LIST


A. Base x 1
B. Launcher x 1
C. Body and Head x 1
D. Shirt x 1
E. Right Arm and Glass x 1
F. Back Frame x 1
G. Barrel Part with Control Box x 1
H. Barrel Part with Sensor x 1
I. Barrel Part x 1
J. Cover x 1
K. Small Parts Bag x 1
L. Adapter* Indoor x 1

Power Adapter * Spec
Input: 100-240V~50/60Hz
Output: 5.9V ⎓ 2.0A
Wattage: 11.8W




NOTE: Throughout the instructions, Right and Left are from the character's point of view.

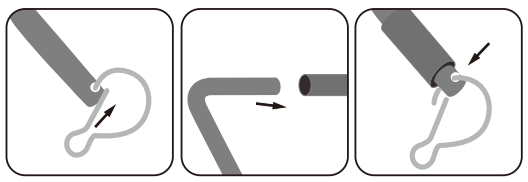

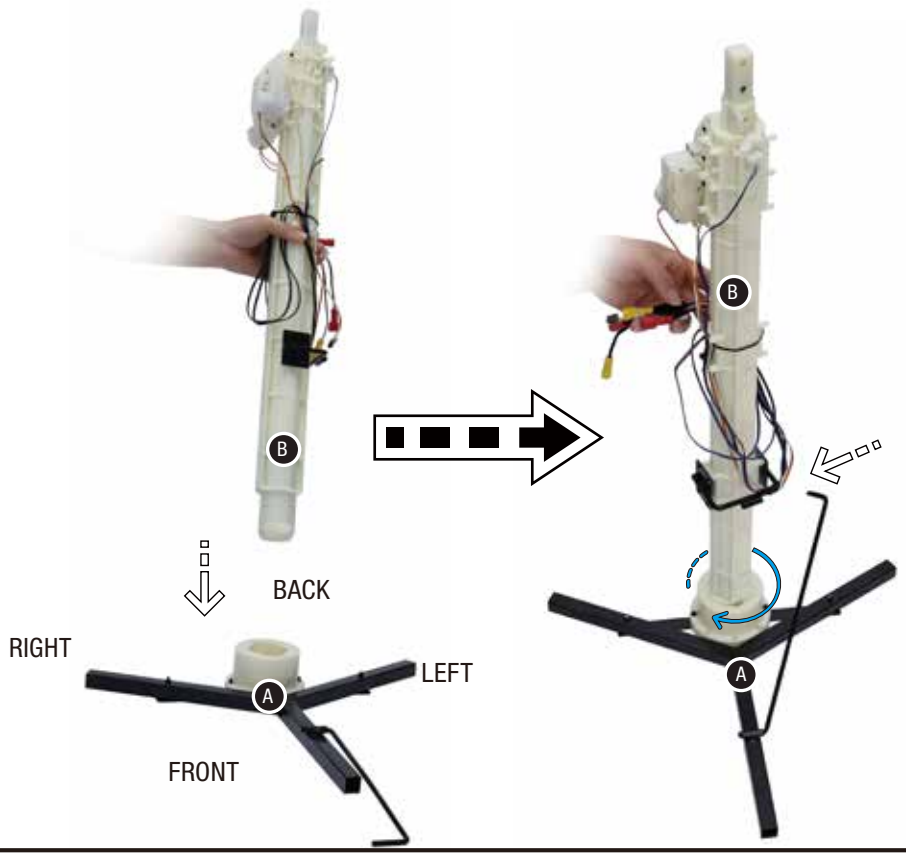

1.1

WARNING: IMPACT RISK - Please be mindful of the launcher! Do not operate without the head assembled to the mechanism. Avoid being within 1 foot of the head during operation.

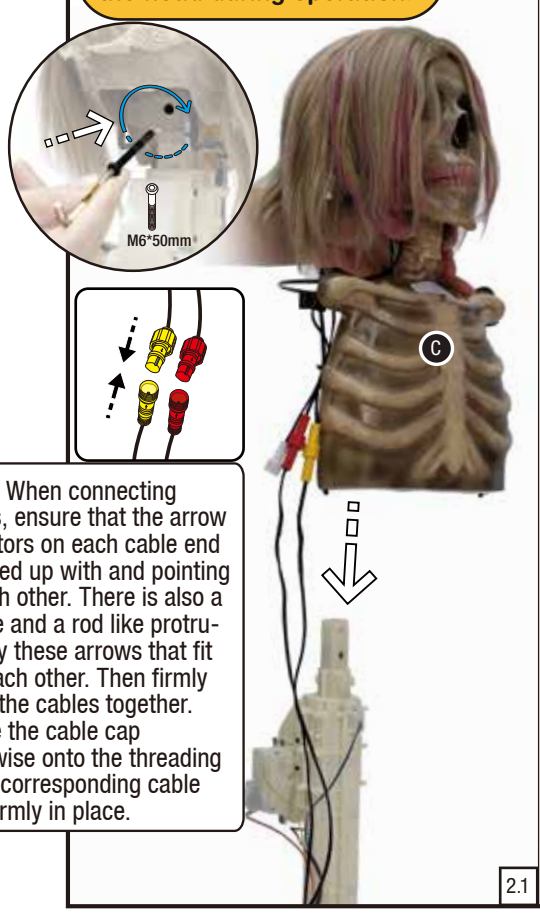


NOTE: When connecting cables, ensure that the arrow indicators on each cable end are lined up with and pointing at each other. There is also a groove and a rod like protrusion by these arrows that fit into each other. Then firmly press the cables together. Rotate the cable cap clockwise onto the threading of the corresponding cable until firmly in place.


2.1



2.2

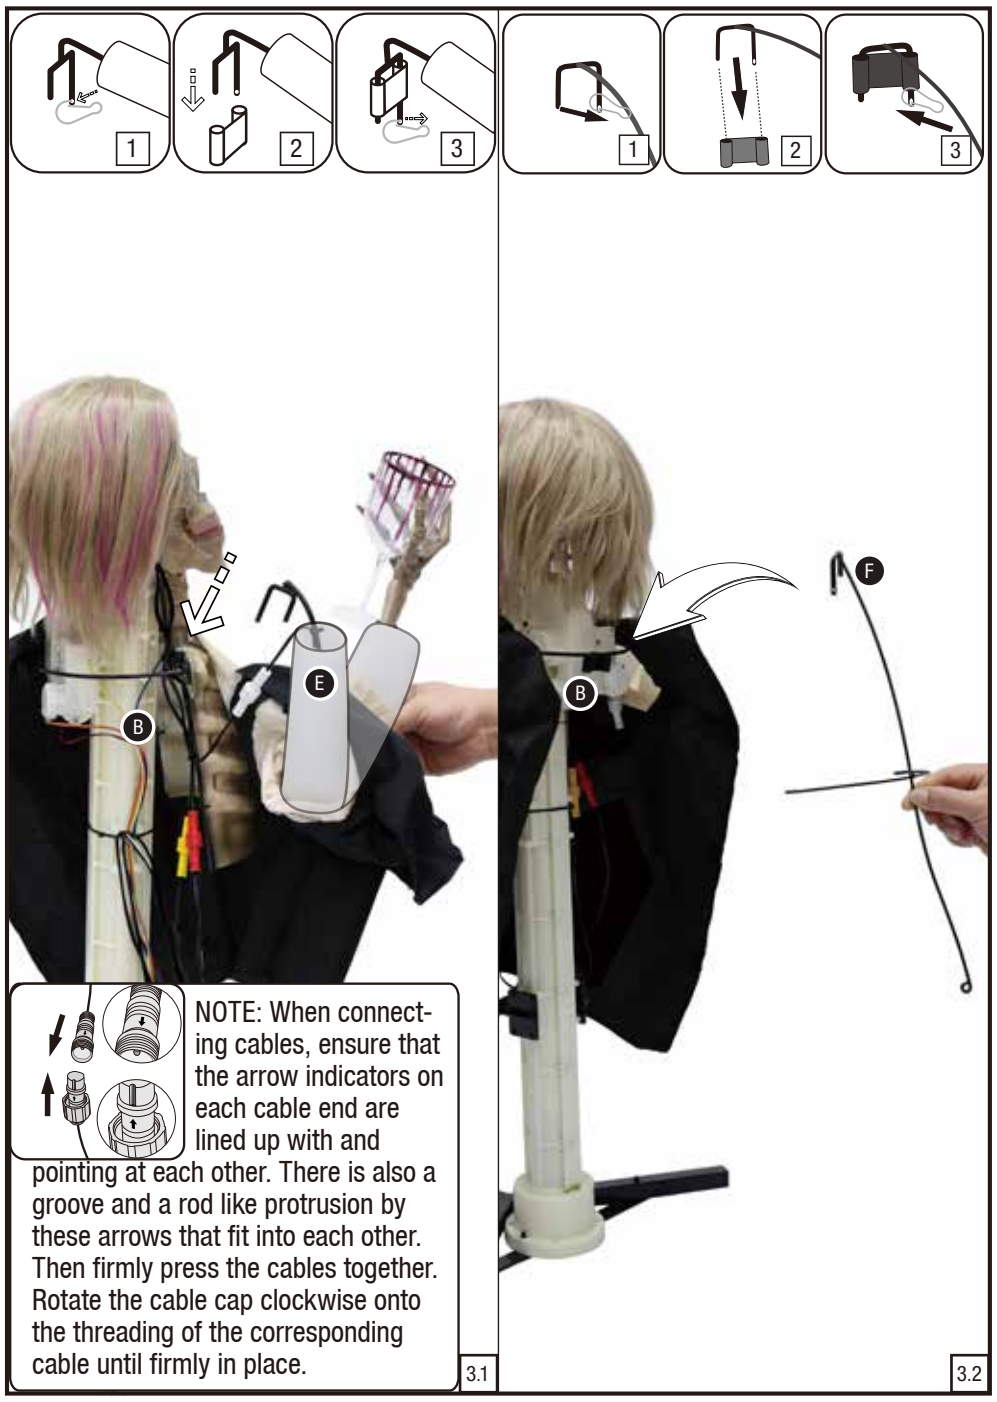




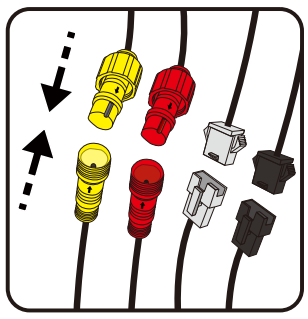



NOTE: Attach (H) Barrel Part with Sensor to the (G) Barrel Part with Control Box before connecting the sensor cables.

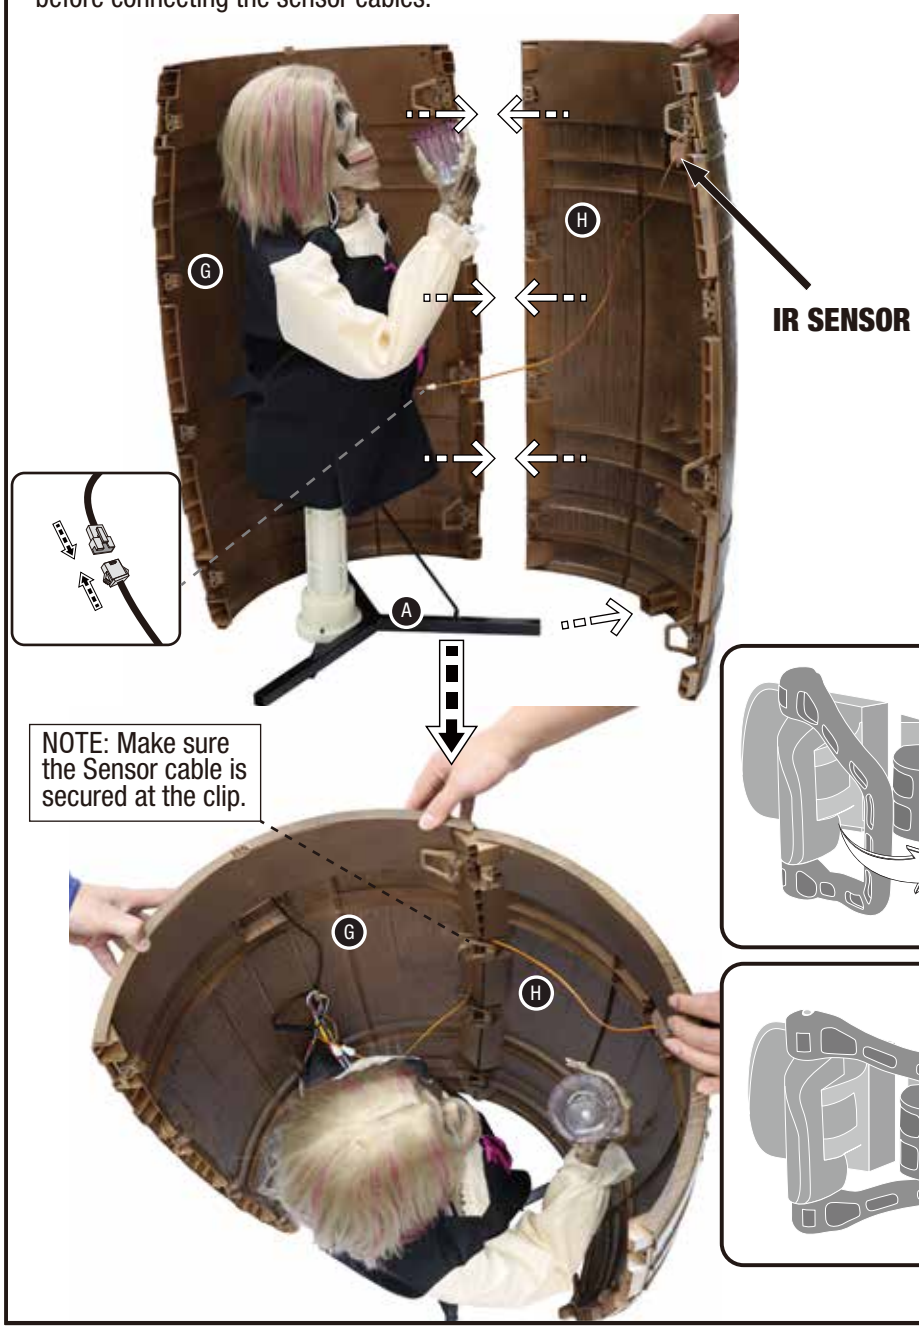





NOTE: Place the (J) Cover on the barrel when not in use or to display as a barrel prop only. Do not place the lid askew and operate the item.

CAUTION: Item will not operate when lid is placed on top of barrel due to stop switch



7.1


4.5FT GRAVE & BONES ANIMATED LED CABERNET CASUALTY IS NOW FULLY ASSEMBLED. PLUG IN AND TURN ON TO LET THE FUN BEGIN!



IR SENSOR
Be sure nothing is blocking the sensor.

Plug the adapter into the Function Control Box.

L
ADAPTER

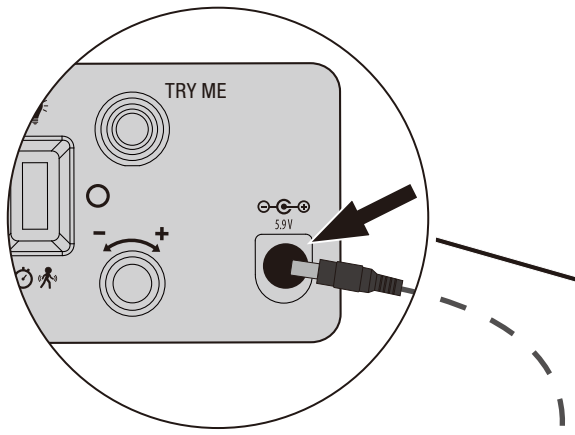



OPERATION INSTRUCTIONS:

1. Plug the power adapter into a standard power outlet and adjust the settings on the Function Control Box, located on the (G) Body Frame Barrel Part with Control Box, as desired.

2. Settings:

	LIGHTS ONLY / ÉCLAIRAGE UNIQUEMENT / SÓLO LUCES	Lights are activated indefinitely.
	OFF • STEP PAD / ARRÊT • TAPIS ÉLECTRONIQUE / APAGAR • ALMOHADILLA DE PASO	This switch mode allows the item to be activated only if triggered by using a Step Here Try Me Activation Pad (Not Included). The first press will activate the activity cycle. If pressed a second time during the activity cycle, the activity cycle will end immediately and the prop will retract into the barrel if it has already popped out. If pressed a third time, the following activity cycle will be activated only if the prop has fully retracted into the barrel.
	TIMER • SENSOR / MINUTEUR • DÉTECTEUR / TEMPORIZADOR • SENSOR	In this switch mode, the prop enters a 6-hour active period followed by an 18-hour inactive period. During the 6-hour active period, the lights are on "indefinitely" for the 6 hour period and the sound and animation activate when the Infra-red (IR) sensor is triggered and will operate for 1 activity-cycle with each activation. The Infra-red (IR) sensor has a range of up to 4 m/13 ft. and will activate when someone comes within an 80-degree angle from left-to-right, as well as from above and below. During the 18-hour inactive period, the lights, sound, and animation cannot be activated and the active/inactive cycle will continue indefinitely unless the switch mode is changed.
		Raise or lower the volume using the volume control turn dial, turn all the way down to turn the volume off.

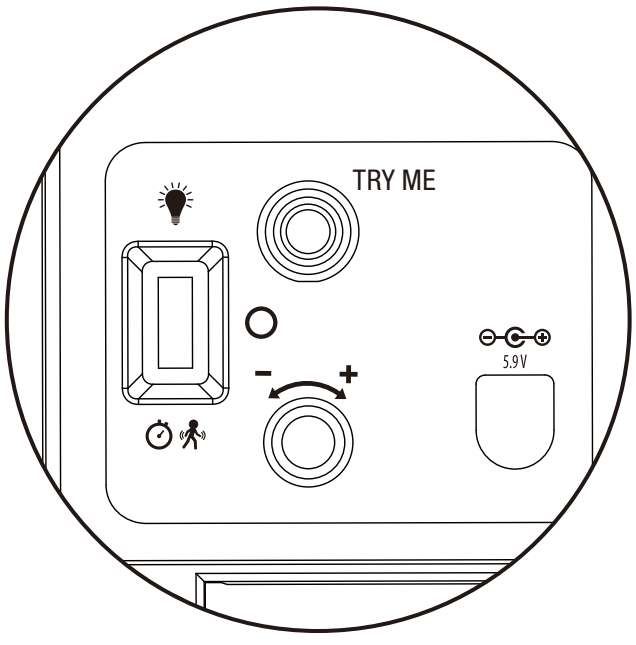

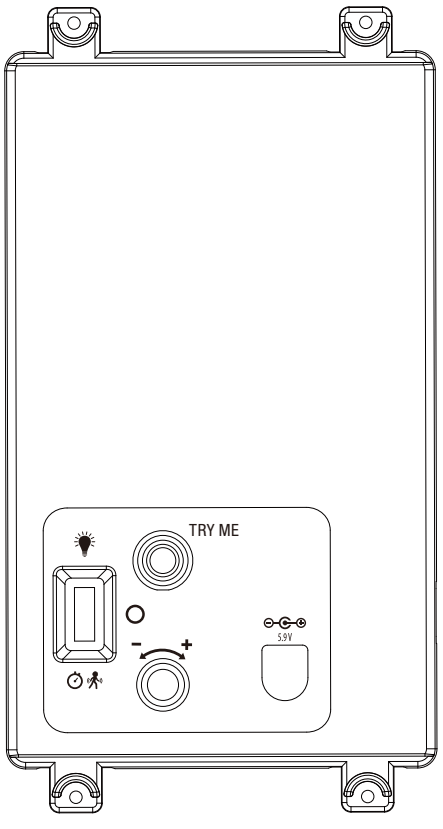

THIS PRODUCT IS COMPATIBLE WITH EXTERNAL TIMERS AND PRESERVES ITS SETTING WHEN THE POWER IS TURNED OFF/ON.

WARNING

This item is not a toy and should be used for decoration only. This item contains small parts that can be a choking hazard. Keep all plastic and wire parts away from children.

1. Please use the adapter supplied by manufacturer.
2. Please assemble item according to instructions. Connect all wires according to matching color.
3. Children should be supervised by adults. Item should not be grabbed, as it becomes a tipping hazard. Keep flammables away from the adapter, as it heats up during operation.

Please view all instructions carefully before assembling. Save this instruction sheet for future reference.

CARE AND STORAGE INSTRUCTIONS

For best performance operate your item indoors. When not in use, store this product in its original packing. Keep away from heat and moisture.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna, Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or experienced radio/TV technician for help.

CAN ICES (B) / NMB (B)

IMPORTANT TIPS:

- Place the (J) Cover on the barrel when not in use or to display as a barrel prop only. Do not place the (J) Cover askew and operate the item.
- Ensure that the item's adapter is plugged in at the Function Control Box and in the wall.
- Ensure that the switch on the function control box is on the desired setting.
- If not functioning properly (ex: Mouth doesn't move, eyes don't light up, body doesn't pop up move), ensure that cables are connected to their corresponding cable as shown in the instruction sheet.
- Be sure nothing is blocking movement or caught in moving parts.
- Ensure that the floor or surface that the item sits on is flat and level.
- Ensure that the volume is not all the way down.
- Be sure nothing is blocking the sensor.

Questions or feedback? Our customer support team is ready to help! To learn more about our policies, get assembly assistance, shop parts, and connect to our community, visit sviservice.com or email us at customerservice@svius.com or call Home Accents Holiday Customer Service 8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-855-HD-HOLIDAY (1-855-434-6543)
HOMEDEPOT.COM