
Item # 1013854052

Model # 25WL50158

USE AND CARE GUIDE

50 Multi-Colored C9 LED Lights

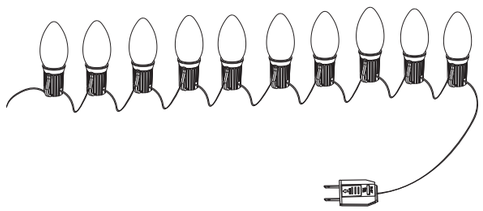

THANK YOU

We appreciate the trust and confidence you have placed in Home Accents through the purchase of this 50 Multi-Colored C9 LED Lights. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Home Accents!

Questions, problems, missing parts? Before returning to the store, call Home Accents Holiday Customer Service
8 a.m.- 7 p.m., EST, Monday-Friday, 9 a.m. - 6 p.m., EST, Saturday

1-855-HDHOLIDAY(1-855-434-6543)

HOMEDEPOT.COM

Retain this manual for future use.

Safety Information

IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, basic precautions should always be followed including the following: Please read and follow all safety instructions prior to use.

- **READ AND FOLLOW ALL SAFETY INSTRUCTIONS.**
- Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
- This seasonal use product is not intended for permanent installation or use.
- Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- Do not use this product for other than its intended use.
- Do not hang ornaments or other objects from cord, wire, or light string.
- Do not let lamps rest on the supply cord or on any wire.
- Do not cover the product with cloth, paper or any material not part of the product when in use.
- This product has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electrical shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not use with an extension cord unless plug can be fully inserted. Do not alter or replace the plug.
- This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Also unplug any additional strings or products that may be attached to the product. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded.
- Read and follow all instructions that are on the product or provided with the product.
- **SAVE THESE INSTRUCTIONS.**

WARNING: This is an electric product – not a toy! To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.

WARNING: To avoid the risk of fire, burns, or personal injury, do not cover the product with cloth, paper, or any material not part of the product when in use.

CAUTION: Do not mount or place near gas or electric heaters, fireplace, candles or other similar sources of heat.

CAUTION: Grasp the plug to insert or remove from the power source. Do not unplug by pulling on the cord.

CAUTION: Before you use or re-use this product, inspect it carefully. Discard if the product has cuts, damage, frayed wire insulation on cords, cracks in the socket enclosures, lose connections, or exposed copper wire.

CAUTION: Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.

CAUTION: Do not close doors or windows on the product or extension cords as this may damage the wire insulation.

CAUTION: DO NOT PLACE THIS PRODUCT ON THE CARPET OR ANY TEXTILE MATERIAL.

Operation

Use and Care Instructions

a) These bulbs are made of glass, please be careful during setup and storage process. These bulbs might be burned out if they keep swinging in the wind. To avoid this, please do not turn on this product before finishing setup process and fixing bulbs in position.

b) When the product is placed on a live tree, the tree should be well maintained and fresh. Do not place on live trees in which the needles are brown or break off easily. Keep the tree holder filled with water.

c) If the product is placed on a tree, the tree should be well secured and stable.

d) Before using or reusing, inspect product carefully. Discard any products that have cut, damaged, or frayed wire insulation or cords, cracks in the lampholders or enclosures, loose connections, or exposed copper wire.

e) When storing the product, carefully remove the product from wherever it is placed, including tree, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections, and wires.

f) When not in use, store neatly in a cool, dry location protected from sunlight.

User Servicing Instructions

Replace the fuse.

- Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
- Open fuse cover. Slide open fuse access cover on top of attachment plug towards blades.
- Remove fuse carefully.
- Risk of fire. Replace fuse only with 5 Amp, 125 Volt fuse (provided with product).
- Close fuse cover. Slide closed the fuse access cover on top of attachment plug.
- Risk of fire. Do not replace attachment plug. Contains a safety device (fuse) that should not be removed. Discard product if the attachment plug is damaged.




Spare fuse


User Servicing Instructions

Replace the lamp.

CAUTION- Replace only with same type 0.6 Watt Max intermediate-base UL Classified lamps.

- Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
- Carefully unscrew lamp counter-clockwise.
- Replace lamp with same type 0.6 Watt Max intermediate-base C9 UL Classified lamps by screwing in clockwise. Do not over-tighten.





CAUTION- To reduce the risk of fire do not deliberately reposition either lampholder contact.

CAUTION- To reduce the risk of fire and electric shock: a) Do not install on trees having needles, leaves or branch coverings of metal or materials which look like metal, and b) Do not mount or support strings in a manner that can cut or damage wire insulation.

If connecting to a lighting string that does not have a Wattage (W) rating {found on the tag within 6 inches of the plug} calculate the wattage as follows: Multiply the current (0.25 A) which is on the flag-type tag by 120.
For Example: Lighting string is rated 120 V, 60 Hz, 0.25 Amps. 0.25 X 120 = 30 Watts
Add the wattage of each light string together for a total of 432 Watts or less. (Do not exceed 432 Watts)

Warranty: 1-year Limited Warranty with original proof of purchase.

Date Code: 04012025_2008499

UL Model No. C950E0.6