


# Troubleshooting

| Problem | Cause | Remedy |
|---|---|---|
| Engine fails to start | Primer bulb hasn't been used | Press the primer bulb |
| | Wrong fuel storage without emptying the fuel tank | Empty the fuel tank and carburetor<br>Add some fresh gas |
| | Soot spark plugs(soot deposits on the electrodes), large gap between the electrodes. | Clean the spark plug, check the heat value of the spark plug, replace the spark plug, if necessary adjust the gap to the electrodes 0.6-0.7mm |
| | Spark is fertilized with gasoline. (Engine "floods") | Dry the spark plug and reinstall it |

## Accessories List

| Picture | Name | Quantity |
|---|---|---|
|  | Spark Plug Wrench | 1 |
|  | Screwdriver | 1 |
|  | Double-Headed Wrench | 1 |
|  | User Manual | 1 |
|  | Hexagon flange head tapping screw | 4 |
|  | Flange lock nut | 2 |
|  | Bolt | 2 |
|  | Side discharge chute | 1 |
|  | Front Wheel Assembly | 1 |
|  | Lawn Mower | 1 |

# KNOW YOUR UNIT

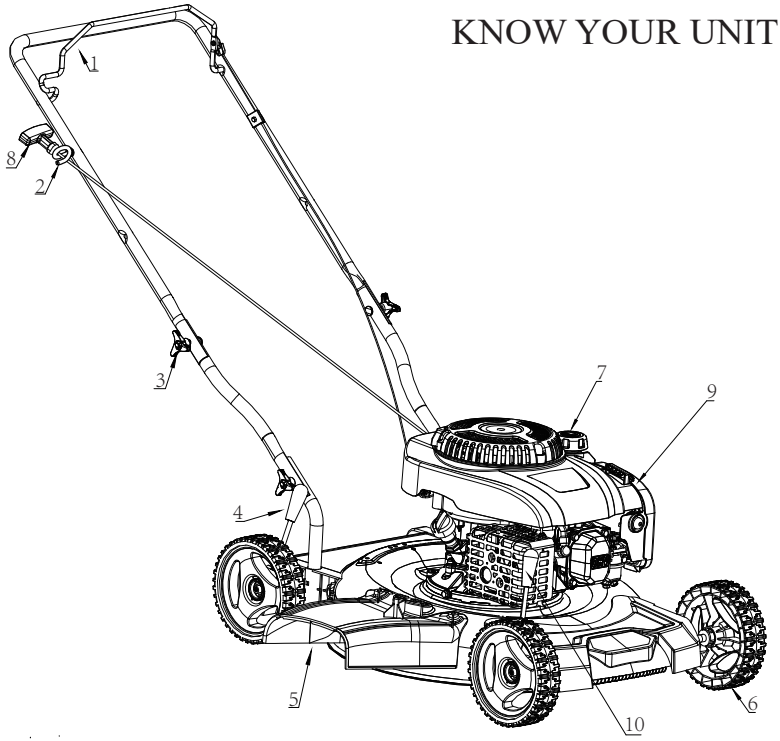


1.Safety Stop Lever

2.Start hook

3.Handle fixing knob

4.Rear height adjusting handle lever

5.Side discharge chute


6.Wheel

7.Fuel Cap

8.Pull Starter

9. Air Filter

10. Front height adjusting handle lever

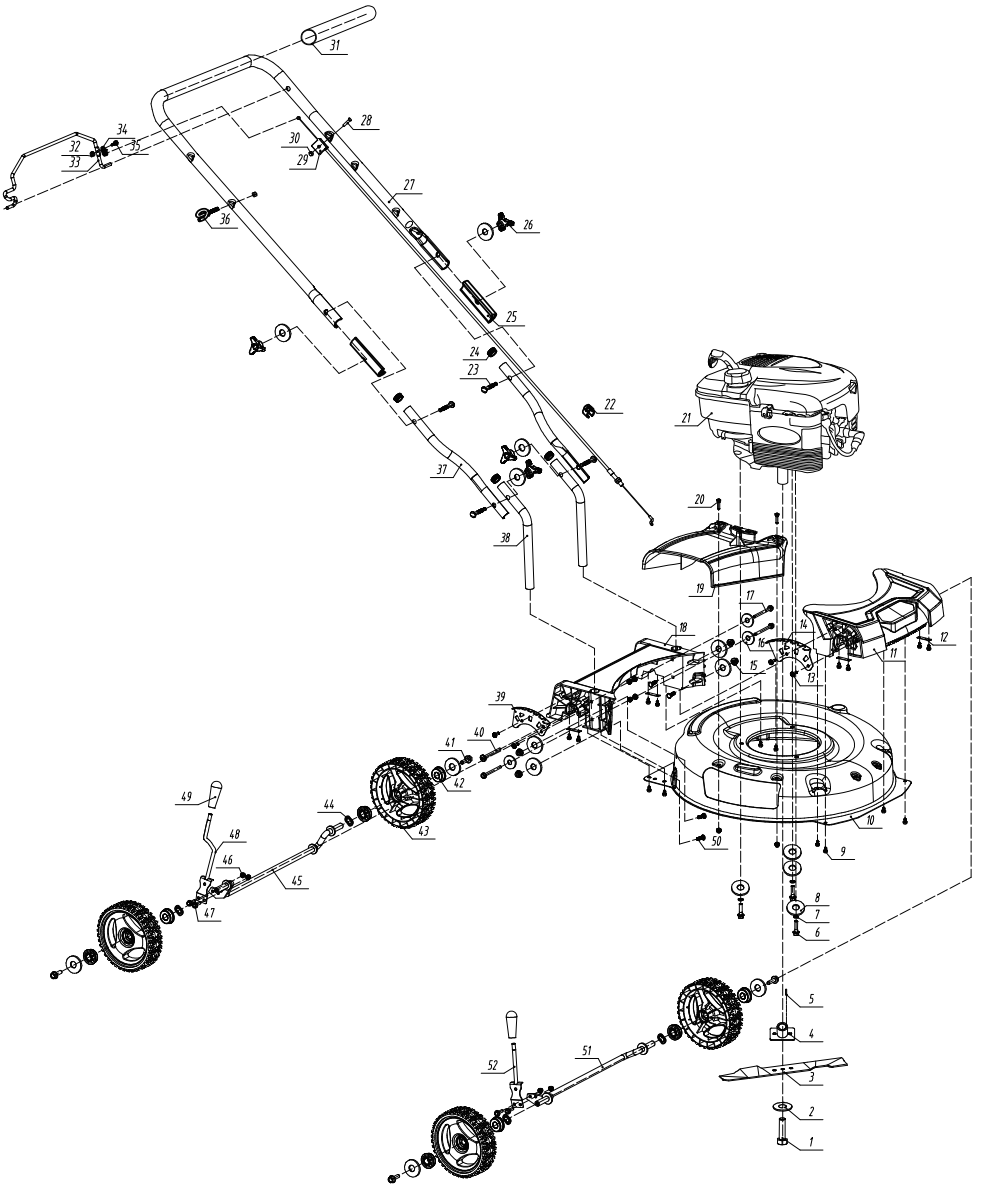
31
28
34
32
35
33
30
29
27
36
26
25
24
23
22
37
21
20
38
19
17
18
16
14
12
15
13
11
39
40
41
42
10
49
44
43
50
9
48
46
45
8
7
47
6
5
4
51
3
52
2
1

| NO. | Name | Quantity |
|---|---|---|
| 1 | Hexagon head bolt（8-24UNF-2B*35） | 1 |
| 2 | Belleville spring washer | 1 |
| 3 | Blade | 1 |
| 4 | Blade adapter | 1 |
| 5 | Flat key | 1 |
| 6 | Bolt（M8*30） | 3 |
| 7 | Washer（Φ8） | 3 |
| 8 | Flat washer（Φ8.4*Φ24*2） | 16 |
| 9 | Hexagon flange head tapping screw（ST6.3×18） | 16 |
| 10 | Deck assy | 1 |
| 11 | Front cover | 1 |
| 12 | Rear wheel axle pressure plate | 4 |
| 13 | Cross recessed pan head self-tapping screw | 4 |
| 14 | Front height adjusting teeth plate | 1 |
| 15 | Flange lock nut（M8） | 4 |
| 16 | Flat washer（Φ6.4*Φ18*1.5） | 3 |
| 17 | Bolt（M6*45） | 3 |
| 18 | Rear discharge chute | 1 |
| 19 | Side discharge chute | 1 |
| 20 | Bolt（M6*25） | 2 |
| 21 | Engine assembly | 1 |
| 22 | Cable clip (two slots) | 1 |
| 23 | Special-shaped bolt | 4 |
| 24 | Lower handle plug | 4 |
| 25 | Insulating spacer sleeve | 2 |
| 26 | Handle fixing knob | 4 |
| 27 | Upper handle | 1 |
| 28 | Special-shaped bolt | 1 |
| 29 | Safety stop cable assembly | 1 |
| 30 | Cap nut | 1 |
| 31 | Handle sponge | 1 |
| 32 | Lock nut（M5） | 1 |
| 33 | Safety stop lever | 1 |
| 34 | Cable clip | 1 |
| 35 | Cable clip bolt | 1 |
| 36 | Start hook | 1 |
| 37 | Left & Right connecting lever | 2 |
| 38 | Left & Right lower handle | 2 |
| 39 | Rear height adjusting teeth plate | 1 |
| 40 | Screw（M6*45） | 1 |
| 41 | Bolt（M8*16） | 4 |
| 42 | Plastic bearing | 8 |
| 43 | Wheel | 4 |
| 44 | Wave spring washer | 4 |
| 45 | Rear axle seaming | 1 |
| 46 | Flange lock nut | 10 |
| 47 | Bolt（M6*16） | 4 |