

MY FOLDAWAY™ RECHARGEABLE FAN



FLOOR FAN & TABLE FAN

2 in 1




INSTRUCTIONS


CONGRATULATIONS!

Thank you for purchasing MyFoldaway Rechargeable Fan! It turns from Table Fan to Floor Fan with ease. The telescopic arm extends up to 40 inches in height. So compact, just simply fold and store it away when not in use. It's a must have for your home!

PARTS AND FEATURES

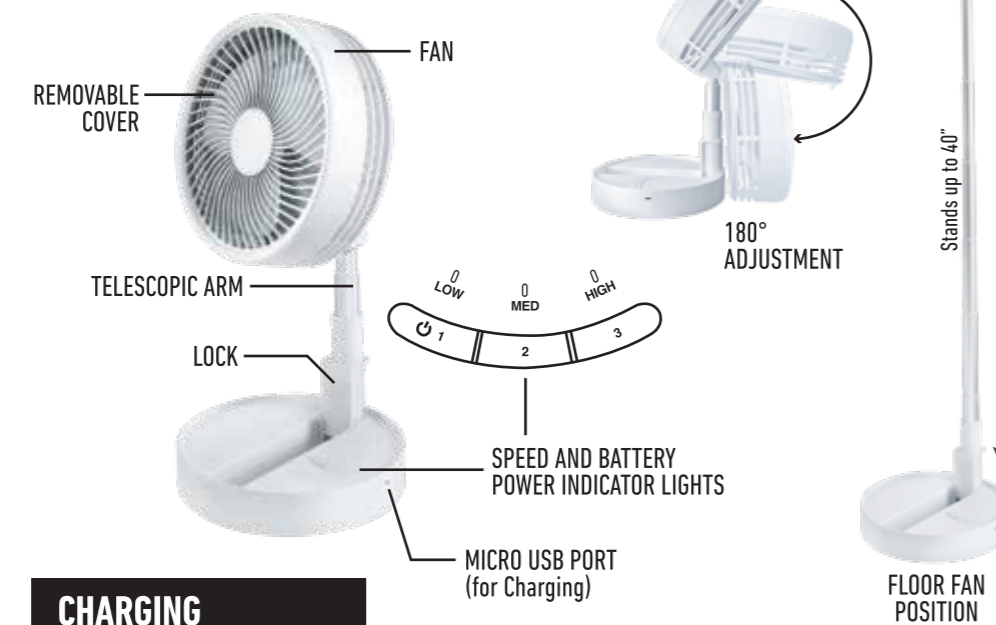

CHARGING

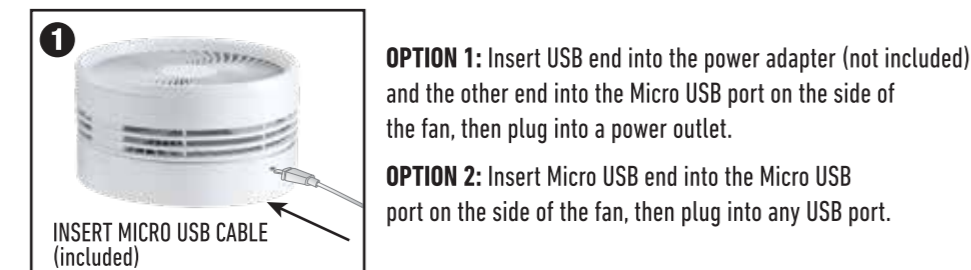

1 Once plugged in, charging will start automatically. Indicator lights will display the charging process. Fan can operate while charging.

Less than 39% battery power remaining: Indicator lights will cycle through Low, Med and High while charging.

40% to 69% charged: Indicator lights will cycle through Med and High, while the light for Low will remain solid.

70% to 99% charged: Indicator lights for High will blink, while the lights for Low and Med will remain solid.

Fully charged: All 3 Indicator lights will remain solid.


SET-UP TABLE FAN



Hold the base of the fan down with one hand and lift the top up with the other hand.



Bring the arm UP.

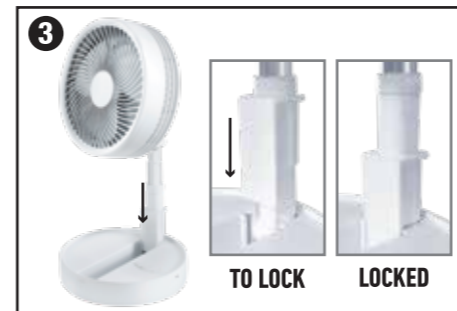

Lock the arm by sliding the lock DOWN.


SET-UP FLOOR FAN




Hold the base of the fan down with one hand and lift the top up with the other hand.



Bring the arm UP.

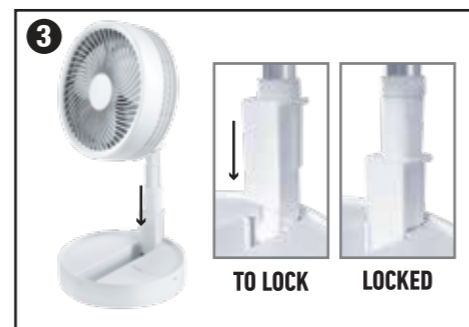


Lock the arm by sliding the lock DOWN.

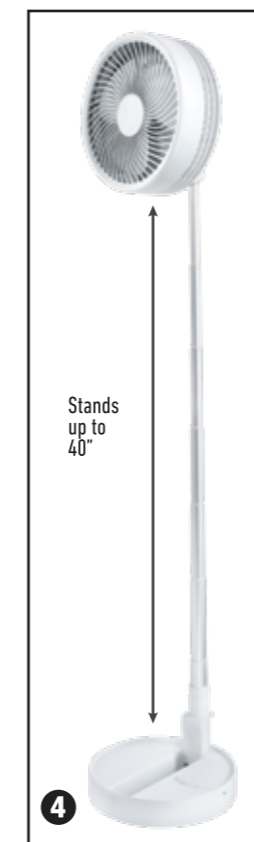


Extend the telescopic arm to the desired height.

OPERATION

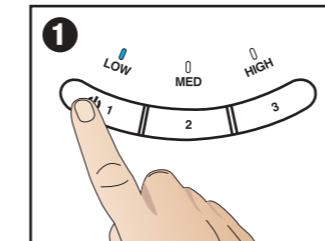

Press and hold the **1 (ON/OFF)** button for **three seconds** to turn on the fan on **LOW** mode. This is a default mode. LOW indicator light will briefly illuminate.
For **MED** mode: Press the **2** button. MED indicator light will briefly illuminate.
For **HIGH** mode: Press the **3** button. HIGH indicator light will briefly illuminate.

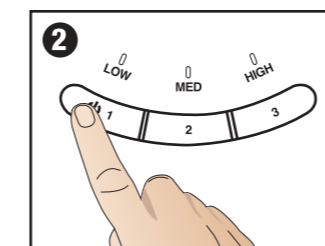

Press and hold the **1 (ON/OFF)** button for **three seconds** to turn the fan OFF.


While the fan is on, 3 LED Indicator lights will display current battery power. Refer to the Battery Power Chart (on right) to check the unit's current battery power.

The fan will automatically shut down when the battery power runs out.

BATTERY POWER CHART

| LED LIGHTS | BATTERY POWER REMAINING |
|--------------|-------------------------|
| LOW MED HIGH | 100% to 70% |
| LOW MED HIGH | 69% to 40% |
| LOW MED HIGH | 39% to 10% |
| LOW MED HIGH | less than 10% |

CLEANING

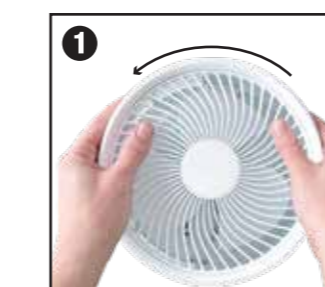

To remove cover, press down with both thumbs and twist the cover counterclockwise.



Clean off the dust from cover. Cover is washable. Use a soft, damp cloth to clean inside of the fan. **Do not immerse the fan in water or any other liquid.**




Align the grooves on the fan and the cover. Follow the markings. Place cover back on.



While pressing down with both thumbs, twist the cover clockwise.

STORAGE

When done using the fan, make sure to return it to its folded position.

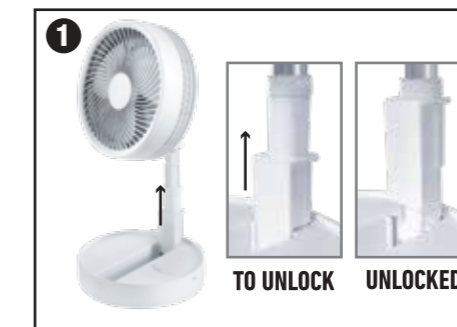

Unlock the arm by sliding the lock UP.



Bring the arm DOWN.



Fold down the top part of the fan.

IMPORTANT SAFEGUARDS

Before using the electrical appliance, these basic precautions should always be followed:

1. Read all instructions.
2. Keep fan out of reach of children.
3. Do not operate any appliance after it malfunctions, or is dropped, or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
4. This appliance is not intended for use by individuals (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
5. Never place the fan in an area where it is accessible to children.
6. Never place anything over the fan when it's running.
7. Never insert or drop any object into any of the openings.
8. DO NOT use outdoors.
9. Always place the fan on a firm, flat, level surface.
10. Fan should be turned off when not in use or during cleaning.
11. Do not move the fan while it's running. Switch it off before moving the unit.

SPECIFICATIONS

| | |
|---------------------|------------------------------|
| Size | 19.7x19.7x10.2cm(folded) |
| Dimensions | 19.7x19.7x101.0cm(extension) |
| Net Weight | 1020g |
| Modes | Low/Med/High |
| Battery Capacity | 3600mAh |
| Battery Run Time | Low/Med/High(10/4.5/2.2 h) |
| Battery Charge Time | 5.5 h |
| Electrical Rating | Low/Med/High(1.4/2.6/4.9W) |
| Voltage | 3.7v |

This product uses a Lithium battery. When it can no longer be used, it should be removed from the unit and recycled. The battery must not be incinerated or composted. The battery can be taken for disposal to any local retailer participating in the national recycling program sponsored by the RBRC (SEE RBRC seal). Call your local details, or the RBRC hotline at 1-800-820-8837 for the closest recycling center to you.

MY FOLDAWAY™ FAN
ITEM NO. 7039FEB
DISTRIBUTED BY
NEW YORK, NY 10001 USA
©2020 EMSON® ALL RIGHTS RESERVED
MADE IN CHINA.

emsoninc.com
1.800.423.4248

MY FOLDAWAY^{MC}

RECHARGEABLE FAN



VENTILATEUR DE PLANCHER
ET VENTILATEUR DE TABLE

2 en 1




INSTRUCTIONS


FÉLICITATIONS !

Merci pour votre achat du ventilateur rechargeable MyFoldaway ! Il se transforme d'un ventilateur de table à un ventilateur de plancher avec facilité. Le manche télescopique a une extension jusqu'à 40 pouces en hauteur. Tellement compact, vous n'avez qu'à le plier et le ranger lorsque vous ne vous en servez pas. C'est un incontournable pour votre foyer !

COMPOSANTS ET CARACTÉRISTIQUES

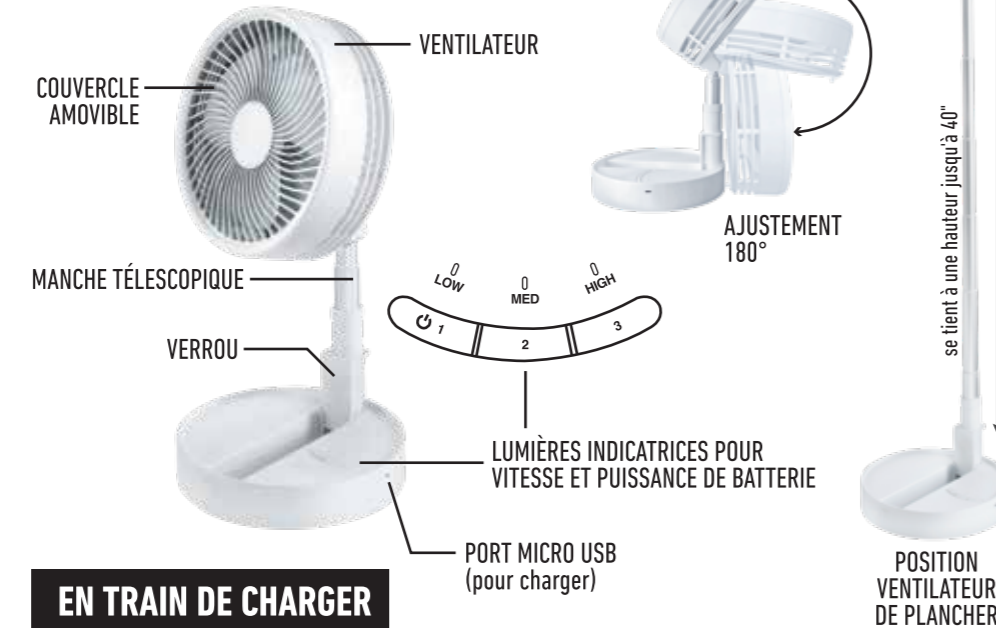

EN TRAIN DE CHARGER

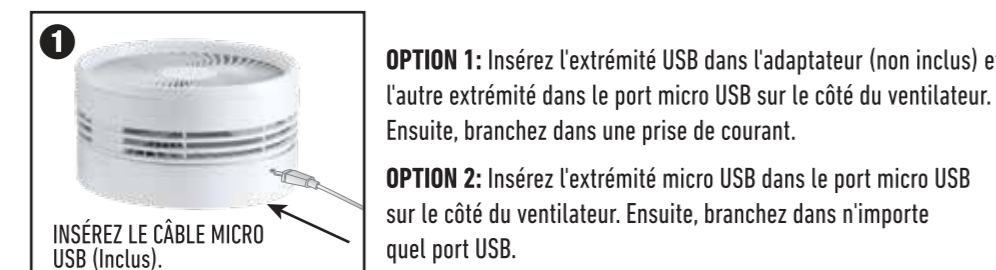

2 Un fois branché, le chargement commencera automatiquement. Les lumières indicatrices afficheront le progrès du chargement. Le ventilateur peut fonctionner tout en se rechargeant.


Moins de 39% restante d'énergie de la batterie : Les lumières indicatrices passeront de basses (Low), Moyennes (Med) à hautes (High) tout en chargeant.

40% à 69% chargé : Les lumières indicatrices passeront de Moyennes (Med) à hautes (High), tandis que la lumière indiquant énergie basse (Low) restera allumée.

70% à 99% chargé : Les lumières indicatrices pour énergie Haute (High) clignoteront tandis que celles indiquant énergie basse (Low) et moyennes (Med) resteront allumées.

Complètement chargé : Les trois lumières indicatrices resteront allumées.

MONTAGE DU VENTILATEUR DE TABLE

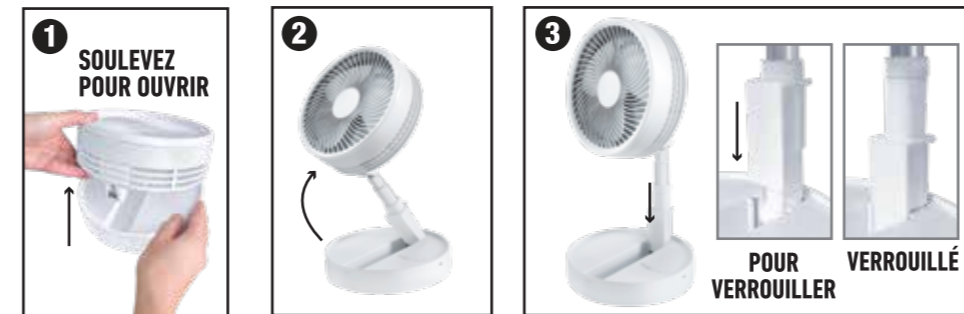

Tenez la base du ventilateur sur une surface avec une main tout en soulevant le haut avec l'autre main.

MONTAGE DU VENTILATEUR DE PLANCHER




Tenez la base du ventilateur sur une surface avec une main tout en soulevant le haut avec l'autre main.



se tient à une hauteur jusqu'à 40"

FONCTIONNEMENT

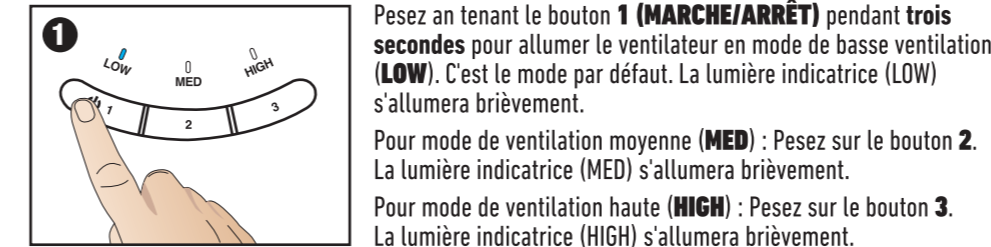

Pendant que le ventilateur est allumé, 3 lumières indicatrices DEL afficheront le statut de la batterie. Référez vous au tableau d'énergie de batterie (à droite) pour vérifier l'énergie de batterie courante.

Le ventilateur s'éteindra automatiquement lorsque la batterie sera vide.

TABLEAU D'ÉNERGIE DE BATTERIE

| LUMIÈRES DEL | POUISSANCE RESTANTE |
|--------------|---------------------|
| LOW MED HIGH | 100% à 70% |
| LOW MED HIGH | 69% à 40% |
| LOW MED HIGH | 39% à 10% |
| LOW MED HIGH | moins de 10% |

NETTOYAGE



IMPORTANT: Assurez-vous que l'unité soit éteinte avant de nettoyer. **Ne submergez pas dans l'eau ou autre liquide.**



RANGEMENT

Lorsque vous avez terminé d'utiliser le ventilateur, assurez vous de le replier dans sa position de rangement.



SAUVEGARDES IMPORTANTES

Avant d'utiliser cet appareil électrique, des mesures de sécurité de base doivent être prises :

1. Lisez toutes les instructions.
2. Tenez le ventilateur hors de la portée des enfants.
3. N'opérez pas un appareil s'il ne fonctionne pas bien, ni s'il est échappé ou endommagé de quelque façon. Rapportez l'appareil au point de service le plus près pour qu'il soit examiné, réparé ou qu'il soit ajusté électriquement ou mécaniquement.
4. Cet appareil n'est pas conçu pour des personnes (incluant les enfants), avec capacités physiques, sensorielles ou mentales réduites, ni pour des personnes sans expérience ni connaissances à moins qu'elles ne soient bien supervisées et bien instruites sur le fonctionnement de l'appareil par une personne responsable de leur sécurité. Les enfants doivent être surveillés pour s'assurer qu'ils ne jouent pas avec l'appareil.
5. Ne placez jamais l'appareil dans une zone accessible aux enfants.
6. Ne recouvrez jamais le ventilateur lorsqu'il est allumé.
7. Ne jamais échapper ni insérer aucun objet dans les ouvertures.
8. N'UTILISEZ PAS À L'EXTÉRIEUR.
9. Placez toujours le ventilateur sur une surface plane et ferme.
10. Le ventilateur doit être débranché lorsqu'il n'est pas utilisé ou que vous le nettoyez.
11. Ne déplacez pas le ventilateur pendant qu'il est en marche. Éteignez le si vous le déplacez.

SPÉCIFICATIONS

| | |
|-------------------------|---------------------------------------|
| Grandeur | 19.7x19.7x10.2cm (plié) |
| Dimensions | 19.7x19.7x101.0cm (en extension) |
| Poids net | 1020g |
| Modes | Bas (low) / Moyen (Med) / Haut (High) |
| Capacité de la batterie | 3600mAh |
| Durée de la batterie | Low/Med/High(10/4.5/2.2 h) |
| Temps de chargement | 5.5 h |
| Évaluation électrique | Low/Med/High(1.4/2.6/4.9W) |
| Tension électrique | 3.7v |

Ce produit est muni d'une batterie au lithium. Lorsqu'elles ne peuvent plus être utilisées, elles devront être retirées de l'unité et recyclées. Cette batterie ne doit pas être incinérée ou compostée. La batterie peut être déposée chez tout détaillant participant au programme de recyclage commandité par RBRC (VOIR SCAEU RBRC). Vérifiez avec votre municipalité ou appelez le numéro sans frais 1-800-820-8837 pour obtenir l'adresse du dépôt le plus près de chez vous.

MY FOLDAWAYTM FAN
ITEM NO. 7039FEB
DISTRIBUÉ PAR EMSON[®]
NEW YORK, NY 10001 É.-U.
©2020 EMSON[®] TOUS DROITS RÉSERVÉS
FABRIQUÉ EN CHINE.

EMSON emsoninc.com
1.800.423.4248