



**NOTE:** If the speaker does not turn on after pressing the ON/OFF button for 2 seconds (as outlined in the Use and Care Guide), then please refer to the below steps to reboot the speaker.

- 1** Press the ON/OFF button and the PAIR button at the same time for 3 seconds until the green light on the PAIR button is illuminated.

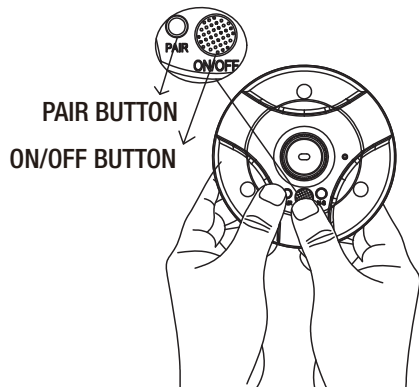


- 2** Press the ON/OFF button for 2 seconds to turn on the speaker.

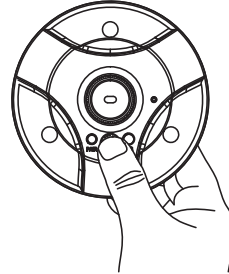

**NOTA:** Si la caja eléctrica para suelo no se enciende después de pulsar el botón de encendido/apagado (ON/OFF) durante 2 segundos (tal y como se indica en la Guía de Uso y Cuidado), consulte los siguientes pasos para restaurarla.

- 1** Pulse el botón de encendido/apagado (ON/OFF) y el botón PAIR a la vez durante 3 segundos hasta que se ilumine la luz verde del botón PAIR.

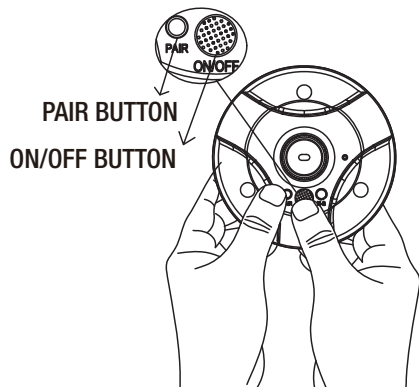

- 2** Pulse el botón encendido/apagado (ON/OFF) durante 2 segundos para encender la caja eléctrica para suelo.

