

Remove Filter Package (If Any)

Remove the packages of the filter before the first useage.

Zero Setting

- The accuracy of the pressure gauge might be affected by transportation.
- Before the first usage, you should zero the pressure gauge in order to ensure the accuracy of the measurement.

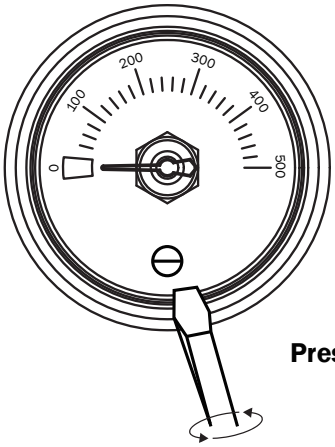


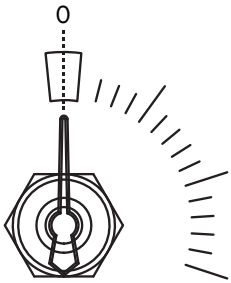

Pressure Gauge


- Use a straight screwdriver to adjust the zero setting screw on the pressure gauge, until the pointer stays in the middle of the zero sector.

Installing the Handle

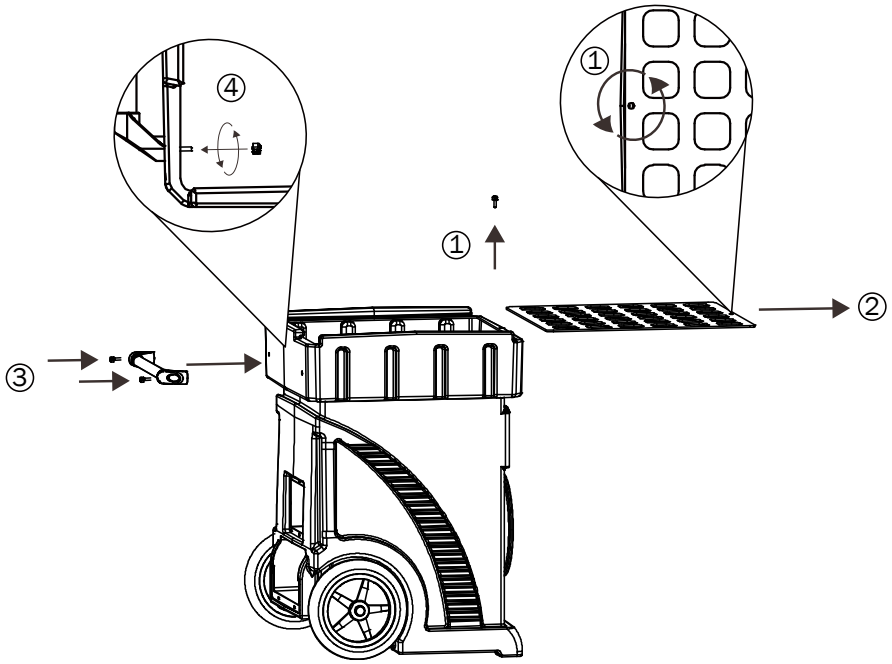

(1) Screw off the hex screw with a hex screw driver on the inlet grill cover。
(2) Take out the inlet grill cover.
(3) Put the screws through the holes on handle and the back of the machine housing.
(4) Fasten the screws with the nuts from the inner surface of the machine.

Extension Setup (Optional)

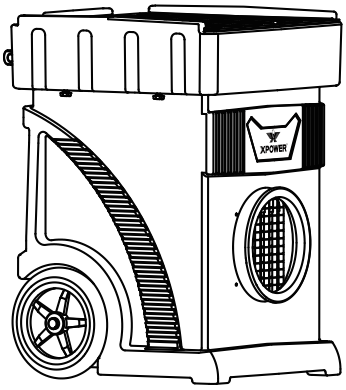



Exhaust Ducting

- Turn off the machine.
- Attach the ducting hose to the exhaust.

Selecting a Location (Important)

- **Enclosed Area:** For optimal efficiency and longer filter lifespan, the Air Scrubber should be operated in an enclosed area. Keep all doors, windows and other outside entrances to the room closed.
- **Air Circulation:** It's suggested to have a constant efficient air circulation inside your working area.
- **Environment Humidity:** For optimal efficiency and higher filter lifespan, the Air Scrubber should not be operated in an environment with a high relative humidity level. High humidity level could cause blockage and damage to filters.
- **Power Cord:** The power cord has a length of 25 feet (7.6 meters). Select a location where the power cord can reach the power source.
- **Inlet and Outlet Orientation:** Also pay attention to the orientation of the air inlet and air outlet. Make sure the airflow won't influence any object nearby the Air Scrubber.
- **IMPORTANT:** The effectiveness of the Air Scrubber can be influenced by different factors. You may also find that installing multiple Air Scrubbers may be required for larger enclosed areas.