OVENTE®

PORTABLE FAN HEATER

HE24B SERIES



Before use, please read this manual thoroughly and save for future reference.

PORTABLE FAN HEATER

HE24B SERIES

TABLE OF CONTENTS

IMPORTANT SAFEGUARDS 3

PARTS & FEATURES 5

USING YOUR FAN HEATER 6

CARE & MAINTENANCE 7

IMPORTANT SAFEGUARDS

To reduce the risk of burns, fire, electric shock, or injury, basic safety precautions should always be followed, including:

- This fan heater is for household use only.
- Connect the unit to a single phase AC supply of the voltage specified on the rating plate.
- In order to avoid overheating, do not cover the fan heater.
- Never leave unattended while in use. Always turn the function switch to 0 (off) and unplug it when not in use.
- Do not run the cable under carpeting, rugs, runners or the like. Arrange the cable away from high-traffic areas, where it will not be tripped over.
- Do not operate the fan heater with a damaged cable or plug, or if it malfunctions, or has been dropped or damaged in any manner.
- Avoid using an extension cable as it may overheat and cause a fire.
- Always use the fan heater on a dry, flat, heat-resistant surface. Do not place the cable near the hot surface of the fan heater.
- Use the fan heater in a well-ventilated area. Do not insert objects or block air outlets in any manner.

IMPORTANT SAFEGUARDS

To reduce the risk of burns, fire, electric shock, or injury, basic safety precautions should always be followed, including:


- Do not place this fan heater near flammable materials, such as furniture or curtains, as this may cause a fire.
- Do not use the fan heater in any area where gasoline, paint or other flammable liquids are stored, e.g., garages or workshops.
- Do not use this fan heater near a bath, shower or swimming pool. Never place it where it could fall into water.
- This fan heater should not be used by people (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they are supervised or have been given instructions concerning use of the fan heater by someone responsible for their safety.
- Caution – some parts of this fan heater can become very hot and cause burns. Pay careful attention when children are present.
- Do not use this fan heater with a programmer, timer, separate remote control system or any other device that switches the fan heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.
- Always use this heater in an upright position.
- Do not use the fan heater outdoors.
- Please note that the fan heater may give off a slight odor due to manufacturing residue. This should stop after one to three uses.

PARTS & FEATURES

1) INTEGRATED CARRY HANDLE
Safely move the unit between rooms

2) AIR OUTLETS
Circulate hot or cold air according to the selected setting

3) POWER INDICATOR LIGHT
Lets you know at a glance that the unit is on

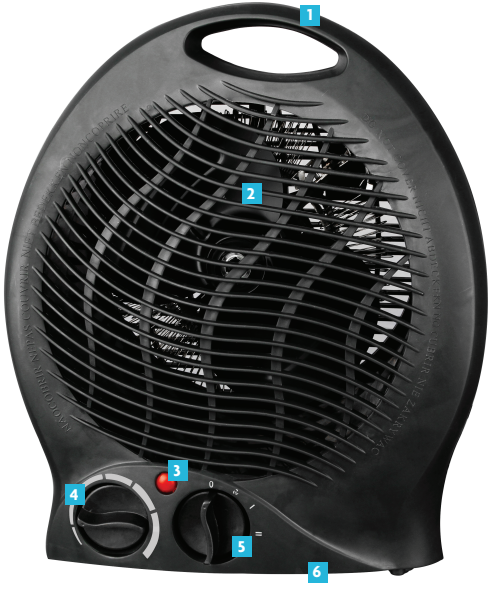

4) ADJUSTABLE THERMOSTAT
Select your desired temperature

5) FUNCTION SWITCH
Off, fan, 750W heat, 1500W heat

6) TIP-OVER SAFETY SWITCH
Place the unit on a flat surface to ensure that the switch is pushed in

USING YOUR FAN HEATER

1. Remove fan heater from its carton and unwind the cord to its full length.
2. Place on a firm, level desk or table in a stable, upright position.
3. Make sure the function switch is turned to 0 (off).
4. Plug the cable into a 110-120V (60Hz) AC power outlet. To avoid an electrical circuit overload, be sure that no other appliances are plugged into the same circuit.

FAN

- For fan-only operation, without any heat output, turn the function switch to and rotate the thermostat to your preferred position. The power indicator light will go on to let you know the fan is operating.

HEATING

- Turn the function switch to "I" for the 750W heat setting and "II" for the 1500W heat setting.
- To conserve energy use the 750W heat setting initially and then switch to the 1500W heat setting.

THERMOSTAT CONTROL

- Before setting the thermostat, allow the heater to operate and warm up the room. Then set heater to High (the thickest block on the right of the thermostat).
- Once the desired temperature is reached, lower the thermostat setting until the fan heater stops operating.
- The fan heater will cycle on and off to maintain the temperature you set.

CARE & MAINTENANCE

- Always remove the plug from the outlet and allow the fan heater to cool completely before cleaning it.
- Wipe the fan heater with a soft, damp (not wet) cloth.

WARNING

- Do not immerse the fan heater in water.
- Do not use any cleaning chemicals such as detergents or abrasives.
- Do not allow the interior to get wet as this could create a fire hazard.
- When not in use, store heater in a cool, dry location with the power cord properly secured.

Thermal Overload Protector

This heater is fitted with a thermal overload protector, which will switch off the device if it overheats or is picked up. To reset, disconnect the plug from the outlet for a few minutes, remove the cause of the overheating and plug in the appliance again.

TECHNICAL SPECIFICATIONS

Rated Voltage: 120V~60Hz

Wattage: 1500W



OVENTE WARRANTY

LIMITED ONE (1) YEAR WARRANTY

At Ovente, we aim to make your life easier by producing top-quality housewares, designed with you in mind. We have pledged to uphold all our offerings to the highest standards, and we back all our fan heaters with a one-(1) year warranty from the date of purchase from an authorized retailer. This warranty covers defects in workmanship and materials. It does not include damage due to abuse, misuse, commercial use, accidents or natural wear and tear. In case of replacement, ship- ping and handling fees may apply.

LIMITATIONS

The warranty stated above is the only warranty applicable to this product. Other expressed or implied warranties are hereby disclaimed. No verbal or written information given by the Manufacturer, its agents or employees shall create a guarantee or in any way increase the scope and duration of this warranty. Repair or replacement as provided under this warranty is the exclusive remedy of the consumer. The manufacturer shall not be liable for incidental or consequential damages resulting from the use of this product. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the applicable warranty period set forth above except to the extent prohibited by law. Proof of purchase may be required to validate the order. Promotional items may not be covered under any warranty. Consumer rights may vary from state to state.

For product support email **support@ovente.com** or call **1-855-926-2626.**
Visit us at ovente.com