
USE AND CARE GUIDE

USA Item 1013320756
Canada Item 1001915377
Model 25SV25093

5 FT LONG GRAVE & BONES LED SKELLY'S CAT

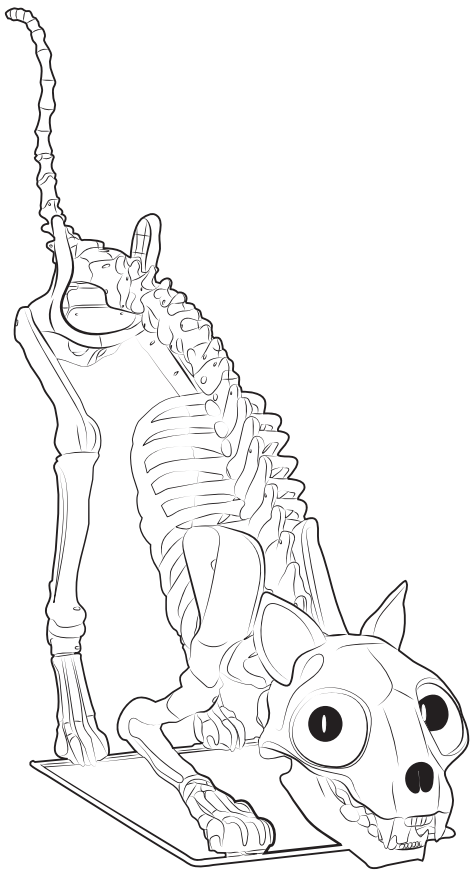


Questions, problems, missing parts? Before returning to the store, please have a copy of your receipt ready and email the SVI customer experience team (customerservice@svius.com) within 90 days of the date of purchase or call Home Accents Holiday Customer Service 8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-855-HD-HOLIDAY (1-855-434-6543)
HOMEDEPOT.COM


PARTS LIST

A. Base x 1
B. Left Front Paw x 1
C. Right Front Paw x 1
D. Left Front Leg x 1
E. Right Front Leg x 1
F. Ribcage x 1
G. Left Back Paw x 1
H. Right Back Paw x 1
I. Left Hind Leg x 1
J. Right Hind Leg x 1
K. Spine and Control Box x 1
L. Tail x 1
M. Head x 1
N. Small Parts Bag x 1
O. Stakes x 4
P. Adapter x 1

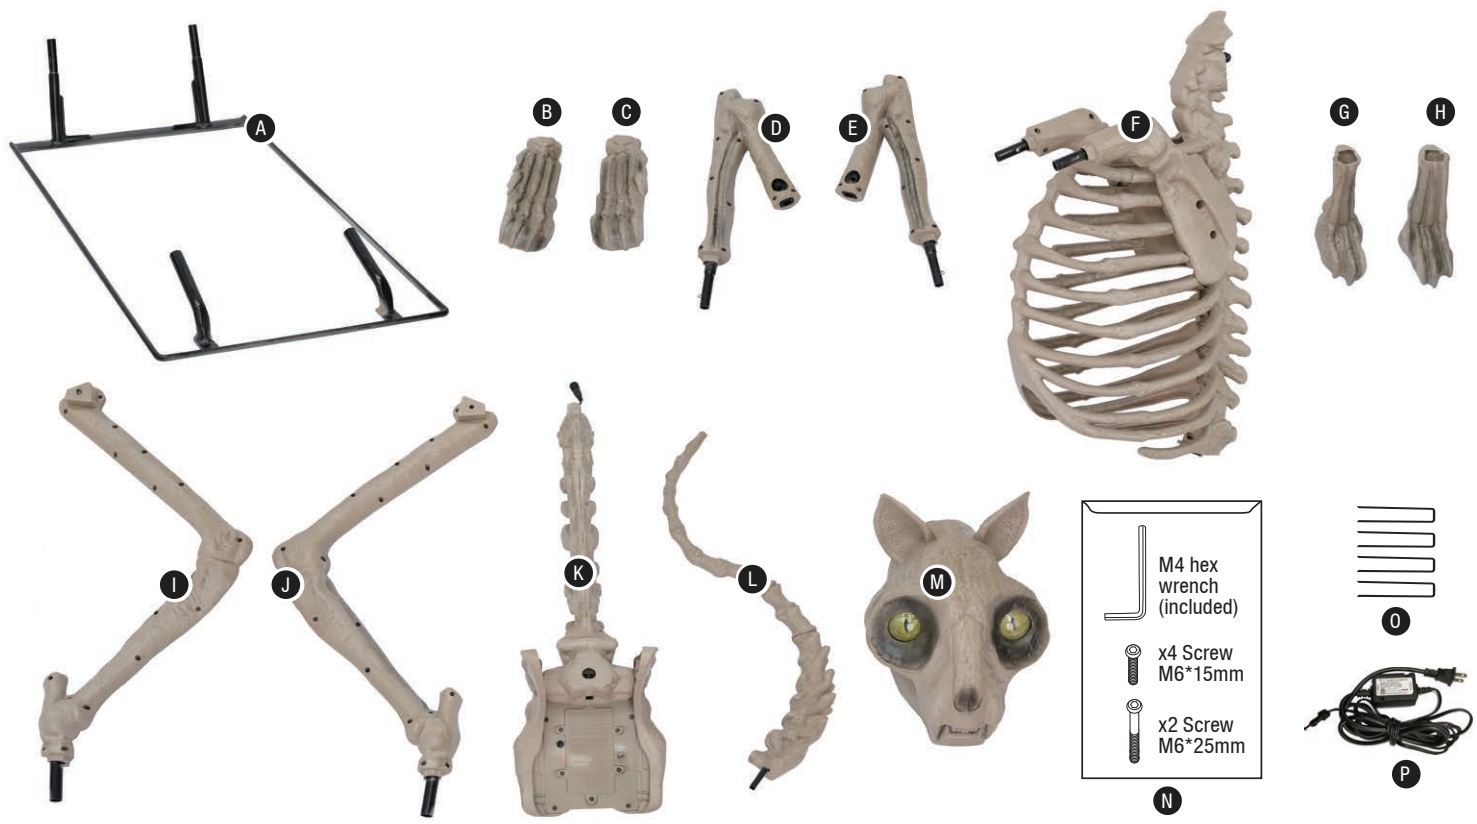



Power Adapter * Spec
Input: 120V~50/60Hz
Output: 5.9V ⎓ 1.5A
Wattage: 8.85W

NOTE: Throughout the instructions, Right and Left are from the character's point of view.

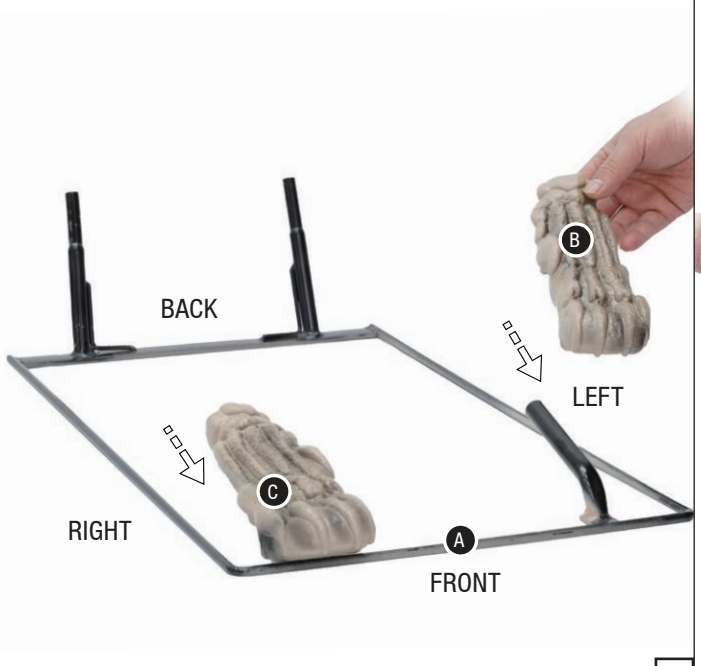


1.1

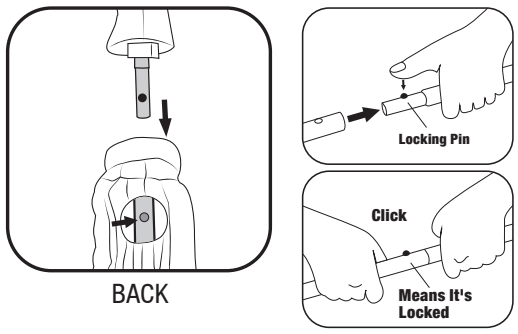


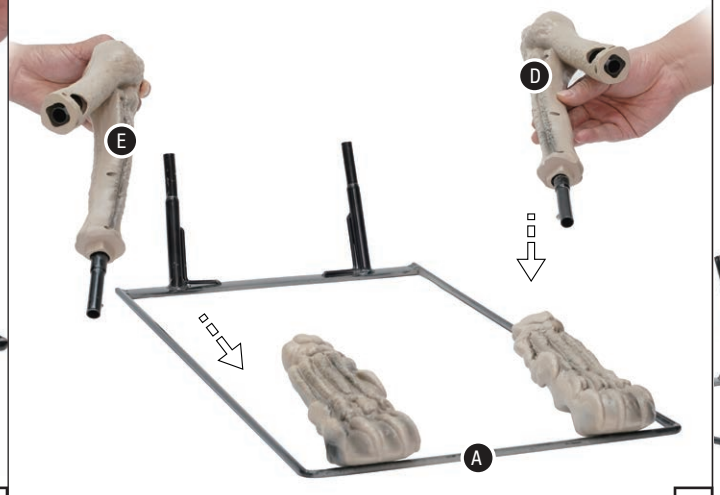


1.2

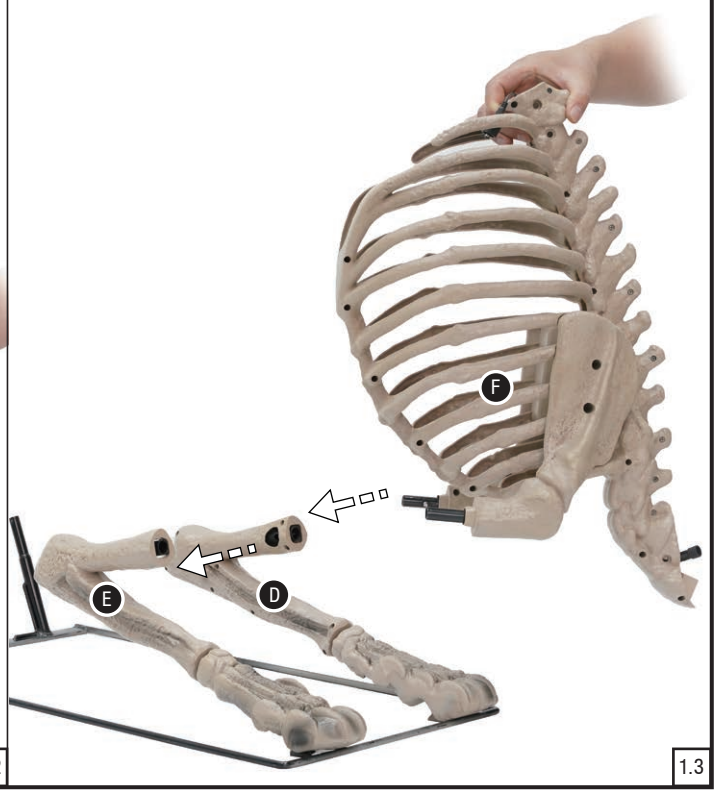

1.3

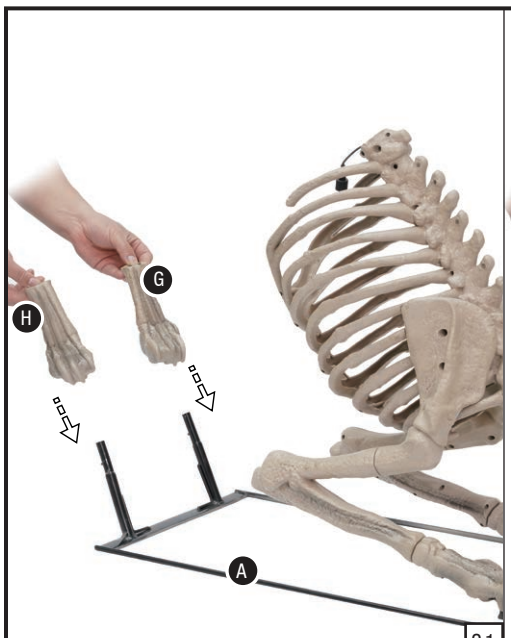


2.1

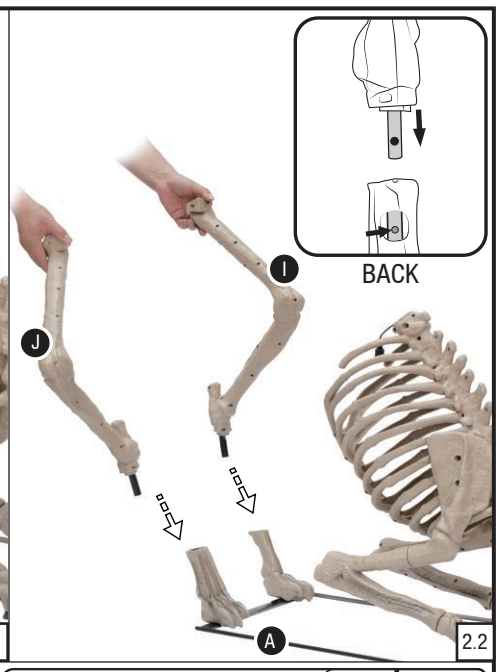


2.2





NOTE: When connecting cables, ensure that the arrow indicators on each cable end are lined up with and pointing at each other. There is also a groove and a rod like protrusion by these arrows that fit into each other. Then firmly press the cables together. Rotate the cable cap clockwise onto the threading of the corresponding cable until firmly in place.

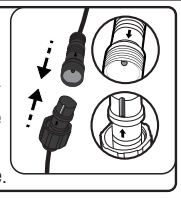


2.3

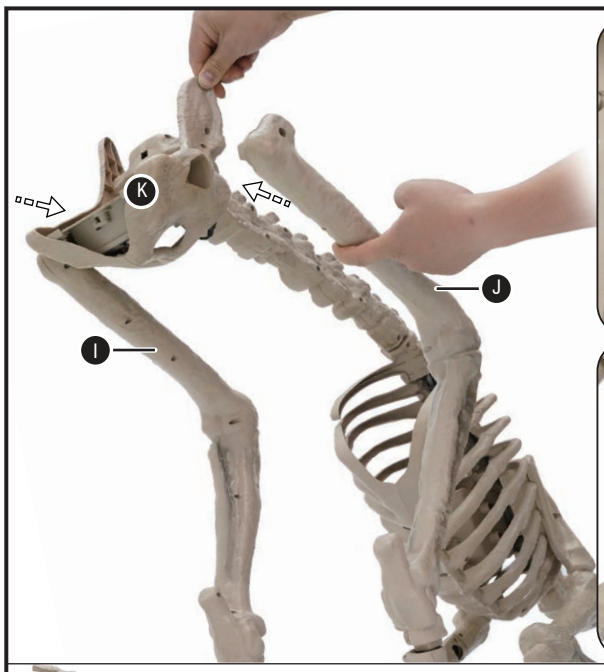


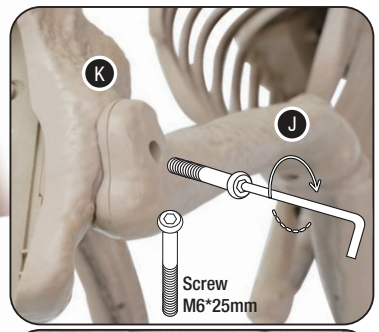

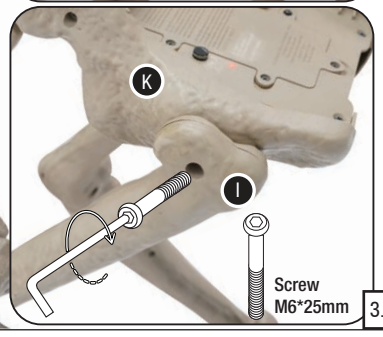



3.1

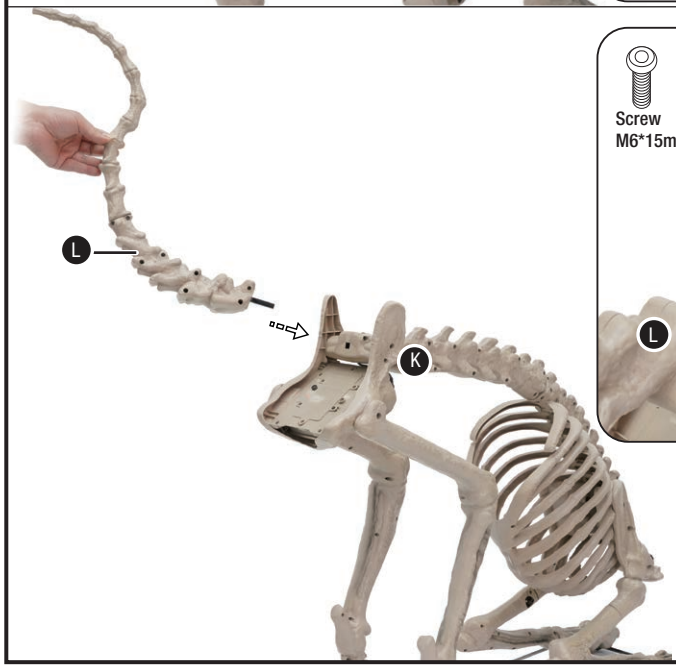

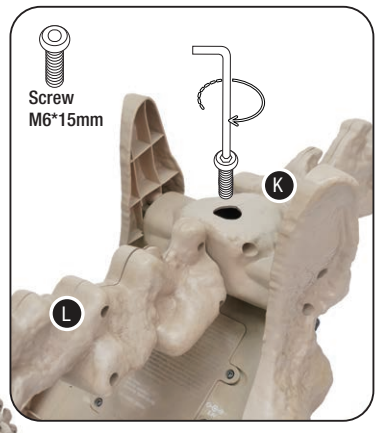


3.2

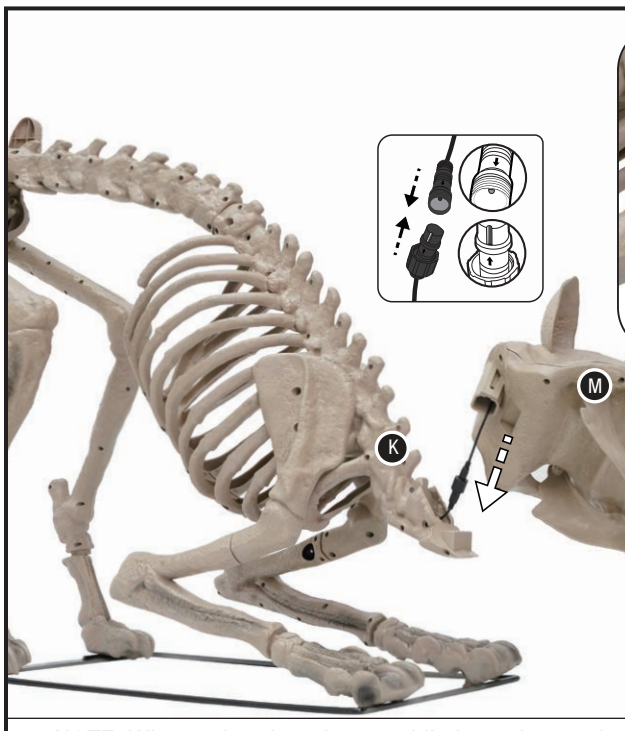

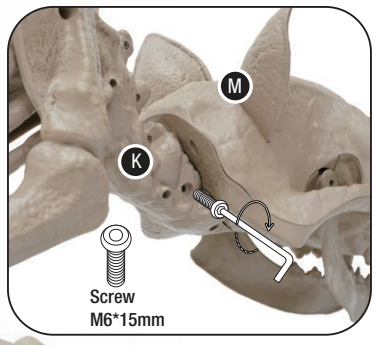


4.1

NOTE: When using the adapter while batteries are in the product, the power will be sourced from the adapter only. However, it is advised to remove the batteries from the product when using the adapter.

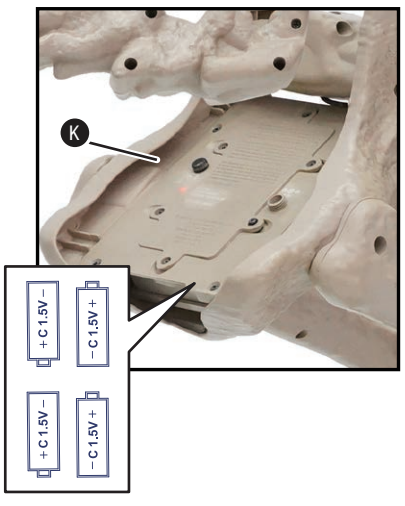


OR

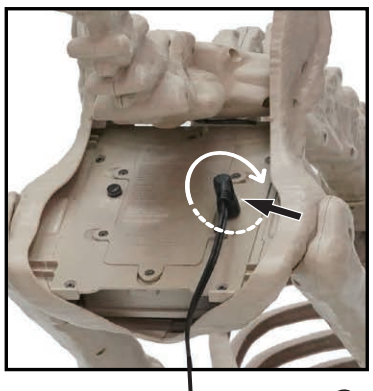

NOTE: Item can be operated with 4 x 1.5V C batteries or adapter.

4.2

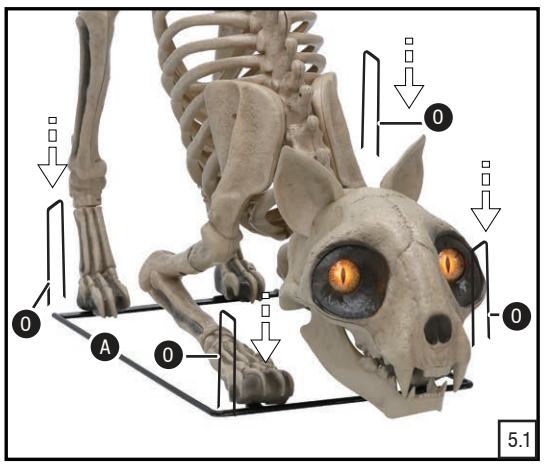

5.1

THE 5 FT LONG GRAVE & BONES LED SKELLY'S CAT IS NOW FULLY ASSEMBLED. PLUG IN AND TURN ON TO LET THE FUN BEGIN!




5.2

NOTE: The 5 Ft Long Grave & Bones LED Skelly's Cat has 2 different function settings (ON•TIMER and OFF) to choose from - see images on box.
Control button located on Battery box.

OPERATION INSTRUCTIONS - CONTROL BOX:

The 5 Ft Long Grave & Bones LED Skelly's Cat can either be powered by an adapter or batteries. Plug the power adapter into a standard power outlet or insert 4 x 1.5V C batteries into the battery box. To turn on the 5 Ft Long Grave & Bones LED Skelly's Cat, press the button on the Spine and Control Box (K) once. Press the same button a second time to turn the item Off.

Button	Function Description
1 ON• TIMER / MARCHE• MINUTEUR / ENCENDER• TEMPORIZADOR	Press power button once to activate the LED eyes. In this mode, the LED eyes will stay on for 6 hours and then turn off for 18 hours. This cycle will repeat indefinitely until the settings are changed.
2 OFF / ARRÊT / APAGAR	Press power button a second time to turn LED eyes OFF.

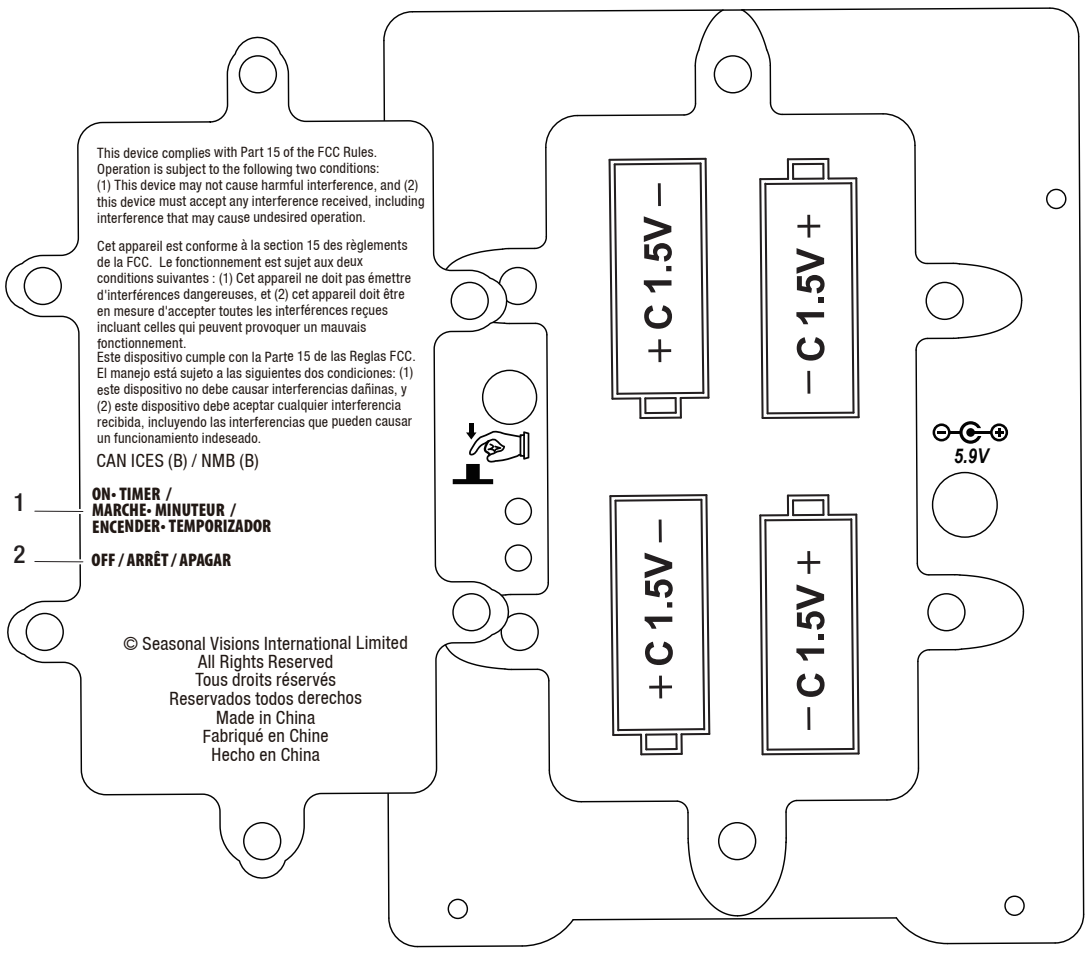

CARE AND STORAGE INSTRUCTIONS

When not in use, store this product in its original packing. Keep away from heat and moisture.

NOTE: When not in use, store this product in its original packing. Keep away from heat and moisture.

BATTERY WARNING:

Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel cadmium) batteries. Do not mix old and new batteries. Rechargeable batteries to be removed from the product before being charged. Only batteries of the same or equivalent type as recommended are to be used. Rechargeable batteries are only to be charged under adult supervision. Non-rechargeable batteries are not to be recharged. Batteries are to be inserted with the correct polarity. Remove batteries if exhausted or if product is to be left unused for a long time. The supply terminals are not to be short-circuited. Dispose of batteries safely. DO NOT DISPOSE OF BATTERIES IN FIRE, BATTERIES MAY EXPLODE OR LEAK

WARNING

This item is not a toy and should be used for decoration only. This item contains small parts that can be a choking hazard. Keep all plastic and wire parts away from children.
1. Please use the adapter supplied by manufacturer.
2. Please assemble item according to instructions. Connect all wires according to matching color.
3. Children should be supervised by adults. Item should not be grabbed, as it becomes a tipping hazard. Keep flammables away from the adapter, as it heats up during operation. Please view all instructions carefully before assembling. Save this instruction sheet for future reference.

☐ Don't climb or pull on product.
☐ Do not add to or modify unless accessory is designed for product
☐ Assemble and place the product on level surfaces only.
☐ Don't push or tilt product.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

☐ Reorient or relocate the receiving antenna.
☐ Increase the separation between the equipment and receiver.
☐ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
☐ Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s).Operation is subject to the following two conditions:
1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

CAN ICES (B) / NMB (B)

IMPORTANT TIPS:

- Ensure that the item's adapter is plugged in at the Function Control Box and in the wall.
- Ensure that the prop is on the desired setting.
- If not functioning properly (ex: LED eyes don't light up), ensure that cables are connected to their corresponding cable as shown in the instruction sheet. Be sure nothing is blocking movement or caught in moving parts.
- Ensure that the floor or surface that the item sits on is flat and level. IF ANY PART IS MISSING OR BROKEN, DO NOT ATTEMPT TO ASSEMBLE THE PRODUCT AND CALL HOME ACCENTS HOLIDAY CUSTOMER SERVICE FROM MON-FRI 8:00AM TO 7:00PM AND SAT 9:00 AM TO 6:00 PM EST AT 1-855-HDHOLIDAY (1-855-434-6543).
- If the item still does not work, contact SVI Customer Service from 8:30am to 5:30pm PST at 1-855-428-3921, email customerservice@svius.com, or call Home Accents Holiday Customer Service from Mon-Fri 8:00am to 7:00pm and Sat 9:00 am To 6:00 pm EST at 1-855-HDHOLIDAY (1-855-434-6543).

Questions, problems, missing parts? Before returning to the store, Please have a copy of your receipt ready and email the SVI customer experience team (customerservice@svius.com) within 90 days of the date of purchase or call Home Accents Holiday Customer Service 8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-855-HD-HOLIDAY (1-855-434-6543)
HOMEDEPOT.COM