
VISSANI™

Item #1000 000 000
Model #YH209M

USE AND CARE GUIDE

SOFT ICE MAKER

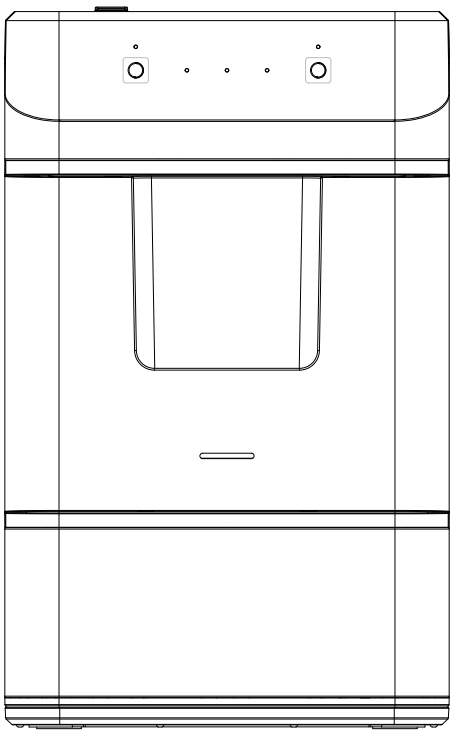

Questions, problems, missing parts?
Before returning to the store, call Vissani Customer Service
8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-855-VISSANI (1-855-847-7264)

HOMEDEPOT.COM

THANK YOU

We appreciate the trust and confidence you have placed in Vissani through the purchase of this soft ice maker. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Vissani!

Table of Contents

Safety Information 2
Warranty 3
Pre-Installation 5
Operation. 6
Specification 7
Troubleshooting 8

Safety Information

SAFETY PRECAUTIONS

IMPORTANT: After receiving the machine, let it stand for 24 hours before using it again.


Only use grounded triangular sockets



Ensure that there is sufficient clearance around the machine


Keep hands and items away from the ice outlet


Do not use sharp knives to open packaging


Indoor use only


Ensure that the machine is not in close proximity to high temperatures/sunlight


Suggest using distilled or purified water


Suggest at least 2 people to operate when moving the machine


Not recommended to use extension cords

IMPORTANT SAFETY INFORMATION

To reduce the risk of injury while using the machi ne, please follow basic safety precautions:

WARNING: Do not r emove any safety, warning, or product information labels from the ice maker.

WARNING: Lifting hazard: It is recommended that two people move and install the ice maker to prevent injury.

WARNING: Before performing any cleaning or maintenance, please unplug the electrical appliances.

WARNING: Do not use flammable liquids or solvent based cleaning agents to clean eduipment.

WARNING: Do not use abrasive cleaners on internal or externa surtaces as they may damage or scratch the equipment.

WARNING: When disposing of refrigeration equipment, special treatment is required. Before disposing of this product, please check the latest relevant disposal methods.

WARNING: Do not operate this device with wet hands or standing on wet surfaces or in accumulated water.

WARNING: Chemical hazards - When using bleach for cleaning, use bleach in a well ventilated area and avoid mixing it with other household cleaning agents.

WARNING: When cleaning the ice basket, please remove it from the ice maker and clean the inside and outside with a soft cloth.

WARNING: Do not use mechanical equipment to thaw the ice maker.

WARNING: Do not puncture the refrigerant pipe.

WARNING: This device belongs to household appliances and is not suitable for children or weak individuals to use without supervision. Young children should be supervised to ensure they do not play with appliances.

WARNING: There is a cutting risk inside the machine, please do not reach into the ice outlet of the running equipment.


WARNING: This device uses flammable refrigerants. There is a risk of fire or explosion caused by retrigerant pipe piercing in extreme cases; Please carefully follow the operating instructions when using.

Safety Information (continued)

CAUTION: The ice maker should be installed in accordance with relevant refrigeration system safety standards and should not be installed in corridors or hallways of public buildings.

This appliance is intended to be used in household and similar applications such as:

- □ Under no circumstances should the third ground pin on the power cord be changed or removed.
- □ For personal safety, this product must be properly grounded.
- □ Do not exceed the rated value of the power socket. Suggest connecting the ice maker to your own circuit.
- □ Only 110~120V, 60Hz standard power supply can be used, and it
- □ should be properly grounded according to national electrical specitications and local regulations and rules
- □ Due to potential safety hazards under certain conditions, we strongly recommend not using adapters or extension cords
- □ Under no circumstances should the third grounding pin on the power cord be disconnected or removed

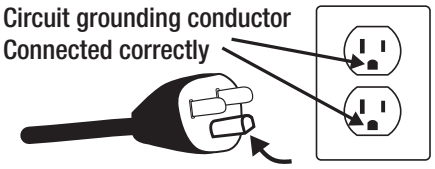

- □ Do not unplug electrical appliances by unplugging the power cord.
- □ To properly disconnect the power, hold the plug tightly and unplug
- □ it directv trom the wa socket.
- □ To prevent electric shock, do not immerse electrical plugs or wires in water or other lauids.
- □ Before using this product, it is necessary to install and position it correctly according to the installation instructions. This product is for indoor use only.
- □ Please do not use outdoors. Do not store or use flammable vapors or liquids near this product.Please note that. Some tvpes of cabinet lients may be hot enough to damage the appearance of the top of your machine.

NOTE: Please note that! Some types of cabinet lights may be hot enough to damage the appearance of the top of your machine.

This machine is not a toy. When using this machine near children, caution and supervision should be exercised.

Do not allow children to operate this device.

When operating, please ensure that your hands are clean and hygienic to avoid unhygienic conditions.

It is recommended to use purified water or distilled water for ice making, and try not to use other unhygienic and unsafe liquids for ice making.

Place the power cord in an area where it will not be pulled by children or cause tripping hazards.

Place the power cord away from hot surfaces.

Do not operate any damaged components, including wires or plugs.

Before cleaning and when not in use, please unplug the product plug.

Do not immerse any part of the product in water.

Do not insert or remove the power plug of this product with wet hands.

Do not attempt to disassemble, repair, modify or replace any part of the product.

This product is only intended for the intended use as described in this user manual.

Do not use any accessories not recommended by the manufacturer.

Warranty

PORTABLE ICE MARKER LIMITED WARRANTY

Your product is protected by this Limited Warranty:

Warranty service must be obtained from VISSANI Consumer Services or an authorized VISSANI servicer.

Warranty

- □ One year Limited Warranty from original purchase date.
- □ VISSANI, through its authorized servicers will:
- □ Pay all costs for repairing or replacing parts of this appliance which prove to be defective in materials or workmanship. Consumer will be responsible for:
- □ Diagnostics, removal, transportation and reinstallation cost required because of service.
- □ Costs of service calls that are a result of items listed under NORMAL RESPONSIBILITIES OF THE CONSUMER**
- □ VISSANI replacement parts shall be used and will be warranted only for the period remaining on the original warranty.

Please contact 1-855-VISSANI (1-855-847-7264) for further assistance.

Warranty (continued)

NORMAL RESPONSIBILITIES OF THE CONSUMER**

This warranty applies only to products in ordinary household use, and the consumer is responsible for the items listed below:

1. Proper use of the appliance in accordance with instructions provided with the product.
2. Routine maintenance and cleaning necessary to keep the good working condition.
3. Proper installation by an authorized service professional in accordance with instructions provided with the appliance and in accordance with all local plumbing, electrical and / or gas codes.
4. Proper connection to a grounded power supply of sufficient voltage, replacement of blown fuses, repair of loosened connections or defects in house wiring.
5. Expenses for making the appliance accessible for servicing.
6. Damages to finish after installation.

EXCLUSIONS

This warranty does not cover the following:

1. Failure caused by damage to the unit while in your possession (other than damage caused by defect or malfunction), by its improper installation, or by unreasonable use of the product, including without limitation, failure to provide reasonable and necessary maintenance or to follow the written Installation and Operating Instructions.
2. Products purchased “as-is” or refurbished are not covered by this warranty.
3. Product that has been transferred from its original owner.
4. Interior or exterior rust on the unit.
5. Damages caused by services performed by persons other than authorized VISSANI servicers; use of parts other than VISSANI replacement parts; obtained from persons other than such VISSANI customer service; or external causes such as abuse, misuse, inadequate power supply or acts of God.
6. Service calls resulting from improper installation of your product.
7. Service calls to instruct you on the use of your product.
8. Surcharges including, but not limited to, any after hour, weekend, or holiday service calls, tolls, ferry trip charges, or mileage expense for service calls to remote areas, including the state of Alaska.
9. If the unit is put to commercial, business, rental, or other use or application other than for consumer use, we make no warranties, express or implied, including but not limited to, any implied warranty of merchantability or fitness for particular use or purpose.
10. Product that has been removed outside the USA or Canada.
11. Products without original serial numbers or products that have serial numbers which have been altered or cannot be readily determined.



NOTE: Some states do not allow the exclusion or limitation of incidental or consequential damages. So this limitation or exclusion may not apply to you.

IF YOU NEED SERVICE

Keep your bill of sale, delivery slip, or some other appropriate payment record. Should service be required, the date on the bill establishes the warranty period commencement date.

If service is performed, it is in your best interest to obtain and keep all receipts.


This written warranty gives you specific legal rights. You may also have other rights that vary from state to state.

NOTICE:Some states do not allow the exclusion or limitation of incidental or consequential damages. So this limitation or exclusion may not apply to you.

Service under this warranty must be obtained by: Contact the Customer Service Team at 1-855-847-7264.

Pre-Installation

PACKAGE CONTENTS

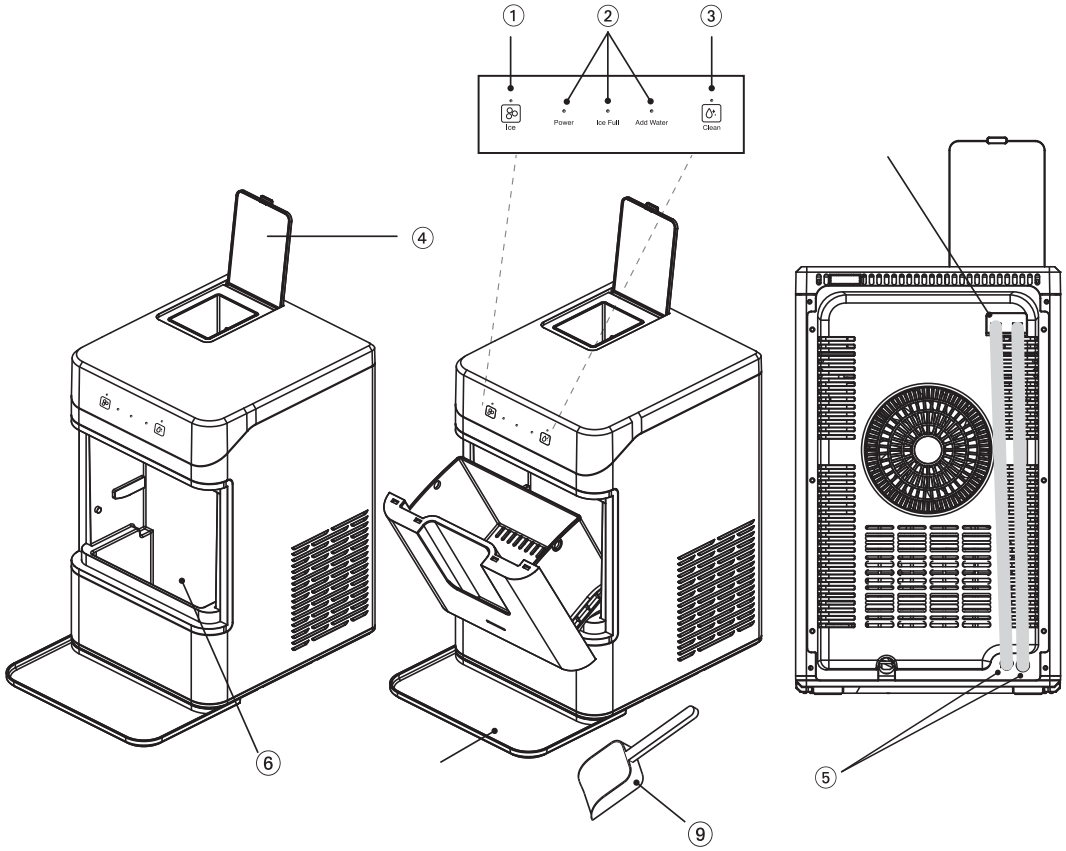

1. Ice making button: Press the button once to start ice making
2. Indicator light (Power - Ice Full - Add Water)
3. Cleaning button: Press and hold for 3 seconds for automatic cleaning
4. Cleaning auxiliary cover
5. Drainage pipe (Located on the back of the machine)
6. Water storage tank (Located inside the machine)
7. Drainage plug
8. Detachable drip tray
9. Ice shovell

Please contact 1-855-VISSANI (1-855-847-7264) for further assistance.

Operation

NOTE: It is recommended to clean the machine before using it for the first time.

NOTE: The first use
The ice maker must stand upright for 24 hours before its first use to stabilize internal components.

Step1: Add an appropriate amount of white vinegar and distilled

Step2: Press and hold the automatic cleaning button for 3 seconds to turn on automatic cleaning. After 3 minutes,

the automatic cleaning is completed and the LED light goes off.

Step3: Unplug the power plug of the device and remove the drain plug from the bottom of the device. Discharge the

wastewater after cleaning.

Step4: Drainage completed, plug back the drain plug.

Step5: Plus in the power and repgat Steps zad twa to teree frmes with clean water. During the drainage process after each automatc cleaning, alwavs unplug the power plug and disconnect the power to avoid electric shock.

NOTE: Warm reminder: If you use the ice maker every day. we recommend that you clean the ice maker at least once a week. It is normal for the ice maker to make some small noise durne ce makine and automacc cleaning.

Step1: After cleaning and rinsing, place the device on a stable countertop or flat surface, leaving at least 30 centimeters of space around the device, including the left, right, and back sides, to ensure proper ventilation.

Connect the power plug to the power socket (110-120V~50Hz)

Step2: Add an appropriate amount of clean water into the storage tank, and add the amount of water to reach the optimal bottom of the ice basket. Try not to exceed the bottom of the ice basket. Please do not use any liquids other than water. If using liquids other than water to make ice, the warranty of the machine will be invalidated. Due to the varying levels of cleanliness of tap water in different regions, it is recommended to use purified or distilled water for ice making.

Step3: Press the power button to start the ice maker.

Step4: Press the "Ice Making" button to start ice making. Ice cubes will be produced within 10 minutes and continue until the bucket is full or the machine indicates a shortage of water.

In the first 3-5 minutes, it will produce crushed ice, followed by soft ice. It produces 600 grams of ice within the first hour, and when the ice production reaches 800 grams, the machine will detect full ice and then enter a paused ice making state.

Ice making pause sensor: If the ice basket is full and the ice has not been removed for use, or if there is no activity after scooping ice from the ice bucket for more than 1 minute, the ice maker will stop making ice.

Restore ice making: Press the ice making button twice to restore ice making.


Water level indicator: When there is insufficient water, the water shortage indicator light will start flashing. After adding water, press the ice making button and the ice maker will resume ice making.

Ice Full Indicator Light: When the ice basket is full of ice, the ice making button flashes for 60 seconds, and then the ice full indicator light comes on, and the ice maker stops making ice. To restart ice making, please press the power button twice to continue ice making.

The first press of the ice making button turns off the ice full indicator light, and the second press of the ice making button starts ice making.

Operation (continued)

FLUSHING DEVICE

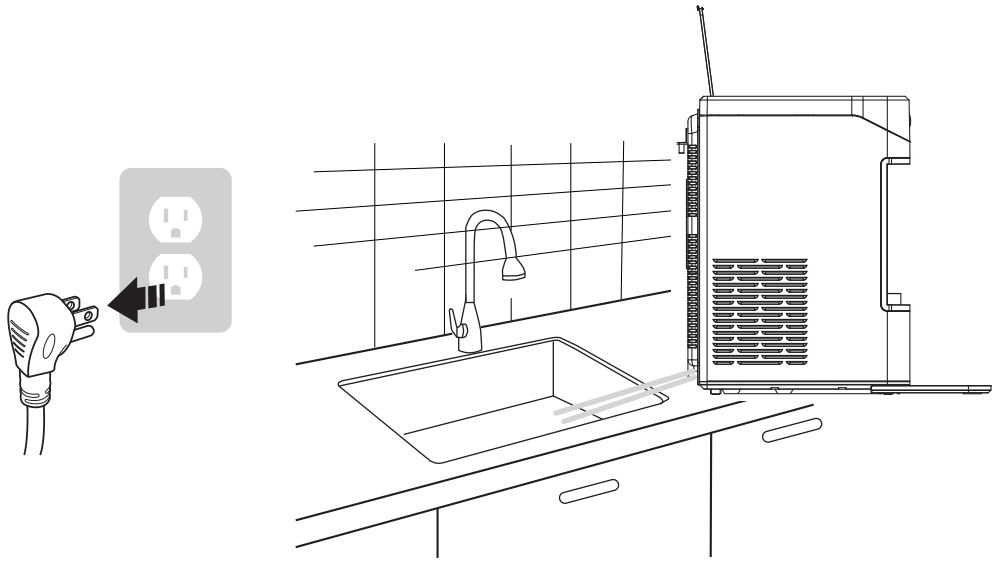

ICE MAKER DRAINAGE

1. Before flushing and draining, unplug the power plug
2. Place the end of the drainage pipe hanging above the back of the device on the sink or bucket.
3. Open the drain plug at the end of the drainage pipe and drain the water.
4. Completely drain the water, then reinstall the drain plug and check if it is tight and tightly plugged into the drain outlet. Hang the drain pipe back in place for future use.
5. After completion, plug the power plug back in and add fresh and clean water (distilled water) for ice making

Specification

Model	YH4031
Voltage/Frequency	120V ~ 60Hz
Ice making current	1.5~1.5A
Power	110~120W
Ice out Time	8-10mins
Daily ice Volume	34 lb /15.6 kg
Ice Basket Volume	800g±10%
Max ice Basket Volume	1200g±10%
Ambient Temperature	10°C~32°C
Cleaning mode	Automatic cleaning, press and hold for 3 seconds before starting
Colour	Metallic Silver/Grey
Unit Dimension	246*295*405mm
Product Net Weight	10.5KG

Troubleshooting

ICE MAKER SOUND

Your personal freezer soft block ice maker is not like a regular hard ice maker. Lightweight production Breathable and soft ice requires several processes.

Therefore, this ice makerIt will produce a normal sound:

Whispering sound - When the appliance is first turned on, you may hear the sound of the condenser fan rotating.

Buzzing sound - When the water pump is first activated, it may produce a buzzing sound, especially if it's dry. Once filled with water, the buzzing sound will disappear.

Clucking sound - The flow of refrigerant may cause a creaking or clucking sound. This will significantly subside once the system stabilizes.

Grunt sound - This brief gurgling or grunting sound may occur when the refrigerant system shuts down and the refrigerant stops flowing.

Buzz - The compressor, being an electric motor, emits a low buzzing sound while it is operating.

Clucking sound (ice-related) – The loudest sound occurs when the first ice bl ock is r eleased into the bottom of the fr eezer. Once the fr eezer is full, the sound of ice cubes falling will decrease.

BEFORE CALLING FOR SERVICE, PLEASE TRY THE SUGGESTION BELOW.

Problem	Possible cause	Solution
"Lack of water" The indicator light is on.	□ Machine water shortage.	□ Fill up with water, press the ice making button again to restart ice making.
"Ice full" The indicator light is on.	□ The ice storage basket is full of ice.	□ Take some ice out.
	□ The infrared detection module is blocked.	□ Replace the machine without direct sunlight.
The ice making speed is abnormally slow.	□ The hot air outlet is blocked by an object.	□ A certain amount of space should be reserved around the ice maker (it is recommended to leave a space of 10-30 centimeters).
	□ Adding water for ice making, the water temperature is too high.	□ The water temperature is required to be between 7-32 °C.
	□ Excessive ambient temperature.	□ Check if there is a heat source around the ice maker, and the ice maker should be used indoors.
leakage	□ The drain plug is not properly plugged, and the drain outlet is leaking water.	□ Fix the drain plug at the bottom of the ice maker.
	□ The water level in the storage tank may be too high.	□ Drain some of the water from the storage tank to below the maximum limit.
	□ The inlet of the water storage tank may be blocked.	□ Check and clean the water inlet.

Please contact 1-855-VISSANI (1-855-847-7264) for further assistance.

VISSANI™

Questions, problems, missing parts?
Before returning to the store, call Vissani Customer Service
8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-855-VISSANI (1-855-847-7264)

HOMEDEPOT.COM

Retain this manual for future use.