



1. Depósito café.  
Coffee holder.
2. Filtro.  
Filter.
3. Junta silicona.  
Rubber safety seal.
4. Embudo.  
Variable dose coffee holder.
5. Válvula.  
Pressure valve.
6. Base.  
Base.

**MGF**

  
**Magefesa®**



**Cafetera  
Coffee maker  
MOD. GENOVA**

**INOX**  
ACERO INOXIDABLE

**MGF**

Más información sobre  
este producto  
More info about this item



## INSTRUCCIONES DE USO, LIMPIEZA Y MANTENIMIENTO

Antes de usar la cafetera por primera vez, prepare, por lo menos, tres cafeteras con tres cuartas partes de café y agua. Tenga en cuenta que el café resultante no será apto para su consumo.

Llene la base (6) con agua hasta la válvula (5). Rellene el embudo (4) con el café molido sin prensarlo y colóquelo dentro de la base. Enrosque con fuerza el depósito del café (1) y ponga la cafetera a fuego lento.

Utilice su café habitual, preferentemente un molido de tipo medio. En caso de que prefiera un tipo molido fino, asegúrese de limpiar en profundidad el filtro con agua corriente después de la utilización de la cafetera.


Para limpiar su cafetera utilice agua y detergente para vajillas no abrasivo. Después del lavado y aclarado del producto pase un paño seco por el interior de la base de la cafetera.

Controle periódicamente el estado de los accesorios (filtro, junta de goma, válvula, embudo) y, en caso necesario, sustitúyalos utilizando para ello recambios originales.

ESPAÑOL



- Fabricada en acero inoxidable.

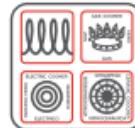

- Apta para cocinas eléctricas, a gas, vitrocerámicas e inducción.

## INSTRUCTIONS FOR USE, CLEANING AND MAINTENANCE

ENGLISH

Prepare coffee at least three times with three quarters of coffee and water before using the coffee maker for the first time. The resulting coffee will not be suitable for consumption.

Fill the base (6) with water to the level of the valve (5). Fill the coffee basket (4) with ground coffee without pressing it down and place it in the base. Tighten down the coffee holder (1) and place it on a slow fire.


Use preferably medium ground coffee. If you prefer fine ground coffee, clean carefully the filter under running water after using the coffee maker.

Clean the coffee maker with water. Dry the inside of the base of the coffee maker with a cloth, after washing and rinsing the coffee maker.

Check regularly the condition of the accessories (filter, rubber seal, valve, coffee basket) and if necessary replace them with original parts.



- Made of stainless steel.

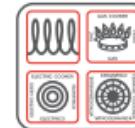

- Suitable for electrical, gas, vitroceramic and induction cookers.