Commercial Electric™

Item # 1014819656/ 1014762530
Model # B02018601A / B02019601A


USE AND CARE GUIDE
LINKABLE LED SHOP LIGHT

IMPORTANT SAFETY INSTRUCTIONS

This portable luminairehas a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. Thisplug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If itstill does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fullyinserted. Do not alter the plug.


PACKAGE CONTENTS

Part	Description	Quantity
A	Shop Light	1

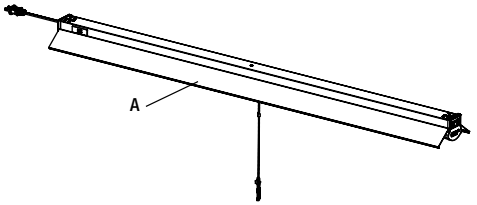

HARDWARE INCLUDED

Part	Description	Quantity
AA	Mounting Chain	2
BB	Drywall Anchor	2
CC	Hook Screw	2
DD	Cable Tie	1



NOTE: Keep your receipt and these instructions for proof of purchase.

⚠ **WARNING:** RISK OF ELECTRIC SHOCK. Ensure the electricity to the wires you are working on is shut off. Either remove the fuse or turn off the circuit breaker before removing an existing light fixture or installing the new one.

If you are unfamiliar with electrical installations, we recommend you contact a qualified electrician to do the installation.

INSTALLATION PREPARATION

Select a suitable location that can support the weight of the fixture. Determine the method for mounting the fixture before drilling, based on the type of ceiling.

⚠ **WARNING:** The shop light is intended to be installed directly beneath a ceiling mounted receptacle.


1. Mark two spots on the ceiling 44 in. (1129mm) apart for suspension mounting before the installation.



MOUNTING TO A DRYWALL CEILING:


a. Drill a 1/8-in. pilot hole into each of the screw locations marked on the ceiling. You can also use an awl or nail to dimple the screw holes.
b. Install a drywall anchor (BB) and a hook screw (CC) in each drilled mounting hole.

NOTE: The drywall anchors (BB) are only to be used for mounting the fixture to plaster or drywall surfaces.

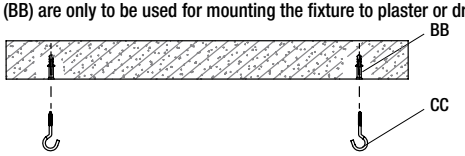


MOUNTING TO A WOOD CEILING:

a. Drill a 1/16 in. diameter pilot hole in the ceiling.
b. Tighten the hook screw (CC) into the wood.

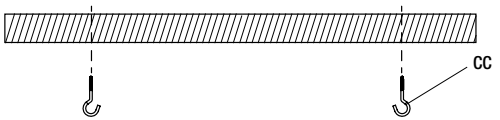


INSTALLATION (CONTINUED)

2. Attach the S hook at the bottom of the mounting chain (AA) to the hanger on the shop light (A). Repeat this step on the other side of the fixture. Then close all hooks with pliers to secure them.

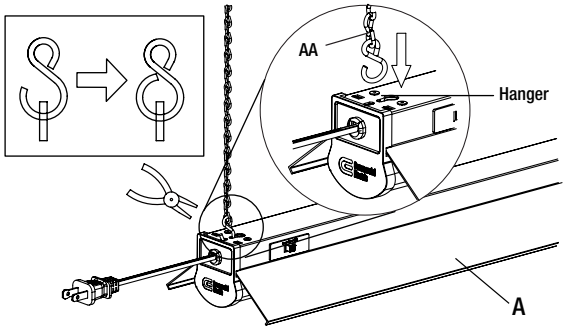


3. Hang the shop light (A) by placing one chain (AA) over each hook screw (CC) that has been installed on the ceiling.
4. Adjust chains to level light. The fixture must hang at least 3 in. from the ceiling.

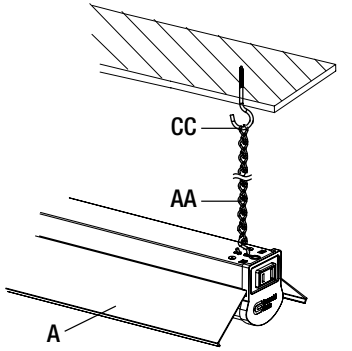

5. Plug the power cord into the AC120V, 60Hz socket. Attach the power cord to the chain (AA) with the cable tie (DD) provided.
6. Pull the chain down to turn the light on and off.
7. You can adjust the working status of the light (Low/Medium/High) by flipping the switch.

⚠ **CAUTION:** When suspension mounting, excess cord should be secured to the mounting chain (AA) with the cable tie (DD).

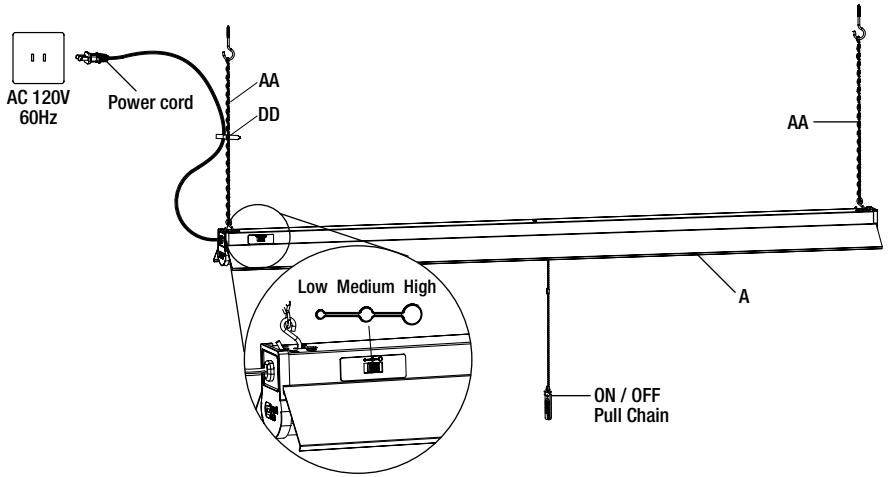


CONTINUOUS INSTALLATION

Multiple light fixtures can be connected, but do not exceed 300 total watts for interconnected lights.

Only the first light fixture needs to be plugged into an electrical outlet.

- For best results,fuly insert the electrical plug adapter into the receptacle in the end of the shoplight.
- The maximum distance between two light fixtures is 5 ft.

⚠ **WARNING:** RISK OF ELECTRIC SHOCK. Disconnect power to the shop light before linking additional shop lights. Do not touch live parts inside the receptacle.

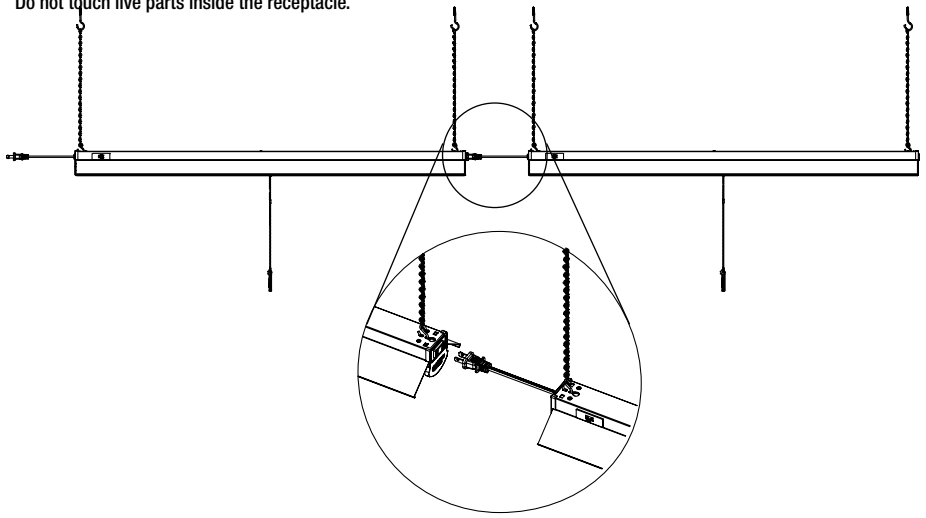

CARE AND CLEANING

⚠ **CAUTION:** Before attempting to clean the tube and luminaire/light fixture, disconnect the power to the fixture by turning the breaker off or removing the fuse from the fuse box. Clean with a soft, dry cloth. Do not use cleaners with chemicals, solvents, or harsh abrasives. Do not use liquid cleaner on the LEDs, LED driver, or wiring.

TROUBLESHOOTING

Minor problems often can be fixed without the help of an electrician.

⚠ **WARNING:** Before doing any work on the fixture, disconnect power to the light fixture.

Problem	Possible Cause	Solution
The fixture will not light.	The power is off.	Ensure the power supply is on.
	The circuit breaker is off.	Ensure the circuit breaker is in the on position.
	There is a bad connection.	Check to ensure proper wire connections are made. Contact a qualified electrician.
	There is a defective switch.	Contact a qualified electrician.
The fuse blows or the circuit breaker trips when the light is turned on.	The wires are crossed or the power wire is grounding out.	Check the wire connections. Contact a qualified electrician or call customer service 1-877-527-0313.

⚠ **WARNING:**

- Carefully read and understand the information given in this manual before beginning the assembly and installation. Failure to do so could lead to electric shock, fire, or other injuries which could be hazardous or even fatal.
- Ensure the electricity to the wires you are working on is shut off. Either remove the fuse or turn off the circuit breaker.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

TROUBLESHOOTING (CONTINUED)

NOTICE:

- Use the hook to support the chain, not the electrical cord.
- Do not install on a radiant-heating type ceiling.
- The maximum distance to the electrical receptacle is determined by the 5 ft. power cord length.
- Do not exceed 300 total watts for interconnected lights.
- When interconnecting shop lights, the maximum distance between two light fixtures is 5 ft. based on the length of the linking cable provided.
- The voltage and current rating of the model # B02018601A is: AC 120V, 60 Hz, 0.59A, 50W.
- The voltage and current rating of the model # B02019601A is: AC 120V, 60 Hz, 1.1A, 92W.

NOTICE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: • Reorient or relocate the receiving antenna. • Increase the separation between the equipment and receiver. • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. • Consult the dealer or an experienced radio/TV technician for help.

NOTE: If shielded cables or special accessories are required for compliance, a statement must be included which instructs the user to employ them, for example, Shielded cables must be used with this unit to ensure compliance with the Class B FCC limits.

WARRANTY

WHAT IS COVERED

The manufacturer warrants this lighting fixture to be free from defects in materials and workmanship for a period of five (5) years from date of purchase. This warranty applies only to the original consumer purchaser and only to products used in normal use and service. If this product is found to be defective, the manufacturer's only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modifications, alterations, neglect, or mishandling.

WHAT IS NOT COVERED

This warranty shall not apply to any product that is found to have been improperly installed, set-up, or used in anyway not in accordance with the instructions supplied with the product. This warranty shall not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, faulty installation, or any other failure not relating to faulty material or workmanship. This warranty shall not apply to the finish on any portion of the product, such as surface and/or weathering, as this is considered normal wear and tear.

The manufacturer does not warrant and specifically disclaims any warranty, whether express or implied, of fitness for a particular purpose, other than the warranty contained herein. The manufacturer specifically disclaims any liability and shall not be liable for any consequential or incidental loss or damage, including but not limited to any labor / expense costs involved in the replacement or repair of said product.

Contact the Customer Service Team at 1-877-527-0313 or visit HOMEDEPOT.COM.

Commercial Electric™

Questions, problems, missing parts? Before returning to the store,
call Commercial Electric Customer Service
8 a.m. - 7 p.m., EST, Monday - Friday
9 a.m. - 6 p.m., EST, Saturday

1-877-527-0313 | HOMEDEPOT.COM

Retain this manual for future use.

ETL LISTED US
Intertek