


Charcoal Filter

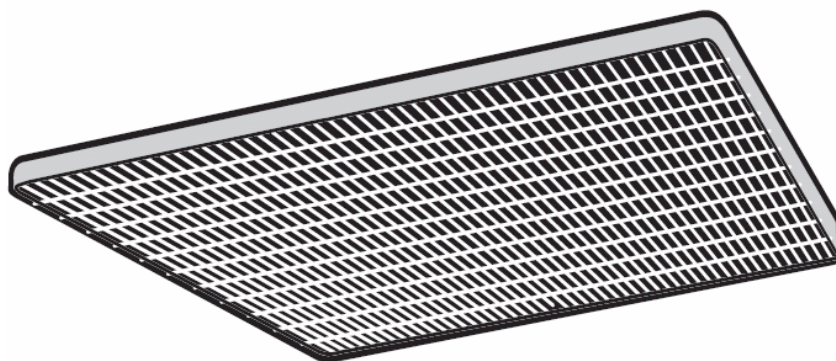

Applicable models:

DEKOR GLASS 30

DEKOR GLASS 36

DKW001MX 30

DKW001MX 36

PRO001MX 30

PRO001MX 36

CHN001MX 30

CHN001MX 36

DKI001MX 36

READ AND SAVE THESE INSTRUCTIONS

LEA Y GUARDE ESTAS INSTRUCCIONES

WARNING: Turn off the power circuit at service panel, and lock out the panel before installing this kit to the appliance.

READ AND SAVE THIS INSTRUCTIONS

PACKAGING CONTENTS:


- 4 Springs for attachment.
- 1 Charcoal filter.

REMOVING USED CHARCOAL FILTER:

- Remove grease filter from hood.
- Pullout springs and remove used charcoal filter.

CHARCOAL FILTER INSTALLATION

- Position the charcoal filter over the grease filter and insert the 4 springs (to prevent the movement).
- Reinstall the grease filter and charcoal filter assembly in the hood.

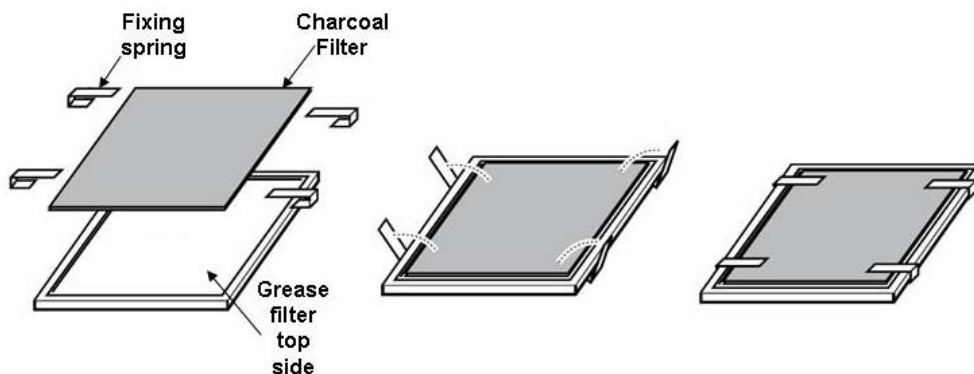

Note: After 120 functional hours the charcoal filter must be replaced.

PRECAUCIÓN: Apague el circuito de energía eléctrica del tablero de control y asegúrelo antes de instalar este filtro al electrodoméstico.

LEA Y GUARDE ESTAS INSTRUCCIONES.

COMPONENTES INCLUIDOS

- 1 Filtro de carbón.
- 4 abrazaderas para montaje.

DESINSTALACIÓN DEL FILTRO DE CARBÓN

- Desinstale el filtro de grasa de la campana.
- Libere las abrazaderas y remueva el filtro de grasa usado.

INSTALACIÓN DEL FILTRO DE CARBÓN

- Posicione el filtro de carbón sobre el filtro de grasa e inserte las 4 abrazaderas (para sujetarlo y evitar movimiento).
- Reinstale el nuevo filtro de grasa en la campana.



Nota: Después de 120 horas funcionales, el filtro de carbón debe ser cambiado.