EASY ASSEMBLY AND OPERATION INSTRUCTIONS
23SV23630 3FT LED SKELETON


USA/ États-Unis 1009126913
Canada 1001785804

READ AND SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE


IF ANY PART IS MISSING OR BROKEN, DO NOT ATTEMPT TO ASSEMBLE THE PRODUCT AND CONTACT SVI CUSTOMER SERVICE FROM 8:30 AM TO 5:30 PM PST AT 1-855-428-3921, EMAIL CUSTOMERSERVICE@SVIUS.COM, OR CALL HOME ACCENTS HOLIDAY CUSTOMER SERVICE FROM MON-FRI 8:00 AM TO 7:00 PM AND SAT 9:00 AM TO 6:00 PM EST AT 1-855-HDHOLIDAY (1-855-434-6543).


IMPORTANT TIPS:
- Ensure that the switch on the function control box is on the desired setting.
- Ensure that the floor or surface that the item sits on is flat and level.
- If the item still does not work, contact SVI Customer Service from 8:30 am to 5:30 pm PST at 1-855-428-3921, email customerservice@svius.com, or call Home Accents Holiday Customer Service from Mon-Fri 8:00 am to 7:00 pm and Sat 9:00 am To 6:00 pm EST at 1-855-HDHOLIDAY (1-855-434-6543).

PARTS LIST
A. Body x 1
B. Base x 1
C. Hex Key x 1

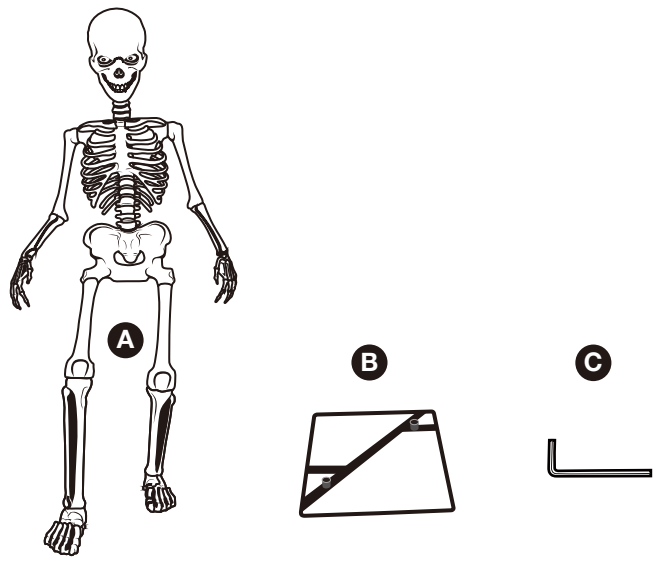


NOTE: Loosen the screws with the hex key, place the housings at the bottom of the feet of the (A) Body onto the poles of the (B) Base, then tighten the screws with the hex key to secure in place.

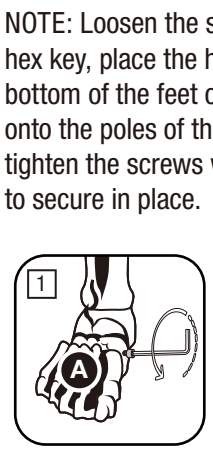

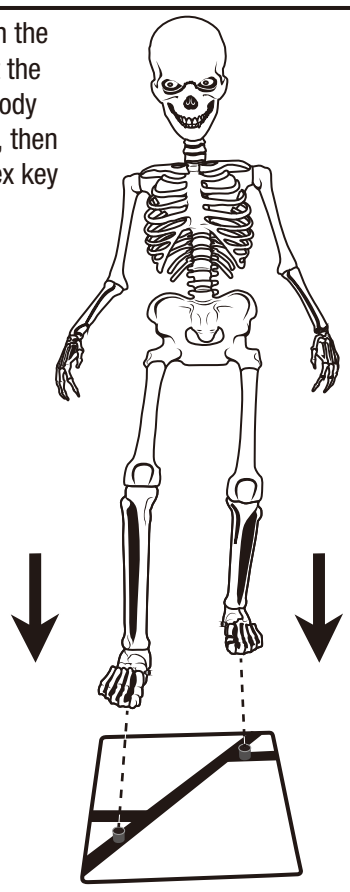

1.1

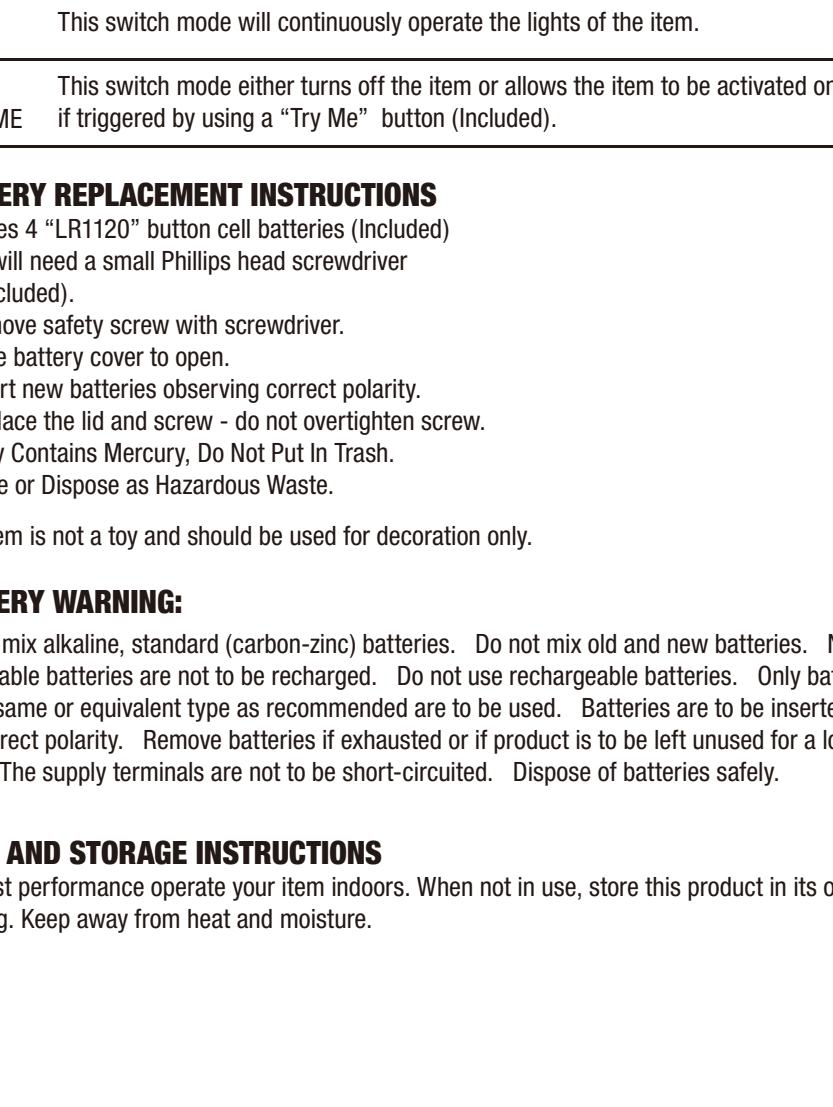

OPERATION INSTRUCTIONS:

ON	This switch mode will continuously operate the lights of the item.
OFF /TRY ME	This switch mode either turns off the item or allows the item to be activated only if triggered by using a “Try Me” button (Included).


BATTERY REPLACEMENT INSTRUCTIONS
Requires 4 “LR1120” button cell batteries (Included)
* You will need a small Phillips head screwdriver (not included).
1) Remove safety screw with screwdriver.
2) Slide battery cover to open.
3) Insert new batteries observing correct polarity.
4) Replace the lid and screw - do not overtighten screw.
Battery Contains Mercury, Do Not Put In Trash.
Recycle or Dispose as Hazardous Waste.

This item is not a toy and should be used for decoration only.

BATTERY WARNING:

Do not mix alkaline, standard (carbon-zinc) batteries. Do not mix old and new batteries. Non-rechargeable batteries are not to be recharged. Do not use rechargeable batteries. Only batteries of the same or equivalent type as recommended are to be used. Batteries are to be inserted with the correct polarity. Remove batteries if exhausted or if product is to be left unused for a long time. The supply terminals are not to be short-circuited. Dispose of batteries safely.

CARE AND STORAGE INSTRUCTIONS
For best performance operate your item indoors. When not in use, store this product in its original packing. Keep away from heat and moisture.

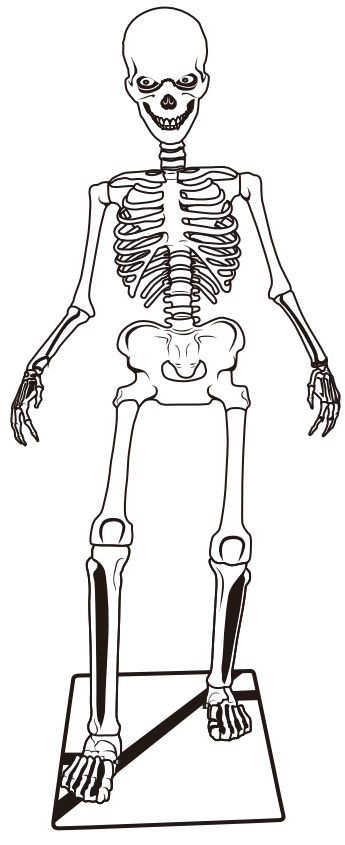

2.1

© Seasonal Visions International
Berkeley, CA 94710
Tel: 1-855-428-3921
All Rights Reserved
MADE IN CHINA