
INSTALLING REPAIR CLAMPS

TO REPAIR STEEL PIPES

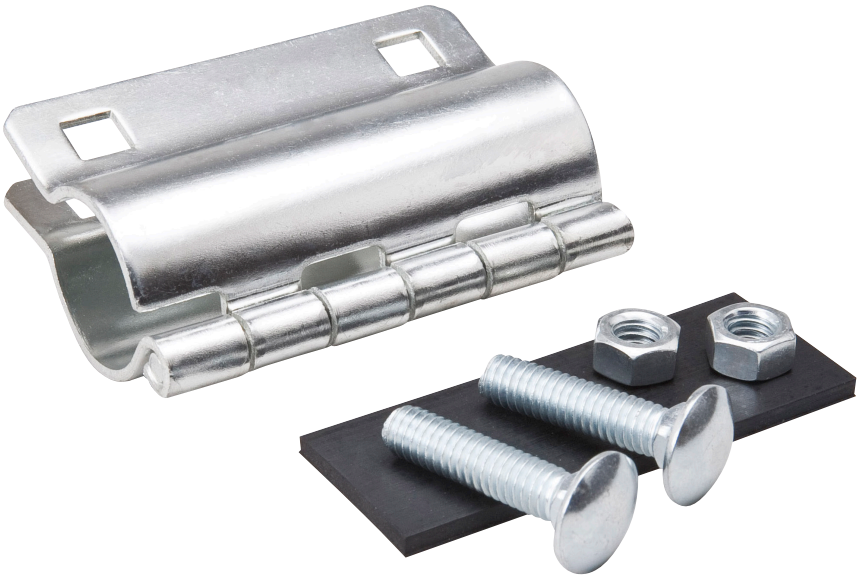

CONNECTING TO STEEL PIPE

1) Place the rubber gasket over the leak.
- This piece is critical in creating a water-tight seal.

2) Slide the metal clamp over the gasket and leaking area.
- Both the gasket and clamp should be centered over the leak.

3) Insert the screws and nuts through the clamp.
- Hand tighten both screws.
- Use a socket wrench to tighten two rotations past hand tight.

PIECES INCLUDED

1 Steel Clamp
1 Rubber Gasket
2 Steel Screws
2 Steel Nuts

TOOLS NEEDED

Socket Wrench

MODELS THIS INSTALLATION INSTRUCTIONS APPLIES TO:

160-803 - 1/2 in diameter
160-804 - 3/4 in diameter
160-805 - 1 in diameter
160-806 - 1¼ in diameter
160-807 - 1½ in diameter
160-808 - 2 in diameter

05 11 2022