
DECOUU

Frequency: 60Hz
Rated Voltage: 120V
Pump Modle
DEPR32S10-50

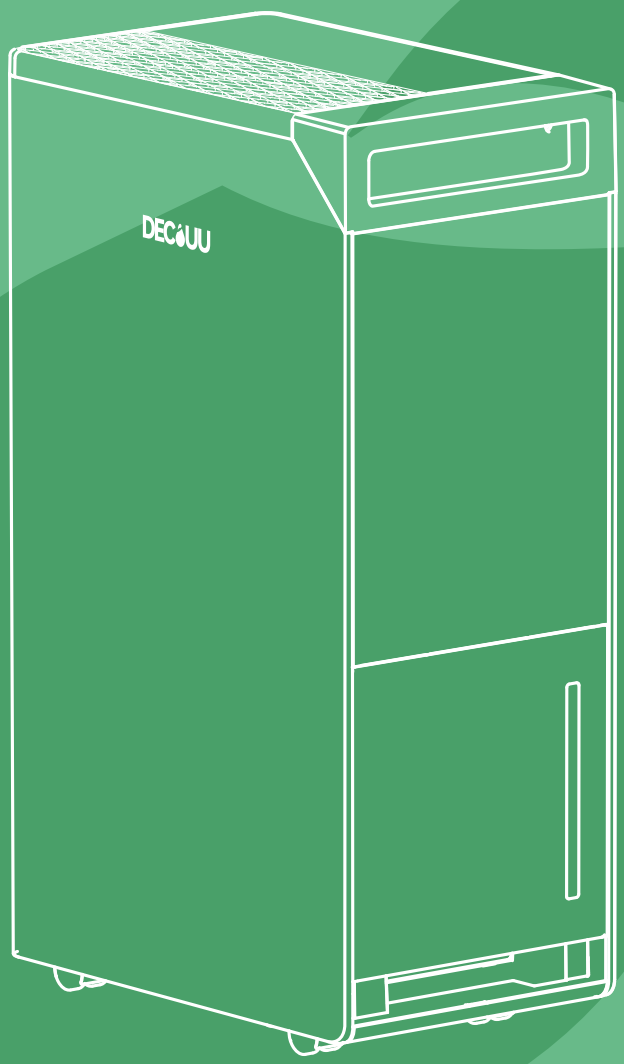

ENERGY STAR DEHUMIDIFIER

USER MANUAL

NEED HELP

WELCOME TO THE DECIUU FAMILY!

Thank you for choosing our product. We hope it brings lasting comfort and performance to your home.

If you have any questions, are missing parts, or need help using this product, You may find faster and more personalized help by reaching out to our support team directly.

Email: Support@deciuu.com

Note: Amazon return options remain available if needed.

Product features may be updated over time and may not be fully reflected in this manual. If you have any questions, we' re always here to help.

24/7 SUPPORT

We typically respond within 24 hours

CONTENTS

01 DRYING FORWARD 01

02 SAFETY INFORMATION 02-05

03 KNOWING YOUR DEHUMIDIFIER 06

04 OPERATION 07-12

05 REMOVING THE COL-LECTED WATER (CONT.) 13

06 CARE& MAINTENANCE 14

07 TROUBLESHOOTING 15

08 WARRANTYIN-FORMATION 16

DRYING FORWARD

WELCOME TO THE DECIUU FAMILY!

Whether this is your first time purchasing a Deciuu product or you're already one of our valued customers, we're thrilled to have you as part of the Deciuu family. Our journey began with a simple yet powerful idea: to create products that not only improve your living space but also contribute to a more sustainable and comfortable environment. We believe that small changes can lead to big impacts—whether it's reducing excess moisture in your home or conserving energy for a brighter future. From the very beginning, our mission has been to design solutions that not only enhance your home but also make a positive impact on the world.

With our brand-new smart dehumidifier, we're offering more than just a product; we're offering a way to transform your living environment. Picture walking into a room where the air is fresh, dry, and free of excess moisture—a place where your family can breathe easier and feel more comfortable. That's the promise of our dehumidifier: powerful dehumidifying capabilities designed to meet your family's needs, no matter the space or climate. And with multiple settings, you can tailor the dehumidification experience to suit any room in your home, whether it's the living room, basement, or bedroom.

Our journey at Deciuu is about more than just creating effective products. It's about creating a movement towards sustainability, a commitment to quality, and a promise to be there for you every step of the way. As you open your new Deciuu product, know that you're not just making a purchase—you're joining a community of like-minded individuals who care about the health of their homes and the planet.

We're honored to be part of your home and excited to help you create the perfect environment for your family—today and for years to come.

From our family to yours,
The Deciuu Team



READ ALL INSTRUCTIONS BEFORE USE

For your safety and continued enjoyment of this product, always read the instruction manual before using.

To prevent any internal damage, it's very important to keep the unit **UPRIGHT** throughout their journey. Please leave it standing **UPRIGHT** and outside the box for **8 HOURS**-before plugging it in.

SAFETY INFORMATION

CAUTION

- This appliance is not intended for use by persons (including children)with reduced physical,sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction conceming use of the appliance by a person responsible for their safety."Children should be supervised to ensure that they do not play with the appliance."
- This appliance is not intended to be serviced.
- The unit is not designed to be used by young children or people with reduced physical, sensory or mental capabilities without supervision.
- Young children should be supervised to ensure that they do not play with the unit.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Electrical installation, if needed, must be performed in accordance with national regulations and standards by qualified personnel only.

REFRIGERANT (FOR R32 ONLY)



Risk of Fire or Explosion. This unit contains flammable refrigerant. Additional safety precautions must be followed.

Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer.

- The appliance shall be stored in a room without continuously operating ignition sources (for example: open flames, an operating gas appliance or an operating electric heater).
- Do not pierce or burn refrigerant tubing. Be aware that refrigerants may not contain an odor.
- Keep ventilation openings clear of obstruction.
- When handling, installing and operating the appliance, care should be taken to avoid damage to the refrigerant tube.
- Maintenance, cleaning and service should only be performed by technicians properly trained and qualified in the use of flammable refrigerants.
- Dispose of dehumidifier in accordance with Federal and Local Regulations. Flammable refrigerants don't require special disposal procedures.
- Contact your local authorities for the environmentally safe disposal.

To prevent injury to the user or personal and property damage, these instructions must be followed. Incorrect operation due to ignoring of instructions may cause harm or damage.

SAFETY INFORMATION

■ The level of risk is shown by the following indications.

WARNING

WARNING: This symbol indicates the possibility of death or serious injury.

CAUTION: This symbol indicates the possibility of injury or damage to property.

■ The meanings of the symbols used in this manual are shown below.

Never do this.

Always do this.

⚠ WARNING

⃠ Do not exceed the rating of the power outlet or connection device.

- Otherwise, it may cause electric shock or fire due to excess heat generation.

⃠ Do not operate or stop the unit by switching on or off the power.

- It may cause electric shock or fire due to heat generation.

⃠ Do not damage or use an unspecified power cord.

- It may cause electric shock or fire.

⃠ Do not modify power cord length or share the outlet with other appliances.

- It may cause electric shock or fire due to heat generation.

⃠ Do not insert or pull out the plug with wet hands.

- It may cause electric shock.

⃠ Do not place the unit near a heat source.

- Plastic parts may melt and cause a fire.

⃠ Unplug the unit if strange sounds, smell, or smoke comes from it.

- A damaged product may cause fire and electric shock.

⃠ You should never attempt to disassemble or repair the unit yourself.

- It may cause machine failure or electric shock.

⃠ Before cleaning, turn off the power and unplug the unit.

- It may cause electric shock or injury.

⃠ Do not use the machine near flammable gases or combustibles, such as gasoline, benzene, thinner, etc.

- It may cause an explosion or fire.

⃠ Do not drink or use the water drained from the unit.

- It contains contaminants and could make you sick.

⃠ If the power cord is damaged, it must be replaced by the manufacturer or an authorized service center or a similarly qualified person.

- It may cause an electrical risk.

SAFETY INFORMATION

⚠ CAUTION

⃠ Do not use the unit in small spaces.

- Lack of ventilation can cause overheating and fire.

⃠ Do not put in places where water may splash onto the unit.

- Water may enter the unit and degrade the insulation, potentially causing an electric shock or fire.

⃠ Place the unit on a level, sturdy section of the floor.

- If the unit falls over, it may cause water to spill, damage belongings, or result in an electric shock or fire.

⃠ Do not cover the intake or exhaust openings with cloths or towels.

- A lack of air flow can lead to overheating and fire.

✓ Care should be taken when using the unit in a room with the following persons:

- Infants, children, elderly people, and people not sensitive to humidity.

⃠ Do not use in areas where chemicals are handled.

- This will cause the unit to deteriorate due to chemicals and solvents dissolved in the air.

⚠ CAUTION

⃠ Never insert your finger or other foreign objects into grills or openings. Take special care to warn children of these dangers.

- It may cause electric shock or failure of the appliance.

⃠ Do not place heavy object on the power cord and take care so that the cord is not compressed.

- There is a risk of fire or electric shock.

⃠ Do not climb on or sit on the unit.

- You may be injured if you fall or if the unit tips over.

✓ Always insert the filters securely. Clean the filter once every two weeks.

- Operating the unit without filters may cause failure.

✓ If water enters the unit, turn it off, unplug the power, and contact a qualified service technician.

- It may cause appliance failure or an accident.

⃠ Do not place flower vases or other water container on top of the unit.

- Water may spill inside the unit, causing insulation failure and electrical shock or fire.

✓ Be careful when you removing the filter not to damage the fins.

- It may cause appliance failure or injure your fingers.

SAFETY INFORMATION

ELECTRICAL INFORMATION


- Do not use the appliance if the power cable cord is damaged. It must be replaced by a Deciuu's Service center and contact Customer Service at **Support@deciuu.com**. The appliance must be plugged into a 3-prong outlet and ensure that the voltage matches the rated specifications. If in doubt, check with a qualified technician.
- Be sure the dehumidifier is properly grounded. To minimize shock and fire hazards, proper grounding is important. This power cord is equipped with a three-prong grounding plug for protection against shock hazards.
- Do not use with extension cables or multi-sockets. Do not pull or place strain on the power cord when moving the appliance. Always unplug the appliance before cleaning or maintenance or when not in use.
- To protect against electric shocks, do not immerse or spray the appliance or any of its parts in water.
- Always switch off the power before unplugging from the socket.



Warning: Flammable Gas


Read Operator's Manual



Service Indicator, read Technical Manual

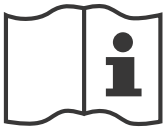

Operator's Manual, Operating Instructions

KNOWING YOUR DEHUMIDIFIER

PRODUCT OVERVIEW

① Air outlet
② Control Panel
③ Handle
④ Water Tank Handle
⑤ Visual Window
⑥ Caster

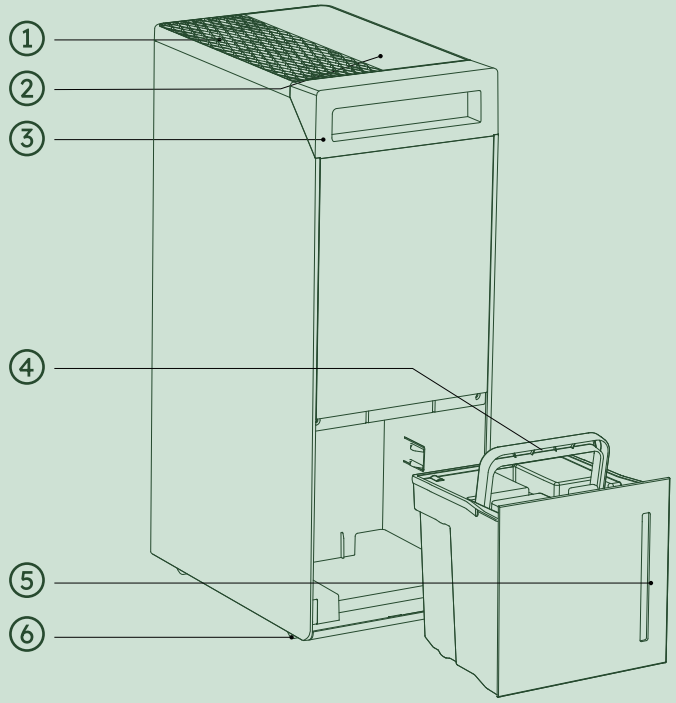

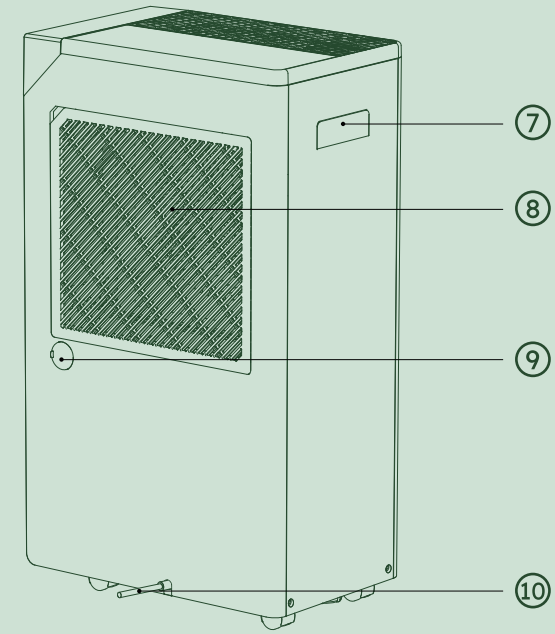


⑦ Handle
⑧ Washable Pre-filter
⑨ Continuous Drain Hose Outlet
⑩ Power Cord
⑪ Drain Hose
⑫ Garden Hose Adapter
⑬ Pump Drain Hose (Ipc)





OPERATION

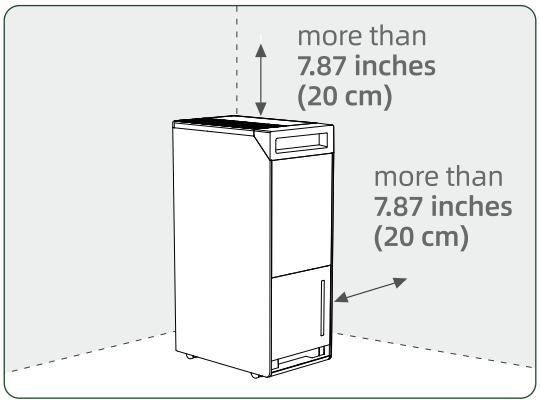

PLACE CORRECTLY

This unit may have been tilted or placed upside down during shipping. To ensure this device works properly, please ensure this unit is upright for at least 8 hours before initial use.

This dehumidifier is designed to operate in environments with temperatures between 41°F (5°C) and 95°F (35°C). The coils can become covered with frost at temperatures below 41°F (5°C).

The dehumidifier must be operated in an enclosed area to be most effective. Close all doors, windows and other outside openings to the room.
Do not force casters (installed at four points on the bottom of the dehumidifier) to move over the carpet, or move the dehumidifier with water in the bucket. (The dehumidifier may tip over and spill water.)

SPECIAL FEATURES

Auto shut Off

The dehumidifier will automatically stop when the bucket is full or the desired humidity level is reached.

3-Minute Compressor Delay Protection

After stopping, the unit cannot restart for 3 minutes to protect the compressor. It will restart automatically after this period.

Auto-Restart

If the dehumidifier loses power unexpectedly, it will automatically restart with the previous settings when power is restored.

Auto-Remember

After turning off and unplugging the device, reconnect and power it on to resume operation in the previous mode. All functions, except for the child lock and timer, have memory capability.


Compressor protection function

In order to extend the product life, the compressor will rest for 8 minutes after continuous operation for 8 hours, and then start again.

NOTE: All the illustrations in the manual are for explanation purposes only. Your dehumidifier may be slightly different. The actual shape shall prevail. The design and specifications are subject to change without prior notice for product improvement. Consult Customer Service for details.

OPERATION

NOTE: The control panel of the unit you purchased may be slightly different according to the models.

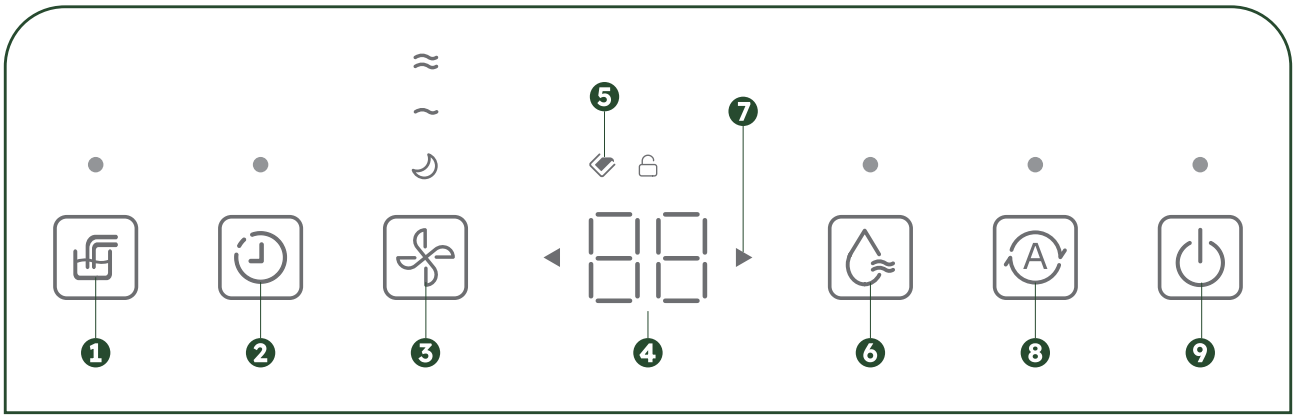

CONTROL PANEL

When you push the button to change operation modes, the unit will make a beep sound to indicate it's changing modes.

❶ Pump Button (Only applicable to dehumidifier models with a pump) Press to activate the pump operation.

NOTE:

Before starting pump, make sure the pump drain hose is attached, the continuous drain hose is removed and the plastic cover of the continuous drain hose outlet is replaced tightly.

When the bucket is full, the pump starts to work. Refer to the next pages for removing the collected water.

❷ Timer Button

Press to set an auto-off timer (0-24 hours) using the ◀ and ▶ buttons. Each press adjusts the time by 1 hour.

NOTE:

- When the timer indicator light is on, press the timer button 2 times to cancel the Timer, and the indicator light is off.
- Pressing the On/Off button to turn off the dehumidifier before the timer ends will cancel the timer setting.
- If the working mode is changed during the timing process, the original timing will be maintained.
- To change the original setting, press the Timer button along with the ◀ and ▶ buttons to reset the timer.

❸ Wind Speed Button

Low Speed Mode: Press this button once, ☾ will light on.

This button also serves as the child lock key. Press it for 3 seconds to activate or shut down the child lock,and the corresponding indicator light will be on or off.

Medium Speed Mode: Press this button twice, ～ will light on.

High Speed: Press this button three times, ≈ will light on.

OPERATION

❹ 88 LED Display shows the set humidity level, adjustable from 35% to 80%, or the set time, adjustable from 1 to 24 hours.

❺ Water Tank State Indicator

When the water tank is full, the red indicator light will be on, when the water tank not in the correct position, the red indicator light will flash.

❻ Custom Mode (Humidity set Control Buttons)

Press + ◄ ► to adjust.

The humidity level can be set within a range of 35% RH to 80%RH in 5% increment

❼ ◄ ►Adjustment Buttons

NOTE:

When first turned on, the dehumidifier defaults to Continuous Mode (CO) with low fan speed. In this mode, the ◄ ► buttons are disabled. To use these buttons, exit Continuous Mode. This button works only when either the Custom Mode (Humidity Set) button or Timer button is active.

❽ Auto Mode

Press again to switch to auto mode, and the humidity is automatically maintained between 45% and 55%. The fan speed can be adjusted according to needs, but the target humidity value cannot be adjusted.

❾ Power Button

Press to turn the dehumidifier on or off. Subsequent power-ons will have a memory function, recalling the last working state.

CO Continuous Mode

It is default mode and low wind speed when turned on. The display shows'CO' first, and then switches to ambient humidity after 5 seconds.
In this mode, the fan speed can be adjusted, but the target humidity cannot be adjusted.

HS Auto Defrost

When frost forms on the coils, the compressor will pause, and the fan will keep running to melt the frost. Normal operation resumes automatically once defrosting is complete.

OPERATION

REMOVING COLLECTED WATER


1. Use the water tank

When the bucket is full, the red indicator light will be on. Slowly pull out the water tank, empty it and replace the water tank. The unit will restart operation when the water tank is back in place.


NOTE:

When you remove the water tank, do not touch any parts inside the unit. Doing so may damage the product. Be sure to push the water tank gently all the way into the unit.

If the pump hose falls off when you remove the water tank (See Figure-1), you must reinstall the pump hose properly to the unit before replacing the water tank into the unit (See Figure-2).

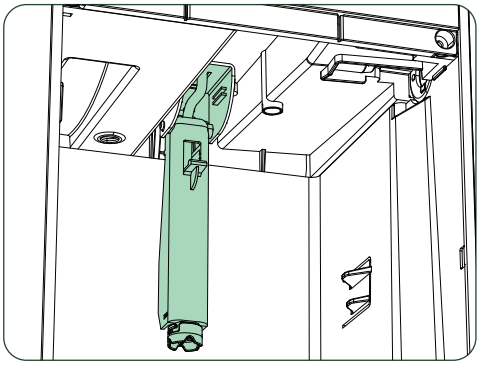

(See Figure-1)

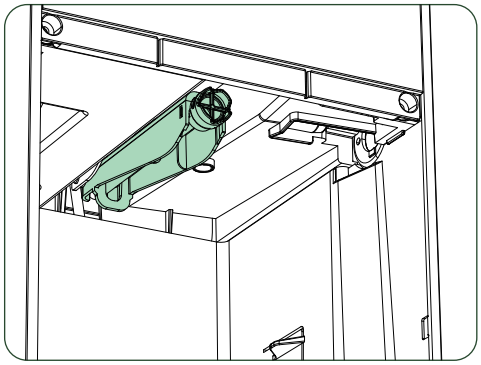


(See Figure-2)

2. Continuous draining

Water can be automatically be emptied into a floor drain by attaching the dehumidifier to a drain hose.

- Take out the garden hose adapter from the bucket.
- Open the soft water plug and connect the drain hose.

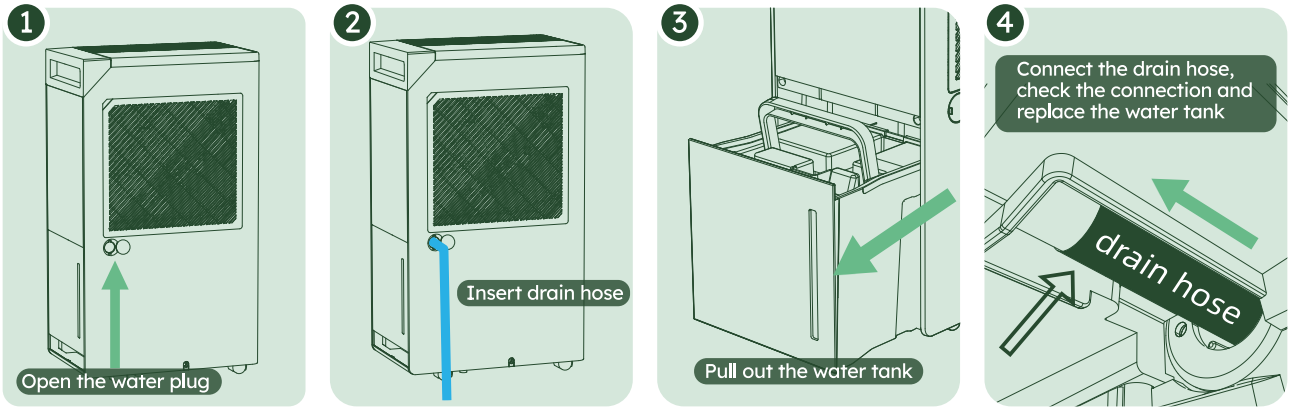

OPERATION

NOTE:


- Make sure the connection is tight and there is no leaking.
- We've provided sufficient length for the drain hose. You can trim it to the desired length as needed if necessary.

Ensure the drain hose slopes downward to allow smooth water flow, otherwise, it may back up into the water tank.

When the continuous drain feature is not being used, remove the drain hose from the outlet and make sure the water plug is tightened.

NOTE:
Do not use continuous draining when the outdoor temperature is equal to or less than 32° (0°c) otherwise the water will freeze, causing the water hose to block up and the dehumidifier may be damaged.

Using Floor Drain | Trimming Hose | Do Not Bend | Do Not Immerse

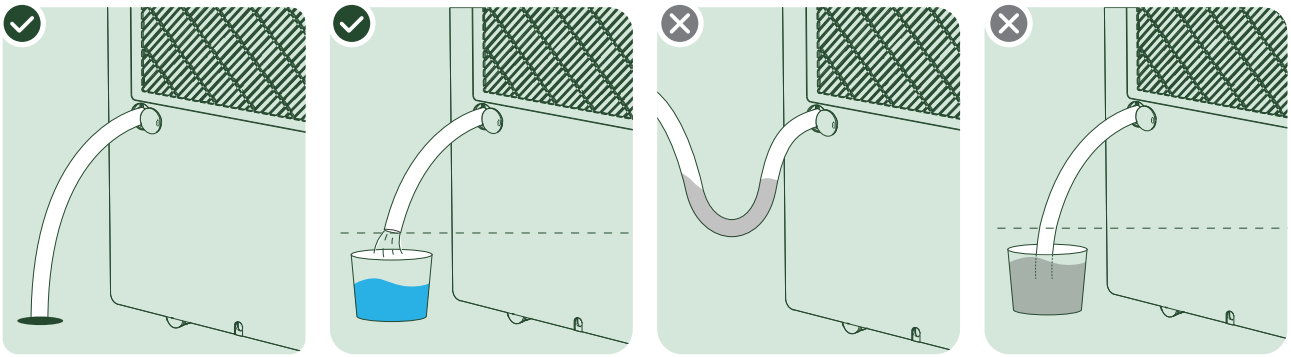

Ensure the drain hose is not submerged and is always positioned below the appliance's horizontal line; otherwise, air pressure may prevent proper drainage.

NOTE:
When the continuous draining feature is not being used, remove the drain hose from the outlet and dry the water in the drain outlet.


CARE:

Before cleaning, turn the dehumidifier off and unplug it from power. Clean the dehumidifier with water and mild detergent. Do not use bleach or abrasives.


OPERATION

PUMP DRAINAGE GUIDE

Check Before Pump Drainage Your unit includes two hoses:

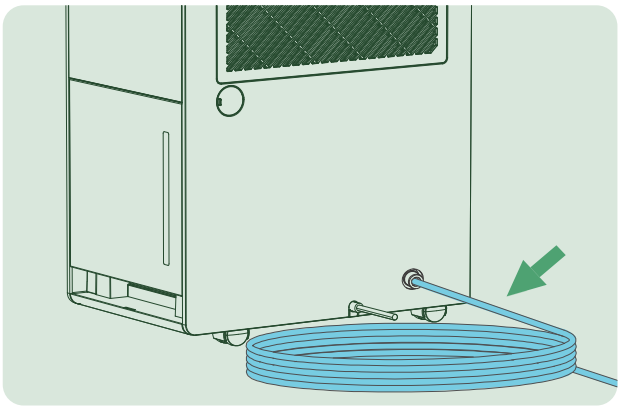


PE Pump Hose – for pump drainage

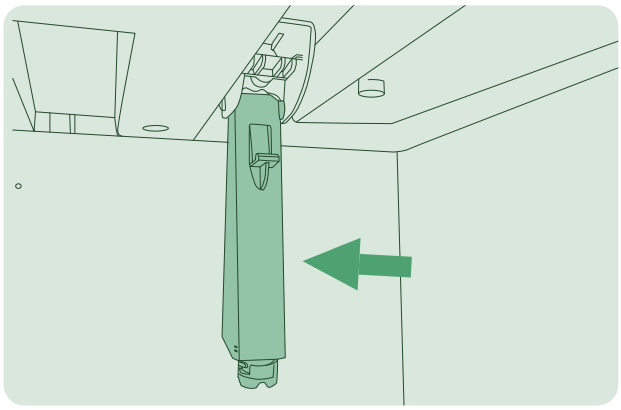

Internal Pump Tube – above the water tank


STEP 1

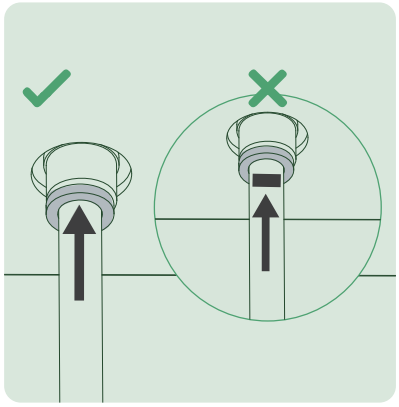

✓ Insert hose fully (hide mark).


✗ Leak risk if mark is visible.

STEP 2

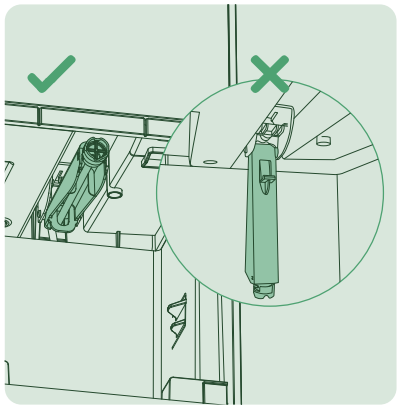

Keep tube upright → Lift & secure if tank won't fully insert→ Reattach clip if loose.

STEP 3

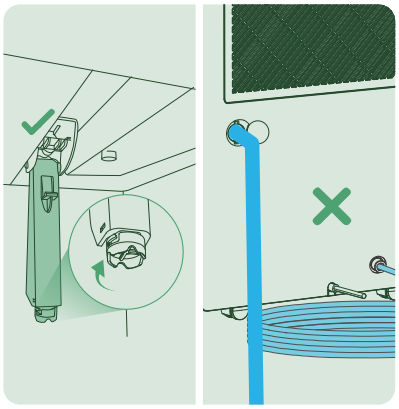

Secure the pump tube cap to keep impurities out.

Do not use drain hose in pump mode.

Pump Drainage


- Press pump → Pump light on.
- Pump stays on standby until tank is full.
- When full tank light is red.
- Pump drains for about 15min.
- While draining, full tank light turns off and fan keeps running.
- Press pump again to stop.

⚠ **Important: Use only ONE method: pump / drain hose / tank. Do not use together.**

REMOVING THE COLLECTED WATER (cont.)

Pump draining (Pump models only)

1. Water can be automatically emptied into a floor drain or a suitable drainage facility by attaching the pump drain outwith a pump drain hose (provided).
2. Remove the continuous drain hose from the unit and close the drainage port cover. (See Figure-3)
3. Insert the pump drain hose into the pump drain hose outlet for at least 15 mm (See Figure-3), then lead the water hose to the floor drain or a suitable drainage facility.
4. Press the pump button on the unit to activate the pump operation.When the bucket is full the pump starts to work.

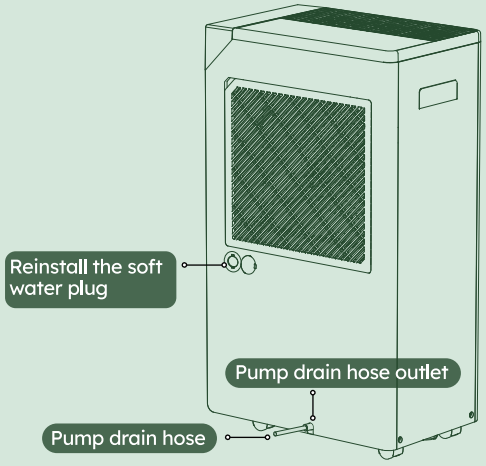

(See Figure-3)

NOTE:
The pump may generate a loud noise for the first 3~5 minutes of operation.


- Make sure the hose is secure so there are no leaks.
- Direct the hose toward the drain, making sure that there are no kinks that will stop the water flowing.
- Place the end of the hose into the drain.
- Select the desired humidity setting and fan speed on the unit for pump draining to start.

NOTE:

The pump operation light blinks when a failure occurs.Please turn off the unit and disconnect the power cord.


Check the following items:

- **Cleaning the pump filter:**
  -Remove the bucket from the unit, take down the pump and clean the pump filter (See Figure -4).
- **Check if the drain hose is clean and free of debris.**
- **Empty the water from the bucket.**
- **Check the hose connection and the water tank for proper fitment. If the error persists, contact customer service at Support@deciuu.com.**

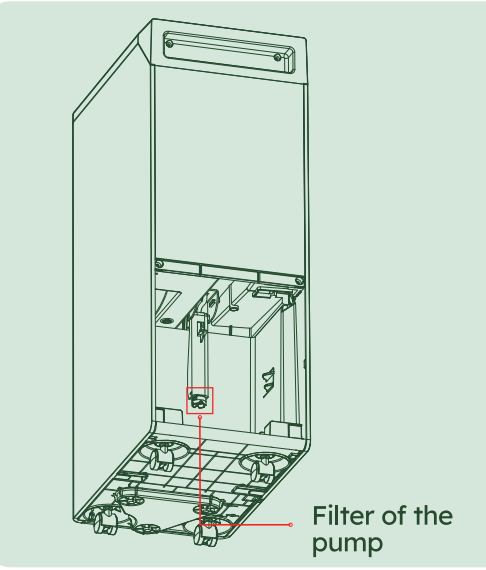

(See Figure -4)

CARE& MAINTENANCE

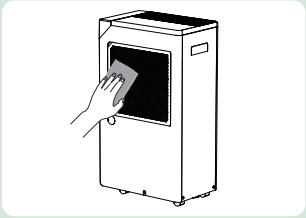


Clean the Outer Surface


Use a soft, dry cloth to gently clean the outer surface.


Tip: Never use chemical solvents like benzene, alcohol, or gasoline, as they may damage or deform the casing.

Clean the Water Tank

Clean the bottom and edges of the water tank every 1-2 weeks to prevent bacterial growth from water accumulation.

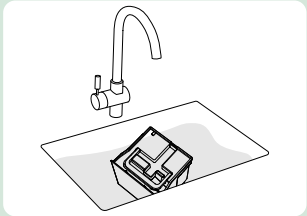

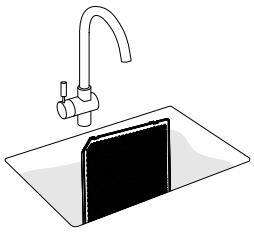

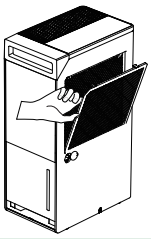


Clean the Washable Pre-filter

1.Take out the filter
2.Rinse the filter under running water and wait until dry
3.Insert the filter back into the dehumidifier

Tip: For optimal performance, clean the filter every 1-2 weeks and ensure it is completely dry before reassembling.

Clean the filter of the pump (only for pump model)

Clean the filter with potable water at least once every 30 days.

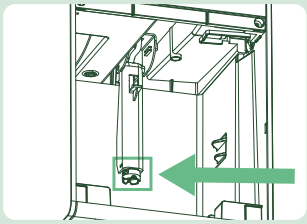

MAINTENANCE

Storing the dehumidifier

When not using the dehumidifier for a long period of time.

- Let it rest for a whole day to naturally dry out before storing
- Clean the body, water bucket, and air filter.
- Cover the dehumidifier with a plastic bag.
- Store it upright in a dry well-ventilated area.

TROUBLESHOOTING

Before contacting customer service, please refer to the troubleshooting section below for common solutions. It may save you time and money.
If the issue persists, contact us via email at **Support@deciuu.com**.

Problem	Solution
Dehumidifier does not start	- Make sure the dehumidifier's plug is inserted completely into the outlet. - Check the house fuse/circuit breaker box. - The dehumidifier has reached its preset level, or the water tank is full. - Water tank is not in the proper position.
Dehumidifier does not dry the air as it should	- Make sure allow enough time to remove the moisture. - Make sure there are no curtains, blinds or furniture blocking the front or back of the dehumidifier. - The humidity control may not be set low enough. - Check that all doors, windows and other openings are securely closed. - Room temperature is too low, below 41°F(5℃) - There is a kerosene heater or something giving off water vapor in the room. - The air filter is dirty. Clean the air filter.
The dehumidifier makes a loud noise when operating	- The air filter is clogged. - The dehumidifier is tilted instead of being upright as it should be. - The floor surface is not level. - Check if the filter is properly positioned. If none of the above conditions apply, please contact **support@deciuu.com**
Connect the drain hose, but the water is flowing in the water tank.	Make sure the connection is tight and there is no leaking. See the Continuous drainage section.
The pump operation light blinks	Clean the pump filter. Check the pump hose is not blocked or leaking Empty the water tank.

WARRANTY INFORMATION

DECIUU LIMITED WARRANTY – 1 YEAR

Deciuu provides a limited 1-year warranty (the Warranty) on this dehumidifier, available exclusively through authorized distributors and retailers.
This Warranty is valid from the date of original retail purchase, applies only to the original purchaser, and is non-transferable.

Extended Warranty (Registration Required)

To enjoy extended coverage, we encourage you to register your product within 30 days of purchase at **www.deciuu.com**.

Upon successful registration, your standard 1-year warranty will be extended by an additional year, providing 2 years of total warranty coverage.

If registration is not completed within the 30-day period, the product will still be covered by the standard 12-month warranty.

This Warranty is void without proof of purchase within the United States and Canada. Please be aware that this Warranty supersedes all other warranties and constitutes the entire agreement between the consumer and Deciuu. Any changes to the Terms and Conditions of this Warranty must be in writing, signed by a representative of Deciuu. No other party has the right or ability to alter or change the Terms and Conditions of this Warranty.

We may ask you to submit, via email, photos or videos of the issue you are experiencing. This is to help us better assess the matter and possibly offer a quick fix. Photos or videos may also be required to determine warranty eligibility.

THE WARRANTY WILL NOT APPLY IN CASES OF:

1. Accident, misuse, or repairs performed by unauthorized personnel.
2. Any unit that has been tampered with or used for commercial purposes.
3. Normal wear and tear of wearable parts.
4. Use of force, damage caused by external influences.
5. Damage caused by non-observance of the User Manual, e.g. connection to an unsuitable mains supply or non-compliance with the instructions.
6. Partially or completely dismantled appliances.
7. Defects caused by or resulting from damages from shipping or from repairs, service, or alteration to the product or any of its parts that have been performed by a repair person not authorized by Deciuu.

We can only provide warranty service (such as refund or replacement) for products that are sold by Deciuu or Deciuu authorized retailers and distributors. If you have purchased the appliance from a different place (including second-hand items sold from Amazon.com Services, inc), please contact your seller for return and warranty issues.

We're Here to Help!

If you have any questions or concerns about your new product, please contact our Customer Support Team at **Support@deciuu.com** with your order ID. We will respond as soon as possible within 24 hours.

EMAIL US

Support@deciuu.com

REGISTER PRODUCT

www.deciuu.com

DECOUU

Dry Smart Live Better