
Item #
Model #BC-1019

USE AND CARE GUIDE

7-POSITION LAY FLAT BACKPACK BEACH CHAIR

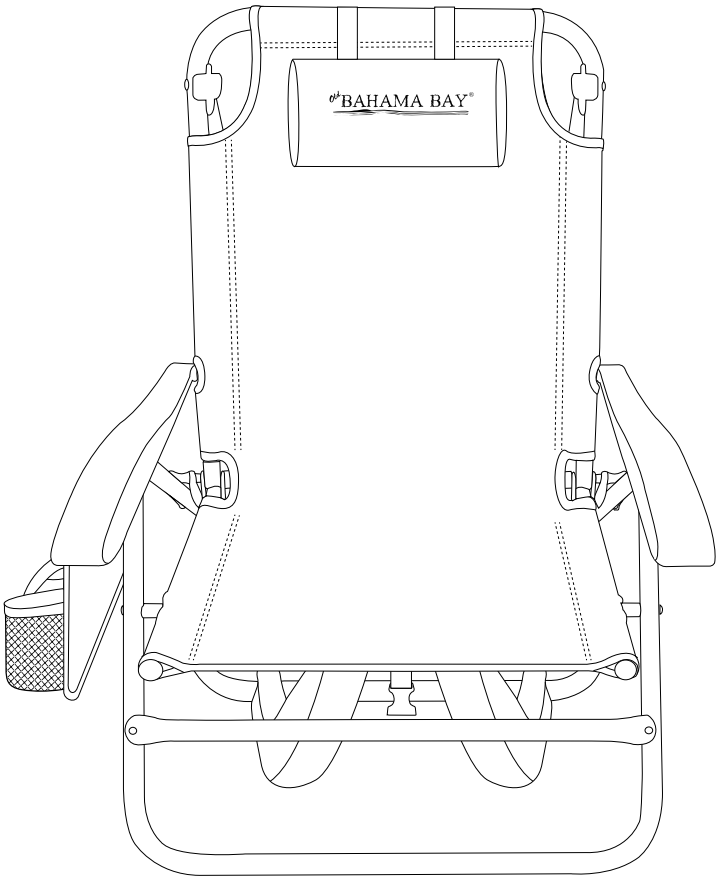

Questions, problems, missing parts?
Before returning to the store, call Customer Service
7:30 a.m. – 4:30 p.m., EST, Monday-Friday

877-579-1550

www.westfieldoutdoor.com

Table of Contents

Table of Contents **2**
Safety Information **2**
Assembly- No assembly required **3**
Operation **4**
Care and Cleaning **6**

Safety Information

SAVE THESE INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE

When using this furniture, basic precautions should always be followed, including the following:


To reduce the risk of injury to persons:


1. Close supervision is necessary when this furniture is used by or near children, or disabled persons, if applicable.
2. Use this furniture only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.



CAUTION:
Maximum load capacity 225 lb.
Please watch your hands and fingers when you open / close the chair.

Assembly - No assembly required

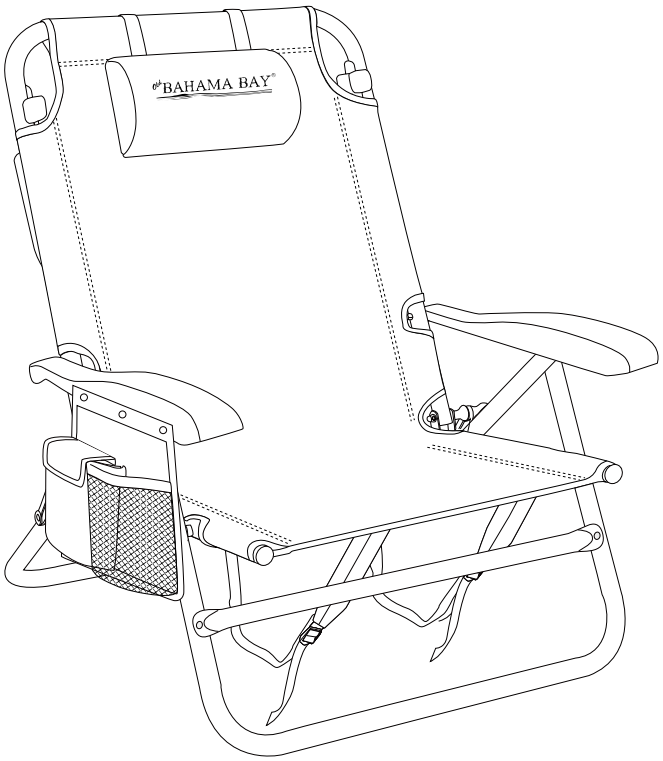

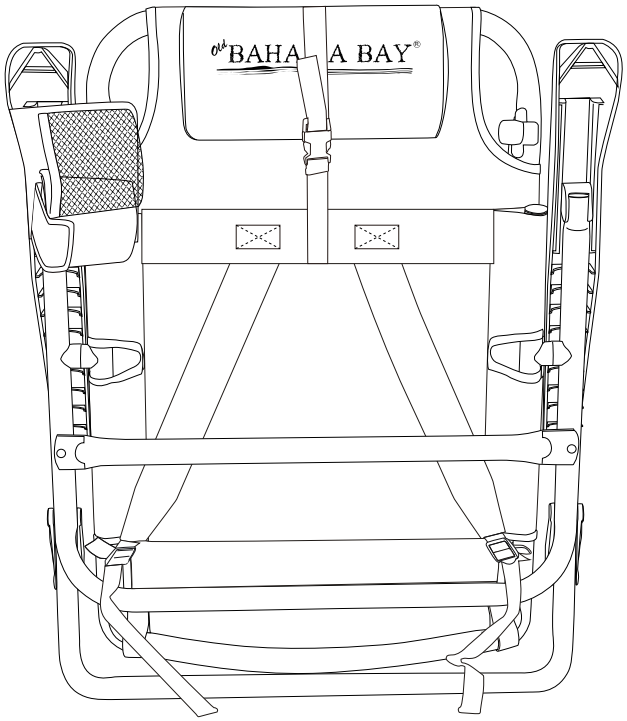


Operation

1 Open the chair

1.Unlock the buckle.


2.With one hand, grab the seat rest support pole. Your other hand should be at the front edge of the armrest on the same side. Open the chair fully. Lift the towel bar.

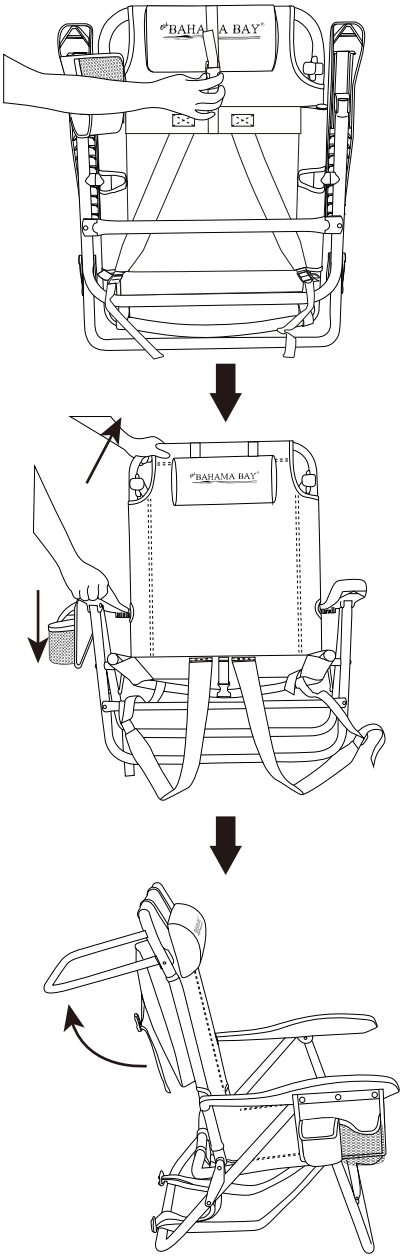

2 Adjust the backrest

1. Lift the armrest up slightly and push it backwards until it clicks into desired position A, B, C, D, E, F or G.


2. If you need to adjust the chair from a lower position to a higher position, you must lift the armrest up slightly, then pull it forward until it clicks into the desired position.

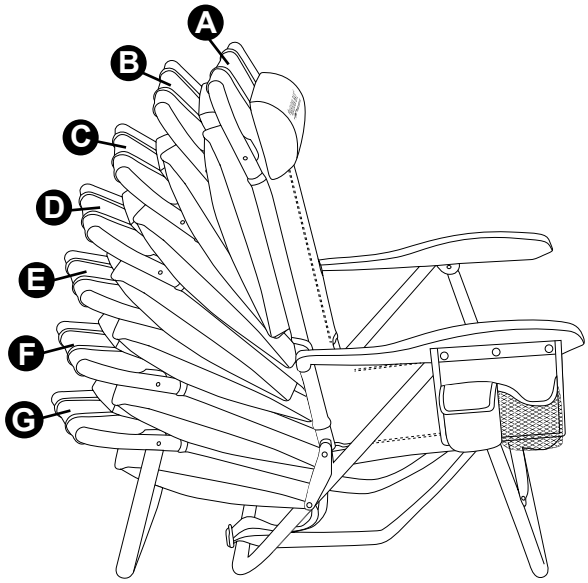

Operation


3 Close the chair

1.Drop towel bar.
2.Grab the front center of the armrest and lift.
3. After folding, lock the buckle

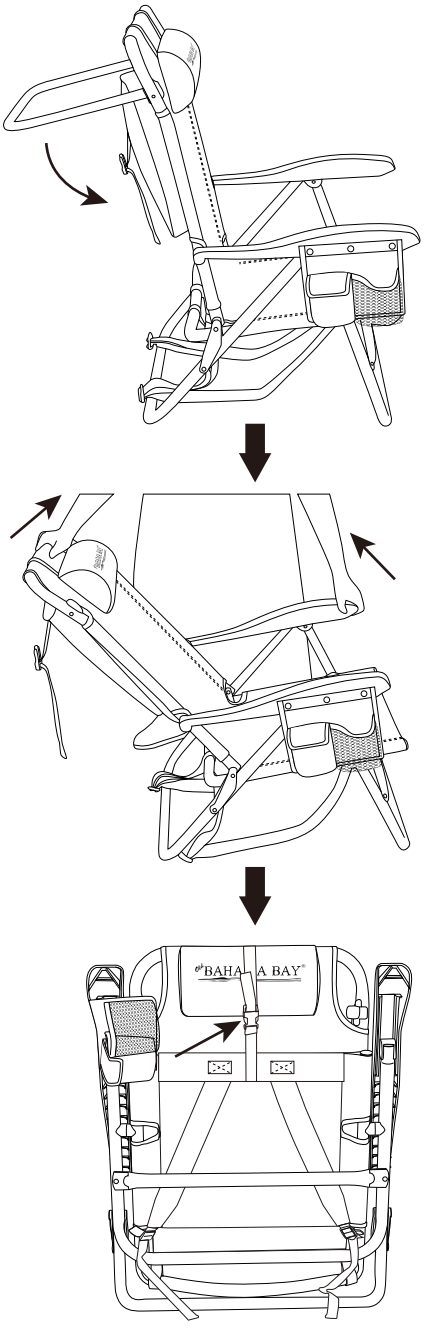

4 Carry the chair

Carry the beach chair by shoulder strap, or pick up the beach chair by the handle.

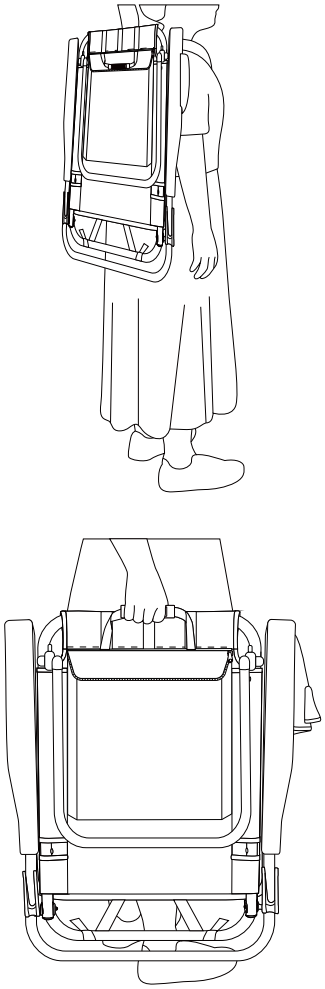

Care and Cleaning

1. Before using, wipe with a clean, dry cloth. Do not use bleach or solvents.
2. Treat frame with one step liquid wax for maximum protection against UV light and salty, damp chair.
3. When not in use, store furniture in a cool, dry place.
4. If you set includes cushions, they may be cleaned by hand with mild solution of soap and water.
5. Rinse cushion thoroughly and allow to drip dry. Do not machine wash or tumble dry, as cushions may shrink.
6. Do not use bleach or solvents on fabrics.
7. When cleaning the tabletop make sure to use a soft, clean cloth does not bleed color
8. Contact the Customer Service Team at 877-570-1550 or visit www.westfieldoutdoor.com.

Questions, problems, missing parts?
Before returning to the store, call Customer Service
7:30 a.m. – 4:30 p.m., EST, Monday-Friday

877-570-1550

www.westfieldoutdoor.com

Retain this manual for future use.