Model # / Store SKU / Internet SKU
H46MWC9GBV2 / 1004319510 / 1004708307
H46MWC9GGV2 / 1004319798 / 1004708311
H46MWC9GWV2 / 1004319517 / 1004708292
H46MWC9BOV2 / 1004319791 / 1004708313
H46MWC9RV2 / 1004337287 / 1004708314
H46MWC9V2 / 1002811059 / 1005021936


USE AND CARE GUIDE

Husky Extra Deep 46 in. 9-Drawer Mobile Work Bench

Questions, problems, missing parts?
Before returning to the store, call
Husky Customer Service
8 a.m – 7 p.m., EST, Monday-Friday
9 a.m – 6 p.m., EST, Saturday

1-888-HD-HUSKY

HUSKYTOOLS.COM

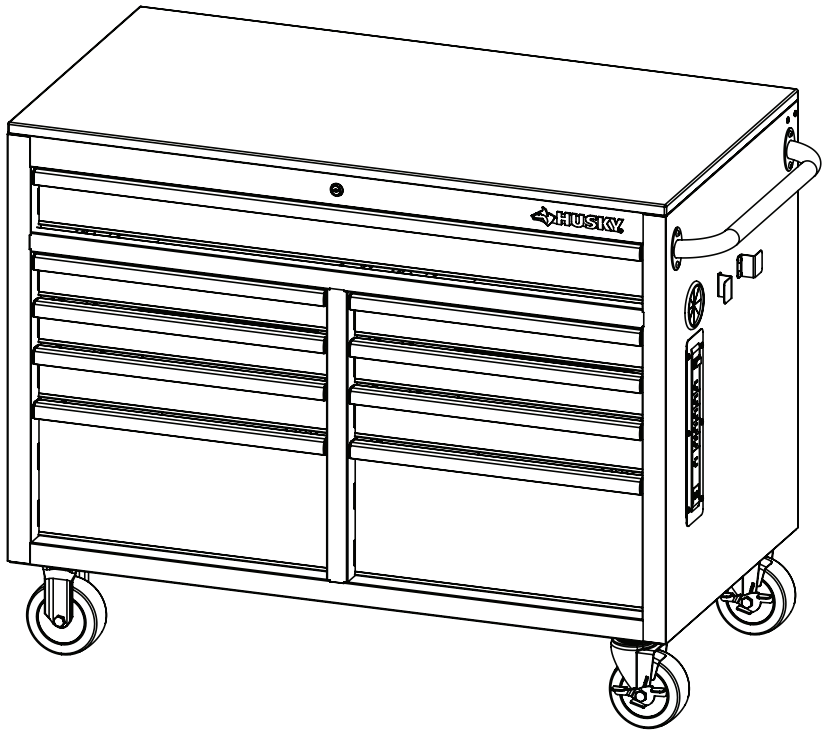

Caster hubcap may be different than shown in diagram

THANK YOU

We appreciate the trust and confidence you have placed in Husky through the purchase of this cabinet. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Husky!

Table of Contents

Table of Contents.....2
Safety Information 2
Warranty 4
Specifications 4
Package Contents.....4
Hardware Included.....4
Alternative Tools For Assembly (Not Included) 4
Assembly 6
Optional Attachment 7
Operation 7
Cordless Power Tool Battery Chargers 8
Maintenance.....8
Replacement Parts 9

Safety Information

1. Do not pull this unit, push it when moving.
2. Use the brakes when this product is not being moved. This prevents the product from rolling.
3. Secure this product properly before moving it with a forklift.
4. Do not tow the product with power equipment.
5. Do not alter this product in any manner. For example, do not weld external lock bars or attach electrical equipment.
6. Before locking the cabinet, ensure the drawers are completely closed in order for the lock bars to work properly.

CAUTION: Do not attach or mount this product to a vehicle or mobile trailers. This may cause personal injury or product damage. Mounting this product to any vehicle or mobile trailers in any manner will void warranty.

CAUTION: Do not stand on this product. You may fall which may cause personal injury or product damage.

CAUTION: Be careful when opening more than one drawer. The product may become unstable and tip, which may cause personal injury or product damage.

CAUTION: Keep the product on level surfaces. The product may become unstable and tip if stored or moved on an unlevel surface, which may cause personal injury or product damage.

CAUTION: Lock the drawers before moving this product. The drawers could come open and make the product unstable and tip, which may cause personal or product damage.

CAUTION: Load unit starting with bottom drawers. Overloading the top of the unit may result in the product becoming unstable and creating a tipping hazard, which may cause personal injury or product damage.

CAUTION: Do not use the side handle as a point of leverage to lift the unit off of the ground. Handle is not intended to withstand the force of vertical lifting, and is only designed to aid in the movement of unit around on casters. Failure to adhere to this warning may cause handle to break and cause personal injury and/or product damage.

7. Extension cord

- □ Follow all manufacturers' Warnings and Operating Instructions for your extension cord.
- □ Do not insert extension cord through hole without grommet in place.
- □ Only use a three-wire extension cord with all three prongs intact. Never remove the round grounding prong.
- □ Extension cord must be connected to a 125 Volt GFCI protected outlet with proper ground. If GFCI outlet is not available, use an extension cord with GFCI protection built in.
- □ Check the insulation and plugs of extension cord before using. Do NOT use cord if it is worn or damaged.
- □ Do NOT overload extension cord.
- □ Remove extension cord from the hole before moving or transporting storage cabinet.
- □ Only use an extension cord that is rated for outdoor use.
- □ Do NOT connect extension cord to outlet that also supplies critical safety equipment with power.

8. Electrical Shock Hazard

- □ Do not plug cord into outlet with wet hands.
- □ Do not use this cabinet near a bathtub, a shower, or a swimming pool.
- □ Cabinet plugs must match the outlet.
- □ Never modify the plug in any way.
- □ Do not use any adapter plugs with earth (grounded) cabinet power strips.
- □ Unmodified plugs and matching outlets will reduce the risk of electric shock.
- □ Avoid body contact with earthed or grounded surfaces. There is an increased risk of electric shock if your body is earthed or grounded.

CAUTION: RISK OF ELECTRICAL SHOCK: This unit has one power supply cord. Make sure the cord is unplugged before any servicing or cleaning.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

□ Reorient or relocate the receiving antenna.
□ Increase the separation between the equipment and receiver.
□ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
□ Consult the dealer or an experienced radio/TV technician for help.

Warranty

The manufacturer warrants the product to be free from defects in materials and workmanship for a period of three (3) years from date of purchase. This warranty applies only to the original consumer and only to products used in normal use and service. If this product is found to be defective, the manufacturer's only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modifications, alteration neglect or mishandling. This warranty shall not apply to any product that is found to have been improperly installed, setup, or used in any way not in accordance with the instructions supplied with the product. This warranty shall not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, faulty installation, or any other failure not relating to faulty material or workmanship. This warranty shall not apply to the finish on any portion of the products such as surface and/or weathering, as this is considered normal wear and tear.

The manufacturer does not warrant and specifically disclaims any warranty, whether express or implied, of fitness for a particular purpose, other than the warranty contained herein. The manufacturer specifically disclaims any liability and shall not be liable for any consequential or incidental loss or damage, including but not limited to any labor/expense costs involved in the replacement or repair of said product.

Contact the Customer Service Team at 1-888-HD-HUSKY or visit www.huskytools.com.

Specifications

Maximum weight per (cabinet drawer)	100 lbs.
Casters support up to	1200 lbs.

NOTE: Begin product assembly close to the final intended location of your cabinet. This product is heavy and may be difficult to move after assembly.

Package Contents

HARDWARE INCLUDED

NOTE: Hardware not shown to actual size.



Part	Description	Quantity
AA	M8 x 25 bolt	16
BB	M6 x 16 bolt	8
CC	Hex key	1

ALTERNATIVE TOOLS FOR ASSEMBLY (Not Included)




*12 mm wrench or socket

Package Contents (continued)

NOTE: The keys are inside top drawer.

NOTE: Caster hubcap may be different than shown in diagram.

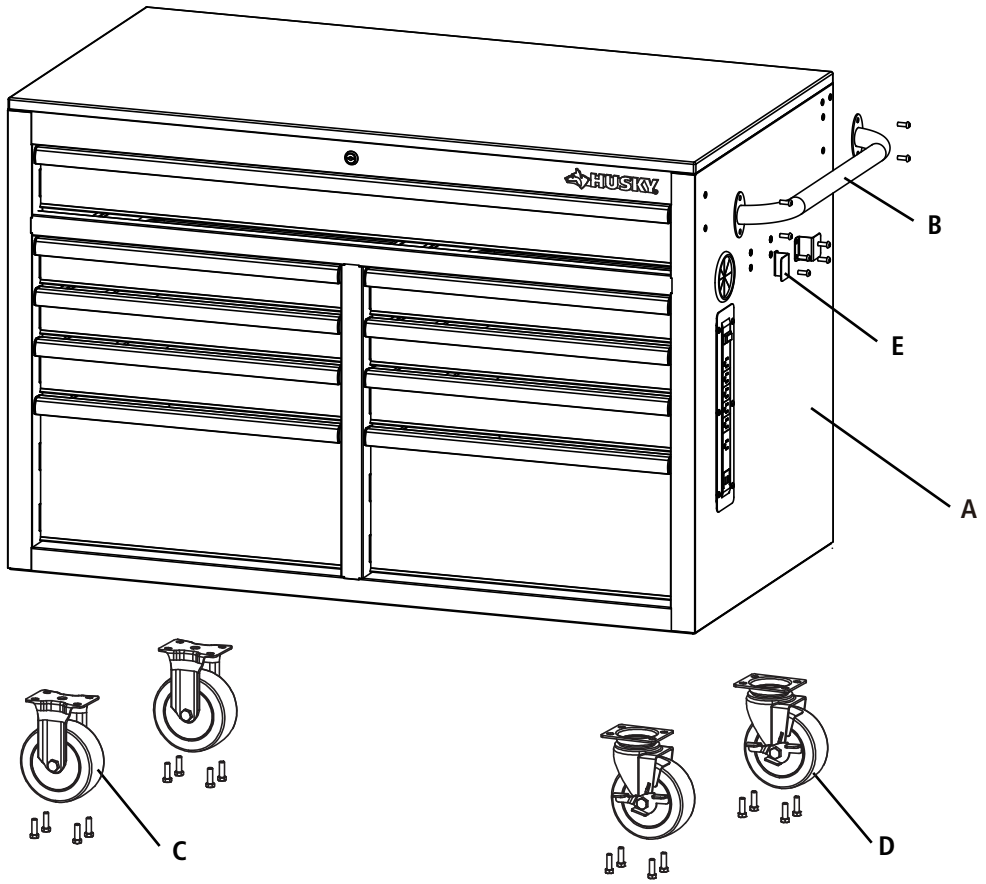

Part	Description	Quantity
A	Cabinet	1
B	Cabinet handle	1
C	Fixed caster	2
D	Swivel caster	2
E	Storage hook	2


Assembly

CAUTION: Two people are recommended for assembly.

1 Attaching the cabinet handle

- □ Position the cabinet handle (B) over the holes on the cabinet (A).
- □ Attach with the bolts (BB) and tighten with supplied hex key (CC).

NOTE: The holes in the cabinet are tapped and do not require nuts.

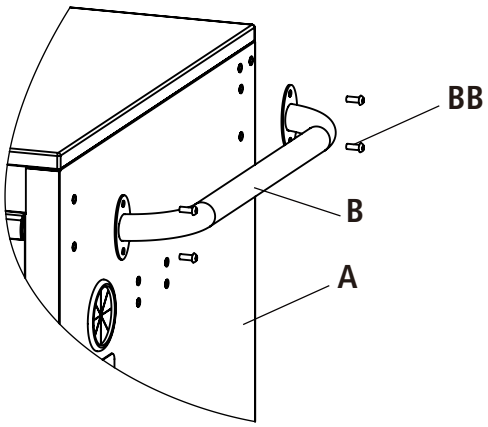


2 Attaching the casters

- □ Be sure the drawers are locked and lay the cabinet (A) on its top. Use packaging material to protect the finish.
- □ Attach the swivel casters (D) to the unit, on the same side as the handle, inserting bolts (AA) through the swivel casters(D) and into the cabinet (A).
- □ Tighten with supplied hex key (CC) or 12 mm wrench/socket.
- □ Repeat this process for the fixed casters (C) on the opposite side of the cabinet (A).
- □ Return the cabinet (A) to its upright position.


CAUTION: Do not over tighten the bolts.

NOTE: Caster hubcap may be different than shown in diagram.

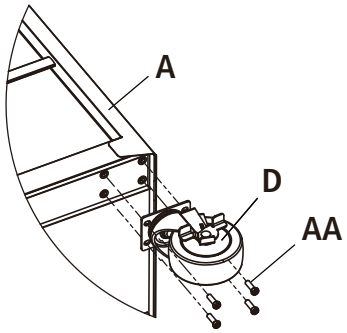


3 Attaching the storage hook

- □ Position the storage hook (E) over the holes on the cabinet (A).
- □ Attach with the bolts (BB) and tighten with supplied hex key (CC).

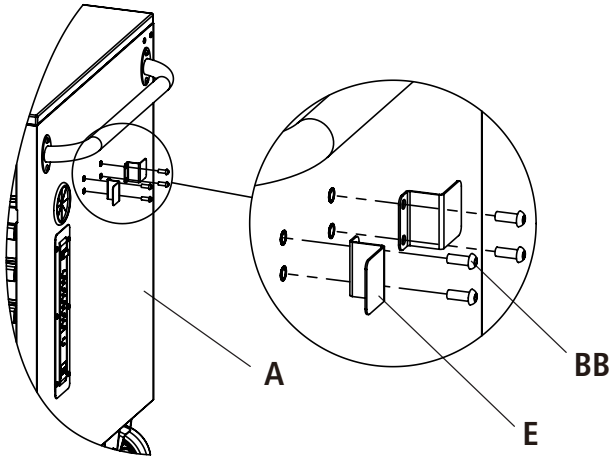

4 Installation of Power Cord


- □ Untie power cord located inside drawer.
- □ Gently pull cord plug through grommet.

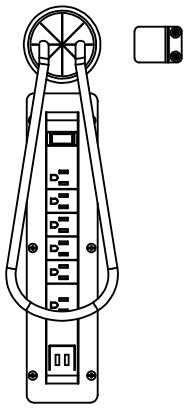

Optional Attachment

- □ **The workbench has pre-threaded holes on the back and side of the unit for the installation of optional pegboard back wall (Model #D6T09001). Refer to huskytools.com or homedepot.com for more details.**


NOTE: Caster hubcap may be different than shown in diagram.

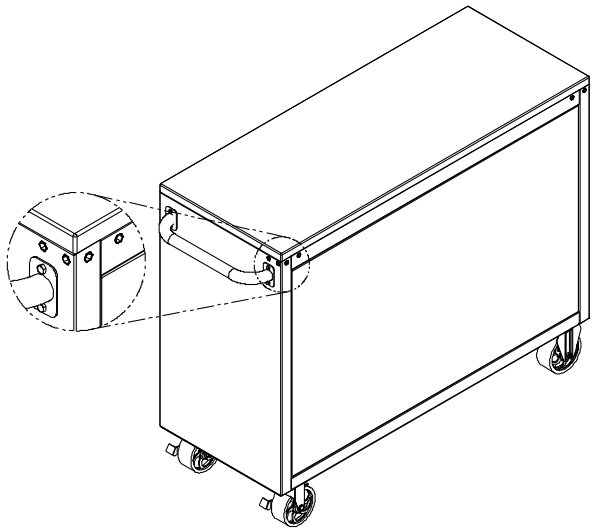

Operation


1 Removing the drawers

- □ **Fully extend the empty drawer.**
- □ **Push up the one release lever while pulling down on the other release lever.**
- □ **Pull the drawer outward until it is released from the drawer slide.**

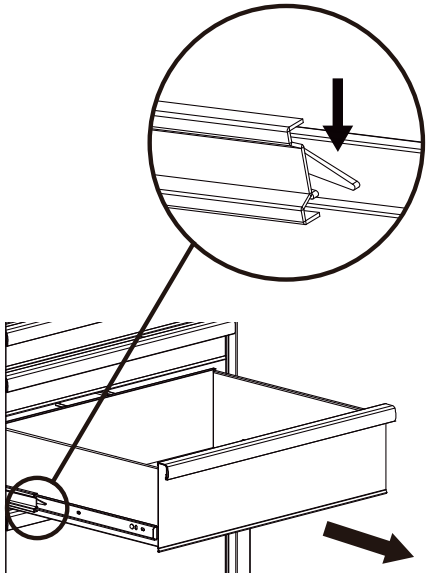

2 Re-inserting the drawers

- □ **Extend the drawer slides.**
- □ **Insert the brackets on each side of the drawer into the slots in the slides, being careful that they are properly positioned.**
- □ **Once properly inserted, completely close the drawer to set the slides in their proper positions.**

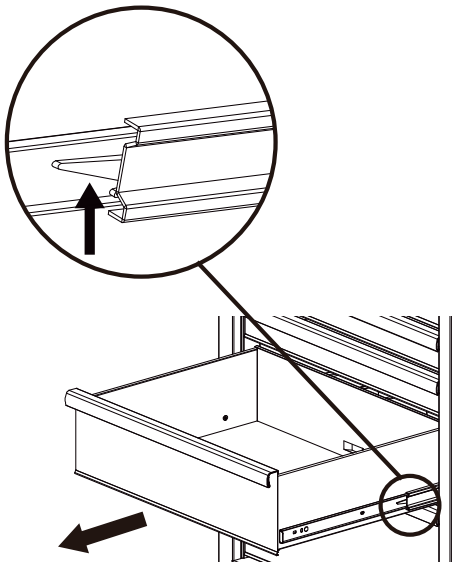


Cordless Power Tool Battery Chargers

- □ See Charger's Owner's Manual for proper use and care of charger and batteries. Follow all Warnings and Instructions provided with your battery charger.
- □ Place chargers and electrical connections in till.
- □ Chargers are for use in dry locations only. Do NOT expose to liquid, vapor, or rain. Should your charger become wet, Do NOT attempt to use. Unplug extension cord from supply before handling wet charger or cords.
- □ Only use chargers and batteries that are intact and operating properly.
- □ Do NOT touch metal prongs when plugging charger into extension cord.
- □ Keep flammable materials like paper or rags away from charger, cords or connections.
- □ Do NOT place or attempt to charge lead acid, car type batteries in storage cabinet.

Maintenance

1 Caster maintenance


- □ Grease the casters annually using high-quality bearing grease.

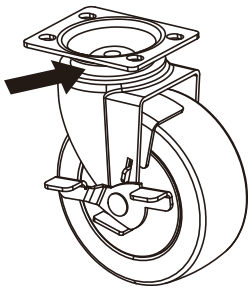

NOTE: Caster hubcap may be different than shown in diagram.

2 Drawer maintenance

- □ Lubricate the slides semi-annually with high-quality bearing grease.

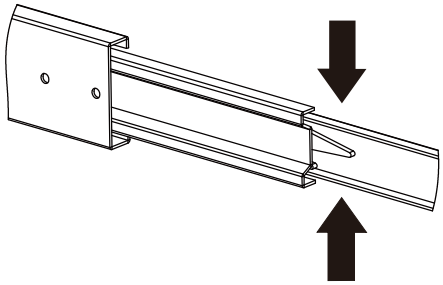


- □ Periodically clean the drawer fronts, drawer trim, and other surfaces with a mild detergent and water.
- □ Auto wax preserves the storage unit's luster finish and protects against scratches. Apply the wax as you would on a car.
- □ Remove grease and oil with a standard nonflammable cleaning fluid.

Replacement Parts

For assistance with replacement parts please call 1-888-HD-HUSKY.

NOTE: Caster hubcap may be different than shown in diagram.

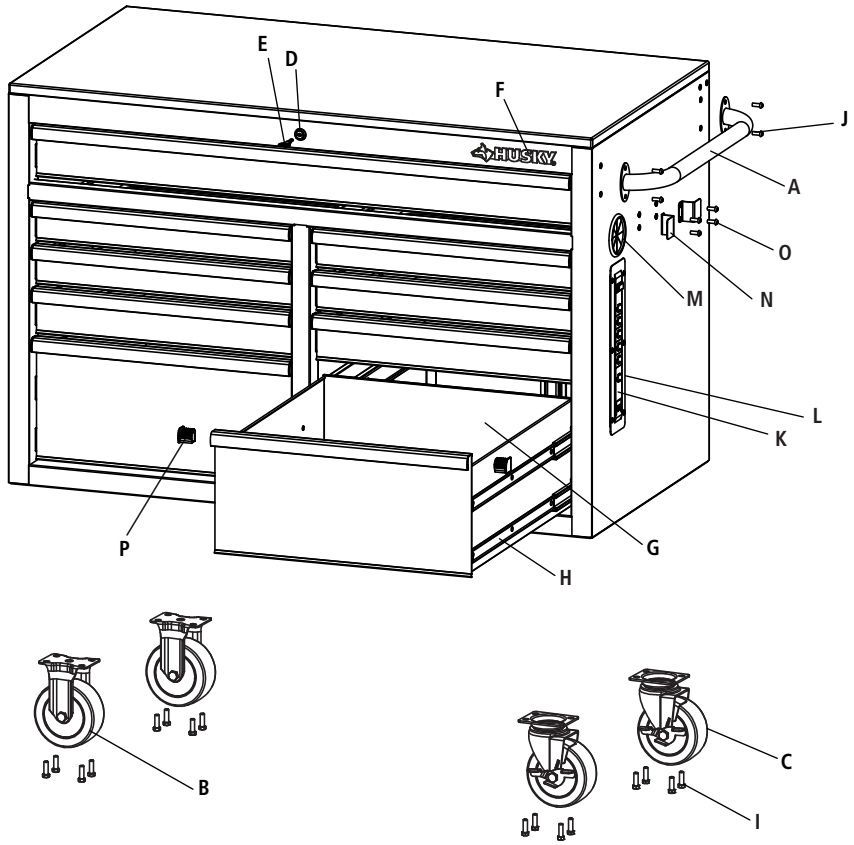

Part	Description	Quantity
A	Cabinet Handle	1
B	Fixed Caster	2
C	Swivel Caster	2
D	Lock	1
E	Key	2
F	Badge	1
G	Drawer Liner	9
H	Drawer Slide	22
I	Caster Bolt	16
J	Handle Bolt	4
K	Outlet	1
L	Outlet Panel Cover	1
M	Rubber Grommet	1
N	Storage Hook	2
O	Storage Hook Bolt	4
P	Drawer Handle Cap	18



Questions, problems, missing parts? Before returning to the store call
Husky Customer Service
8 a.m. - 7 p.m., EST, Monday-Friday
9 a.m. - 6 p.m., EST, Saturday

1-888-HD-HUSKY

HUSKYTOOLS.COM

Retain this manual for future use.

Item # 1000000000
Model # H46PWRSTATION


USE AND CARE GUIDE

Husky 46 in. Power Station

Questions, problems, missing parts?
Before returning to the store, call
Husky Customer Service
8 a.m – 7 p.m., EST, Monday-Friday
9 a.m – 6 p.m., EST, Saturday

1-888-HD-HUSKY

HUSKYTOOLS.COM

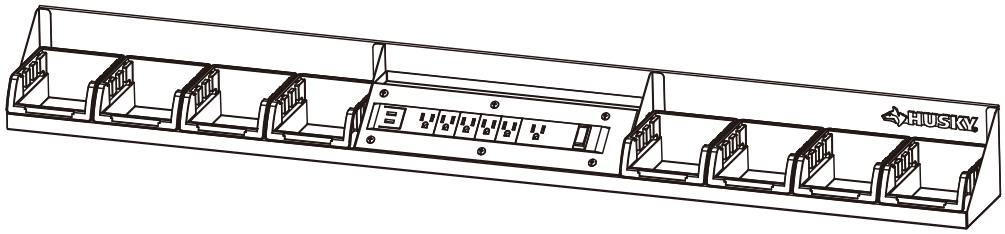

THANK YOU

We appreciate the trust and confidence you have placed in Husky through the purchase of this power station. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Husky!

Table of Contents

Table of Contents.....2

Safety Information 2

Warranty.....4

Package Contents.....4
- Hardware Included..... 4
- Tools For Assembly (Not Included) 4

Assembly 6

Cordless Power Tool Battery Chargers 7

Replacement Parts.....8

Safety Information

1. Be careful of any possible sharp edges.
2. Secure this product properly before using it.
3. Do not alter this product in any manner. This may cause product damage or personal injury.



CAUTION: Do not attach or mount this product to a vehicle or mobile trailers. This may cause personal injury or product damage. Mounting this product to any vehicle or mobile trailers in any manner will void warranty.



CAUTION: Keep the product on level surfaces. The product may become unstable and tip if stored or moved on an unlevel surface, which may cause personal injury or product damage.



CAUTION: Do not use this product around liquids or flammable substances to avoid the risk of electrical shock. This may cause personal injury or property damage.

4. Extension cord

- □ Follow all manufacturers' Warnings and Operating Instructions for your extension cord.
- □ Do not insert extension cord through hole without grommet in place.
- □ Only use a three-wire extension cord with all three prongs intact. Never remove the round grounding prong.
- □ Extension cord must be connected to a 125 Volt GFCI protected outlet with proper ground. If GFCI outlet is not available, use an extension cord with GFCI protection built in.
- □ Check the insulation and plugs of extension cord before using. Do NOT use cord if it is worn or damaged.
- □ Do NOT overload extension cord.
- □ Remove extension cord from the hole before moving or transporting power station.
- □ Only use an extension cord that is rated for outdoor use.
- □ Do NOT connect extension cord to outlet that also supplies critical safety equipment with power.

5. Electrical Shock Hazard

- □ Do not plug cord into outlet with wet hands.
- □ Do not use this power station near a bathtub, a shower, or a swimming pool.
- □ Power station plugs must match the outlet.
- □ Never modify the plug in any way.
- □ Do not use any adapter plugs with earth (grounded) power station power strips.
- □ Unmodified plugs and matching outlets will reduce the risk of electric shock.
- □ Avoid body contact with earthed or grounded surfaces. There is an increased risk of electric shock if your body is earthed or grounded.

CAUTION: RISK OF ELECTRICAL SHOCK: This unit has one power supply cord. Make sure the cord is unplugged before any servicing or cleaning.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

□ Reorient or relocate the receiving antenna.
□ Increase the separation between the equipment and receiver.
□ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
□ Consult the dealer or an experienced radio/TV technician for help.

Warranty

The manufacturer warrants the product to be free from defects in materials and workmanship for a period of three (3) years from date of purchase. This warranty applies only to the original consumer and only to products used in normal use and service. If this product is found to be defective, the manufacturer's only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modifications, alteration neglect or mishandling. This warranty shall not apply to any product that is found to have been improperly installed, setup, or used in any way not in accordance with the instructions supplied with the product. This warranty shall not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, faulty installation, or any other failure not relating to faulty material or workmanship. This warranty shall not apply to the finish on any portion of the products such as surface and/or weathering, as this is considered normal wear and tear.

The manufacturer does not warrant and specifically disclaims any warranty, whether express or implied, of fitness for a particular purpose, other than the warranty contained herein. The manufacturer specifically disclaims any liability and shall not be liable for any consequential or incidental loss or damage, including but not limited to any labor/expense costs involved in the replacement or repair of said product.


Contact the Customer Service Team at 1-888-HD-HUSKY or visit www.huskytools.com.

Package Contents

HARDWARE INCLUDED


NOTE: Hardware not shown to actual size.


AA


BB


Part	Description	Quantity
AA	Double sided tape(110x55x0.8mm)	4
BB	Self-tapping screw(ST4.8x15mm)	4

TOOLS FOR ASSEMBLY (Not Included)



Philips head screwdriver

Package Contents (continued)

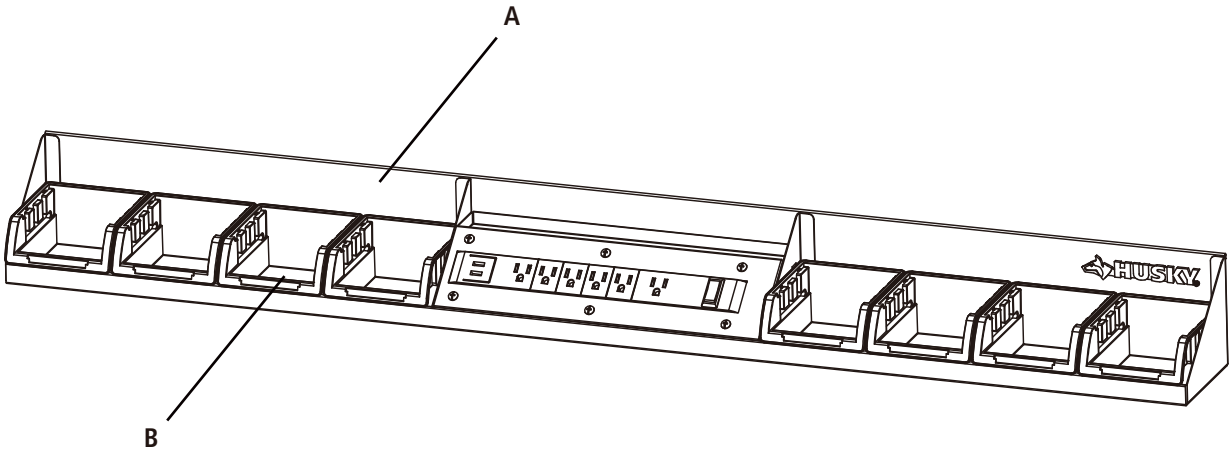

Part	Description	Quantity
A	Power Station	1
B	Plastic Bin	8

Assembly


The 46 in. Power Station is designed to fit all Husky Mobile Workbenches with wood tops that are minimum 46 in. wide, including but not limited to the below Models:


- **SKU # 1002811059**
- **SKU # 1004319798**
- **SKU # 1004337287**
- **SKU # 311086274**
- **SKU # 1004319510**
- **SKU # 1004319798**
- **SKU # 1004319517**
- **SKU # 763089**
- **SKU # 304959851**
- **SKU # 1002811059**
- **SKU # 309057460**
- **SKU # 312145948**

The 46 in. Power Station can be attached using either the double sided tape or wood screws.

1 Double sided tape assembly

- □ **Ensure the wood top of the 46 in. Mobile Workbench is cleaned, dry, and free of any debris before applying the double sided tape.**
- □ **Attach 4 pcs double-sided tape(AA) to the bottom of the Power Station(A) per the diagram.**
- □ **Pass the power cord plug through the rubber grommet in the rear.**
- □ **Align the Power Station along the back of the mobile workbench, and firmly stick the power station(A) on cabinet wood top.**

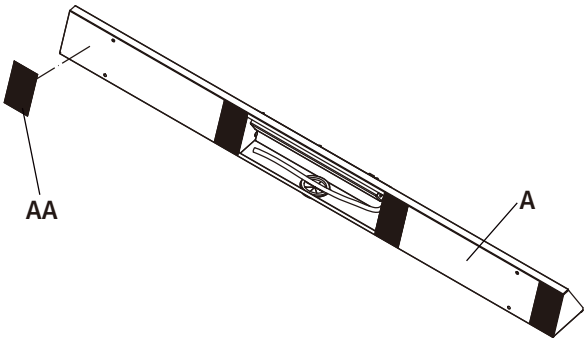


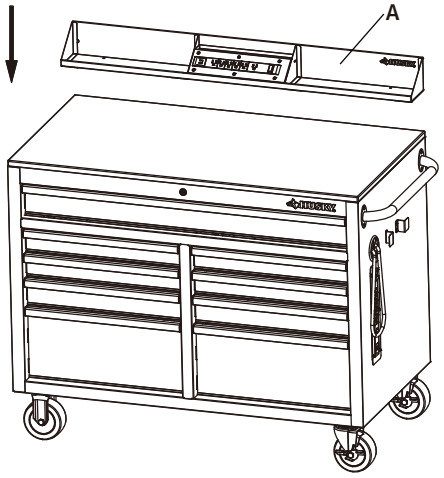

2 Screw assembly


CAUTION: Do not over tighten the screws.

- □ **Pass the power cord through the rubber grommet in the rear.**
- □ **Align the Power Station(A) along the back of the mobile workbench and mark the 4 hole locations with a pen.**
- □ **Using a 3/32 in. drill bit, pre-drill the 4 holes into the wood top. Be careful to only drill 1/2 in. deep.**
- □ **Secure the Power Station(A) to the wood top using the 4 Self tapping screws(BB).**

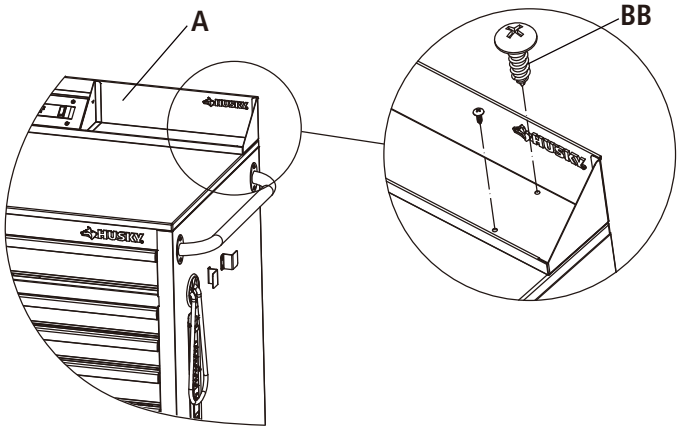

3 Installation of plastic bins

□ **Put 8 pcs Plastic bins(B) into the groove.**

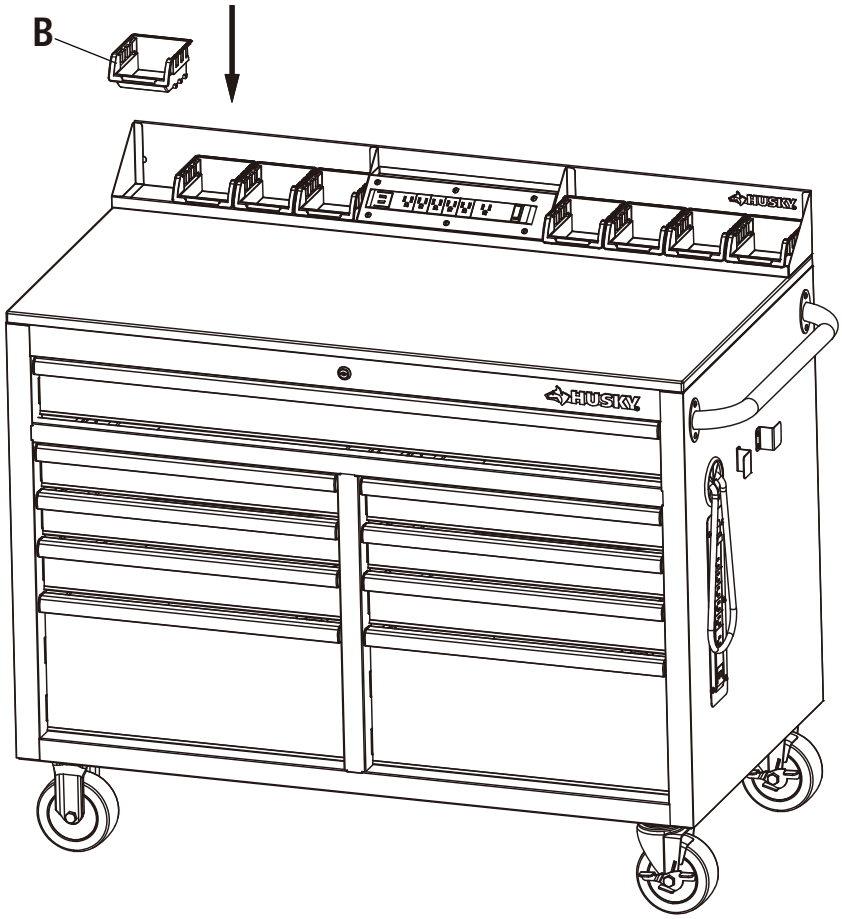

Cordless Power Tool Battery Chargers

□ **See Charger's Owner's Manual for proper use and care of charger and batteries. Follow all Warnings and Instructions provided with your battery charger.**

□ **Chargers are for use in dry locations only. Do NOT expose to liquid, vapor, or rain. Should your charger become wet, Do NOT attempt to use. Unplug extension cord from supply before handling wet charger or cords.**

□ **Only use chargers and batteries that are intact and operating properly.**


□ **Do NOT touch metal prongs when plugging charger into extension cord.**

□ **Keep flammable materials like paper or rags away from charger, cords or connections.**

□ **Do NOT place or attempt to charge lead acid, car type batteries in power station.**

Replacement Parts

For assistance with replacement parts please call 1-888-HD-HUSKY.

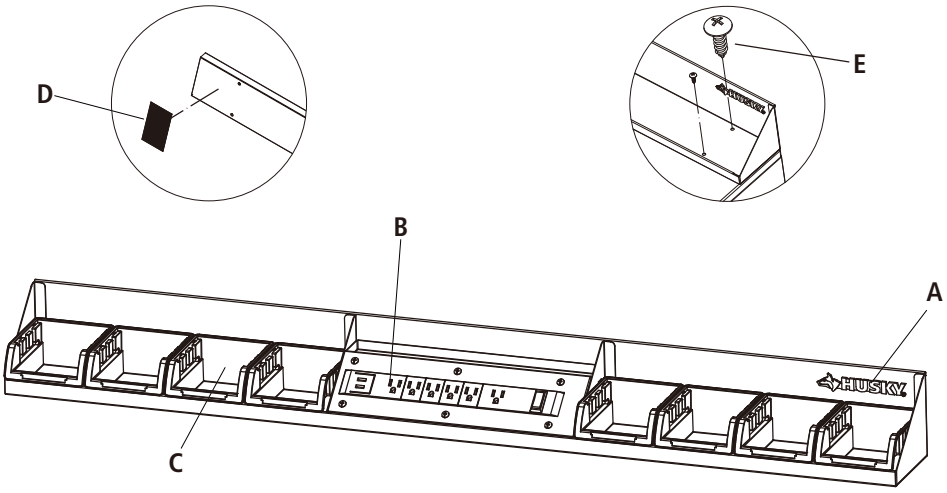

Part	Description	Quantity
A	Badge	1
B	Outlet	1
C	Plastic bin	8
D	Double sided tape	4
E	Self-tapping screw	4



Questions, problems, missing parts? Before returning to the store call
Husky Customer Service
8 a.m. - 7 p.m., EST, Monday-Friday
9 a.m. - 6 p.m., EST, Saturday

1-888-HD-HUSKY

HUSKYTOOLS.COM

Retain this manual for future use.