Item #1014 056 785
Model #K40569


USE AND CARE GUIDE

12,000 LUMEN CORDED LED WORK LIGHT

Questions, problems, missing parts?
Before returning to the store, call
Husky Customer Service
8 a.m. - 7 p.m., EST, Monday - Friday
9 a.m. - 6 p.m., EST, Saturday

1-888-HD-HUSKY

HUSKYTOOLS.COM

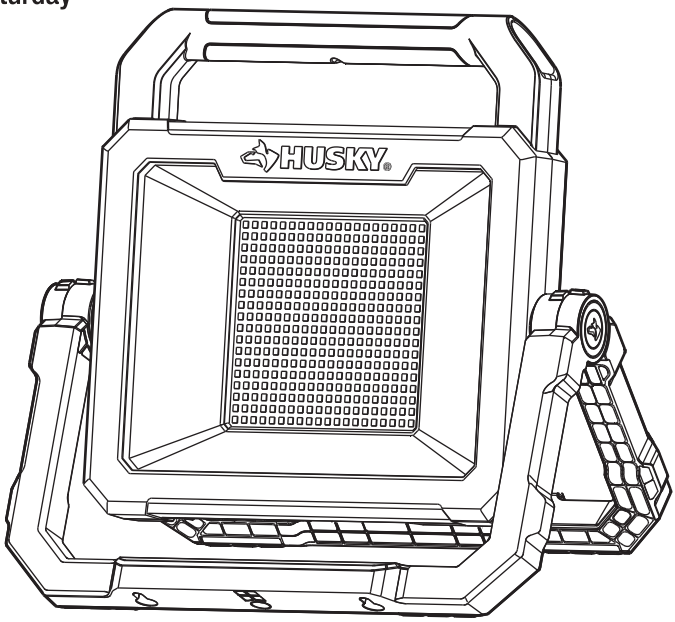

THANK YOU

We appreciate the trust and confidence you have placed in Husky through the purchase of this corded LED work light. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Husky!

Table of Contents

Table of Contents 2
Safety Information 2
FCC Statement 3
Warranty 3
Specifications 4
Pre-Operation 4
Package Contents 4
Operation. 5
Care and Cleaning 7
Maintenance 7

Safety Information

SAVE THESE INSTRUCTIONS.

Read and understand all Safety and Operating instructions in this manual before using this product.


Follow all safeguards stated in this manual, in addition to normal safety precautions in working with electrical devices. When using outdoor-use Portable Lamp Stand / Tripod Work Lights, always follow basic safety precautions to reduce the risk of fire, electric shock and personal injury.


DANGER: Be extremely careful when using this device. Improper use of this work light can result in injury or death.

WARNING: Failure to observe the following safety rules may result in FIRE, ELECTRICAL SHOCK, OR INJURY.

- Use only 3-wire UL listed outdoor extension cords that have 3-prong grounded plugs and grounded receptacles that accept the work light's plug.
- Ground Fault Circuit Interrupter (GFCI) protection should be provided on the circuit(s) or outlet(s) to be used for wet location tripod work lights. Receptacles are available having the built-in GFCI protection and are able to be used for this measure of safety.
- Use only with an extension cord for outdoor use, such as an extension cord of cord type SEW, SEOW, SEOOW, SOW, SOOW, STW, STOW, STOOW, SJEW, SJEOW, SJEOOW, SJW, SJOW, SJOOW, SJTW, SJTOW, or SJTOOW.
- Never use around heavy volatile fluids such as gasoline.
- Do not use with an extension cord near water, or in areas where water may accumulate. Keep the worklight at least 16 ft. from pools or spas. Keep plugs dry. Only use this worklight with GFCI-protected outlets when in wet locations.
- Keep the USB and outlet cover closed in wet locations.

WARNING: Do not cover the luminous surface during operation. blocking heat dissipation may cause overheating, equipment damage, or fire.

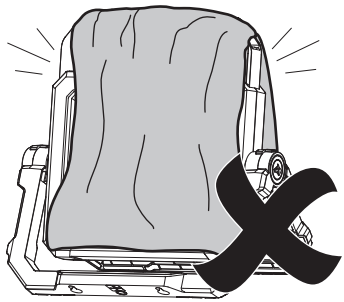

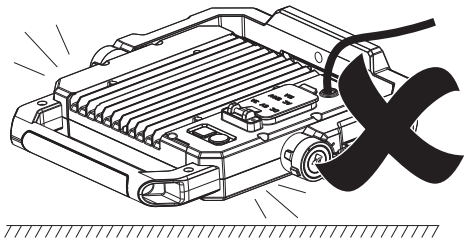

FCC Statement

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTICE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

FCC RESPONSIBLE PARTY
THE HOME DEPOT
2455 PACES FERRY ROAD
ATLANTA, GA 30339
(770)433-8211

Warranty

LIMITED WARRANTY

This item is warranted to be free from defects in materials or workmanship for a period of three (3) years from the original date of purchase under normal conditions of intended use. If this product is defective, the Warrantor will, within the warranty period, replace the product or refund the purchase price of the product, at the Warrantor's option, at the place of purchase upon presentation of sales receipt or other proof of purchase. This warranty extends only to the original retail purchaser and excludes any damage to the product resulting from accident, misuse, abuse, damage caused by electrical power surge, or operation not recommended or authorized by these operating and safety instructions. This warranty is voided if the product is ever used in a commercial or business environment.

There are no warranties beyond this limited warranty. This limited warranty is your complete and exclusive remedy. The Warrantor makes no other warranties, express or implied, including but not limited to any implied warranty of merchantability or of fitness for a particular purpose. The Warrantor undertakes no responsibility for the quality of the product except as otherwise provided herein. The Warrantor assumes no responsibility that the product will be fit for any particular purpose for which you may be buying this product. The Warrantor expressly disclaims liability for any special, incidental, indirect, or consequential damages arising from the purchase or use of this product.

The amount of the Warrantor's liability under this warranty is limited to the amount of the original purchase price paid for the product by the original retail purchaser. If the Warrantor cannot lawfully disclaim statutory or implied warranties, then all such warranties shall be limited to the duration of this warranty and to the amount of the original purchase price paid for the product by the original retail purchaser.

This warranty gives you specific legal rights; you may also have other rights that vary by jurisdiction. This warranty is valid only within the United States of America (USA).

Contact the Customer Service Team at 1-888-HD-HUSKY or visit www. HUSKYTOOLS.com.


Specifications

Product Weight	5.14 lbs
Product Width	12.32 in.
Product Depth	2.99 in.
Product Height	12.76 in.
Input Cord Gauge	5 ft. 16/3 SJTW

Rated Voltage	120V~ 60Hz
Rated Current	1.4A (100% brightness)
Rated Power	116W (100% brightness) 70W (60% brightness) 35W (30% brightness)
CCT	3000 / 4000 / 5000K
Lumens	12,000 / 7200 / 3600 Lumens
USB-A / USB-C Output	DC 5V 3A
Grounded Outlet Output	120V~ 10A Max.

Pre-Operation

PACKAGE CONTENTS

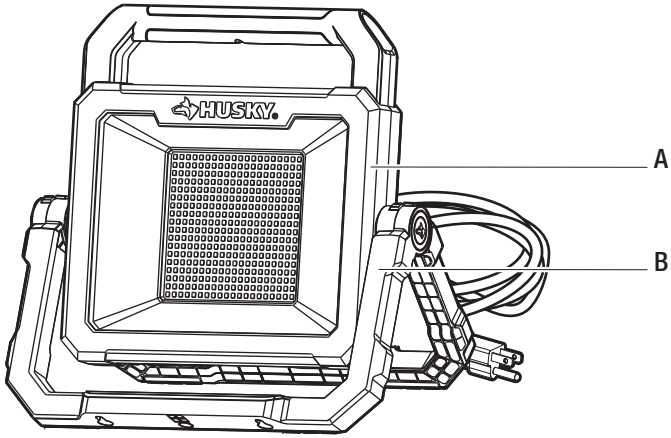


Part	Description	Quantity
A	Lamp head	1
B	Stand	1

Operation

1 Adjusting the light direction


- □ Open stand (B) to place the lamp on a flat surface, the maximum expansion angle of the stand is 120°.
- □ When the expansion angle of stand (B) is 90°, the lamp will be in the most stable state.

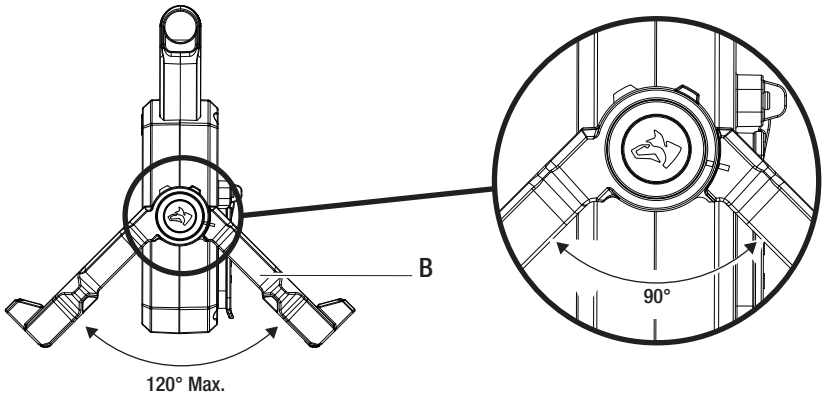

2 Multiple mounting options

- □ The work light can be carried by the portable handle or placed on a flat table.
- □ The work light can be hung on the wall through the holes in the stand (B).
- □ The work light can work with the existing portable tripod (SKU# 1007018028 not included) through the stand (B). For tripod details, please visit www.homedepot.com or visit local stores.
- □ The work light can also be mounted on any tripod with a 1/4 in. screw via stand (B).

WARNING: Ensure work light is securely installed to prevent falling object hazard.

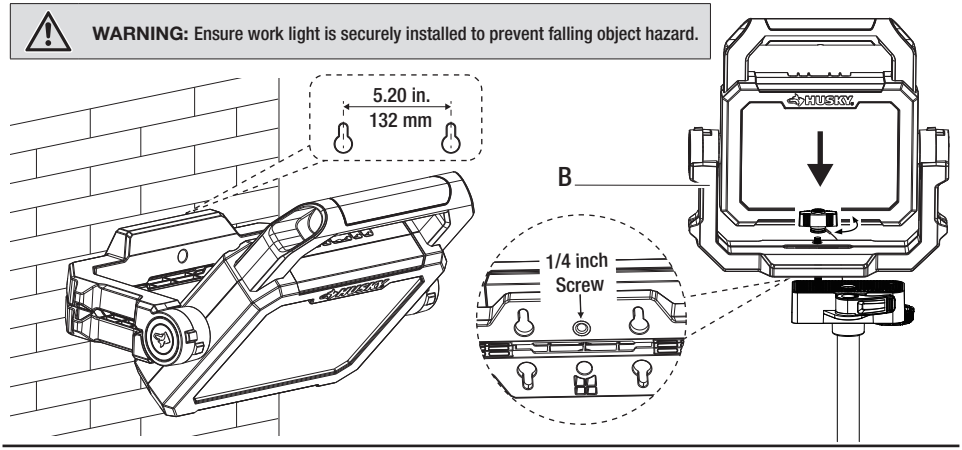


3 Turning the light on

- □ Adjust the color temperature (3000K-4000K-5000K) of the light through the button (C) on the back of the work light body.
- □ Press the power button (D) once to turn the light on high mode (12,000 lumens output).
- □ Press the power button (D) again for medium mode (7200 lumens output).
- □ Press the power button (D) a third time for low mode (3600 lumens output).
- □ Press the power button (D) a fourth time to turn the light off completely.

WARNING: To reduce the risk of injury, do not stare at operating lamp, Serious eye injury could occur.


WARNING: Risk of personal injury. To avoid being burned, always hold the work light by its handle when making adjustments.

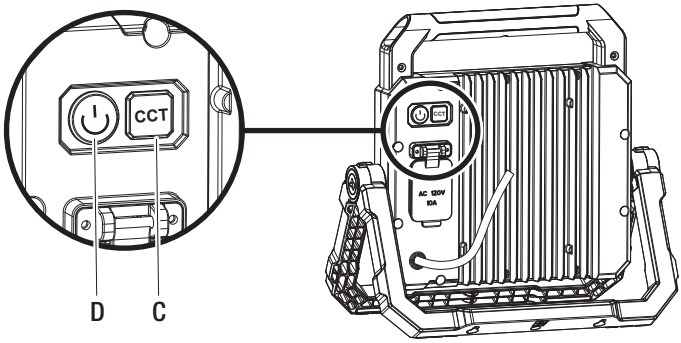

4 Using the USB port and outlet

- □ Use the USB port and grounded outlet to connect any devices or electrical equipment. The output for the USB-A (F) and USB-C (E) port is DC 5V 3A. The rating for the grounded outlet (G) is AC 120 Volt, 10 Amp. Max.


WARNING: Keep the USB and outlet cover closed in wet locations.

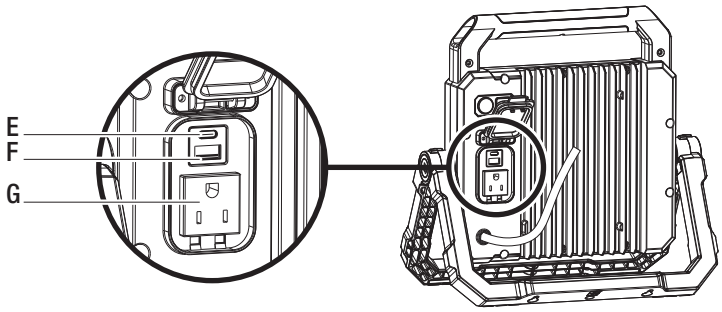

Operation (continued)

5 Store and arrange lamps

- □ When the lamp is not in use, the power cord can be wound on the bracket for convenient storage.

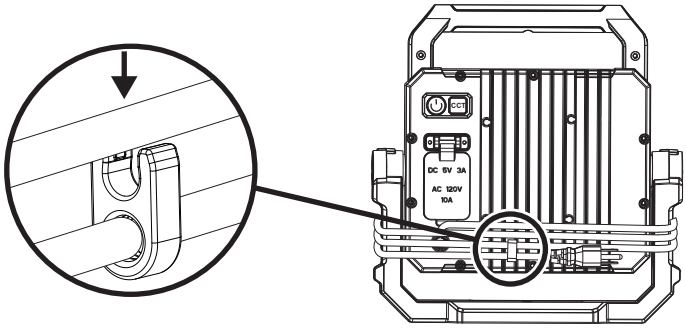

Care and Cleaning

WARNING: Always make sure that the worklight is unplugged and cooled down before attempting to clean it.

- □ Clean the lamp head, lens cover, and lamp stand regularly with a non-abrasive cleaner.
- □ Allow the work light to cool down completely before storing.
- □ Store in a safe place, out of the reach of children.

Maintenance

If the light does not work, check the following:

- □ Ensure the fixture is properly plugged into the power source.
- □ Ensure the power button is on.



Questions, problems, missing parts? Before returning to the store,
call Husky Customer Service
8 a.m. - 7 p.m., EST, Monday-Friday
9 a.m. - 6 p.m., EST, Saturday

1-888-HD-HUSKY

HUSKYTOOLS.COM

Retain this manual for future use.