
Portable Gas Stove
INSTRUCTIONS FOR USE

GAS ONE

⚠ DANGER



EXPLOSION HAZARD:

Do not use a pan or the griddle plate larger than 340 mm as can cover the gas cartridge compartment and cause the gas cartridge to overheat.

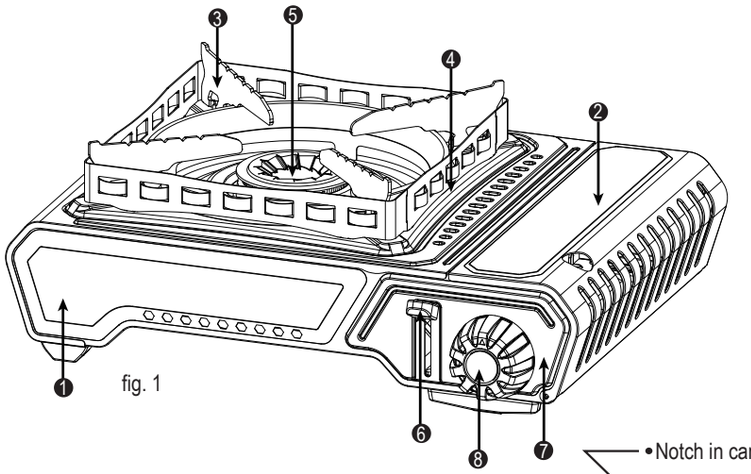


fig. 1

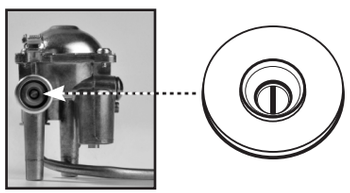


fig. 6

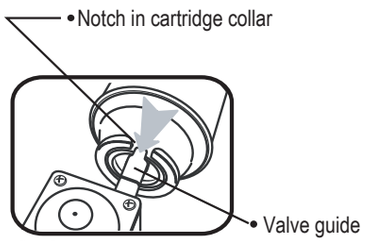


fig. 2

❶ Body case
❷ Cartridge cover
❸ Pan support
❹ Drip pan
❺ Burner
❻ Cartridge lever
❼ Control panel
❽ High / low control knob with piezo-ignition

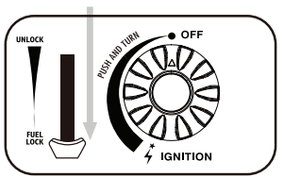


fig. 3

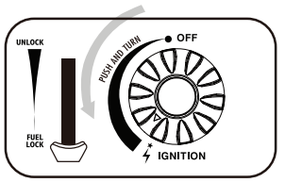


fig. 4

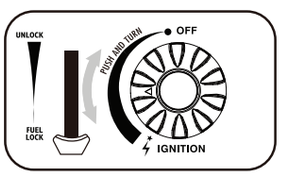


fig. 5

INSTRUCTIONS FOR USE

IMPORTANT

- Read the instruction carefully before use to familiarize yourself with the appliance before conneting it to its gas cartridge.
- Keep these instruction for future reference.
- This appliance shall only be used with GAS ONE GAS-1 butane cartridge. It may be hazardous to attempt to fit other types of gas containers.
- Don't use appliances when ambient temperature is higher than 35°C.
- Don't use appliances when the cover of cartridge enclosure is in open position.
- Release or disconnect the gas cartridge after every use.
- **USE OUTDOORS ONLY.**
- Keep young children away from the appliance.

WARNING

Check that seals (between the appliance and the gas cartridge) are in place and in good condition before connecting the gas cartridge (fig.6).

Don't use the appliance if it has damaged or worn seals.

SAFETY DEVICE

- The appliance is equipped with a safety device which stops the flow of gas if the pressure in the cartridge, e.g. because of overheating, becomes too high.

To continue usage…

- Turn the control knob to "●" position.
- Turn the cartridge lever to "UNLOCK" position and take the cartridge out.
- Turn the control knob to the ignition position to release any excess pressure inside the valve.
- Place new cartridge after checking that the cartridge lever is in "UNLOCK" position.
- The cartridge can only be installed when the control knob is in the "●" - position.

USING THE STOVE FOR THE FIRST TIME

1. Check that the control knob (8) is set to position "●" by turning it clockwise and the cartridge lever (6) is set to "UNLOCK".
2. Open the cartridge cover (2) and insert the cartridge, with the head to the front, so the notch points upwards and aligns in the value guide (fig.2).
3. Press the cartridge lever (6) down (fig.3) and close the cartridge cover.
4. If you hear a "hissing" noise, the cartridge has not been correctly fitted. Do not attempt to ignite the appliance but move lever (6) to the "UNLOCK" position and repeat step (1-4).
5. Push and turn the knob (8) fully to the ignition position until it clicks. (fig.4) Repeat this action until burner ignites.
6. Adjust the control knob to the required position. (fig.5) Never set the cartridge lever (6) to the "UNLOCK" position during use!

AFTER USE

1. Turn the control knob (8) into the "●" position.
2. Check if burner is extinguished before setting the cartridge lever (6) to the "UNLOCK" position.
3. When the appliance has cooled completely, for your own safety, remove the cartridge.

CHANGING THE CARTRIDGE

The cartridge may be removed even if it is not empty.

Once your equipment has fully cooled:

Check that the gas inlet is fully closed by turning the control knob (8) clockwise to "●" position and that the burner (5) is extinguished.

Disconnect the cartridge by putting the cartridge lever (6) in the "UNLOCK" position.

Open the cartridge compartment cover (2) and remove the cartridge.

Butane cartridge must be changed in a safe place, e.g. in the open air or in a well-ventilated location, preferably outside, away from any source of ignitonm such as naked flames, pilots, electric fires and away from other people.

Check the seals before connecting a new gas cartridge to the appliance. (fig.6)

Put in a new cartridge by the following the instructions in paragraph "USING THE STOVE FOR THE FIRST TIME".

STORAGE – MAINTENANCE

When the appliance has cooled completely it should be cleaned of any residues of food or fat after each use.

Store the appliance and the cartridge in a cool, dry and well-ventilated area, out of reach of children.

Do not modify the appliance.

WARNING

This appliance can only be used with GAS ONE GAS-1 butane cartridge.

Do not use an appliance which is leaking, damaged or which does not operate properly.

Always place the stove on a horizontal stable and heat resistant surface.

Do not move the appliance during use.

Never place two stoves close to each other.

Place the cooker at least 40cm away from adjacent walls and 120cm away from ceiling.

Place the stove at least 160cm away from inflammable materials.

Do not use a pan smaller than 120mm or larger than 340mm in diameter for each burner. Do not use vessels with concave or convex bottoms.

If there is a leak in the appliance (smell of gas), immediately turn the control knob (8) into the "●" position.

Take the appliance outside where a possible leak may be detected. If you wish to check for leaks on the appliance, do it outside and never try to detect the leaks with a flame, but always use soapy water!

CAUTION: accessible parts may become very hot, Keep children away from the appliance.

TROUBLE SHOOTING

No gas	Check whether the gas cartridge was inserted properly Gas cartridge is empty (test by shaking the cartridge) Outside temperature below 4°C, move to warmer surroundings
No ignition	Clean the burner head with a brush

In the event of any problems, please contact: GasOne.1(800) 698-5070. Support@gasone.com

TECHNICAL CHARACTERISTICS

Model:	GS-5900 Butane
Type of gas:	Vapour pressure butane
Category direct pressure:	4.5 kW
Nominal heat input:	330 g/h
Gas consumption:	