NOTES:


- In some cases, the Vent Backplate will be secured to the wall, but it might not be all the way flush – in this case, you can use the 6 mounting hole locations and provided #6 x 1.25-in screws to drive the Vent Backplate flush with the wall.
- **System works best with your HVAC system fan ON.**

Installation with Screws:


Once you have removed your existing vent cover, measured the ductwork opening, and found that it is smaller than 14" x 6" or for some other reason the tool-less installation clips will not work for you:

1.Secure the Vent Backplate to the Wall Using the Provided Screws:


Looking at the Vent Backplate – reference this guide to identify screw hole locations.

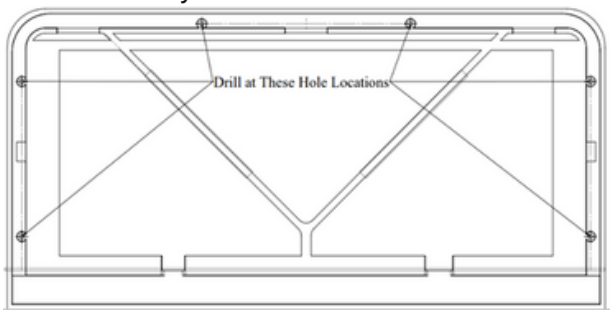

If the mounting surface consists of dry-wall backed by wooden studs, the #6 x 1.25-in screws provided can be used immediately to mount the Vent Backplate to the wall.

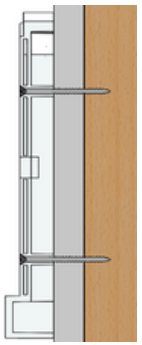

If only mounting into dry-wall, pre-drill holes at the hole locations using a 3/16-in drill bit, insert the plastic anchors provided, and then use the #6 x 1.25-in screws provided to mount.

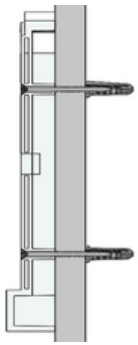

Safety Info

⚠ WARNING: Proper Fit

Use this product only with compatible ductwork openings. Contact Us for assistance if dealing with non-standard or incompatible opening or visit Page 6 for more information.

⚠ WARNING: Secure Installation

Ensure the vent is securely fastened to the wall/ductwork opening to prevent accidental detachment.

⚠ WARNING: Filter Installation

Ensure you install filters in return vents ONLY. Do not install filters on the supply end.

⚠ WARNING: Filter Replacement

If using as a return vent; Replace the air filters every 3 months to maintain optimal air quality and system performance. You will be reminded, and air filters will be sent to your door for replacement.

ATTENTION: Clean Ventilation Area

Keep your vents clean and unobstructed to facilitate proper airflow and ventilation. To help facilitate this, the vent front covers are dishwasher safe.

ATTENTION: Clear Ventilation Area

Keep the area around all of your vents clean and unobstructed to facilitate proper airflow and ventilation.

NOTE: Proper Installation

If unsure about the installation process, contact us to ensure correct installation and proper functioning. Use this product only as intended and described in this instruction manual.

THESE VENTS/FILTER ARE INTENDED TO BE USED IN COMBINATION WITH THE EXISTING HVAC SYSTEM AND FURNACE FILTER


Impeccable Air, its affiliates, and partners are not liable for any direct, indirect, incidental, consequential, or punitive damages arising from your use of our products, website, or services.

Impeccable Air
819 McKay Court Suite 203
Boardman, Ohio 44512


IMPECCABLE AIR

Whole Home Air Purification
impeccableair.com

Sidewall Return Vent Installation

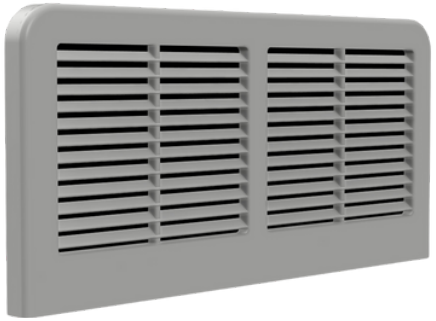

Impeccable Air Return Grille

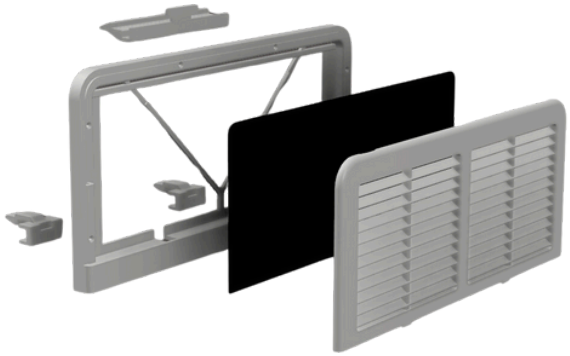

INCLUDES	
1	Return Grille Backplate
1	Return Grille Front Cover
1	Impeccable Air Filter
1	Top Clip for Tool-less Install
2	Bottom Clips for Tool-less Install
6	#6 x 1 1/4-inch Installation Screws
6	Plastic Drywall Anchors

IMPROPER INSTALLATION MAY RESULT IN PROPERTY DAMAGE OR BODILY INJURY. READ THESE INSTRUCTIONS THOROUGHLY BEFORE ATTEMPTING INSTALLATION.

THESE INSTRUCTIONS ARE INTENDED AS AN AID FOR PROPER INSTALLATION & MAINTENANCE OF THESE PRODUCTS.

Installation

1

Dimensions

- Vent Front End Outer Dimensions: 15.75” long x 7.75” tall x 0.75” thick
- Ductwork Opening Size: 14” long x 6” tall.
- This Vent Grille is ideal for the 14” x 6” ductwork opening but does cover any smaller opening with minimal installation modifications.

Ease of Installation

1. Remove Your Existing Vent Cover and Measure for the Vent Grille:
Measure the width and height of the ductwork opening in the floor. DO NOT MEASURE YOUR OLD VENT COVER.
If your ductwork opening is 14” long x 6” tall follow right along with installtion with clips.



If you found that it is smaller than 14” x 6” or for some other reason the tool-less installation clips will not work for you, skip over to “Installation with Screws“ on page 4 of this brochure.

Once you have removed your existing vent cover, measured the ductwork opening, and ensured that it is 14” x 6”:

2. Prepare the Sidewall Return Grille for Installation: Go To Top of Page 2

Scan the QR code for visual help with tool-less installation:
impeccableair.com/videos/v/impeccable-air-return-vent

Contact Us For Help

info@impeccableair.com (330) 277 - 6845

Pop the Front Cover off with your fingers, or by using a flathead screwdriver - insert into the three small openings on the top of the vent and perform a quarter turn:


2




Watch this Video:


impeccableair.com/videos/v/front-cover-removal


3. Install the Long Top Clip and Two Bottom Clips to the Vent Backplate:
Looking at the back of the Vent Backplate – the long clip goes under the top brace and then snaps into the middle opening:

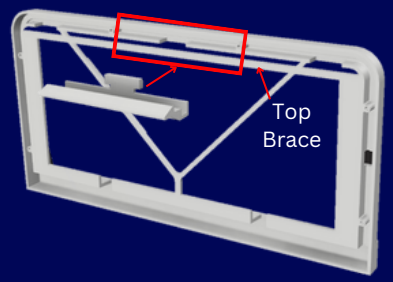

Side View of Fit

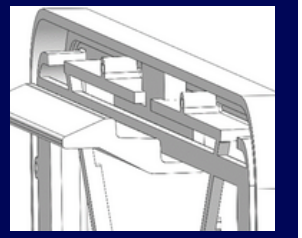

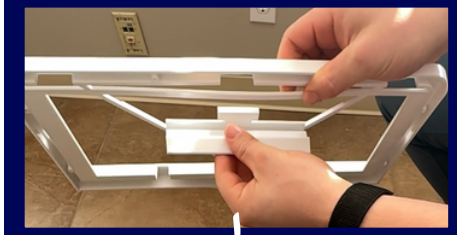

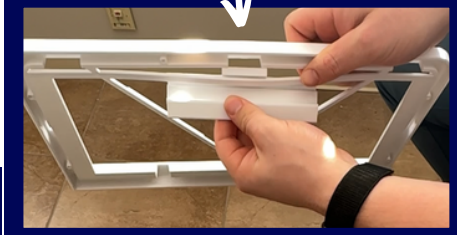


Watch this Video:


impeccableair.com/videos/v/clips-for-toolless-installation


Looking at the back of the Vent Backplate – the bottom clips press fit right into the two slots along the bottom of the Vent Backplate.

3

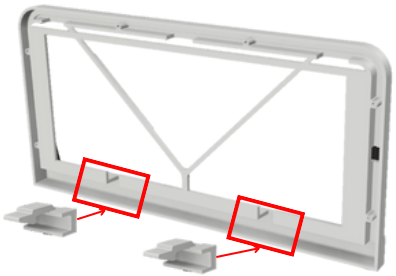


Side View of Fit

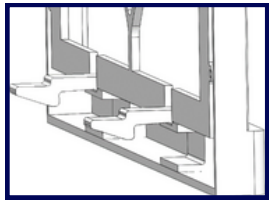

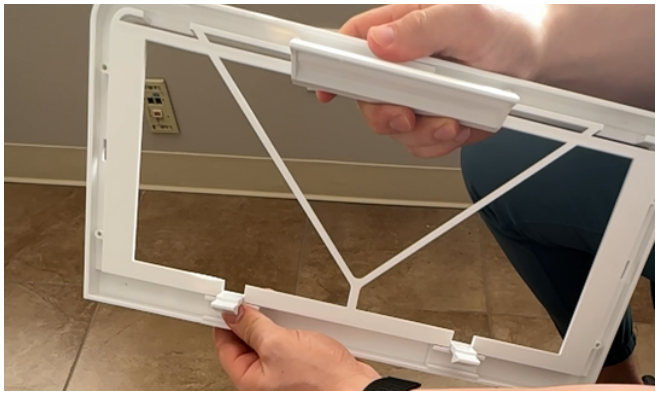

4. Secure the Vent Backplate to the Wall/Ductwork Opening & Install the Impeccable Air Filter and Front Grille:
Looking at the ductwork opening in the wall, start with the bottom clips, then the top clip, and snap fit the Vent Backplate to the wall. Then, place the filter against the back plate and attach the Front Grille using its friction fit snaps.

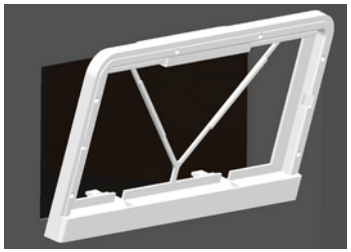



Scan the QR code on Page 1 for visual help with tool-less installation. Read NOTES on Page 4