Commercial Electric™

Item# 1015 080 931
Model # HCRA72NBA1

USER GUIDE

Smart Remote Wireless Switch

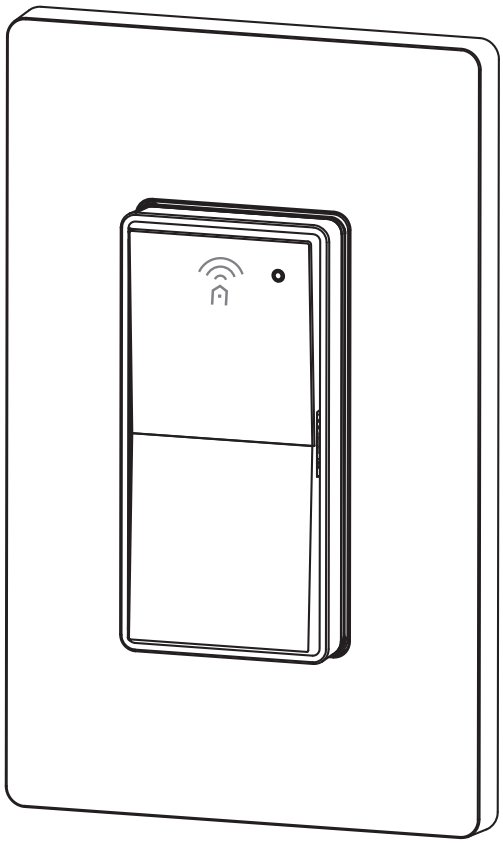

Bluetooth®

THANK YOU

We appreciate the trust and confidence you have placed in Commercial Electric through the purchase of this Smart Remote Switch. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs.
Thank you for choosing Commercial Electric!

Table of Contents

Safety Information 2
Package Contents 6
Pre-Installation 7
Specification 7
Installation 8
Operation 9
Replace the Batteries 12
Troubleshooting 13

Supplier's Declaration of Conformity 47 CFR § 2.1077 Compliance Information
Responsible Party
Leedarson America, Inc. 300 Technology Court SE Suite 100; Smyrna, GA 30082 1-678-293-8382
customerservice@leedarson.com
Unique Identifier: HCRA72NBA1(SKU # 1015080931)
Contains FCC ID: 2AB2Q-LA02306
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

Safety Information

FCC Compliance Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

» Reorient or relocate the receiving antenna.
» Increase the separation between the equipment and receiver.
» Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
» Consult the dealer or an experienced radio / TV technician for help.

RF Warning Statement: This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

Safety Information (continued)

WARNING:

- □ Ensure the batteries are installed correctly according to polarity (+ and -).
- □ Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- □ Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations. Do NOT dispose of batteries in household trash or incinerate.
- □ Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

WARNING: Before mounting any of the devices clean the surface with a gentle degreaser. Please note that some surfaces may be unsuitable for mounting with the adhesive pads provided.

WARNING: Risk of personal injury. Prolonged exposure to alarm siren may cause permanent hearing loss.

WARNING: Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.

Safety Information (continued)

WARNING:

- □ Do NOT dispose of batteries in household trash or incinerate.
- □ Even used batteries may cause severe injury or death.
- □ Call a local poison control center for treatment information.
- □ Non-rechargeable batteries are not to be recharged.
- □ Do not force discharge, recharge, disassemble, heat above 40℃ (104F) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.



WARNING: Contains coin battery

CAUTION: Do not install

- □ In wet locations.
- □ Outside the premises (outdoors).
- □ Near metal objects or mirrors which may cause radio signal interference.
- □ Near the main power lines or cables due to potential electromagnetic interference.

NOTE: Please note the below power source. Use the compatible battery type and nominal battery voltage.

□ (2) CR2450 Battery. Nominal battery voltage is 3V, DC.

Safety Information (continued)

⚠ WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- KEEP new and used batteries **OUT OF REACH OF CHILDREN**.
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



Package Contents

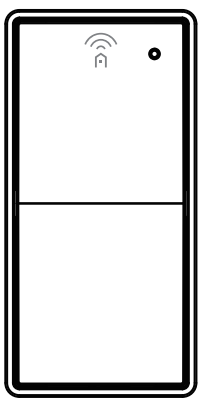

A

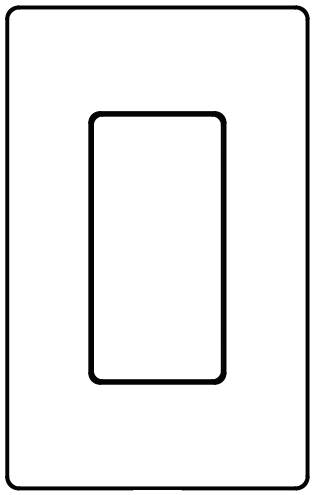

B



C



D

Part	Description	Quantity
A	Remote Switch	1
B	Wall Plate	1
C	3M Tape	2
D	Battery CR2450	2
E	User Manual	1
F	Quick Start Quide	1

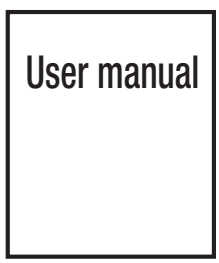

E



F

Pre-Installation

TOOLS REQUIRED

PH2



Screwdriver

Specification

Item	Spec
Battery	2*CR2450
Control distance	5M
Protocol	BLE5.0
Operating temp	0 °C - 40 °C
Operating humidity	10% - 90% RH

Installation

Please pull out the insulator tab to activate the power of remote switch.

□ Use a Phillips screwdriver to carefully unscrew the retaining screws on the back cover of the remote switch.

□ Pull out the battery insulator tab to complete the battery circuit and activate the power.

□ Reattach the cover and tighten the screws firmly. The LED Indicator will light up when the ON button is pressed.

NOTE: If the LED Indicator does not turn on, ensure the insulator tab is fully removed and batteries are installed correctly (check polarity: +/-).

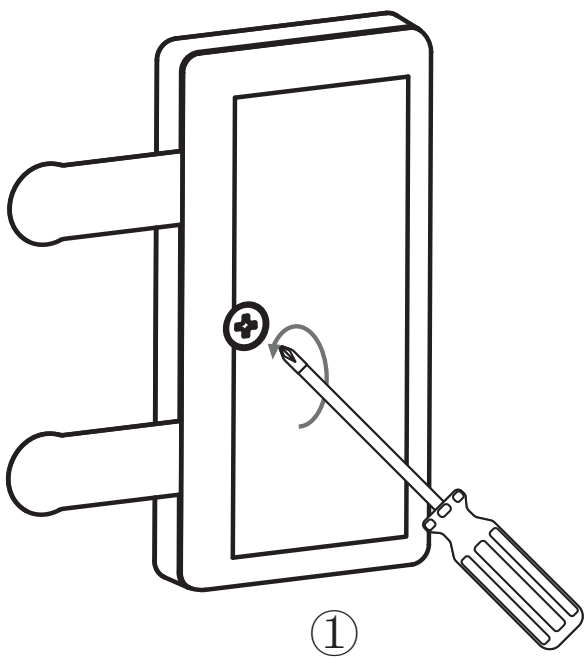

①

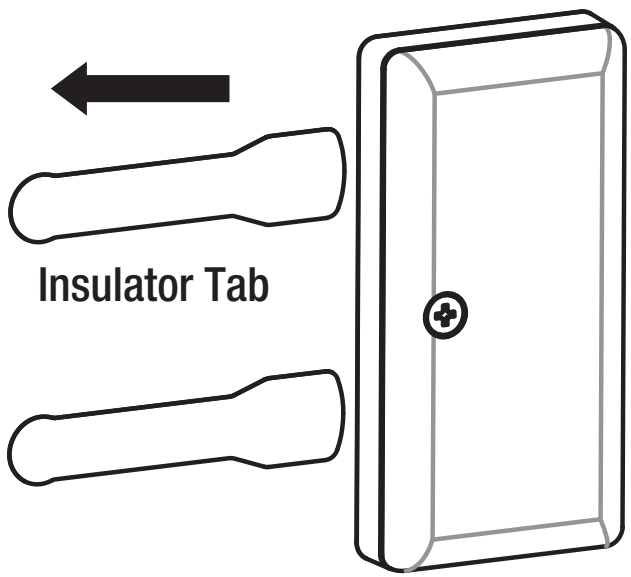

②

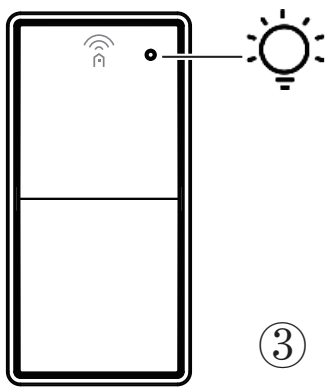

③

Operation

1 Download the Hubspace™ app from the Apple App Store or the Google Play Store.

Download on the App Store

GET IT ON Google Play

2 Sign in if you have an account, or register to create an account then sign in.

3 Connect your remote switch to power and follow the instructions on the app screen.

NOTE: □ Hubspace Wi-Fi and Bluetooth products are required for operation, including but not limited to Hubspace Lighting, Hubspace Electrical Plugs, Hubspace Single-pole Switches, and Hubspace Ceiling Fans. All additional Hubspace products are sold separately.

□ List of existing Hubspace products known to be incompatible with this remote switch can be found on www.homedept.com.

□ Please pull out the insulator tab under the battery to activate the power of remote switch.

4 Tap the '+' button in the upper-right corner on the app screen to add your Remote Switch.

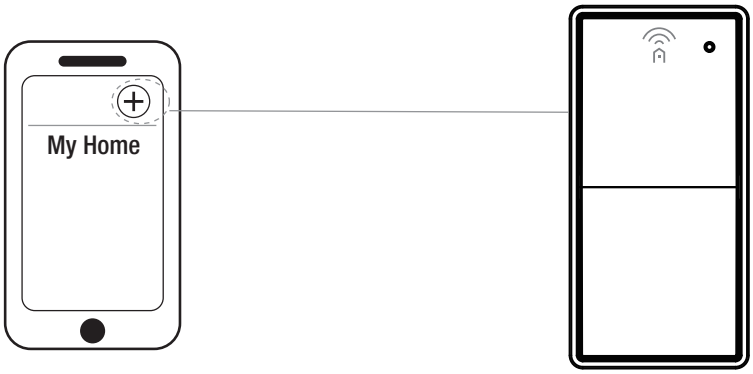

NOTE: Bluetooth® access is required for product setup. Android phones must also enable Location services to allow for Bluetooth scanning.

Operation (continued)

5 Scan the QR code on the remote switch or in the Quick Start Guide.

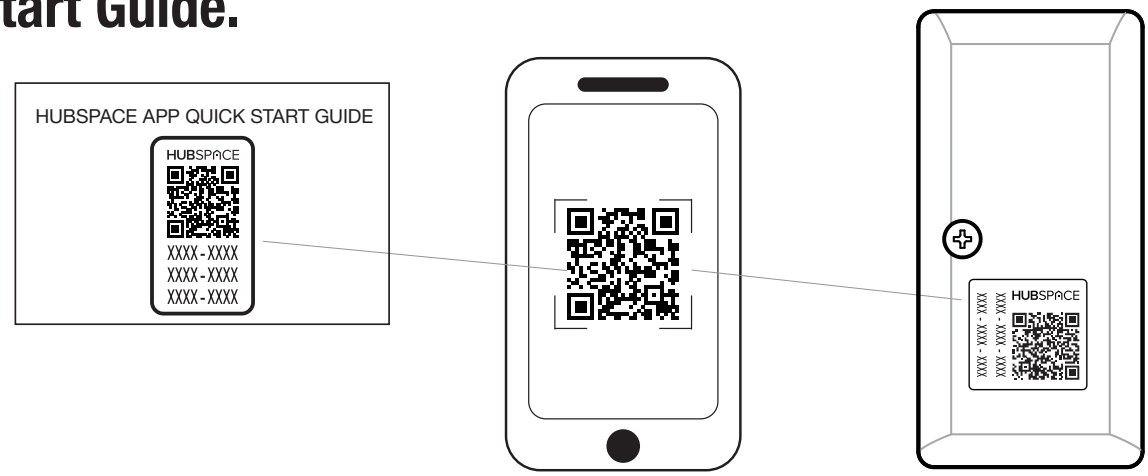

NOTE: If the QR code cannot be scanned, you can enter the code manually. Tap Enter Code and follow the instructions.
You can find the QR code either on the back side of Remote Switch housing.

6 Using your Smart Remote Switch.

☐ Please pair this remote switch with the compatible Hubspace devices before using the remote control features. To pair them:

- Add both the remote switch and the Hubspace device in the Hubspace app.
- Tap on the Remote Switch in the Hubspace app.
- Select the Hubspace devices you wish to connect to the remote switch interface to activate its remote control features.

THE HUBSPACE CONNECT™ REMOTE WIRELESS SWITCH ALLOWS FOR SIMULTANEOUS CONTROL (TURN ON/OFF OR DIM) OF THESE PRODUCTS POWERED BY HUBSPACE™:

- LIGHT BULBS
- CEILING FANS
- INDOOR LIGHTING
- OUTDOOR LIGHTING
- SWITCHES
- PLUGS

Operation (continued)

What to Expect During Setup Setting up?

Hubspace Connect is quick and guided in the Hubspace app. You'll start by choosing what type of products you want your switch to control—Hubspace smart products, non-smart lights, or a combination of both. The app will then ask a few simple questions to understand whether those products are on the same circuit as the switch or on a different one. Next, you'll select the Hubspace products you want the switch to control from a list of devices already in your home. Once selected, the app confirms your setup and your switch is ready to use. After setup, you can turn connected Hubspace products on, off, or dim them directly from the wall switch or the app—even if they're located in another room or on a different circuit. You can update or change which products the switch controls at any time in the app.

Replace the Batteries

- ☐ You can also control the device manually by pressing the button on the Smart Remote Switch.
  - Single press ON Button to turn on the devices
  - Single press OFF Button to turn off the devices
  - Double press ON Button to set a maximum brightness - default 100%.
  - Double press OFF Button to set a minimum brightness - default 20%.

NOTE: The brightness setting only available when the remote switch works with the Hubspace lighting products. You can set the default brightness via Hubspace app.

Disclaimer: Hubspace Wi-Fi and Bluetooth products are required for operation, including but not limited to Hubspace Lighting, Hubspace Electrical Plugs, Hubspace Single-pole Switches, and Hubspace Ceiling Fans. All additional Hubspace products are sold separately.
List of existing Hubspace products known to be incompatible with this remote switch can be found on www.homedept.com.

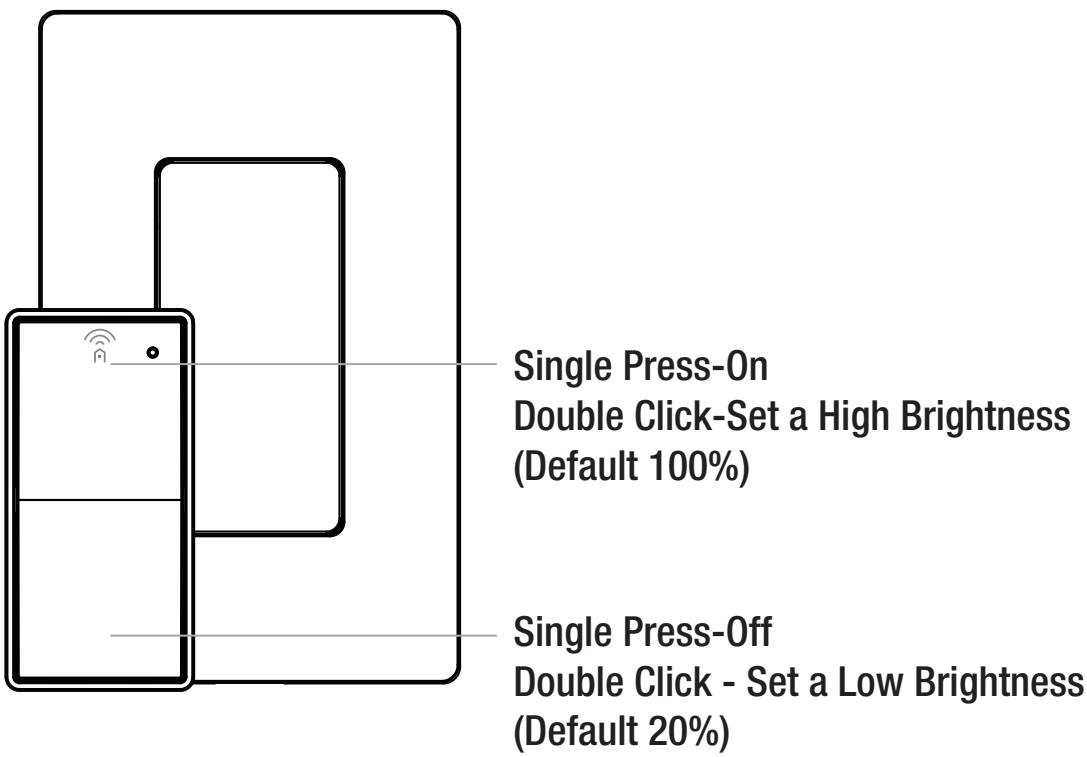

Troubleshooting

- □ Use a Phillips head screwdriver to carefully unscrew the retaining screws on the back cover of the remote switch.
- □ Replace the two old CR2450 batteries with new ones, ensuring the new ones are inserted with the correct polarity (match the "+" and "-" symbols with those in the compartment).
- □ Reattach the cover and tighten the screws firmly.

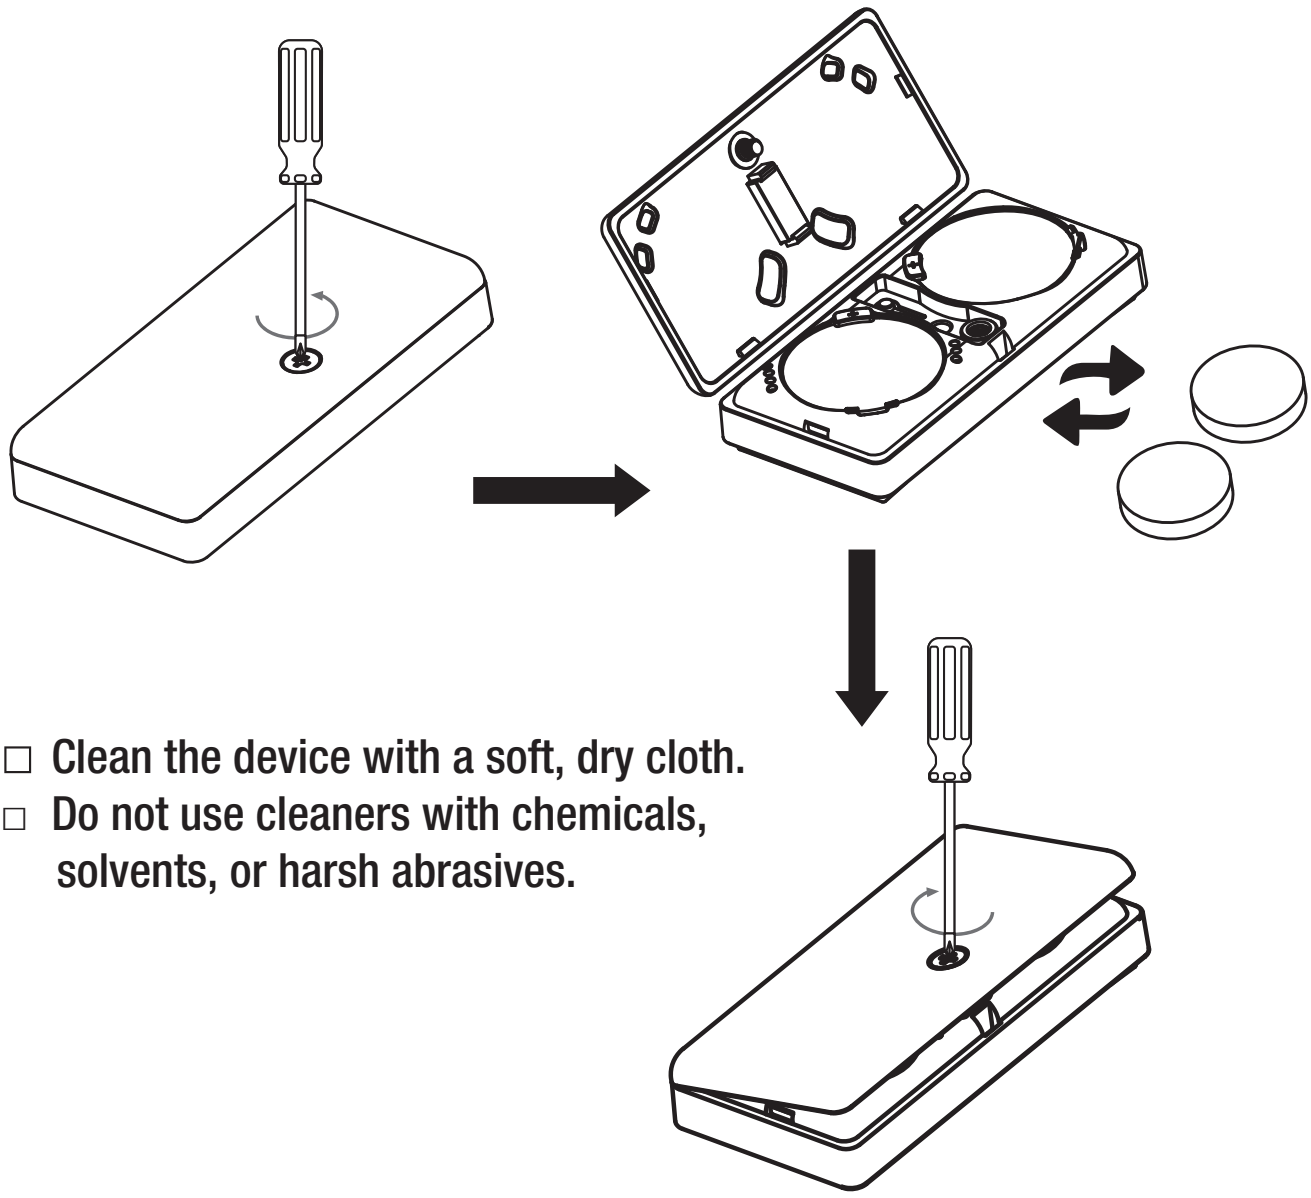

- □ Clean the device with a soft, dry cloth.
- □ Do not use cleaners with chemicals, solvents, or harsh abrasives.

Troubleshooting (continued)

Problem	Solution
What product can be controlled with the smart remote switch?	Hubspace Wi-Fi and Bluetooth products are required for operation, including but not limited to Hubspace Lighting, Hubspace Electrical Plugs, Hubspace Single-Pole Switches, and Hubspace Ceiling Fans. All additional Hubspace products are sold separately. List of existing Hubspace products known to be incompatible with this remote switch can be found on www.homedepot.com.
Lights are flickering.	Loading bulb has a bad connection.
Light or LED indicator do not turn ON.	Load bulb is burned out.
Could not control the product.	Make sure the remote switch is connected to the network.
	Make sure the addtional compatible hubspace Wi-Fi+Bluetooth products are paired and connected with this remote switch.
I cannot find the QR code.	It is on the remote switch housing. A copy of the QR code is also included in your product's documentation.
The QR code has become damaged. How do I add the product?	Under the QR code is a 24-digit code. You can enter those manually instead of scanning the code.

Troubleshooting (continued)

Problem	Solution
I lost my QR code. How do I add a product?	1. Make sure the product is connected to power. 2. In the Hubspace app, tap +, then Add Product. 3. On the Scan Product screen, tap the Search button in the lower-right corner. 4. Follow the on-screen instructions.
A product is on another account. How do I transfer it?	Scan the QR code and it will transfer to your account.
The product is on and I scanned the QR code, but the app cannot connect to it.	For Android phones, make sure Location is enabled because it is required for Bluetooth scanning. Turn off Bluetooth on your phone and turn it back on. Then, scan the QR code. If the problem persists, turn your phone off and on, then try again.
Can I scan the same QR code to add multiple products?	No. Each product has a unique QR code .
Why can't my remote control pair with the light?	1. Please check whether the Remote Switch or the light is powered on. 2. Please check whether the Remote Switch has been paired with the light.
Why can't see the added Remote Switch on the APP?	Maybe the Remote Switch has been reset, you need to re-pair Remote Switch and the device.
How to reset the Remote Switch and clear the original configuration?	Press the On and Off buttons simultaneously for more than 5 seconds, the LED indicator will start flashing red, indicating that the Remote Switch has entered pairing mode.
If the Wi-Fi of the smart bulb is disconnected, can the remote control be controlled?	If the Remote Switch is paired with the smart bulb at the beginning, it can continue to control it even if the Wi-Fi of the bulb is disconnected, because it is controlled by BLE at this time.
Can two Remotes Switch control the same bulb?	Yes, add the same bulb to the control list of two Remote Switchs, and the two Remote Switchs control it alternately, and the light bulb will respond normally.



Questions, problems, missing parts? Before returning to the store,
call Hubspace Customer Service
8 a.m. - 7 p.m., EST, Monday-Friday, 9 a.m. - 6 p.m., EST, Saturday

1-877-592-5233

HOMEDEPOT.COM/Hubspace

Retain this manual for future use.