


VERANDA

Item #1008 186 447
Model #92168

Use and Care Guide

Solar LED Post Cap Light

PACKAGE CONTENTS

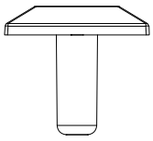


A - Top cover with flame bulb
x 1


B - AA 1.2V 1000mAh Ni-Mh rechargable battery (pre-installed)
x 1



C - Battery cover (pre-installed)
x 1

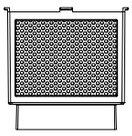

D - Housing
x 1



E - 6x6 wood post adapter
x 1



F - Screw
x 4

PLANNING FOR A SUCCESSFUL ASSEMBLY

- □ Read all instructions before assembly and installation.
- □ Inspect each part for defects that may have occurred during shipping.
- □ Keep your receipt and these instructions for proof of purchase.
- □ Designed for use on wood posts. These lights may not fit on alternative material posts.

CHOOSING THE RIGHT LOCATION

Install your solar light in a location with full, direct sunlight. Do not install in shaded areas as these areas will not allow the batteries to fully charge and will reduce the nighttime operating hours for your light. Ensure that the installation location is away from other nighttime light sources such as street or porch lamps. These light sources may prevent your solar light from automatically turning on.


HOW SOLAR WORKS

The solar light has a solar panel that converts sunlight into electricity. During the day, the converted electricity is stored in the rechargeable batteries. At night, the solar light is powered by the batteries using the electricity stored during the day. The operating time depends on geographical location, daily weather conditions, and season. For optimal performance during the evening, allow the batteries to charge for 6 to 7 hours in direct sunlight.

Assembly and Installation

1 Preparing for installation

- □ FOR FIRST TIME USE: Twist and remove the top cover (A) from the housing (D).
- □ Slide the switch (aa) to the desired position (FLAME or ON mode)
- □ Replace the top cover (A) on the housing (D).

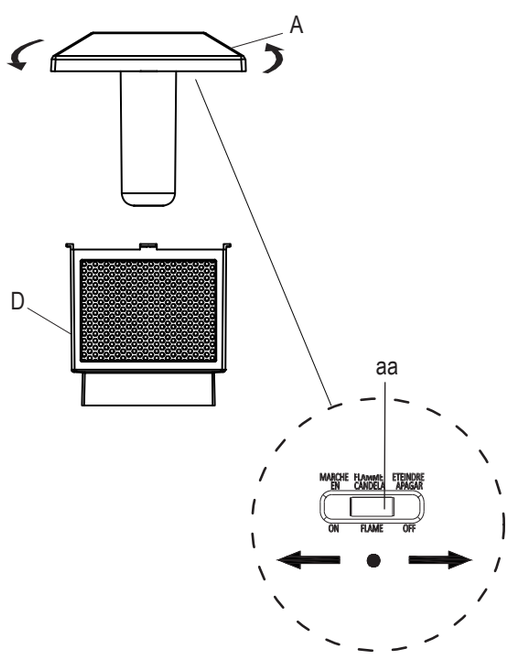


2 Installing the solar cap to a wood post

FOR 4x4 wood post:


- □ Place light housing (D) onto the 4x4 wood post and secure using two screws (F).

FOR 6x6 wood post:

- □ Place 6x6 adapter (E) onto the 6x6 wood post and secure using two screws (F).
- □ Place the light housing (D) onto the 6x6 adapter (E) and secure using two screws (F).

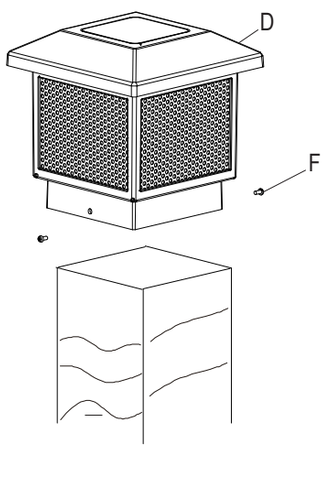

4x4 wood post

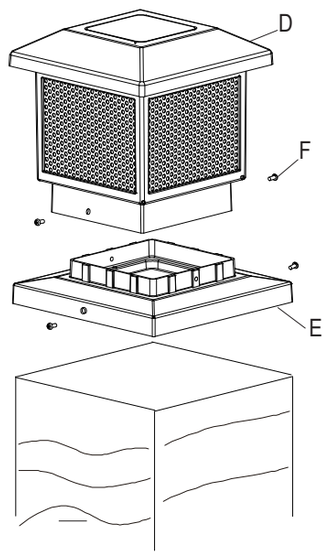

6x6 wood post

Maintenance


Replacing the battery

CAUTION: When replacing the battery, use one (1) 1000 mAh NiMH AA 1.2V rechargable battery.

IMPORTANT: Dispose of the batteries in accordance with local, state, and federal regulations.

NOTE: For best performance, replace with a rechargable 1.2V AA NiMH battery of 1000 mAh or greater every 1.5 years or when performance diminishes.

- □ Twist and remove the housing (D) from the top cover (A).
- □ Remove the battery cover (C). Replace the old battery with a fresh AA NiMH 1000 mAh rechargable battery
- □ Replace the battery cover (C) and housing (D).

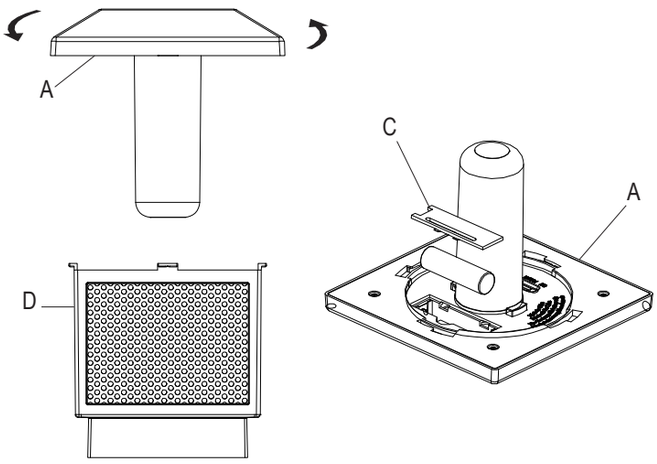

Charging the battery

- □ For optimum performance, it is best to install the solar light in full sunlight and let it charge for 6-7 hours.
- □ Allow the light to run at least 8-12 entire charging and discharging cycles to reach the maximum capacity of the battery.

Winter tips

- □ Keep debris and snow off the solar panel to allow the battery to recharge. If lights have been covered by snow for a long time, allow the battery to recharge in full, direct sunlight for at least 6-7 hours so it can maintain maximum capacity.

Troubleshooting

Problem	Solution
The nightly runtime for the lights is shorter.	□ The battery is not adequately charged. Locate the solar light in an area where it can receive the maximum amount of full, direct sunlight every day. □ The battery is reaching the end of its useful life. Replace the old battery with a new battery.
The lights do not turn on in the evening.	□ The solar panel is installed close to other light sources. Relocate the solar panel or eliminate the other light sources.

Care & Cleaning

- □ Clean the solar panel with a damp cloth. Do not use any chemicals or abrasives.

Warranty

The manufacturer warrants this product to be free for two (2) years against any defects that are due to faulty materials or workmanship. This warranty applies only to the original consumer and only to products used in normal use and service. If this product is found to be defective, the manufacturer's only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modifications, alterations, neglect or mishandling. This warranty shall not apply to any product that is found to have been improperly installed, set up, or used in any way not in accordance with the instructions supplied with the product. This warranty shall not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, or faulty installation or any other failure not relating to faulty workmanship. This warranty shall not apply to the finish on any portion of the product, such as surface and/or weathering, as this is considered normal wear and tear. The manufacturer does not warrant and specifically disclaims any warranty, whether expressed or implied, or fitness for a particular purpose, other than the warranty contained herein. The manufacturer specifically disclaims any liability and shall not be liable for any consequential or incidental loss or damage, including any labor/expense costs involved in the replacement or repair of said product.

Contact the Customer Service Team at 1-877-527-0313 or visit www.HomeDepot.com.